



Communication Drivers

Parameterization of drivers inclosed in **Asix** package

*Doc. No ENP7002
Version: 2013-04-24*

ASKOM[®] and **Asix**[®] are registered trademarks of ASKOM Spółka z o.o., Gliwice. Other brand names, trademarks, and registered trademarks are the property of their respective holders.

All rights reserved including the right of reproduction in whole or in part in any form. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system, without prior written permission from the ASKOM.

ASKOM sp. z o. o. shall not be liable for any damages arising out of the use of information included in the publication content.

Copyright © 2013, ASKOM Sp. z o. o., Gliwice



ASKOM Sp. z o. o., ul. Józefa Sowińskiego 13, 44-121 Gliwice,
tel. +48 32 3018100, fax +48 32 3018101,
<http://www.askom.com.pl>, e-mail: office@askom.com.pl

Table of Contents

1 Drivers and Transmission Protocols	5
1.1 Driver of ADAM Protocol	10
1.2 Aggregate Driver.....	16
1.3. CtAirPointer - driver for data exchange between ASIX and air monitoring station AirPointer developed by Recordum Messtechnik GmbH, Austria.....	19
1.4 CtAK - Driver of AK Protocol for Emerson MLT2 Analyzers	22
1.5 AM_SA85 - Driver of MODBUS PLUS Protocol for AM-SA85-000 Card.....	27
1.6 AREVA – Driver for Communication with MiCOM Devices	29
1.7 AS511 - Driver of AS511 Protocol for SIMATIC S5 PLCs	33
1.8 AS512 - Driver of AS512 Protocol for SIMATIC S5 PLCs	36
1.9 AS512S7 - Driver of AS512 Protocol for SIMATIC S7 PLCs.....	38
1.10 BAZA - Driver for Access to Database.....	40
1.11 BUFOR – Driver of General Purpose.....	45
1.12 CTCalec - Driver of CALECMCP Device Protocol	47
1.13 CAN_AC_PCI - Driver of CANBUS Protocol for CAN ACx PCI Card	50
1.14 CANOPEN - Driver of CANBUS Protocol for PCI 712 NT Card.....	55
1.15 COMLI - Driver of COMLI Protocol	59
1.16 CPIII - Driver to Communicate with Control Panels CP-III/E Used to Control Compressors of MYCOM (MAYEKAWA)	63
1.17 CZAZ - Driver for Communication with CZAZ-U and CZAZ-UM.....	70
1.18 DataPAF - Driver of DataPAF Energy Counter Protocol.....	75
1.19 DDE Driver.....	84
1.20. CtDlms - Driver of Electric Energy Counter of ZxD/ZxG/ZxQ Type of Landys&Gyr Company	88
1.21 DMS285 - Driver of Protocol for DURAG DMS 285 Analyzers	97
1.22 DMS500 - Driver of Protocol for DURAG DMS 500 Analyzers	111
1.23. DNP3 - Driver of Distributed Network Protocol Version 3 for Electrical Power Engineering Control and Supervision Systems.....	117
1.24 DP - Driver of PROFIBUS DP Network Protocol for PROFOboard Board	131
1.25 DP5412 - Driver of PROFIBUS DP Protocol for CP5412 Card	137
1.26 DSC - Driver of DSC PLC Protocol	141
1.27 DXF351 - Driver of Compart XF351 Device Protocol.....	143
1.28. CtEcl - Driver for Communication with ECL Comfort 210/310 Controllers Made By Danfoss	146
1.29 CtEcoMUZ - Driver of ecoMUZ Protocol	151
1.30. EcoMuz2 - driver of ecoMUZ-2 Protocol of JM Tronik	154
1.31 CtEQABP - driver for electricity meters EQABP of POZYTON	164
1.32. CtEsSer - Honeywell Esser 8008 Fire Protection Unit Driver	167
1.33 FESTO - Driver of Diagnostic Interface for FESTO PLCs	171
1.34 FILE2ASIX – Driver for Data Import from Files.....	173
1.35 FP1001 - Driver of METRONIC Measurer Protocol.....	176
1.36 GFCAN - Driver of CANBUS Protocol for CanCard.....	183
1.37 CtGlobal - exchange of data between the Asix system application an a swap file.....	187
1.38 IEC61850 - Driver for IEC61850 Protocol	189
1.39 K3N - Driver of OMRON's K3N Meters Family Protocol	198
1.40 K-BUS - Driver of Protocol for VIESSMANN Decamatic Boiler PLCs	203
1.41 CtLG - Driver of Dedicated Protocol of LG Master-K and Glofa GM PLCs.....	207
1.42 CtLogo - DRIVER of Logo OBA5 controllers from SIEMENS	212
1.43 LUMBUS - Driver for LUMEL Meters	215
1.44 CtLZQM - driver of LZQM electricity meters	223
1.45 CtM200 - Spirax Sarco M200 Flow Computer Driver.....	228
1.46 MACMAT - Driver of GAZ_MODEM Protocol for MACMAT Station.....	231
1.47 CtMax1000 - drajwer protokołu systemu MAX-1000 firmy ULTRAK.....	244
1.48 M-BUS - Driver of M-BUS Protocol.....	247
1.49 MEC - Driver of MEC07 and MEC08 Heat Meter Protocol	253
1.50 MELSECA - Driver of MITSUBISHI MELSEC-A PLC Protocol	258
1.51 MEVAS - Driver of MEVAS Analyzers.....	261
1.52 MicroSmart – driver for data exchange with MicroSmart controllers from IDEC	273
1.53 MODBUS - Driver of MODBUS/RTU Protocol for MASTER Mode.....	276
1.54 MODBUS_TCPIP - Driver of MODBUS_TCP/IP Protocol for OPEN MODBUS/TCP Mode.....	283
1.55 MODBUSSLV - Driver of MODBUS/RTU Protocol for SLAVE Mode.....	293

Communication Drivers

1.56 MPI - Driver of MPI Protocol for SIMATIC S7 PLCs	297
1.57 MPS - Driver of MPS Protocol for Power Network Parameter Meters	299
1.58 MSP1X - Driver of Protocol for MSP-1x ELMONTEX PLCs	302
1.59. CtMuel - MUEL System Driver.....	305
1.60 MultiMuz - Driver for MultiMUZ Microprocessor-Based Security Devices from JM-Tronik..	308
1.61 MultiMuz_tcpip - Driver for MultiMUZ Microprocessor-Based Security Devices from JM-Tronik.....	317
1.62 MultiMuz3_tcpip - Driver for MultiMUZ Microprocessor-Based Security Devices from JM-Tronik.....	324
1.64 MUPASZ - Driver of MUPASZ Device Protocol	334
1.64. Mupasz710_RS - Driver of Microprocessor Protecting Devices of MUPASZ 710 Type.....	337
1.65. MupaszRtu_TCPIP - Driver of Microprocessor Protecting Devices of MUPASZ 710 Type.	348
1.66 CtMus04 - driver for data exchange with MUS-04 control devices from ELEKTROMETAL S.A.	359
1.67 MUZ - Driver of Protocol for MUZ Devices.....	363
1.68 CtNCP - Driver for MN-Series Drivers from Invensys	373
1.69 NetLink - Driver of MPI/Profibus Protocol for SIMATIC S7 by using NetLink Lite SYSTEME HELMHOLZ Module.....	376
1.70 NetLinkPro - Driver for Communication with the S7 Controllers.....	379
1.71. NETWORK Driver.....	382
1.72 NONE Driver.....	383
1.73 CtNordicRF - driver of Nordic ID RF 601 Terminal Made by NordicID Company.....	384
1.74 OMRON - Driver of HOSTLINK Protocol	387
1.75. CtOmronTcpip - Driver for Data Exchange with Omron Controllers Supporting the FINS/UDP and FINS/TCP Protocols	393
1.76 OPC Driver	397
1.77 CtPA5 - PA5 Flow Counter Protocol Driver	402
1.78 CtPmc4000 - POLON 4800 Fire Protection Station Driver According to Protocol PMC-4000	405
1.79 PPI - Driver of PPI Protocol for SIMATIC S7 200 PLCs.....	409
1.80 CtProtherm300 - Driver of PROTHERM 300 DIFF PLC Protocol	415
1.81 PROTRONICPS - Driver of PROTRONICPS Regulator Protocol	418
1.82 S700 - Driver S700 of MAIHAK Analyzer Protocol	421
1.83 S7_TCPIP - Driver for Data Exchange with SIMATIC Controllers with Use of Ethernet	427
1.84 SAPIS7 - Driver of SAPIS7 Protocol for SIMATIC S7 PLCs	430
1.85 S-BUS - Driver of S-BUS Protocol for SAIA-Burgess Electronics PLCs.....	433
1.86 CtSbusTcpip - Driver of S-Bus Ethernet Protocol	440
1.87 CtSi400 - Driver of Protocol for Sintony Si 400 Alarm Central of SIEMENS	443
1.88 SINECH1 - Driver of Ethernet Network Protocol for SIMATIC S5 PLCs.....	449
1.89 SINECL2 - Driver of PROFIBUS Protocol for SIMATIC S5 PLCs	452
1.90 CtSNG - Driver to Exchange Data with SNG Devices	456
1.91 SNMP - driver for reading and writing object values using SNMPv1 and SNMPv2c protocol	460
1.92 CtSNPX - Driver of SNPX Protocol for GE Fanuc PLCs	461
1.93 SPA - Driver of SPA Protocol	465
1.94 CtSrio - driver of SRIO 500M protocol.....	470
1.95 SRTP - Driver of SRTP Protocol.....	485
1.96 TALAS - Driver of TALAS Analyzer Protocol.....	489
1.97 CtTwinCAT - Driver of ADS Protocol for TwinCAT System.....	493
1.98 UniDriver	499
1.99 CtWago - Wago Controllers Protocol Driver.....	500
1.100 ZdarzenieZmienna Driver.....	506
1.101 CtZxD400 - Driver of Protocol of Landys & Gyr ZxD400 Electric Energy Counters	510

1 Drivers and Transmission Protocols

The Asix system includes a set of drivers that handle the following types of data transfer with controllers of an industrial process.

Driver	Protocol
ADAM AGGREGATE	<ul style="list-style-type: none">- protocol for ADAM-4000 modules of ADVANTECH- the driver allows definition of variables, values of which are generated as a result of calculations performed on other variables of the Asix system (source variables)
CtAirPointer	<ul style="list-style-type: none">- driver for data exchange between ASIX and air monitoring station AirPointer developed by Recordum Messtechnik GmbH, Austria
CtAK	<ul style="list-style-type: none">- the AK protocol allows data exchange between Asix system computers and Emerson MLT2 analyzers
AM_SA85	<ul style="list-style-type: none">- protocol for communication with the Modbus Plus network of Schneider Automation
AREVA	<ul style="list-style-type: none">- allows to exchange data between Asix and digital protection devices MiCOM of AREVA; the list of serviced devices includes MiCOM P127 and MiCOM P34x series
AS511	<ul style="list-style-type: none">- protocol using programmer interface of SIMATIC PLCs of SIEMENS
AS512	<ul style="list-style-type: none">- protocol of CP524/525 communication processors for SIMATIC PLCs of SIEMENS
AS512S7	<ul style="list-style-type: none">- protocol of CP340 communication processors for SIMATIC S7 PLCs of SIEMENS
BAZA	<ul style="list-style-type: none">- the driver enables data import from databases to the Asix system
BUFOR	<ul style="list-style-type: none">- general purpose protocol for information exchange with user programs by means of a shared memory
CTCalec	<ul style="list-style-type: none">- Calec MCP driver retrieving the current values of variables from CALEC MCP devices of Aquametro according to the protocol described in the document "MCP Datenauslesung mit dem lowlevel Protokoll"
CAN_AC_PCI	<ul style="list-style-type: none">- protocol for data exchange between SELECONTROL MAS PLCs of Selectron Lyss AG and Asix system computers
CANOPEN	<ul style="list-style-type: none">- CANOPEN network protocol of SELECTRON MAS PLCs of Selectron Lyss AG
COMLI	<ul style="list-style-type: none">- protocol (COMunication Link) for communication with ABB SattCon, AC 800C, AC 800M, AC 250 PLCs; data are transferred via RS-232 or RS-485 serial interfaces
CPIII	<ul style="list-style-type: none">- Driver to Communicate with Control Panels CP-III/E Used to Control Compressors of MYCOM (MAYEKAWA)
CZAZ	<ul style="list-style-type: none">- allows to exchange data between Asix system and digital protection devices CZAZ-U and CZAZ-UM of ZEG-Energetyka
DATAPAF DDE	<ul style="list-style-type: none">- protocol for connection with DataPAF energy counters- driver defining a channel of the ASMEN module referring to variables shared by a DDE server
CtDlms	<ul style="list-style-type: none">- driver is used for data exchange between the Asix system and electric energy counters of ZxD/ZxG/ZxQ type of Landys & Gyr company, using the DLMS protocol
DMS285 DMS500	<ul style="list-style-type: none">- protocol for emission meter D-MS285 computers- protocol for emission meter D-MS500 computers (previous name – DURAG)
DNP3	<ul style="list-style-type: none">- driver of Distributed Network Protocol Version 3 for Electrical Power Engineering Control and Supervision Systems
DP	<ul style="list-style-type: none">- protocol for devices compatible with PROFIBUS DP by using a PROFIBoard card

Communication Drivers

DP5412	- protocol for devices compatible with PROFIBUS DP by using Siemens cards
DSC	- protocol for data exchange between Asix system computers and DSC 2000 controllers
DXF351	- protocol for communication with Compart DXF351 devices of Endress+Hauser
CtEcl	- protocol for data exchange between the Asix system and ECL Comfort 210/310 controllers made by Danfoss via an Ethernet network in the Open Modbus Tcp/Ip mode
CtEcoMUZ	- protocol for data exchange between the Asix system and Microprocessor Protecting ecoMUZ Devices made by JM Tronik
EcoMuz2	- driver is used for data exchange between the Asix system and Microprocessor Protecting ecoMuz-2 devices made by JM Tronik. The transmission is performed through serial links by means of serial interfaces in the RS-485 standard.
CtEQABP	- protocol for data exchange between the Asix system and electricity meters EQABP, produced by Zakład Elektrycznych Urządzeń Pomiarowych POZYTON sp. z o.o. in Częstochowa
CtEsser	- protocol for data exchange between the Asix system and the Honeywell Esser 8008 fire protection unit control system
FESTO FILE2ASIX	- protocol using a diagnostic interface for FESTO PLCs - the driver enables data import from text files to the Asix system
FP1001	- protocol for water and steam flow monitors of METRONIC Kraków
GFCAN	- protocol of CAN network with use of communication card of Garz & Fricke Industrieautomation GmbH
CtGLOBAL	- protocol for data exchange between the Asix system application and a so-called swap file, which is a container for the driver's current variable parameters (name, status, value, timestamp)
IEC61850 K3N	- IEC61850 protocol - protocol for data exchange between K3N meters family of OMRON and Asix system computers
K-BUS	- protocol K-BUS used for data exchange between VIESSMANN Dekamatic boilers controllers connected to a Dekatel-G (or Vitocom 200) concentrator and Asix system computers
CtLG CtLogo LUMBUS	- protocol of LG Master-K and Glofa GM PLCs - driver of Logo OBA5 controllers from SIEMENS - protocol for data exchange between RG72 controllers manufactured by Lubuskie Zakłady Aparatów Elektrycznych (Electrical Measuring Instrument Works) "LUMEL" in Zielona Góra and Asix system computers
CtLZQM	- protocol for data exchange with LZQM electricity meters, produced by POZYTON Electronic Measuring Instruments Facility in Częstochowa
CtM200	- for data exchange between the asix system and the M210G flow computer from Spirax Sarco
MACMAT	- GAZ-MODEM protocol used for communication with MACMAT stations
CtMAX1000	- communication based on the so-called "Network protocol" with the MAX 1000 camera management system by ULTRAK
M-BUS	- subset of standard protocol for data reading from measuring devices used by MULTICAL heat meters of KAMSTRUP A/S
MEC	- protocol of data exchange between Asix system and MEC07 and MEC08 heat meters manufactured by Instytut Techniki Ciepłej (Institute of Thermal Technology) in Lodz. Data are transferred with use of a standard RS-232 interface.
MELSECA	- protocol of A1S71C24-R2 communication processor for MELSEC-A PLCs
MEVAS	- protocol for data exchange between the MEVAS emission meter computer produced by Lubuskie Zakłady Aparatów

MicroSmart	Elektrycznych (Electrical Measuring Instrument Works) "LUMEL" in Zielona Góra and Asix system computers - driver for data exchange with MicroSmart controllers from IDEC
MODBUS	- subset of standard communication protocol used by AEG Modicon GE Fanuc PLCs
MODBUS_TCPIP	- protocol of data exchange between Asix system and computers/devices by means of the MODBUS protocol on the basis of Ethernet with the TCP/IP protocol
MODBUSSLV	- MODBUS protocol, in which Asix operates as SLAVE
MPI	- protocol of MPI interface of SIMATIC S7 PLCs of SIEMENS; a serial interface
MPS	- serial interface protocol for MPS measuring gauges of a power network from OBR Metrologii Elektrycznej in Zielona Góra
MSP1X	- protocol MSP1X used for data exchange between MSP1X PLCs of ELMONTEX and Asix system computers
CtMuel	- protocol used to exchange data between the Asix system and a MUEL system maintenance computer
MultiMuz	- used to exchange data between the asix system and te MultiMUZ microprocessor-based security devices manufactured by Warsaw-based JM-Tronik
MultiMuz TCPIP	- communication is executed in Ethernet with the use of TCP or UDP protocol to exchange data between the Asix system and te MultiMUZ microprocessor-based security devices manufactured by Warsaw-based JM-Tronik.
MultiMuz3 TCPIP	- communication is executed in MODBUS RTU mode on TCPIP with the use of Ethernet and port 10502 to exchange data between the Asix system and the MultiMUZ3 microprocessor-based security devices manufactured by Warsaw-based JM-Tronik.
MUPASZ	- hollow (virtual) channel protocol
Mupasz710_RS	- data exchange between Asix and the microprocessor protecting devices of MUPASZ 710 type made by Instytut Tele- i Radiotechniczny in Warsaw. The communication is made with use of serial link and the MODBUS protocol.
MupaszRtu_TCPIP	- driver is used for data exchange between Asix and the microprocessor protecting devices of MUPASZ 710 type. The communication is performed in MODBUS RTU mode via Ethernet link, using port no. 502.
CtMus04	- allows data between the asix system and the microprocessor-based control devices MUS-04 manufactured by ELEKTROMETAL S.A. from Cieszyn to be exchanged
MUZ	- protocol for data exchange between Microprocessor Security Devices of MUZ-RO type;
CtNCP	- is used to exchange data between the Asix system and MN-series controllers from Invensys (former Satchwell)
NETWORK	- protocol used by the NETSRV.EXE program is a special type of protocol. It does not provide a physical link to a controller, but only connection to any other computer that has such a link
NetLink	- is used for data exchange between Asix computers and SIMATIC S7 PLCs by using an MPI/Profibus bus and a NetLink Lite SYSTEME HELMHOLZ module
NetLinkPro	- to communicate with the S7 controllers via the NETLink PRO gateway
NONE	- NONE protocol enables: <ul style="list-style-type: none"> • Asix application testing in simulation mode, • data exchange between Asix programs by means of process variables;
CtNordicRF	- protocol used to exchange data with Nordic ID RF 601 barcode scanner

OMRON	- enables data exchange between OMRON PLCs and Asix system computers
CtOmrtonTcpip	- protocol used for data exchange between Asix system and Omron controllers supporting the FINS/UDP and FINS/TCP protocols
OPC	- the driver defining a channel of ASMEN module retrieving the variables shared by an OPC server
CtPA5	- protocol to exchange data between the Asix system and the PA-5 transducers manufactured by Poznań-based POWOGAZ S.A. Water Meter Factory
CtPmc4000	- is used for data exchange between the asix system and POLON 4800 fire protection station according to protocol PMC-4000
PPI	- protocol for SIEMENS S7-200 PLCs
CtProtherm300	- driver for data exchange between Protherm 300 DIFF PLCs of Process-Electronic GmbH and Asix system computers
PROTRONICPS S700	- PROTRONIC PS protocol of Hartmann & Braun - protocol S700 used for data exchange between Maihak 3700 gas analyzers and Asix system computers
S7_TCPIP	- is used for data exchange with SIMATIC S7-series controllers through the Ethernet connection with the use of a standard computer network card
SAPIS7	- protocol of SIMATIC S7 PLCs with use of the MPI interface or PROFIBUS communication processor (an implementation of S7 function)
S-BUS	- S-BUS protocol used for data exchange between PCD PLCs of SAIA Burgess Electronics and Asix system computers
CtSbusTcpip	- driver for data exchange between family of PCD SAIA-Burgess PLCs and Asix system computers
CtSi400	- is used for data exchange between asix computers and a Sintony Si 400 alarm central of SIEMENS
SINECH1	- protocol of CP1430 communication processors of SIMATIC S5 PLCs (Ethernet)
SINECL2	- protocol of CP5430 communication processors of SIMATIC S5 PLCs of SIEMENS
CtSNG	- protocol used for data exchange between the Asix system and SNG systems provided by the Warsaw based Synergia Tech company, via an Ethernet link
SNMP	- driver can read and write objects values using SNMPv1 and SNMPv2c protocol - manage the various elements of telecommunications networks, such as routers, switches, computers and telephone exchanges. The driver performs its functions by using the SNMP Management API
SNPX	- driver for data exchange between Asix system computers and GE Fanuc 90-30 PLCs as well as GE Fanuc 90 CMM and PCM modules
SPA	- protocol used for communication with devices connected to SPA bus of the ABB company
CtSRIO	- protocol used for exchange of data with the SRIO 500M hub (ABB-produced), which provides communication between the host system and the devices connected to the SPA bus, such as protection relays and signalling devices
SRTP	- driver used for data exchange between the Asix system and GE Fanuc Automation VersaMax Nano/Micro PPLCs using an IC200SET001 converter and WersaMax 90 PLCs using the IC693CMM321 communication module; via Ethernet with the TCP/IP protocol
TALAS	- protocol of TALAS emission computers
CtTwinCAT	- driver for data exchange between the Asix system and the TwinCAT system of Beckhoff Industrie Elektronik
UniDriver	
CtWago	- protocol used to exchange data between the Asix system and Wago controllers.

- ZDARZENIE ZMIENNA** - driver for generating process variables of WORD type (16-bit word) on the basis of actual values of alarm events in the Asix system
- CtZxD400** - driver of protocol of electric energy counters of ZxD400 type manufactured by Landys & Gyr

The package of available protocols will be systematically expanded. The ASKOM company is ready to develop on customer request any transmission protocol according to the rules defined in the price list of the Asix system.

1.1 Driver of ADAM Protocol

Driver Use

The ADAM driver is used for data exchange with ADAM-4000 series modules developed by Advantech. The transmission is performed with use of serial interfaces via standard serial ports of a computer (using the converter) or by using an additional card with an RS485 interface.

The only Asix system requirement is that the ADAM modules should be configured to the following data transfer mode:

- number of character bits 10 (1 start bit, 8 character bits, 1 stop bit),
- no parity check,
- checksum.

Parameterization of ADAM driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the ADAM driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: ADAM

Adam tab:

Channel parameters:

Network number of ADAM module - network number of the ADAM module;
Identifier of ADAM module type - identifier of the ADAM module type. At present the following types are implemented:
1 - ADAM-4011
2 - ADAM-4012
3 - ADAM-4013
4 - ADAM-4017
5 - ADAM-4018
6 - 8-channel pulse counter Mcom-1 (an equivalent of ADAM-4080D)
7 - ADAM-4050
8 - ADAM-4052
9 - ADAM-4060
10 - ADAM-4053
11 - ADAM-4080
12 - ADAM-4021
Port - serial port name;
Transmission speed in bauds - transmission speed.

The *Transmission speed in bauds* parameter is an optional parameter. Its default value is 9600 (Bd).

EXAMPLE

An exemplary item which declares the use of transmission channel operating according to the ADAM protocol is given below:

Channel / Name: CHAN1
Channel / Driver: ADAM
Network number of ADAM module: 1
Identifier of ADAM module type: 5
Transmission speed in bauds: 9600 Bd

Addressing the Process Variables

The syntax of symbolic address which is used for process variables belonging to the ADAM driver channel is as follows:

VARIABLE_TYPE *variable_index* [*.subchannel_no*]

where:

<i>VARIABLE_TYPE</i>	- string identifying the variable name in the ADAM protocol;
<i>variable_index</i>	- variable index within a given type;
<i>subchannel_no</i>	- subchannel number for multichannel modules or a bit number for digital in/out modules.

The following symbols of process variable types are allowed:

R	- read only variable;
W	- write only variable;
RW	- read/write variable.

Depending on the ADAM module type, various ranges of *variable_index* and *subchannel_no* are allowed. Process variables implemented at present are given below:

Table 1. Types of Implemented Process Variables Serviced by ADAM Modules.

Symb. Address	Variable Type in Device	Type of Raw Variable	Device Type	Data Format
	Variables Only for Reading			
R1	Read analog Input	Float	ADAM-4011	Eng. units
R1	Read analog Input	Float	ADAM-4012	Eng. units
R1	Read analog Input	Float	ADAM-4013	Eng. units
R1	Current readback	Float	ADAM-4021	Eng. Units
R1.0	Read analog Input 0	Float	ADAM-4017	Eng. units
R1.1	Read analog Input 1	Float	ADAM-4017	Eng. units
R1.2	Read analog Input 2	Float	ADAM-4017	Eng. units
R1.3	Read analog Input 3	Float	ADAM-4017	Eng. units
R1.4	Read analog Input 4	Float	ADAM-4017	Eng. units
R1.5	Read analog Input 5	Float	ADAM-4017	Eng. units
R1.6	Read analog Input 6	Float	ADAM-4017	Eng. units
R1.7	Read analog Input 7	Float	ADAM-4017	Eng. units
R1.0	Read analog Input 0	Float	ADAM-4018	Eng. units
R1.1	Read analog Input 1	Float	ADAM-4018	Eng. units
R1.2	Read analog Input 2	Float	ADAM-4018	Eng. units
R1.3	Read analog Input 3	Float	ADAM-4018	Eng. units
R1.4	Read analog Input 4	Float	ADAM-4018	Eng. units
R1.5	Read analog Input 5	Float	ADAM-4018	Eng. units
R1.6	Read analog Input 6	Float	ADAM-4018	Eng. units
R1.7	Read analog Input 7	Float	ADAM-4018	Eng. units
R1.0	Read counter/frequency value channel 0	Dword	MCom-1	Hex
R1.1	Read counter/frequency value channel 1	Dword	MCom-1	Hex
R1.2	Read counter/frequency value channel 2	Dword	MCom-1	Hex
R1.3	Read counter/frequency value channel 3	Dword	MCom-1	Hex
R1.4	Read counter/frequency value channel 4	Dword	MCom-1	Hex
R1.5	Read counter/frequency value channel 5	Dword	MCom-1	Hex
R1.6	Read counter/frequency value channel 6	Dword	MCom-1	Hex
R1.7	Read counter/frequency value channel 7	Dword	MCom-1	Hex
R2.0	Read timer interval value channel 0	Dword	MCom-1	0.1 sec incr.
R2.1	Read timer interval value channel 1	Dword	MCom-1	0.1 sec incr.
R2.2	Read timer interval value channel 2	Dword	MCom-1	0.1 sec incr.
R2.3	Read timer interval value channel 3	Dword	MCom-1	0.1 sec incr.
R2.4	Read timer interval value channel 4	Dword	MCom-1	0.1 sec incr.
R2.5	Read timer interval value channel 5	Dword	MCom-1	0.1 sec incr.
R2.6	Read timer interval value channel 6	Dword	MCom-1	0.1 sec incr.
R2.7	Read timer interval value channel 7	Dword	MCom-1	0.1 sec incr.

Table 2. Types of Implemented Process Variables Serviced by ADAM Modules (continuation).

Symb. Address	Variable Type in Device	Type of Raw Variable	Device Type	Data Format
R1.0	Read digital Input 0	Word	ADAM-4050	0/1
R1.1	Read digital Input 1	Word	ADAM-4050	0/1
R1.2	Read digital Input 2	Word	ADAM-4050	0/1
R1.3	Read digital Input 3	Word	ADAM-4050	0/1
R1.4	Read digital Input 4	Word	ADAM-4050	0/1
R1.5	Read digital Input 5	Word	ADAM-4050	0/1
R1.6	Read digital Input 6	Word	ADAM-4050	0/1
RW1	Analog Data Out/Last value readback	Float	ADAM-4021	Eng. Units
RW1.0	Read/Write digital Output 0	Word	ADAM-4050	0/1
RW1.1	Read/Write digital Output 1	Word	ADAM-4050	0/1
RW1.2	Read/Write digital Output 2	Word	ADAM-4050	0/1
RW1.3	Read/Write digital Output 3	Word	ADAM-4050	0/1
RW1.4	Read/Write digital Output 4	Word	ADAM-4050	0/1
RW1.5	Read/Write digital Output 5	Word	ADAM-4050	0/1
RW1.6	Read/Write digital Output 6	Word	ADAM-4050	0/1
RW1.7	Read/Write digital Output 7	Word	ADAM-4050	0/1
R1.0	Read digital Input 0	Word	ADAM-4052	0/1
R1.1	Read digital Input 1	Word	ADAM-4052	0/1
R1.2	Read digital Input 2	Word	ADAM-4052	0/1
R1.3	Read digital Input 3	Word	ADAM-4052	0/1
R1.4	Read digital Input 4	Word	ADAM-4052	0/1
R1.5	Read digital Input 5	Word	ADAM-4052	0/1
R1.6	Read digital Input 6	Word	ADAM-4052	0/1
R1.7	Read digital Input 7	Word	ADAM-4052	0/1
RW1.0	Read/Write digital Output 0	Word	ADAM-4060	0/1
RW1.1	Read/Write digital Output 1	Word	ADAM-4060	0/1
RW1.2	Read/Write digital Output 2	Word	ADAM-4060	0/1
RW1.3	Read/Write digital Output 3	Word	ADAM-4060	0/1
R1.0	Read counter/frequency value - channel 0	Dword	ADAM-4080	Hex
R1.1	Read counter/frequency value - channel 1	Dword	ADAM-4080	Hex
RW1.0	Read/Write initial counter - channel 0	Dword	ADAM-4080	Hex
RW1.1	Read/Write initial counter - channel 1	Dword	ADAM-4080	Hex
W1.0	Clear counter - channel 0	Dword	ADAM-4080	Hex
W1.1	Clear counter - channel 1	Dword	ADAM-4080	Hex

Table 3. Types of Implemented Process Variables Serviced by ADAM Modules (continuation).

Symb. Address	Variable Type in Device	Type of Raw Variable	Device Type	Data Format
R1.0	Read digital Input 0	Word	ADAM-4053	0/1
R1.1	Read digital Input 1	Word	ADAM-4053	0/1
R1.2	Read digital Input 2	Word	ADAM-4053	0/1
R1.3	Read digital Input 3	Word	ADAM-4053	0/1
R1.4	Read digital Input 4	Word	ADAM-4053	0/1
R1.5	Read digital Input 5	Word	ADAM-4053	0/1
R1.6	Read digital Input 6	Word	ADAM-4053	0/1
R1.7	Read digital Input 7	Word	ADAM-4053	0/1
R1.8	Read digital Input 8	Word	ADAM-4053	0/1
R1.9	Read digital Input 9	Word	ADAM-4053	0/1
R1.10	Read digital Input 10	Word	ADAM-4053	0/1
R1.11	Read digital Input 11	Word	ADAM-4053	0/1
R1.12	Read digital Input 12	Word	ADAM-4053	0/1
R1.13	Read digital Input 13	Word	ADAM-4053	0/1
R1.14	Read digital Input 14	Word	ADAM-4053	0/1
R1.15	Read digital Input 15	Word	ADAM-4053	0/1

The ADAM driver is installed as a DLL automatically.

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to ADAM driver.

Default length of reply

Meaning - using the default answer length;
 YES – waiting for the maximal possible answer length or character timeout;
 NO – it is used if the answer length is not known in order not to wait for a timeout by the answer; otherwise the default answer length is used and a character timeout is waited.

Default value - NO.

Checksum

Meaning - using the checksum in transfers PC <--> ADAM.

Default value - YES.

Read timeout

Meaning - timeout for answer as a multiple of 100 milliseconds.

Default value - 15, i.e. 1500 ms.

Character timeout

Meaning - character timeout as a multiple of 10 ms.

Default value - 5, i.e. 50 ms.

1.2 Aggregate Driver

Driver Use

The Aggregate driver allows definition of variables the values of which are generated as a result of calculations performed on other variables of the Asix system (source variables). Archive values of source variables are used for an aggregate calculation. Usage of archive values allows to prevent any discontinuities in case of the Asix system restart.

Parameterization of Aggregate driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the Aggregate driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: Aggregate

Addressing the Process Variables

The address part of variable declaration for the Aggregate driver takes the following form:

aggregate_name aggregate_parameters

where:

aggregate_name - name of the aggregate;
aggregate_parameters - aggregate parameters, delimited with white space.

The driver may realize following aggregates:

Table 4. Types of Aggregates Executed by the Driver Aggregate.

Aggregate Name	Way of Calculations
Average (Average)	As a result, the weighted average of the source variable in the calculation period is obtained.
Max (max)	As a result, the maximum value of the source variable in the calculation period is obtained
Min (min)	As a result, the minimum value of the source variable in the calculation period is obtained.

Parameters of above aggregates take the following form:

Variable_name:Archive_Type Period Threshold [A]
[L[lower_limit]:[upper_limit]]

where:

- Variable_name* - name of the source variable which is connected with the aggregate;
- Archive_type* - one letter code determining the type of the archive in which source variable values are saved;
- Period* - calculation period of the aggregate;
- Threshold* - minimum number of correct measures, in percentages, needed for aggregate calculations;
- A* - parameter determines whether calculation performing time should be adjusted to the calculation period;
- Lower_limit* - lower limit value; if the source variable value is lower than the value of *lower_limit*, then the *lower_limit* value is used instead; the parameter may be used up to version 1.01.000 of the driver;
- Upper_limit* - upper limit value; if the source variable value is higher than the value of *upper_limit*, then the *upper_limit* value is used instead; the parameter may be used up to version 1.01.000 of the driver;

Period determines the calculation period. The calculation period is given in the same manner as the time interval specification for ASPAD, ie. in the form of numbers and units:

`<number><unit> [<number><unit> [...]]`

where:

- `<number>` - number of given subsequently time units;
- `<unit>` - determines the time unit which may be:
 - s - second,
 - m - minute,
 - g lub h - hour,
 - d - day (24 hours) .

In case when unit is missing, the minute is taken as a default unit of the calculation period.

The result of aggregate calculations is said to be good if the interest rate of correctly read samples (given in percentages) is equal to *Threshold*. Default value of *Period* is 5 minutes, and of *Threshold* - 80 percentages. For the *threshold* correct measurement calculation the source variable valid time is taken into account, according to the parameterization of archiving this variable (sampling period). It means, *threshold* is calculated as a ratio of the sum of all correctness times of measurements and calculation period length. In case of an average, the calculation result is a weighted average in relation to the measurement correctness time. Values of variables, for which time stamp is greater or equal to beginning of the calculation period and lower than the end of it, are taken into consideration for calculations of aggregates. The aggregate calculation occurs after the end of the calculation period.

The last, optional parameter *A* determines the time instance at which an aggregate will be calculated. If the parameter is omitted, the aggregate will be calculated after each reading of the source variable (in stepwise manner). If *A* is the last parameter, then the aggregate calculation time is adjusted to a multiplicity of the aggregate calculation period. The aggregate calculation result type is adjusted to the type of conversion function given in the variable declaration.

EXAMPLE

An exemplary variable declaration:

```
Temp_sr, Temp-średnia, SREDNIA Temperatura:B 10 70 A, Srednie, 1, 1, NOTHING_FP
```

The variable `Temperatura_sr` declared above is an average value of the variable `Temperatura`. The period, over which the variable was averaged, is 10 minutes and in order to obtain a correct value of the average, at least 70 percent of correct measurements are needed. Archive values, placed in the B archive, of the variable

Communication Drivers

Temperatura are used for the average creation. The aggregate calculation instant will be adjusted to the calculation period multiplicity, i.e. calculations will be performed at 00:00:00, 00:10:00, 00:20:00 and so on.

1.3. CtAirPointer - driver for data exchange between ASIX and air monitoring station AirPointer developed by Recordum Messtechnik GmbH, Austria

Driver Use

The CtAirPointer is used for data exchange between ASIX and air monitoring station AirPointer developed by Recordum Messtechnik GmbH, Austria. The transmission is performed with use of HTTP protocol using info.php and download.php websites of monitoring station web server.

The driver allows to read current and historical 1-, 5- and 30-minute averages of each of parameters measured by the monitoring station. The current average value is transmitted by the driver as the current value of process variable.

Parameterization of CtAirPointer driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtAirPointer driver requires a channel with the following parameters to be added to the **Current data** module of Architect:

Standard tab:

Name: *logical name of the transmission channel*
Driver: AirPointer

AirPointer tab:

Channel parameters:
ServerIP= IP_address; Password=text; User=text; AlarmNr=number

where:

<i>ServerIP</i>	- monitoring station IP address;
<i>Password</i>	- access password to info.php and download.php sites of the station;
<i>User</i>	- monitoring station user name,
<i>AlarmNr</i>	- alarm number when communication with the monitoring station is broken.

EXAMPLE:

ServerIP =192.168.200.160; Password=password123; User=user; AlarmNr=100

Addressing the Process Variables

The syntax of symbolic address which is used for process variables belonging to the CtAirPointer driver channel is as follows:

P<Idparam>.<avgNo>

Communication Drivers

where:

avgNo - number that identifies the average number. Acceptable values:
1 -1-minute average
2 -5-minute average
3 -30-minute average

Idparam - number that identifies the parameter registered by the station.
The list of acceptable parameters is available by the site info.php.

All the variable are of the FLOAT type.

Exemplary variable declarations:

ZM_01_01, NO 1 min average,	P1.1	PTY, 1, 1, NOTHING_FP
ZM_01_02, NO 5 min average,	P1.2	PTY, 1, 1, NOTHING_FP
ZM_01_03, NO 30 min average,	P1.3	PTY, 1, 1, NOTHING_FP
ZM_06_01, SO2 1 min average,	P6.1	PTY, 1, 1, NOTHING_FP
ZM_06_02, SO2 5 min average,	P6.2	PTY, 1, 1, NOTHING_FP
ZM_06_03, SO2 30 min average,	P6.3	PTY, 1, 1, NOTHING_FP

Driver Configuration

CtAirPointer driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CTAIRPOINTER**:

Section name: CTAIRPOINTER

Option name: LOG_FILE

Option value: log_file_name

Meaning: The item allows to define a file which all the diagnostic messages of the driver will be written to. The item is used for diagnostic purpose.

Parameter:

log_file_name

Default value: By default, the log file is not created.

Section name: CTAIRPOINTER

Option name: HISTORY_LOG_FILE

Option value: log_file_name

Meaning: The item allows to define a file which all the messages about reading historical data from monitoring station will be written to.

Parameter:

log_file_name

Default value: By default, the log file is not created.

Section name: CTAIRPOINTER

Option name: LOG_FILE_SIZE

Option value: number

Meaning: The item allows to define the size of the log file defined with the use of LOG_FILE / LOG_OF_HISTORICAL_TELEGRAMS options.

Parameter:

number - size of the log file in MB.
Default value: 10 MB.

- Section name: CTAIRPOINTER**
- Option name: LOG_OF_TELEGRAMS**
- Option value: YES/NO**

Meaning: The item allows to write the data sent from the monitoring station to the log file. The item should be used only while the Asix start-up.

Default value: NO.

- Section name: CTAIRPOINTER**
- Option name: LOG_OF_HISTORICAL_TELEGRAMS**
- Option value: YES/NO**

Meaning: The item allows to write the data sent from the monitoring station to the log file (declared with the use of **HISTORY_LOG_FILE** item). The item should be used only while the Asix start-up.

Default value: NO.

- Section name: CTAIRPOINTER**
- Option name: HISTORY_SCOPE**
- Option value: number**

Meaning: The position determines how far the driver will turn back in time in the monitoring station archives when reading historical data.

Parameter:

number - time in days.
Default value: 20.

- Section name: CTAIRPOINTER**
- Option name: HISTORY_ACCESS_TIMEOUT**
- Option value: number**

Meaning: The position determines which value will be returned to Aspad as timeout of Pozycja określa, jaka wartość zostanie zwrócona do Aspada jako re-query timeout about the data currently unavailable.

Parameter:

number - time in minutes.
Default value: 5.

- Section name: CTAIRPOINTER**
- Option name: ASPAD_HISTORICAL_BUFFER_LOG**
- Option value: YES/NO**

Meaning: The item allows to write the data sent to Aspad to the log file (declared with the use of HISTORY_LOG_FILE item). The item should be used only while the Asix start-up.

Default value: NO.

1.4 CtAK - Driver of AK Protocol for Emerson MLT2 Analyzers

Driver Use

The driver of the AK protocol allows data exchange between Asix system computers and Emerson MLT2 analyzers. Communication is realized over the RS-485 serial links.

The driver allows only to read the data available by the READ type command, except commands assigned to service purposes as well as commands with the CODE type attribute.

Parameterization of CtAK driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the CtAK driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: CtAK

CtAK tab:

Channel parameters:

Port=number [*;Baudrate=number*] [*;RecvTimeout*] [*;CharTimeout*]

where:

<i>Port</i>	- number of a serial port COM;
<i>Baudrate</i>	- transmission speed between a computer and a device; the following speeds are available: 300, 600,1200,2400, 4800, 9600, 19200 Bd; by default - 19200 Bd;
<i>RecvTimeout</i>	- timeout (w milliseconds) between sending the last character of a query and receiving the first character of a response; by default - 200 milliseconds;
<i>CharTimeout</i>	- timeout (w milliseconds) between the successive response characters; by default - 30 milliseconds;

NOTICE *The parameters passed in the channel declaration have to be compatible with the parameters set for communication ports of PLCs handled by this channel.*

EXAMPLE

An exemplary declaration of the channel with standard timeouts on COM2:

Channel / Name: CHANNEL
Driver: CtAK
Channel Parameters: Port=2

Addressing Process Variables

The syntax of symbolic address which is used for the variables belonging to the CtAK driver channel is presented below:

<Type>.<AnalNo>.<ChanNo>[.<RangeNo>].<Index>

where:

- Type* - variable type – a name of the command (CODE) used by the protocol for reading particular categories of variables from the analyzer are used as *Type*;
- AnalNo* - analyzer number;
- ChanNo* - channel analyzer number;
- RangeNo* - *Range* number of a given channel (if it is used when addressing the variable - see: statement of commands);
- Index* - specific interpretation of *Index* for the *Type* parameter is as follows:
a/ number of an element in *Range* (if *Range* is used when addressing the variable - see: statement of commands),
b/ number of elements in the data array returned by the command (if the command returns a data array). In particular the array dimension can equal 1.

```
/* concentration: analyzer no. 1, channel; 2, index 1
JJ_01, concentration,          AIKO.1.2.1, CHANNEL, 1, 1, NOTHING_FP
/* pressure: analyzer no. 1, channel 3, index 1
JJ_02, pressure,              ADRU.1.3.1, CHANNEL, 1, 1, NOTHING_FP
```

Input/Output States and Calibration State

The driver allows to read Input/Output states of DIO cards by the service command "r;ASVC Kn S615 b". The following variable address should be used for reading Input/Output states:

ASVC.<AnalNo>.<ChanNo><DIONo>.<Index>

where:

- AnalNo* - analyzer number,
- ChanNo* - channel analyzer number,
- DIONo* - number of a DIO card the calibration status is transferred by,
- Index* - offset in the array of data read from the DIO card. The following values are allowable:

- 1 – states 8 inputs I1 ... I8 (I1 – the least significant bit)
- 2 – states 8 inputs O1 ... O8 (O1 – the least significant bit)
- 3 – states 8 inputs O9 ... O16 (O9 – the least significant bit)
- 4 – states 8 inputs O17 ... O24 (O17 – the least significant bit)

The O24 output state includes the current calibration status.

EXAMPLE

Examples for reading input/output states:

```
# analyzer no. 1, channel 2, DIO no. 3, input state I1 ... I8  
JJ_01, state I1...8, ASVC.1.2.3.1, PT3, 1, 1, NOTHING
```

```
# analyzer no. 3, channel 1, DIO 4, output state O1 ... O24  
JJ_02, state O1...24, ASVC.3.1.4.2, PT3, 1, 1, NOTHING_DW
```

State of Transmission with the Analyzer

The driver stores information on the status of the last transmission session and on the value of the *Error Code* field transferred from the analyzer during the last transmission (if the transmission ended properly). Reading this information is realized by the following symbolic addresses:

IERR.< *Analnr*>.< *Chanrr*>

ICOM.< *Analnr* >

where:

- Analnr* - analyzer number,
- Chanrr* - number of the analyzer channel.

IERR returns the value of the *Error Code* field of the last transmission session in a given channel of the analyzer.

ICOM returns the status of the last transmission session with a given analyzer (0 - correct, 1 - transmission error).

Driver Configuration

CtAK driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CTAK** section.

- Section name: CTAK**
- Option name: LOG_FILE**
- Option value: log_filename**

Meaning - the item allows to define a file which all the diagnostic messages of the driver will be written to. The item is used for diagnostic purpose.

Default value - by default, the log file is not created.

- ☑ **Section name: CTAK**
- ☑ **Option name: LOG_FILE_SIZE**
- ☑ **Option value: number**

Meaning - the item allows to define the size of the log file.

Default value - by default, the log file is not created.

Parameter:

number - size of the log file in MB.

- ☑ **Section name: CTAK**
- ☑ **Option name: LOG_OF_TELEGRAMS**
- ☑ **Option value: YES/NO**

Meaning - the item allows to write the content of telegrams sent/received by the driver to the log file (declared by means of the item LOG_FILE). Writing the content of telegrams should be used only while the Asix start-up.

Default value - NO; by default, the driver does not write the content of telegrams to the log file.

EXAMPLE

An exemplary driver parameterization section:

- ☑ *Section name: CTAK*
- ☑ *Option name: LOG_FILE*
- ☑ *Option value: d:\tmp\ctAk\ak.log*

- ☑ *Section name: CTAK*
- ☑ *Option name: LOG_FILE_SIZE*
- ☑ *Option value: 3*

- ☑ *Section name: CTAK*
- ☑ *Option name: LOG_OF_TELEGRAMS*
- ☑ *Option value: YES*

Statement of Commands

There are implemented data types (commands of the AK protocol) and parameters used when addressing variables of the particular types below.

Table 5. List of Implemented Commands of the AK Protocol for the CtAK Driver.

Type (command)	Addressing by <i>Range</i>
AAEG	Yes
AAI	Yes
AANG	Yes
AEMB	No
AGRW	No
AIKG	No
AIKO	No
AKAK	Yes
AKAL	Yes
AKON	???
ALCH	Yes
ALIK	No
ALIN	Yes
ALKO	Yes
ALST	No
AM90	No
AMBA	Yes
AMBE	Yes
AMBU	Yes
AMDR	No
AQEF	No
ASOL	No
ASTF	Nie
ASTZ	No
ASYZ	No
AT90	No
ATEM	Nie
ATOL	No
AVEZ	No
Options	
ABST	No
AKEN	No
AKOW	Yes
AUKA	Yes
ASVC	Yes (DIO number is used instead of <i>Range</i>)

1.5 AM_SA85 - Driver of MODBUS PLUS Protocol for AM-SA85-000 Card

Driver Use

The AM_SA85 driver is used for data exchange between the Modbus Plus network of Schneider Automation and Asix system computers provided with the AM-SA85-000 card of Schneider Automation.

Parameterization of AM_SA85 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the AM_SA85 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: AM_SA85

AM_SA85 tab:

Channel parameters:

address [, *adapter* [, *discrete* [, *registers*]]]

where:

Modbus Plus network address - address in the Modbus Plus network in the ASCII string form of R1.R2.R3.R4.R5 format, where R1 ... R5 represent sequent levels of routing to device in the network;

Adapter - adapter number;

Maximal number of discrete values read out in a single telegram - max. number of discrete values read in an individual telegram;

Maximal number of registers read out in a single telegram - max. number of registers read in an individual telegram.

Default values:

adapter - 0,
discrete - 120,
registers - 120.

EXAMPLE

The definition of logical name CHANNEL operating according to the AM_SA85 protocol and exchanging data with the controller no. 10 (other parameters are default ones):

Channel / Name: CHANNEL

Driver: AM_SA85

Modbus Plus network address: 10.0.0.0.0

The AM_SA85 driver is loaded as a DLL automatically.

Addressing the Process Variables

The symbolic address syntax is compatible to the way of addressing used for the MODBUS protocol.

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to AM_SA85 driver.

Log file

Meaning - the item allows to define a file to which all the diagnostic messages of the AM_SA85 driver and the information about the content of telegrams received by the drive will be written. If the item doesn't define a full path, the log file will be created in the current directory. The log file should be used only during the Asix system start-up.

Default value - by default, the file log isn't created.

EXAMPLE

```
LOG_FILE=D:\asix\AM_SA85.LOG
```

Log file size

Meaning - it allows to determine a log file size in MB.

Default value - by default, 1 MB.

Log of telegrams

Meaning - the item allows writing to the log file (declared with use of the LOG_FILE item) the contents of telegrams transmitted during data exchange between Asix and Modbus Plus network controllers; writing the telegrams content to the log file should be used only during the Asix system start-up.

Default value - by default, the contents of telegrams isn't written to the log file.

Send timeout

Meaning - defines timeout for sending a query to a controller; the timeout is given as a multiple of 0.5 second.

Default value - by default, the item is set to 10 (5 seconds).

Receive timeout

Meaning - defines timeout for receiving an answer from a controller; the timeout is given as a multiple of 0.5 second.

Default value - by default, the item is set to 10 (5 seconds).

1.6 AREVA – Driver for Communication with MiCOM Devices

Driver Use

The AREVA driver is the extension of MODBUS driver in the area of generating alarms in the reaction to events proceeded in a device. The current manual focuses only on this extension. Other information you can find in the MODBUS user's manual.

Parameterization of AREVA driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the AREVA driver requires a channel with the following parameters to be added to the Current data module:

Standard tab:

Name: logical name of the transmission channel

Driver: AREVA

Areva tab:

Channel parameters:

adres,series, port[,baud,character,parity,stop, max_i/o,max_register]

where:

<i>address</i>	- address of a device in a MODBUS network;
<i>series</i>	- number of device series: 2 lub 4;
<i>port</i>	- serial port name (maximal number of serviced ports: 32);
<i>baud</i>	- transmission speed expressed in bauds; max: 115 kBd;
<i>character</i>	- number of bits in a transmitted character;
<i>parity</i>	- parity check type (even, odd, none);
<i>stop</i>	- number of stop bits,
<i>max_i/o</i>	- maximal number of inputs/outputs, the value of which may be transferred by devices within one cycle (max 127*16 i/o states);
<i>max_register</i>	- maximal number of registers, the state of which may be transferred by the device within one cycle (max 127 registers).

Parameters baud, character, parity, stop, max_i/o, max_register are optional.

Addressing the Process Variables

Declarations of variables are the same as in MODBUS driver.

Driver Configuration

AREVA driver parameters are declared in the Miscellaneous module, the *Directly entered options* tab.

The driver parameters can be declared in 'AREVA' section as well as in sections named in the same manner as the transmission channel. The values defined in 'AREVA' section become global ones for all devices. In other sections there are placed the parameters concerning individual devices. Some parameters may be used only in 'AREVA' section, other may appear in all sections.

Example

```
AREVA1= AREVA, 10, 4, COM1, 57600, 8, none, 1, 32, 64  
AREVA2= AREVA, 10, 4, COM2, 57600, 8, none, 1, 32, 64  
AREVA3= AREVA, 10, 4, COM2, 57600, 8, none, 1, 32, 64
```

Section name: AREVA
Option name: Global_alarms
Option value: TAK

Section name: AREVA
Option name: Recv_timeout
Option value: 500

Section name: AREVA1
Option name: Recv_timeout
Option value: 1000

The *Global_alarms* parameter refers to all devices. As devices are not individual parameterized, the parameter can be used only in 'AREVA' section. The *Recv_timeout* parameter placed in 'AREVA' section defines 500 milisecond timeout for all devices with the exception of a device declared in 'AREVA1' channel (for 'AREVA1' the parameter has 1 second declaration).

There are parameters for AREVA driver described below. „Global parameter“ means that a parameter can be declared only in 'AREVA' section.

- Section name: AREVA**
- Option name: Global_alarms**
- Option value: YES|NO**

Meaning: the item controls the way of transferring alarms read from devices to the alarm system of **asix**; **global parameter**.

Default value: by default, the alarms are transferred to the alarm system as global alarms (transferred to the alarm system by means of the function `AsixAddAlarmGlobalMili()`). Setting the value of the item GLOBAL_ALARMS on NO causes that the alarms are transferred to the alarm system by means of the function `AsixAddAlarmMili()`.

Section name: AREVA
 Option name: Event_check_period
 Option value: number
Meaning: the option declares the interval (in seconds) between checking the state of events and alarm generation in two subsequent devices connected to the same serial port; **global parameter**.
Default value: 10

Section name: AREVA
 Option name: Field_number
 Option value: number
Meaning: the option declares a field number for a given device; it is transmitted as an alarm parameter.
Default value: -1

Section name: AREVA
 Option name: Log_file
 Option value: file_name
Meaning: the item allows to define a file to which all diagnostic messages of AREVA driver and all messages describing the telegrams received and sent by AREVA driver will be written; if LOG_FILE does not define the full path, then the log file will be created in the current directory; the log file should be used only while the **asix** start-up; **global parameter**.
Default value: by default, the log file is not created.

Section name: AREVA
 Option name: Transmission_delay
 Option value: number
Meaning: the item allows to determine a time interval (as a multiple of 10 milliseconds) between two successive operations on a communication bus; **global parameter**.
Default value: by default, the item assumes a value of 1 (10 milliseconds).

Section name: AREVA
 Option name: number_of_repetitions
 Option value: number
Meaning: The item allows to define maximal number of trials to do the command in case of transmission errors; global parameter.
Default value: 3

Section name: AREVA
 Option name: Recv_timeout
 Option value: number
Meaning: Allows to specify a waiting time for arriving the first character of an answer sent from a specified device.
Default value: 1000

Section name: AREVA
 Option name: Areva2_Alarms / Areva4_Alarms
 Option value: yes/no
Meaning: if the parameter is set to 'yes' alarm servicing of specified device series is turned on; global parameter.
Default value: yes

Section name: AREVA
 Option name: Alarms2_base / Alarms4_base
 Option value: number
Meaning: allows to specify a number to be added to the alarm number of a device in order to obtain the alarm number in asix system; global parameter.

Default value: 500 for 2 series; 5000 for 4 series

- Section name: AREVA**
- Option name: Alarms_base**
- Option value: number**

Meaning: allows to specify numeration of alarms for each device.
 Default value: 500 for 2 series; 5000 for 4 series

Numeration of Alarms

The 2 series:

Recalculation of the event number into the alarm number:

$$\text{Asix_alarm_number} = \text{event_number} * 16 + \text{bit_number} + \text{alarms_base}$$

Bits are counted starting with BIT 0.

Numeration of bits and the meaning of individual bits is described in a device documentation.

The 4 series:

Numeration is based on the documentation: P34x_EN_GC_H54.pdf „MiCOM P342, P343, P344. Generator Protection Relays. Software Version 0320. Hardware Suffix J” - „Event Record Specification for Courier and MODBUS Interfaces” table on page 117.

Range	Meaning
0 - 199	General events. The list of events is available at the end of the table in the mentioned above documentation.
200 - 231	Relay contact events, it is the number of bit counted starting with 0.
300 - 331	Opto-isolated input events; it is the number of bit counted starting with 0.
400 - 491	Latched alarms. The number of alarm can be read form the „Event index 3x10011” column. There is the text: „Bit 15=state, bits 0-14=nn “nn” – alarm number.
500 – 595	Self reset alarms. Numeration as above.
1000 - 2599	Protection events. It is the number of bit counted starting with 0.

Alarm Parameters

Alarm parameters:

1. number of field
2. 16-bits word connected with the event and passed by a device

1.7 AS511 - Driver of AS511 Protocol for SIMATIC S5 PLCs

Driver Use

The AS511 driver is used for data exchange with SIMATIC S5 PLCs by means of a programmer interface. The transmission is performed with use of serial interfaces of standard serial ports of Asix system computers provided with the RS232C converter – current loop 20 mA. The operation of Asix with PLCs with use of the AS511 protocol doesn't require any controller's program adaptation.

The AS511 driver of the Asix system may be used for data exchange with the following PLC types: S5-90U, S5-95U, S5-100U, S5-115U, S5-135U.

Parameterization of AS511 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the AS511 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: AS511

AS511 tab:

Channel parameters:

port,[baud,character,parity,stop]

where:

<i>port</i>	- serial port name;
<i>baud</i>	- transmission speeds in bauds; the transmission speed must be equal to 9600 bauds;
<i>character</i>	- number of bits in a transmitted character;
<i>parity</i>	- parity check type (even, odd, none).

The parameters *baud*, *character*, *parity*, *stop* i *buffer* are optional. When they are omit, the default values are as follows:

- transmission speed - 9600 Bd,
- number of bits in a character - 8,
- parity check type - parity check,
- number of stop bits - 2.

EXAMPLE

An exemplary item defining the use of transmission channel operating according to the AS511 protocol is given below:

Channel / Name: CHANNEL
Driver: AS511
Port: COM1

The transmission channel with the logical name CHAN1 has the following parameters defined:

- AS511 protocol using a serial interface,
- port COM1,
- transmission speed of 9600 Bd,
- transmitted character length - 8 bits,
- parity check,
- two stop bits.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the AS511 driver channel is as follows:

variable_type [db_number.]variable_index

where:

- variabletype* - string identifying the variable type in the controller;
- db_number* - optional number of a data block; it is used only in case of process variables which map the content of words in data blocks;
- variable_index* - variable index within a given type. In case of data blocks it is the word no. in a data block.

The following symbols of process variables are allowed:

- EA - states of outputs, transferred in bytes,
- EAW - states of outputs, transferred in words,
- EE - states of inputs, transferred in bytes,
- EEW - states of inputs, transferred in words,
- EM - states of marks (flags), transferred in bytes,
- EMW - states of marks (flags), transferred in words,
- EZ - states of counters, transferred in words,
- ET - states of clocks, transferred in words,
- ED - values of words in data blocks,
- EL - values of double words in data blocks,
- EG - values of double words in data blocks, treated as a floating-point number in KG format,

EXAMPLES

- ED10.22 - word no. 22 in the data block no. 10
- EL20.32 - double word placed in words no. 32 and no. 33 in the data block no. 20
- EZ50 - counter no. 100

Driver Configuration

AS511 driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **AS511** section.

- Section name: AS511**
- Option name: BLOCK**
- Option value: YES/NO**

Meaning - allows reading the whole data block.

Default value - YES

NOTE *The AS511 driver (from 1.23 version) allows reading words of data placed in data blocks by reading the whole block instead of determined part of cache (like it was in the previous version). It allows data reading from the 115F controller. Reading the whole block is possible if the parameter 'block' is placed in the AS511 section.*

1.8 AS512 - Driver of AS512 Protocol for SIMATIC S5 PLCs

Driver Use

The AS512 driver is used for data exchange with SIMATIC S5 PLCs provided with the CP524/CP525 communication processor. The transmission is performed with use of serial interfaces of standard or additional serial ports of a computer.

The controller software must be prepared for cooperation with Asix, i.e.

- program in a CPU controller must include calls of functional blocks handling receiving and sending telegrams with use of a CP524/CP525 communication processor (*SEND_ALL*, *RECV_ALL*). The number of calls of these blocks within a controller operation cycle define the number of telegrams, which may be sent during the cycle between the computer and controllers !
- software of communication processor must use the 3964R procedure and transmission speed must be the same as the rate declared in the transmission channel of ASMEN.

Parameterization of AS512 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the AS512driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: AS512

AS512 tab:

Channel parameters:

port, [, *baud*, *character*, *parity*, *stop*, *cpu*]

where:

<i>port</i>	- serial port name,
<i>baud</i>	- transmission speed in bauds; the transmission speed should not exceed the value of 38400 bauds,
<i>character</i>	- number of bits in a transmitted character,
<i>parity</i>	- parity check type (even,odd,none),
<i>stop</i>	- number of stop bits,
<i>cpu</i>	- CPU number in the controller, to which the carried out operation refers.

The parameters *baud*, *character*, *parity*, *stop*, *cpu* i *buffer* are optional. In case of omitting them the default values are as follows:

- transmission speed - 9600 Bd,
- number of bits in a character - 8,
- parity check type - parity check,
- number of stop bits - 1,
- CPU number - 0.

EXAMPLE

An example item, which defines the use of transmission channel operating according to the AS512 protocol, is given below:

Channel / Name: CHAN1

Driver: AS512

Channel parameters: COM1,4800,8,even,1,2

The transmission channel of the logical name CHAN1 has the following parameters:

- AS512 protocol using a serial interface,
- port COM1,
- transmission speed of 4800 Bd,
- transmitted character length - 8 bits,
- parity check,
- one stop bit,
- data exchange concerns the CPU no. 2.

Addressing the Process Variables

During declaration of process variable its symbolic address is entered. It is used as an unique definition of the controller variable, the value of which will be assigned to the process variable in Asix. The syntax of symbolic address which is used for the variables belonging to the AS512 driver channel, is presented below:

variable_type [db_number.]variable_index

where:

- variable_type* - string identifying the variable type in the controller;
db_number - optional number of a data block; it is used only in case of process variables which are the content mapping of words in data blocks;
variable_index - variable index within a given type. In case of data blocks, it is the word no. in a data block.

The following symbols of process variables types (following the names of variable types used by SIEMENS) are permitted:

- EA - states of outputs, transferred in bytes,
EE - states of inputs, transferred in bytes,
EM - states of marks (flags), transferred in bytes,
EZ - states of counters, transferred in words,
ET - states of clocks, transferred in words,
ED - values of words in data blocks,
EL - values of double words in data blocks,
EG - values of double words in data blocks, treated as a number in the KG floating-point format.

EXAMPLES

- ED10.22 - word no. 22 in the data block no. 10
EZ100 - counter no. 100

The AS512 driver is loaded as a DLL automatically.

1.9 AS512S7 - Driver of AS512 Protocol for SIMATIC S7 PLCs

Driver Use

The AS512S7 driver is used for data exchange with SIMATIC S7 PLCs provided with the CP340 communication processor. The transmission is performed with use of serial interfaces in standard serial ports of a computer according to the AS512 protocol.

The ASKOM company offers the software for the SIMATIC S7 PLC that enables data exchange with Asix according to the AS512 protocol.

Parameterization of AS512S7 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the AS512S7 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: AS512S7

AS512S7 tab:

Channel parameters:

port, [,bauds,character,parity,stop,cpu]

where:

<i>port</i>	- name of the serial port,
<i>bauds</i>	- transmission speed in bauds,
<i>character</i>	- number of bits in a transmitted character,
<i>parity</i>	- parity check type (even, odd, none),
<i>stop</i>	- number of stop bits,
<i>cpu</i>	- number of the CPU (to which the carried out operation refers) in the controller.

The parameters *bauds*, *character*, *parity*, *stop*, *cpu* are optional. When they are omitted, the default values are as follows:

- transmission speed - 9600 Bd,
- number of bits in a character - 8,
- parity check type - parity check,
- number of stop bits - 1,
- CPU number - 0.

EXAMPLE

An example item, which defines the use of transmission channel operating according to the AS512S7 protocol, is given below:

```
Channel / Name: CHAN1
Driver: AS512S7
Channel parameters: COM1,4800,8,even,1,2
```

The transmission channel of the logical name CHAN1 has the following parameters defined:

- AS512S7 protocol using a serial interface,
- port COM1,
- transmission speed of 4800 Bd,
- transmitted character length - 8 bits,
- parity check,
- one stop bit,
- data exchange concerns the CPU no. 2.

During the declaration of process variable its symbolic address is entered. It is a unique definition of the controller variable, the value of which will be assigned to the process variable in Asix.

Addressing the Process Variables

The syntax of symbolic address which is used for the variables belonging to the AS512S7 driver channel is presented below:

```
variable_type [db_number.]variable_index
```

where:

<i>variable_type</i>	- string identifying the variable type in the controller;
<i>db_number</i>	- optional number of a data block; it is used only in case of process variables, which are the content mapping of words in data blocks;
<i>variable_index</i>	- variable index within a given type. In case of data blocks, it is the word no. in a data block.

In the AS512S7 protocol only the access to words in data blocks is implemented. For this reason there is only one type of process variables allowed:

ED	- values of words in data blocks.
----	-----------------------------------

EXAMPLES

ED10.22	- word no. 22 in the data block no. 10
---------	--

The AS512S7 driver is loaded as a DLL automatically.

1.10 BAZA - Driver for Access to Database

Driver Use

The BAZA driver allows to import data into the Asix system from databases. The access to database is realized on the basis of the ADO technology. BAZA makes all the data stored in databases available to the Asix system. The received data may (but they needn't) be stamped with a status and time. The driver also allows reading from other sources like an Excel spreadsheet. If data are stamped with a time, the driver allows to complete historical data in ASPAD archives. When data stored in a database are not stamped with a time, the data newly received by the driver are stamped with a current time. If a datum is not stamped with a status, the status *proper datum* will be assigned to it.

Parameterization of BAZA driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the BAZA driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: BAZA

BAZA tab:

Channel parameters:

database

where:

database

- field that determines a database.

It can be:

- file name; the name has to allow to distinguish it from the database name i.e. it has to include the "." or "\" character; when declaring a file name as *database*, it is assumed that it is a Microsoft Jet database (Microsoft.Jet.OLEDB.4.0);
- database name; in such case the database is assumed to be serviced by an SQL Server on a local station (SQLOLEDB);
- connection string put in quotation marks; this specification form allows to determine an arbitrary database, i.e. to determine the following parameters: database server localization (e.g. remote computer), user name, password, timeout of establishing a connection etc.; this form allows to specify a database as a DSN name;
- section name, put in square brackets, in which elements of the connection string are placed; this form is used in case of a long connection string.

EXAMPLE

An exemplary declaration of the transmission channel:

Microsoft Jet database:

Channel / Name: Measurements1
Driver: BAZA
Channel parameters: c:\Pomiary.mdb

Database defined by DSN data source (of computer or user):

Channel / Name: Measurements2
Driver:
Channel parameters: "DSN=Pomiary"

Database defined by file DSN data source:

Channel / Name: Measurements3
Driver:
Channel parameters: "FILEDSN=C:\BAZA\Pomiary.dsn"

Database defined by UDL file (Microsoft Data Link):

Channel / Name: Measurements4
Driver: Baza
Channel parameters: "File Name=C:\BAZA\Pomiary.UDL"

SQL database named "Pomiary" on local computer:

Channel / Name: Measurements5
Driver: BAZA
Channel parameters: Pomiary

SQL database named "Pomiary" on computer "Emisja":

Channel / Name: Measurements6
Driver: BAZA
Channel parameters: "Provider=SQLOLEDB.1;Data Source=Emisja;Initial Catalog = Poiary;Integrated Security=SSPI;"

Addressing the Variables

The syntax of symbolic address which is used for the variables belonging to the BAZA driver channel is presented below:

array_declaration[,*value_field*[.*time_field*][.*status_field*]]

where:

array_declaration - expression that determines an array in the database (set of records);
value_field - field name (column) containing the datum value;
time_field - field name (column) containing the data time (Data/Time type);
status_field - field name (column) containing the data status (numerical type – OPC status).

Value_field may be omitted if *array_declaration* determines the array containing one column.

If *time_field* is omitted, a current time is taken.

If *status_field* is omitted, the *proper data* status is assigned to the variable value.

Array_declaration can be:

- name of the array placed in the database;
- query, put in apostrophes or round brackets, sending to the database by the driver in order to data readout;
- symbolic name in the $\$(name)$ form. The name determines the query the syntax of which is defined in the [BAZA] section in an initialization file.

In the most simple and typical case the array is determined by its name. If, for example, the database contains the array named Pomiary containing Temperature, Pressure, Time and Status columns, then variable addresses would have the following form:

Pomiary.Temperature.Time.Status
Pomiary.Pressure.Time.Status

EXAMPLE

When the more complex rule defining the records is necessary, other address forms may be used, i.e. with query text, e.g.:

(SELECT * FROM Pomiary WHERE). Temperature.Time.Status

The queries have to be constructed to determine a record set ordered decreasingly according to the time. When reading current data, the driver modifies the query to read the newest record (the driver adds TOP 1 fraze). When reading historical data (only when address contains *time* field), the driver adds or modifies the WHERE fraze to receive data from the specified time range.

The other form of using the queries is use of a query name. The query is defined in the [BAZA] section in an initialization file. The name use allows:

- shortening the address in case of using many variables with the same query but different value fields;
- avoidance of errors in case of necessity of using the characters (which are interpreted by ASMEN in a different manner) in the query;
- optimization of a query number, i.e. if the array of many variables is the result of the query, then the driver sends only one query instead of one by one for each variable.

An exemplary declaration of query name use:

Definition of the variable address:

Name: Temperature

Address: $\$(QUERY1)$.Temperature.Time.Status

Name: Pressure

Address: $\$(QUERY1)$.Pressure.Time.Status

Initialization file:

[BAZA]

Query1 = SELECT * FROM Pomiary WHERE

NOTICE *The quotation marks (") should NOT be used in the address.*

Driver Configuration

BAZA driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The BAZA driver may be configured using the **BAZA** section placed in the application initialization file or sections having the same name as channel names. The parameters

placed in the BAZA section apply to all driver channels. The parameters placed in other sections refer to a specified channel. If the parameter is defined both in the BAZA section and in the channel section, then the parameter referring to a specified channel has a higher priority.

Section name: BAZA

Option name: No_TOP

Option value: YES/NO

Meaning - if the item has value NO, then the driver puts in the SQL query the fraze TOP limiting a number of read records. Some databases don't allow using the fraze TOP - then one should declare the value YES.

Default value - NO.

Section name: BAZA

Option name: log_file

Meaning - defines a file to which all the diagnostic messages of the driver and the information about the content of telegrams received by the driver will be written.

Default value - lack.

Section name: BAZA

Option name: Max_history

Option value: number

Meaning - determines a time period from the current moment backwards, for which historical data, saved in the station memory, will be read.

Default value - 30.

Parameter:

number - number in days.

Section name: BAZA

Option name: Record_optimize

Option value: number

Meaning - the parameter refers to variables determined by the name of the array. If the item has the value Yes, then only one (common for all variables) SQL query, causing readout of the record containing only the fields that occur in variable addresses, will be formulated for all variables placed in the array. If the parameter has the value No, all fields in array will be read.

Default value - yes.

Section name: BAZA

Option name: Order

Option value: yes/no

Meaning - if the parameter has the value Yes, the driver will formulate an SQL query in such way that read records will be ordered in according to the time fields. If the parameters has the value No, the records will not be ordered.

Default value - yes.

Section name: BAZA

Option name: History_records

Option value: number

Meaning - the parameter determines the maximal number of records read from the database once during historical data reading. The parameter has a sense only when *No_TOP* parameter takes the value No.

Default value - 1000.

Parameters:

number - number of records.

☑ **Section name: BAZA**

☑ **Option name: UTC**

☑ **Option value: yes/no**

Meaning - determines whether the time written in the database is an UTC time (Universal Time Coordinate or Greenwich Mean Time). If the parameter has the value Yes, the time is an UTC time, if the parameter has the value No - the time is a local time.

Default value - no.

Optimization of Field Number in a Record

The driver formulates one SQL query, common for all variables contained in the same array, causing readout of record including only the fields that occur in variable addresses. If the address even of one variable includes the name of the field that doesn't occur in the array, then reading of all array variables ends with an error. To determine which of variables has an incorrect name, one should declare *Record_optimize=No* - thanks to such solution the error will refer only to wrongly declared variables. If the error refers to the time field name, one should additionally set the *Order=No* parameter - but absence of ordering may cause reading incorrect data.

1.11 BUFOR – Driver of General Purpose

Driver Use

The BUFOR driver allows data exchange between the Asix system and any program developed by the user to transfer the process variables.

The transmission channel based on the BUFOR protocol is created by two programs:

- driver of the protocol BUFOR for general purpose (included in the Asix package),
- driver of process data transmission developed by the user.

The user program must be implemented in the form of a process operating in Windows XP / 2000 / NT 4.0 environments.

The data exchange between the BUFOR driver and the user program is performed by means of an exchange file (memory mapped file). The synchronization of the access to a memory mapped file is carried out by using a mutex object.

Parameterization of BUFOR driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the BUFOR driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: BUFOR

BUFOR tab:

Channel parameters:

FILE_MMF,USER,PAR1,PAR2,PAR3

where:

FILE_MMF - memory mapped file name;
USER - user process name;
PAR1..PAR3 - parameters which are transferred to the user process.

The description of data structures and rules of cooperation of a user process with the BUFOR driver is included in the file DrBufor.hlp.

Addressing the Process Variables

The syntax of symbolic address which is used for process variables belonging to the BUFOR driver channel is as follows:

Ivariable_index

where:

- I - constant element of symbolic address for the BUFOR driver channel;
- variable_index* - variable index in an array of user driver variables. The first variable has the index 1.

The other parameters in a process variable declaration have typical meaning.

The BUFOR driver is loaded as a DLL automatically.

Possibility of Mutex Name Declaration

It is possible to declare a mutex name in the MUTEX option declared in the *Miscellaneous* module, the *Directly entered options* tab:

- Section name: the same as name of the channel that uses BUFOR driver*
- Option name: MUTEX*
- Option value: mutex_name*

Example:

Section name: CHANNEL

Option name: BUFOR

Option value: TEST_MMF, userebuf, par1 par2 par3

Mutex declaration:

Section name: CHANNEL

Option name: MUTEX

Option value: TEST_MUTEX

When a mutex name is declared, the BUFOR driver operates according to the scheme:

- the driver creates the user's process by means of the procedure *CreateProcess()* and expects that the process will create a mutex with the name given in the MUTEX position; while creating a mutex, the process must occupy it at once!
- while giving the mutex name declared in the MUTEX position, the driver calls the *OpenMutex()* function; if *OpenMutex ()* returns an error, the driver will finish the channel initialization with the error;
- the driver expects till the user's program releases mutex and after that realizes the stage of verification of memory mapped file contents.

1.12 CTCalec - Driver of CALECMCP Device Protocol

Driver Use

The CTCalec driver is designed to retrieve current values of variables from the CALEC MCP meter of Aquametro.

CTCalec is a dynamic link library (DLL) with an interface meeting the requirements of the UniDriver module. The CTCalec driver together with UniDriver create a driver meeting the requirements of the ASMEN module.

Parameterization of CTCalec driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CTCalec driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CTCalec

CTCalec tab:

Channel parameters:
driver parameters

where:

driver parameters - configuration parameters of CTCalec described in the further part of the specification.

During loading and initialization of an Asix application, CTCalec receives from the ASMEN module an address of each process variable retrieved from the source definition of variables (in sequence and one time). The variables supplied by the driver are read-only.

Configuration Parameters

The driver supports the following configuration parameters described in the following table.

Table 6. Configuration Parameters of CTCalec.

Parameter Name	Meaning	Default Value
<i>Port</i>	Indicates the name and parameters of the serial port the device is connected to. For detail description, see below.	N/A- parameter required
<i>ReadingPeriod</i>	Indicates the period (in seconds); a variable value will be updated every <i>ReadingPeriod</i> in the internal	10 s

	driver buffer.	
<i>ReadingTimeout</i>	The maximal time of variable reading from the device (in milliseconds), it is recommended not to be less than 1200.	1200 ms

EXAMPLE

An example of the CTCalec channel declaration (all items must be written in one line):

Channel / Name: CalecMCP
Driver: CTCalec
Channel parameters: Port=COM1:9600:8:even:1, ReadingPeriod=10, ReadingTimeout=1200

Configuration Parameters of Serial Port

The full syntax of the serial port declaration is as follows:

Port=<port name >:<rate>:<character>:<parity>:<stop>

where:

- port name* - serial port name in the operation system, e.g. COM1 or COM2;
- rate* - baud rate of serial transmission;
- character* - number of bits in a transmitted character;
- parity* - parity check type (odd, even or none);
- stop* - number of stop bits, it may be entered 1, 15 (1.5 bits) or 2.

The simplified syntax includes *port name* only:

Port = <port name>

For the other parameters default values are assigned respectively: 9600:8:even:1

Addressing the Process Variables

A variable address consists of a hexadecimal address of the variable in the device and of the type of variable value coding separated by a colon. As the type of variable value it may be assumed FLOAT for floating-point variables and FIX for fixed-point variables.

EXAMPLE

- 2000:FIX Fixed-point variable to be retrieved from the address 2000 in hexadecimal format,
- 2080:FLOAT Floating-point variable to be retrieved from the address 2080 in hexadecimal format.

For floating-point variables the conversion function NOTHING_FP should be used and for fixed-point variables the conversion function NOTHING.

Period of Variable Refreshing (Updating)

The reading time of one variable is usually in the range from 520 ms to 630 ms (average 570 ms) but for some variables (in a tested device it was the measurement named Temperaturdifferenz) it may reach 1300 ms. When defining a driver reading period and variable refreshing period it is necessary to take into consideration that it should be physically possible to read the required variable in the defined refreshing period. Generally the driver reading period and the variable refreshing period are the same.

Protocol Functions Excluded from Implementation

In the documentation it is mentioned that there is at least one *text* type variable in the device. Because the transmission method of this data type is not described, it is not supported by the driver.

1.13 CAN_AC_PCI - Driver of CANBUS Protocol for CAN ACx PCI Card

Driver Use

The CAN_AC_PCI driver is used for data exchange between SELECONTROL MAS PLCs of Selectron Lyss AG and Asix system computers by using the CAN network. The Asix system computer must be provided with a card of communication processor CAN_AC1 or CAN_AC2 of Softing GmbH.

Parameterization of CAN_AC_PCI driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the CAN_AC_PCI driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CAN_AC_PCI

CAN_AC_PCI tab:

Channel parameters:

interface_no

where:

interface_no - number identifying the CAN_AC1/CAN_AC2 card interface by means of which the transmission with the CAN network is executed. In the CAN_AC1 card the interface no. 1 may be used exclusively.

The CAN_AC_PCI driver is loaded as a DLL automatically.

Addressing the Process Variables

Values of process variables are transferred in telegrams sent by CAN based controllers connected to a CAN network. Each telegram consists of at most 8 bytes that may be identified as:

- bytes indexed 1 – 8 (type BY),
- 16-bit numbers indexed 1 – 4 (type WD),
- 32-bit numbers indexed 1 – 2 (type DW).

The CAN_AC_PCI driver distinguishes the following types of access to process variables:

- read-only (type R_),
- write-only (type W_),
- read/write (type RW_).

The addressing of process variables consists in indication of:

- access type (R_, W_ or RW_);

- variable type (BY, WD, DW);
- telegram no. (for variables with RW_ access type it is the telegram number used to read the variable),
- index within the telegram (for variables with RW_ access type it is the index in the telegram used to read the variable),
- for variables with RW_ access type it is necessary to declare in addition:
 - a/ telegram no. used to read the variable,
 - b/ index in the telegram used to write variable.

The syntax of symbolic address which is used for variables belonging to the CAN_AC_PCI driver channel is as follows:

`<access_type><variable_type><tel>.<index>[.<tel>.<index>]`

where:

- | | |
|----------------------|--|
| <i>access_type</i> | - access type to the process variable: |
| R_ | - read-only, |
| W_ | - write-only, |
| RW_ | - read/write, |
| <i>variable_type</i> | - process variable type: |
| BY | - variable of the byte type, |
| WB | - variable of the 16-bit number type, |
| DW | - variable of the 32-bit number type, |
| <i>tel</i> | - telegram no., |
| <i>index</i> | - index within the telegram. |

EXAMPLE

X1, byte no 2 of telegram 31,R_BY31.2,	NONE, 1, 1, NOTHING_BYTE
X2, word no 3 of telegram 31,R_WD31.3,	NONE, 1, 1, NOTHING
X3, burner state, RW_BY31.1.35.3,	NONE, 1, 1, NOTHING_BYTE
X4, valve setting,RW_WD32.1.34.1,	NONE, 1, 1, NOTHING

Value of the variable X3 is transferred to the Asix system by means of the byte no. 1 of the telegram no. 31. The transfer of the variable X3 consists in sending from Asix a telegram no. 35, the byte no. 3 of which includes the required state of the variable X3.

Driver Configuration

CAN_AC_PCI driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CAN_AC_PCI** section.

- Section name: CAN_AC_PCI**
 - Option name: TRANSMISSION_SPEED**
 - Option value: interface_no,baud_id**
- Meaning - the item is used to declare a transmission speed in the CAN network.
- Default value - by default, the transmission speed is assumed to be 1 MB.
- Parameter:
- | | |
|---------------------|---|
| <i>interface_no</i> | - interface no. of the CAN_AC card (for the CAN_AC1 card always 1), |
| <i>baud_id</i> | - identifier of transmission speed in the CAN network: |
| 1 | - 1 MB |
| 2 | - 500 kB |
| 3 | - 250 kB |
| 4 | - 125 kB |
| 5 | - 100 kB |
| 6 | - 50 kB |
| 7 | - 20 kB |

EXAMPLE

An example of declaration of transmission speed of 20 kB (the CAN network numbered 1):

Section name: CAN_AC_PCI
Option name: TRANSMISSION_SPEED
Option value: 1,7

- Section name: CAN_AC_PCI**
- Option name: REFRESH_CYCLE**
- Option value: number**

Meaning - the item is used to declare a time interval between two successive signals allowing the CAN_AC card driver to read data from the CAN network.

Default value - by default, the CAN_AC_PCI driver reads data every 0.5 second.

Parameter:
 number - number of 0.5-second intervals, which must pass between two successive signals allowing the CAN_AC board driver to read data from the CAN network.

EXAMPLE

An example of declaration of data reading every 1 second:

Section name: CAN_AC_PCI
Option name: REFRESH_CYCLE
Option value: 2

- Section name: CAN_AC_PCI**
- Option name: NETWORK_CONTROL**
- Option value: number**

Meaning - the item allows to test the reception of telegrams from the CAN network. It defines the maximal time (in seconds) between reception of successive telegrams with the same number. In case of exceeding this time the process variables from such telegram will be provided with an error status. If additionally in the same time any telegram wasn't received from the CAN network the message about a lack of telegrams in the network is generated in 'Control Panel'.

Default value - by default, the CAN_AC_PCI driver doesn't check reception of telegrams.

Parameter:
 number - maximal number of seconds, which may pass between successive telegrams of the same number.

EXAMPLE

An example of checking the reception of telegrams every 5 seconds:

Section name: CAN_AC_PCI
Option name: NETWORK_CONTROL
Option value: 5

- Section name: CAN_AC_PCI**
- Option name: TELEGRAM_TRACE**
- Option value: YES|NO**

Meaning - the item controls transferring to the operator panel the messages about telegrams that have been received from the CAN network. A message includes the number of CAN network, the number of telegram, number of bytes and telegram contents in hexadecimal form.

Default value - by default, the contents of telegrams are not displayed.

- Section name: CAN_AC_PCI**
- Option name: CONTROL_TRACE**
- Option value: YES|NO**

Meaning - the item controls transferring to the operator panel the messages about control telegrams that have been sent from the Asix system computer to controllers. A message includes the number of CAN network, the number of telegram, number of bytes and telegram contents in hexadecimal form.

Default value - by default, the contents of telegrams are not displayed.

- Section name: CAN_AC_PCI**
- Option name: LOG_FILE**
- Option value: file_name**

Meaning - the item allows to define a file to which all messages, describing the telegrams received from the CAN network, will be written. If LOG_FILE does not define the full path, then the log file will be created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

- Section name: CAN_AC_PCI**
- Option name: USE_CONTROL_VALUE**
- Option value: YES|NO**

Meaning - the driver has two pools of telegrams: sending and receiving ones. The sending telegrams are used by Asix to send control data whereas the receiving telegrams contain actual copies of telegrams sent from controllers and are a source of values of process variables for Asix. USE_CONTROL_VALUE allows to copy a value of the process variable (of W type) from a sending telegram directly to a buffer of the receiving telegram. The copying concerns the receiving telegram with the same number as the sending telegram assigned to the control variable and is executed only after that have done the control operation correctly. In this way the values of process variables are used by driver as actual values of process variables. This state lasts up to the moment the real values of process variables under consideration will be read from a controller.
The CONTROL_VAR_CHECK item allows to change the copying mode of control values.

Default value - by default, the control values are not copied to the buffers of receiving telegrams of the driver.

Checking Control Variables

The declaration of W_ type variables (control variables) are checked by default. It is possible to use only one variable of this type in one telegram.

- Section name: CAN_AC_PCI**
- Option name: CONTROL_VAR_CHECK**
- Option value: YES|NO**

Meaning - the item permits to change default settings and enables using telegram to send control value by means of more than one variable of W_ type. Individual control values are send sequentially, i.e. by sending a separate telegram transferring a value of one control variable only, the other parts of the telegram are filled in with zeroes.

Change of Default Settings for Updating Mode of Receiving Buffers by Means of Control Variables

Section name: CAN_AC_PCI

Option name: USE_RW_DECLARATION

Option value: YES|NO

Meaning - the item allows to change the mode of copying control variables to buffers of driver receiving telegrams. The item is import for W_ type variables only, and is effective if it is used together with the CONTROL_VAR_CHECK=YES item. The result of using the item under consideration is copying the control variable to the buffer of receiving telegram (with the number specified in the process variable declaration in the position of telegram that is used to read the variable value).

Default value - by default, the driver buffers are not updated according to declarations of RW_ type variables.

1.14 CANOPEN - Driver of CANBUS Protocol for PCI 712 NT Card

Driver Use

The CANOPEN driver is used for data exchange between SELECONTROL MAS PLCs of Selectron Lyss AG and Asix system computers by using the CAN network. The Asix system computers must be provided with the PCI_712 NT communication processor board and the PCI712 CanLib32 software package of Selectron Lyss AG.

Parameterization of CANOPEN driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the CANOPEN driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CANOPEN

CANOPEN tab:

Channel parameters:
card_no

where:

card_no - PCI_712 NT card no., by means of which the transmission with the CAN network is executed. In the present version the CANOPEN driver can operate with one PCI_712 NT board.

The CANOPEN driver is loaded as a DLL automatically.

Addressing the Process Variable

Values of process variables are transferred in telegrams sent by controllers connected to the CAN network. Each telegram consists of at most 8 bytes, which can be identified as:

bits with indexes 1 - 8 (type BY),
16-bit numbers with indexes 1 - 4 (type WD),
32-bit numbers with indexes 1 - 2 (type DW).

The CANOPEN driver distinguishes the following types of access to process variables:

read-only (type R_),
write-only (type W_),
read/write (type RW_).

Addressing the process variables consists in indication of:

- access type (R_, W_ or RW_);
- variable type (BY, WD, DW);

- telegram no. (for the variables with RW_ access type it is the number of telegram used to read the variable);
- index within the telegram (for the variables with RW_ access type it is the index of telegram used to read the variable);
- for the variables of RW_ access type it is necessary to declare additionally:
 - number of telegram used to write the variable,
 - index of telegram used to write the variable.

The syntax of symbolic address which is used for variables belonging to the CANOPEN driver channel is as follows:

`<access_type><variable_type><tel>.<index>[.<tel>.<index>]`

where:

access_type - type of access to process variables:
 R_ - read-only,
 W_ - write-only,
 RW_ - read/write,
variable_type - type of process variables:
 BY - variable of byte type,
 WB - variable of 16-bit number type,
 DW - variable of 32-bit number type,
Tel - telegram no.,
Index - index within the telegram.

EXAMPLE

X1, byte no 2 of telegram 31, R_BY31.2, NONE, 1, 1, NOTHING_BYTE
 X2, word no. 3 of telegram 31, R_WD31.3, NONE, 1, 1, NOTHING
 X3, state of burners,RW_BY31.1.35.3, NONE, 1, 1, NOTHING_BYTE
 X4, valve setting,RW_WD32.1.34.1, NONE, 1, 1, NOTHING

The X3 variable value is transferred to Asix in byte no. 3 of the telegram 31. The setting of X3 variable consists in sending from Asix the telegram no. 34, the byte no. 3 of which contains required value of X3 variable.

Driver Configuration

CANOPEN driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CANOPEN** section.

Section name: CANOPEN

Option name: TRANSMISSION_SPEED

Option value: network_no,baud_id

Meaning - the item is used to declare the transmission speed in the CAN network.

Default value - by default, the transmission speed is assumed to be 1 MB.

Parameter:

network_no - CAN network no. (in the present version always the network no. 1),

baud_id - identifier of transmission speed in the CAN network:

- 1 - 1 MB
- 2 - 500 kB
- 3 - 250 kB
- 4 - 125 kB
- 5 - 100 kB

6 - 50 kB
7 - 20 kB

EXAMPLE

An example of declaration of transmission speed of 20 kB (the CAN network numbered 1):

Section name: CANOPEN

Option name: TRANSMISSION_SPEED

Option value: 1,7

Frequency of Data Reading from PCI_712 NT Card

Section name: CANOPEN

Option name: REFRESH_CYCLE

Option value: *number*

Meaning - the item is used to declare a time interval between successive signals allowing the PCI_712 NT card driver to generate information on messages received from the CAN network.

Default value - by default, the CANOPEN driver send signals every 0.5 sec.
number - equal to 0.5-second intervals, which must pass between successive signals allowing the PCI_712 NT card driver to generate information on messages received from the CAN network.

EXAMPLE

The declaration of sending a permission signal every 1 sec:

Section name: CANOPEN

Option name: REFRESH_CYCLE

Option value: 2

Checking Reception of Telegrams from CAN Network CAN

Section name: CANOPEN

Option name: NETWORK_CONTROL

Option value: *number*

Meaning - the item allows to test reception of telegrams from the CAN network. It defines the maximal time (in seconds) between receptions of successive telegrams with the same number. In case of exceeding this time the process variables bound with such telegram will be provided with an error status. If additionally in the same time any telegram wasn't received from the CAN network a message about a lack of telegrams in network is generated in 'Control Panel'.

Default value - by default, the CANOPEN driver doesn't check reception of telegrams.
number - maximal number of seconds which may pass between successive telegrams with the same number.

EXAMPLE

An example of checking reception of telegrams every 5 seconds:

Section name: CANOPEN

Option name: NETWORK_CONTROL

Option value: 5

Tracing Telegrams Received from CAN Network

- Section name: CANOPEN**
- Option name: TELEGRAM_TRACE**
- Option value: YES|NO**

Meaning - the item controls transferring to the operator panel the messages about telegrams that have been received from the CAN network. A message includes the number of CAN network, the number of telegram, number of bytes and telegram content in hexadecimal form.

Default value - by default, the contents of telegrams are not displayed.

EXAMPLE

The declaration of tracing the received telegrams:

Section name: CANOPEN
Option name: TELEGRAM_TRACE
Option value: YES

Tracing of Control Telegrams

- Section name: CANOPEN**
- Option name: CONTROL_TRACE**
- Option value: YES|NO**

Meaning - the item controls transferring to the operator panel the messages about control telegrams that have been sent from the Asix system computer to controllers. A message includes the number of CAN network, the number of telegram, number of bytes and telegram contents in hexadecimal form.

Default value - by default, the contents of telegrams are not displayed.

EXAMPLE

The declaration of tracing the control telegrams:

Section name: CANOPEN
Option name: CONTROL_TRACE
Option value: YES

- Section name: CANOPEN**
- Option name: LOG_FILE**
- Option value: file_name**

Meaning - the item allows to define a file to which all the messages, describing telegrams received from the CAN network, will be written. If LOG_FILE does not define the full path, a log file will be created in the current directory. The log file should be used only while the Asix system start-up.

Default value - by default, the log file is not created.

EXAMPLE

Section name: CANOPEN
Option name: LOG_FILE
Option value: D:\asix\CAN.LOG

1.15 COMLI - Driver of COMLI Protocol

Driver Use

The driver is designed for data exchange between the Asix system and SattConxx and other ABB PLCs supporting the COMLI (**COM**munication **L**ink) protocol. The data exchange is performed by means of a serial interface in the RS-232 or RS-485 standard.

In the present driver version the following functions of COMLI protocol are implemented:

- Transfer individual I/O bits,
- Transfer I/O bits or a register,
- Request individual I/O bits,
- Request several I/O bits or registers,
- Transfer date and time,
- Acknowledge.

Parameterization of COMLI driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the COMLI driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: COMLI

COMLI tab:

Channel parameters:

slave_no, port [, baud] [,parity] [,data_type]

where:

slave_no - slave no. assigned to the PLC;
port - name of the serial port through which the connection with the PLC will be executed;
baud - option: transmission speed; by default 9600;
parity - option: parity check; by default ODD;
data_type - option: representation of ASCII data (ASCII) or binary (BINARY); by default it is BINARY.

EXAMPLE

Below there is an example of declaration of transmission channel named CHANNEL, that is used for communication with the controller no. 3 through the port COM2 in default mode, i.e. 9600 Bd, 8 bit character, check parity ODD, binary representation of data:

Channel / Name: CHANNEL
Driver: COMLI
Channel parameters: 3, COM2

Types of Process Variables

In the driver the following types of process variables are defined:

IO	- I/O states,
RG	- values of registers,
TM	- writing date and time to a PLC.

The values of **IO** and **RG** type variables may be read and written whereas the values of **TM** type variable may only be written.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the COMLI driver channel is as follows:

<Type><Index>

where:

<i>Type</i>	- name of variable type,
<i>Index</i>	- address of the variable within the <i>Type</i> type of the variable.

Ranges of indexes are following:

type IO :	0 - 16383,
type REG :	0 - 3071,
type TM :	no index is given.

EXAMPLE

Examples of declaration of process variables:

JJ_1, state I/O number 1,IO1,CHANNEL,1,1,NOTHING
JJ_2, register number 10,RG10,CHANNEL,1,1,NOTHING
JJ_40, writing date and time every 1 minute, TM, CHANNEL,12,60,NOTHING_BYTE

Synchronization of Date and Time with the Controller

In the driver a mechanism of synchronization of date and time between Asix and PLCs is included.

The synchronization is activated for each transmission channel separately with use of option *Time_synchronization* declared in Architect in *Miscellaneous*, on *Directly entered options* tab:

Section name: ASMEN
Option name: TIME_SYNCHRONIZATION
Option value: *channel,variable*

where:

<i>channel</i>	- name of the channel used to communicate with a PLC.
<i>variable</i>	- name of an ASMEN variable belonging to the channel <i>channel</i> and using for synchronization of date and time.

The synchronization of date and time consists in writing to a PLC a frame containing the current date and time of Asix. The frame is written by using the function for writing the date and time of the COMLI protocol according to the frequency assigned to the *variable*. The variable type must be the type **TM** (supporting date and time), the number of

elements assigned to the *variable* must be 12 (the size of frame of date and time). The function NOTHING_BYTE must be used as a calculation function.

EXAMPLE

An example of the definition of time synchronization every 1 minute for the channel CHANNEL by using the variable SYNCHRO is given below.

Channel declaration:

Channel / Name: CHANNEL
Driver: COMLI
Channel parameters: 2, COM1

Declaration of the variable SYNCHRO:

Section name: ASMEN
Option name: DATA
Option value: COMLI.DAT

The declaration of the variable SYNCHRO is found in the file *COMLI.DAT* and has the following form:

SYNCHRO, synchronization of date and time, TM, CHANNEL,12, 60, NOTHING_BYTE

Synchronization parameters:

Variable: SYNCHRO

Driver Configuration

COMLI driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **COMLI** section.

- Section name: COMLI**
- Option name: RECV_TIMEOUT**
- Option value: slave_no, number**

Meaning - for each slave it is possible to define the maximal time, which may elapse between sending query and receiving response (so-called receiving timeout).

Default value - by default, the item has a value of 2000.

Parameter:

slave_no - slave no. assigned to the controller.
number - value of timeout in milliseconds.

- Section name: COMLI**
- Option name: LOG_FILE**
- Option value: file_name**

Meaning - the item allows to define a file to which all the diagnostic messages of the driver and the information about the content of telegrams sent/received by the driver will be written. If the item doesn't define a full path the log file will be created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

Section name: COMLI

Option name: LOG_FILE_SIZE

Option value: number

Meaning - the item allows to define the size of the log file in MB.

Default value - the default size of the log file amounts 1 MB.

Parameter:

number - size of the log file in MB

Section name: COMLI

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - the item allows to write the content of telegrams sent/received by the driver to the log file (declared by means of the item LOG_FILE). Writing the content of telegrams should be used only while the Asix start-up.

Default value - by default, the driver does not write the content of telegrams to the log file.

Section name: COMLI

Option name: NUMBER_OF_REPETITIONS

Option value: number

Meaning - the item allows to define maximal number of trials to do the command in case of transmission errors.

Default value - by default, max. 3 repetitions are executed.

Parameter:

number - number of repetitions.

1.16 CPIII - Driver to Communicate with Control Panels CP-III/E Used to Control Compressors of MYCOM (MAYEKAWA)

Driver Use

Driver is used to exchange data between the Asix system and control panels CPIII/E used to control compressors of MYCOM (MAYEKAWA). Communication is performed using a serial communication in RS-485 standard.

The drivers realizes the following functions:

- readout of current analog and binary values,
- readout and write of setpoints,
- readout of alarms and declaring them to the Asix alarm system.

Parameterization of CPIII driver is implemented using the Architect program.

Declaration of Transmission Channel

Declaration of transmission channel operating according to the protocol of driver CPIII requires to add to the module *Current data* the following parameters:

Standard tab:

Name: logical name of the transmission channel

Driver: CPIII

CPIII / Channel parameters tab:

Identification:

Address of a device in a network;

Port:

Port;

Transmission parameters:

Transmission speed in bauds;

Word length;

Parity checking (n-none, e-even parity, o-odd parity, m-mark, s-space);

Stop bits.

If the transmission parameters are omitted, the following values are default:
9600,7,e,1

Alarms base:

Number of first alarm

Global alarms:

The way of transferring alarms read from remote devices to the alarm system of the Asix system

An exemplary channel declaration:

Driver: CPIII

Channel parameters:

*Address of a device in a network: 10,
Port: COM1*

Declaration of Process Variables

Addressing variables of CPIII driver is based on the description of the communication protocol of CPIII device, but value of each variable differs to this in the description of the protocol. In particular, do not use multipliers described in the protocol because the driver performs the relevant operations of multiplication /division.

Table. Declaration of address of CPIII driver variables.

Address	Meaning	Conversion function of NOTHING_xxx type
D1	Analog input 1	NOTHING_FP
D2	Analog input 2	NOTHING_FP
D3	Analog input 3	NOTHING_FP
D4	Analog input 4	NOTHING_FP
D5	Analog input 5	NOTHING_FP
D6	Analog input 6	NOTHING_FP
D7	Analog input 7	NOTHING_FP
D8	Analog input 8	NOTHING_FP
D9	Analog input 9	NOTHING_FP
D10	Analog input 10	NOTHING_FP
D11	Analog input 11	NOTHING_FP
D12	Analog input 12	NOTHING_FP
D13	Analog input 13	NOTHING_FP
D14	Analog input 14	NOTHING_FP
D15	Analog input 15	NOTHING_FP
D16	Analog input 16	NOTHING_FP
D17	Operation time in hours	NOTHING_DW
D18	like D17	NOTHING_DW
D19	Capacity control manipulated value (MV), calculated by PID controller, wanted slide valve position.	NOTHING_FP
D20	Superheat process value (PV); actual value of evaporator superheat in case of temperature control.	NOTHING_FP

	example: chiller unit equipped with linear expansion valve.	
D21	Superheat manipulated value (MV), calculated by PID controller.	NOTHING_FP
D22	Liquid injection process value PV.	NOTHING_FP
D23	Liquid injection manipulated value (MV) , calculated by PID controller.	NOTHING_FP
D24	fixed data : 000000	NOTHING_FP
D25	Setpoint unit start, cut-in value for controller. (Equivalent of D1 in the command of setpoint entry for communication protocol of CPIII device).	NOTHING_FP
D26	Setpoint unit stop, cut-out value for controller. (Equivalent of D2 in the command of setpoint entry for communication protocol of CPIII device).	NOTHING_FP
D27	Capacity control setpoint. (Equivalent of D3 in the command of setpoint entry for communication protocol of CPIII device).	NOTHING_FP
D28	Setpoint superheat control - only applicable in case of temperature control. (Equivalent of D4 in the command of setpoint entry for communication protocol of CPIII device)	NOTHING_FP
D29	Setpoint Liquid Injection, setpoint for liquid injection oil cooling. (Equivalent of D5 in the command of setpoint entry for communication protocol of CPIII device).	NOTHING_FP
D30	fixed data : 000000	NOTHING_FP
D31	Current mode: 10 : manual mode 15 : manual mode + datacomms on 20 : auto 25 : auto mode + datacomms on 30 : remote mode 35 : remote mode + datacomms on 40 : remote - auto mode 45 : remote -auto mode + datacomms on	NOTHING_BYTE
D31.n	Current mode divided into individual elements: D31.0 – has the value of 1 for automatic mode, and 0 for manual D31.1 – has the value of 1 for "datacomms" and 0 in other case D31.2 – has the value of 1 for remote mode ("remote") and 0 in other case	NOTHING_BYTE
D32	Digital inputs	NOTHING_DW
D32.n	A single bit of digital input "n" can take values form 0 to 31. It corresponds to digital inputs from 1 to 32, e.g. D32.0 corresponds to digital input of 1. The variable takes the value of 1 if the digital input is set, and 0 otherwise	NOTHING_BYTE
D33	The status of all alarms	NOTHING_DW
D33.n	The status of a single alarm. The variable takes the	NOTHING_BYTE

	<p>value of 1 if the alarm is active, and 0 otherwise. The number "n" identifies a single alarm and is the number of bit in status word of alarms in the range of 0-31.</p> <p>Examples: start fail" (the word of alarm status 00000001) oil pressure low" (the word of alarm status 00000002) "discharge pressure high" (the word of alarm status 00000004) "discharge temperature high" (the word of alarm status 00000008) itd.</p>	
D100	<p>Special controls.</p> <p>The variable takes the value of:</p> <p>0 - "remote start" OFF & "100% lock" OFF 1 - "remote start" OFF & "100% lock" ON 2 - "remote start" ON & "100% lock" OFF 3 - "remote start" ON & "100% lock" ON</p> <p>(Equivalent of D6 in the order of setpoints entry of communication protocol of CPIII device).</p>	NOTHING_BYTE
D100.n	<p>Special control by individual elements.</p> <p>D100.0 - "100% lock" D100.1 - "remote start" OFF corresponds to 0 and ON corresponds to 1.</p>	NOTHING_BYTE

Alarm Generation

The driver of CPIII device with the interval not longer than the value determined by **Event check period** checks the state of lists of device events and generates alarms for all new found events. Alarm check is done for each data readout from the device, also when data is read from the device to refresh variable values. So alarm check may be done more frequently than it is determined by **Event check period** - when there are variables which refresh period is shorter than the value of this parameter. The number of Asix system alarm is created as the sum of bit number in the status word of CPIII device alarms and the value determined by the parameter **Alarms base**. If there is no **Alarms base** declaration the alarms will not be generated.

Generating an alarm, the driver transfers the address of CPIII device as the parameter of this alarm. This address may be used in the text associated with the given alarm.

Example:

If the parameter *Alarms base* has the value of 5 and the alarm 'r;start fail' appears (the mask of which has the value of 00000001 (bit no. 0)), the alarm no. 5 will be generated. Simultaneously, the variable with address D33.0 will take the value of 1.

Parameters of Channel / CPIII Driver

The driver configuration is defined in the *Current Data* module, in the channel operating according to CPIII driver, on tabs: *Channel parameters*, *Driver parameters*.

Parameters located on tabs of driver parameters applies to all channels with the same driver declared. In the case of several channels operating on the same driver – parameters set on tabs *Driver parameters* for one channel are automatically displayed on the same tabs for the rest of channels.

Parameters located on tabs of channel parameters applies to one channel for a specific device.

Channel parameters 2 tab:

Event check period

Meaning - interval between checking the state of events and generating alarms.
Default value - 30
Parameter:
number - number in seconds.

Log file

Meaning - the item allows to define a file to which all the diagnostic messages of the driver and the information about the content of telegrams sent/received by the driver will be written. If the item doesn't define a full path the log file will be created in the current directory. The log file should be used only while the Asix start-up.
Default value - by default, the log file is not created.
Parameter:
Log file - nazwa pliku logu;
Maximum size of log file - number in MB; 0 - unlimited;

Retries

Meaning - number of retries in case of transmission error.
Default value - 3
Parameter:
number - positive number.

Timeout

Meaning - maximum time of waiting for a device response.
Default value - 500
Parameter:
number - time in milliseconds;

Special control

Meaning - parameter specifies a default value for the D100 variable in the situation when the driver has got a first command to write the variable from the range of D25-D29. The values of all the variables for write – i.e. D25-D29 and D100 are written simultaneously during one operation of transmission. Before that operation the driver reads values of the variables D25-D29 and sends them to a device in unchanged form (except the variable the value of which is recommended to be changed). Only the value of demanded variable is changed. It is not possible to read the previous value of the variable D100 – but some variable has to be sent to a device – so, the parameter *Special control* specifies the value of D100 in above case. The parameter does not have sense if the first operation of writing concerns the variable D100, i.e. when the user specified its value before changing values of other variables.
Default value - 0

Communication Drivers

Pressure control

- Meaning - parameter specifies the multiplier used for reading/writing the variables D25, D26 and D27. For 'Yes' declaration the multiplier takes the value of 100 – for 'No' declaration the multiplier takes the value of 10.
- Default value - 'No'

Driver parameters tab:

Alarms base

- Meaning - parameter allows to specify the way of alarm numbering. After adding this parameter to the number of bit in the alarm status word – the number of alarm in Asix system is got.
- Default value - -1 (no alarm handling).
- Parameter:
number - positive number.

Global alarms

- Meaning - parameter controls the way of transmission of alarms read from remote devices to the alarm system of Asix.
- Default value - by default, alarms are transmitted to the alarm system as global alarms (by the function `AsixAddAlarmGlobalMili()`). Setting the value to NO causes that alarms are transmitted to the alarm system by the function `AsixAddAlarmMili()`.

Event check period

- Meaning - parameter allows to specify the interval between checking the state of events and alarm generation.
- Default value - 30.
- Parameter:
number - time in seconds.

Log file

- Meaning - parameter allows to specify the name of log file and the size of the log file.
- Default value - the log file is not created and maximum size of log file by default equals 0 - that means unlimited.
- Parameter:
number - time in seconds.

Driver parameters 2 tab:

Retries

- Meaning - parameter allows to specify the maximal number of tries to do the command in case of transmission errors.
- Default value - 3.
- Parameter:
number

Timeout

Meaning - parameter allows to specify the maximal timeout for the response from an individual device.
- 500.
Default value
Parameter: *number* - time in milliseconds.

Special control

Meaning - parameter specifies a default value for the D100 variable in the situation when the driver has got a first command to write the variable from the range of D25-D29. The values of all the variables for write – i.e. D25-D29 and D100 are written simultaneously during one operation of transmission. Before that operation the driver reads values of the variables D25-D29 and sends them to a device in unchanged form (except the variable the value of which is recommended to be changed). Only the value of demanded variable is changed. It is not possible to read the previous value of the variable D100 – but some variable has to be sent to a device – so, the parameter *Special control* specifies the value of D100 in above case. The parameter does not have sense if the first operation of writing concerns the variable D100, i.e. when the user specified its value before changing values of other variables.
Default value - 0

Pressure control

Meaning - parameter specifies the multiplier used for reading/writing the variables D25, D26 and D27. For 'Yes' declaration the multiplier takes the value of 100 – for 'No' declaration the multiplier takes the value of 10.
Default value - 'No'

Example of driver parameterization

Declaration of channel:

Name: CPIII_1
Channel parameters: 5, COM1,57600,8,none,1

Name: CPIII_2
Channel parameters: 5, COM2

Name: CPIII_3
Channel parameters: 6, COM2

Declaration of parameters for the channel CPIII:

- Global alarms:* Yes
- Event check period:* 60

Declaration of parameters for the channel CPIII_2:

- Event check period:* 30

Global alarms applies to all devices. *Event check period* is different for the device of CPIII_2 channel.

1.17 CZAZ - Driver for Communication with CZAZ-U and CZAZ-UM

Driver Use

The driver of serial link RS-485 that allows to exchange data between Asix system and digital protection devices CZAZ-U and CZAZ-UM of ZEG-Energetyka.

Parameterization of CZAZ driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CZAZ driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CZAZ

CZAZ tab:

Channel parameters:
address, port, [baud, character, parity, stop]

where:

address - device address in network;
port - serial port name;
baud - transmission speed in bauds;
character - number of bits in a transmitted character;
parity - parity check type (even, odd, none);
stop - number of stop bits,

An exemplary channel declaration:

Name (of channel): ASMEN
Driver: CZAZ
Channel parameters: 10, COM1,115200,8,none,1

Declaration of Process Variables

The syntax of symbolic address which is used for variables belonging to the CZAZ driver channel is as follows:

object_id[.element_nr[bit_nr]]

where:

object_id - hexadecimal identifier of an object according to CZAZ device documentation. It is also possible to use the name of an object instead of the number.

- element_nr* - The number of element within an object. The first element has the number 0. If *element_nr* is omitted, it is taken 0.
- bit_nr* - The number of bit within an element. The first bit has the number 0.

Example

In the documentation of CZAZ device there is the 0102 object named Signal, which contains three elements: Signal1, Signal2 i Signal3.

Address	Meaning
102	first element of the object - Signal1 (as 32-bit word)
0102	as a/m
Signal	as a/m
102.0	as a/m
Signal.0	as a/m
102.1	second element of the 102 object - Signal2 (as 32-bit word)
102.1.4	Bit named SPZ5 in the second element of 102 object

Variables referring to objects of OB type are 8-bit elements (NOTHING_BYTE conversion function).

Variables referring to objects of 2B type are 16-bit words (NOTHING conversion function).

Variables referring to objects of 4B type are 32-bit words (NOTHING_DW conversion function).

Variables referring to individual bits in objects are 8-bit elements (NOTHING_BYTE conversion function).

Variables referring to elements of ULONG type objects are 32-bit words (NOTHING_DW conversion function).

Variables referring to elements of UWORD type objects are 16-bit words (NOTHING_DW conversion function).

The first element of 0110 object (Counter) is 32-bit word (NOTHING_DW conversion function), and the rest elements are 16-bit words (NOTHING conversion function).

The driver allows access to the first element of 0004 object (Time). It is 32-bit number (NOTHING_DW conversion function). To display this element on wisualization masks it is possible to use the NUMBER object with the format %D. The driver permits to write such a variable into a device and set (in this way) its time. The number of 0004 object milliseconds are unavailable.

The driver allows access to the following objects: 0001, 0002, 0004, 0011, 0012, 0013, 0014, 0100, 0101, 0102, 0105, 0110, 0111, 0112, 0114, 0115, 0119, 011B, 011D, 011E, 0120, 0121, 0125, 0126, 0200, 0201, 0202, 0203, 0204, 0208, 0209, 020A, 020B, 020D, 020E, 020F, 0210, 0211, 0212, 0213, 0221, 0222, 0223, 0224, 0225, 0227, 0228, 0229, 022A, 022C, 022D, 0230, 0231, 0232, 0233, 0234, 0235, 0236, 0300, 0311, 0312, 0313, 0314, 031A, 0320, 0321, 0330, 0400, 0401, 0402, 0500, 0501, 0502 and 0503.

Generation of Alarms

The driver of CZAZ device with the interval defined by the *Event_check_period* parameter checks the state of device event lists and generates alarms for all new detected events. The number of Asix system alarm is created as the sum of the number of CZAZ device

event and the value defined by the *Alarms_base* parameter. The buffer of CZAZ device events can include up to 500 new events. For each event the alarm of event beginning / end is generated. Therefore it is possible to generate 1000 alarms at the same time for each serial link that CZAZ devices are connected to, while the default alarm buffer size of Asix system equals 200. To prevent losing alarms, the buffer size should be set with use of the *INPUT_BUFFER_SIZE* parameter of *ALARMS_SYSTEM* section (The option is not directly supported by Architect module, so to declare it for the application, you should use the *Miscellaneous* module (in Architect), *Directly entered options* tab.).

Driver Configuration

CZAZ driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The CZAZ driver may be configured using the 'CZAZ' section as well as sections having the same name as channel names. The parameters placed in the 'CZAZ' section apply to all devices and have global meaning. The parameters placed in other sections refer to a specified device. Some parameters can be declared only for the 'CZAZ' section, other can be placed in all sections.

Example

Channel declaration:

Name: CZAZ1
Channel parameters: 10, COM1,57600,8,none,1

Name: CZAZ2
Channel parameters: 10, COM2,57600,8,none,1

Name: CZAZ3
Channel parameters: 10, COM2,57600,8,none,1

Driver parameters:

Section name: CZAZ
Option name: Global_alarms
Option value: yes

Section name: CZAZ
Option name: Time_sync
Option value: 50

Section name: CZAZ1
Option name: Time_sync
Option value: 120

The *Global_alarms* parameter refers to all devices. As devices are not individual parameterized, the parameter can be used only in 'CZAZ' section. The *Time_sync* parameter placed in 'CZAZ' section defines 50 second time interval to control the time of all devices with the exception of CZAZ1 channel device, as in the 'CZAZ1' section one has defined the time interval equalled 120 seconds.

There are same driver parameters below. The 'global parameter' means the parameter declared only in '**CZAZ**' section.

Section name: CZAZ
 Option name: Alarms_base
 Option value: number
Meaning: allows to specify numeration of alarms for each device.
Default value: -1 (no alarm service).

Section name: CZAZ
 Option name: Global_alarms
 Option value: yes/no
Meaning: the item controls the way of transferring alarms read from remote devices to the alarm system of Asix; **global parameter**.
Default value: by default, the alarms are transferred to the alarm system as global alarms (transferred to the alarm system by means of the function AsixAddAlarmGlobalMili()). Setting the value of the item GLOBAL_ALARMS on NO causes that the alarms are transferred to the alarm system by means of the function AsixAddAlarmMili()).

Section name: CZAZ
 Option name: Event_check_period
 Option value: number
Meaning: the option declares the interval (in seconds) between checking the state of events and alarm generation in two subsequent devices connected to the same serial port; **global parameter**.
Default value: 10

Section name: CZAZ
 Option name: Field_number
 Option value: number
Meaning: the option declares a field number for a given device; it is transmitted as an alarm parameter.
Default value: -1

Section name: CZAZ
 Option name: Log_file
 Option value: file_name
Meaning: the item allows to define a file to which all diagnostic messages of CZAZ driver and all messages describing the telegrams received and sent by CZAZ driver will be written; if LOG_FILE does not define the full path, then the log file will be created in the current directory; the log file should be used only while the Asix start-up; **global parameter**.
Default value: by default, the log file is not created.

Section name: CZAZ
 Option name: Transmission_delay
 Option value: number
Meaning: the item allows to determine a time interval (as a multiple of 10 milliseconds) between two successive operations on a communication bus; **global parameter**.
Default value: by default, the item assumes a value of 1 (10 milliseconds).

Section name: CZAZ
 Option name: Number_of_repetitions
 Option value: number
Meaning: the item allows to define maximal number of trials to do the command in case of transmission errors; **global parameter**.

Communication Drivers

Default value: 3

Section name: CZAZ

Option name: Recv_timeout

Option value: number

Meaning: allows to specify a waiting time for arriving the first character of an answer sent from a specified device.

Default value: 1000

Section name: CZAZ

Option name: Time_sync

Option value: number

Meaning: allows to specify a time (in seconds) between successive time readouts from a device. If the parameter equals 0, the time is not read and all variables get a Windows time stamp.

Default value: 600

Section name: CZAZ

Option name: Time_difference

Option value: number

Meaning: allows to specify the time difference (in milliseconds) between a device time and Windows time. After exceeding the time defined by *Time_difference*, the time in CZAZ device will be set and equalized with the Windows time. The parameter is taken into consideration only if the *Time_sync* parameter differs from 0.

Default value: 0 (time in CZAZ device is not changed).

1.18 DataPAF - Driver of DataPAF Energy Counter Protocol

Driver Use

The DataPAF protocol is designed for communication with DataPAF energy counters provided with the EPROM 2.1 13.Aug.96 or later one. For the communication a COM interface is used.

Parameterization of DataPAF driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the DataPAF driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: DataPAF

DataPAF tab:

Channel parameters:

COM n

where:

COM n - number of the serial port to which the DataPAF energy counter is connected.

Each defined channel may have its own section, the name of which is a logical name of the channel. It contains parameters for the given channel. Some channels may have a common serial port.

Also the given port COM n may have its own section named **DataPAF: n** . It defines parameters of the serial port.

Definition of Variables

EXAMPLE

An example of the ASMEN variable definition:

```
3010E15m1, DATAPAF Średnia 15min energii kan. 1, XEN1, CHAN1, 1, 60, NOTHING_FP  
3010EBDSH, DATAPAF suma energii biernej kanałów w pop.okres, PEN11.8, CHAN1, 1,  
3600, NOTHING_FP
```

The List of All the Variable Types Supported by the DataPAF Driver

c - signifies the number of channel 1..30
s - time zone 0..8

Table 7. The List of All the Variable Types Supported by the DataPAF Driver.

Name	Description	Type	
ENc.s	The current value of energy in the current accounting period in a given time zone.	FLOAT	
PENc.s	The value of energy in the whole previous accounting period in a given time zone.	FLOAT	
MMc.s	Maximum power in the current accounting period in a given time zone.	FLOAT	
PMMc.s	Maximum power in the previous accounting period in a given time zone.	FLOAT	
MMIc	Minute power. The power for the previous minute.	FLOAT	
IMIc	Minute impulses. The number of impulses in the previous minute.	WORD	
IMPc	Impulses in integration period. The number of impulses in the last whole period of integration.	WORD	
BRKc	Break in integration period. The variable takes the value of 1 when a break in the line feeding impulses to counter occurred during the last period of integration.	BYTE	
POFc	The loss of voltage in integration period. The variable can take the following values: 0 - no loss; 1 - short voltage loss; 2 - long voltage loss; 3 - long and short voltage loss;	BYTE	
XENc	Energy value in the period of integration. Energy value in the last full period of integration. It is the value of IMP variable multiplied by the current value of input multiplier, taking into account the value of <i>energy_error</i> parameter.	FLOAT	
IMTc	Impulses in the current period of integration.	WORD	
Lc	Value of the counter in the current accounting period.	FLOAT	
PLc	Value of the counter in the previous accounting period.	FLOAT	
TIM	Current time of electricity meter as a string of bytes.	TEXT	
DAT	Current date of electricity meter as a string of bytes.	TEXT	
DTIM	Current time and date of electricity meter as a string of bytes.	TEXT	
ALRc	Alarms associated with the channel. Alarms are presented as a mask of bits: Bit 4 – a break in the input line	BYTE	

	(10H) Bit 5 – excess of power limit (20H)		
GALR	Counter alarms. Alarms are presented as a mask of bits: Bit 1 – no place for registration (2H) Bit 2 – used up batteries (4H) Bit 3 – break in the line of synchronization (8H)	DWORD	
INMULc	Value of input multiplier. It is the value to be multiplied by the number of impulses to obtain the equivalent energy value.	FLOAT	
INMULCNTc	Counter number.	WORD	
INMULKUKIc	Factor $K_u * K_i$.	FLOAT	
INMULCONSTc	Constant of the counter.	DWORD	
INMULDIGc	Number of digits.	WORD	
MCHAN	Maximum number of channels.	WORD	
PNT	Reference point.	WORD	
REG	Region.	WORD	
COL	Collector.	WORD	
CHAN	Number of channels.	WORD	
SUM	Number of sums.	WORD	
INTEG	Integration period in minutes.	WORD	
PPS	Beginning of the previous accounting period.	DWORD	
PPE	End of the previous accounting period.	DWORD	
CPS	Beginning of the current accounting period.	DWORD	
CPE	End of the current accounting period.	DWORD	

Historical Data

Historical data are available for the following variable types: POF, IMP, BRK and XEN.

Driver Configuration

DataPAF driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The default values of serial interfaces are retrieved from the section **DataPAF**, if section exists. This section is used to configure all the channels for the DataPAF protocol, which are declared in this system.

- Section name: DataPAF**
- Option name: NUMBER**
- Option value: number**

Or

- Section name: DataPAF**
- Option name: serial_Number**
- Option value: number**

Meaning - determines an identification number of the DataPAF counter. Input of incorrect number makes the communication impossible.

Default value - 1234.

Communication Drivers

Parameter:

number - counter number.

Section name: DataPAF

Option name: baud

Option value: number

Or

Section name: DataPAF

Option name: bps

Option value: number

Meaning - determines transmission speed.

Default value - 4800.

Parameter:

number - transmission speed in Bd.

Section name: DataPAF

Option name: diagnostics

Option value: number

Meaning - declaring this position with value 14 will cause outputting the diagnostic information connected with time synchronization to the log file.

Default value - 0.

Parameter:

number - 14.

Section name: DataPAF

Option name: parity

Option value: parity_parameter

Meaning - determines parity;

Default value - N.

Parameter:

parity_parameter - allowed value:
n - no parity bit,
o - odd parity check,
e - even parity check,
m - mark,
s - space.

Section name: DataPAF

Option name: stop_bits

Option value: number

Meaning - determines a number of stop bits.

Default value - 1.

Parameter:

number - allowed values are 1 and 2.

- ☑ **Section name: DataPAF**
- ☑ **Option name: word**
- ☑ **Option value: number**

Or

- ☑ **Section name: DataPAF**
- ☑ **Option name: word_length**
- ☑ **Option value: number**

Meaning - determines word length.
Default value - 8.
Parameter:
 number - allowed values are from the range of 5 to 8.

- ☑ **Section name: DataPAF**
- ☑ **Option name: time_out**
- ☑ **Option value: number**

Or

- ☑ **Section name: DataPAF**
- ☑ **Option name: timeout**
- ☑ **Option value: number**

Meaning - waiting time for the DataPAF answer.
Default value - 1000.
Parameter:
 number - in milliseconds.

- ☑ **Section name: DataPAF**
- ☑ **Option name: repetitions**
- ☑ **Option value: number**

Meaning - number of repetitions of communication operations ended with an error.
Default value - 3.
Parameter:
 number - number of repetitions.

- ☑ **Section name: DataPAF**
- ☑ **Option name: max_Time_Difference**
- ☑ **Option value: number**

Meaning - determines the maximal difference between the Asix system time and the DataPAF counter time, after which warnings will be generated in 'Control Panel'. The station time can be read with an interval defined by the parameter *time_Check*.
Default value - 60.
Parameter:
 number - number in seconds.

- ☑ **Section name: DataPAF**
- ☑ **Option name: time_Check**
- ☑ **Option value: number**

Meaning - interval, with which the current time of the counter is read.

Communication Drivers

Default value - 180.
Parameter:
number - number in seconds.

Section name: DataPAF

Option name: system_sync

Option value: number

Meaning - maximal difference between the Asix system time and the DataPAF counter time, after which a system time synchronization with the counter time will occur. If the parameter value is 0, then the system time is not synchronized with the counter time.

Default value - 0.
Parameter:
number - number in seconds.

Section name: DataPAF

Option name: period_Check

Option value: number

Meaning - interval, with which the change of current calculation period of the counter is checked.

Default value - 180.
Parameter:
number - number in seconds.

Section name: DataPAF

Option name: max_history

Option value: number

Meaning - determines a time period from the current moment backwards, for which historical data, saved in station memory, will be read.

Default value - 35.
Parameter:
number - number in days.

Section name: DataPAF

Option name: history_Buffer_Removal

Option value: number

Meaning - the parameter determines a time period, after which buffers containing historical data, read for needs of an archiving module, are removed.

Default value 120.
Parameter:
number - the time is given in minutes.

Section name: DataPAF

Option name: CRC16

Option value: YES/NO

Meaning - determines if the CRC16 validity check has to be used in the communication with the counter. If NO is given, then the sum of sequent bytes will be calculated.

Default value - YES.

☑ **Section name: DataPAF**

☑ **Option name: log**

☑ **Option value: file_name**

Meaning - the parameter determines the name of file, to which additional diagnostic information will be written.

Default value - lack.

☑ **Section name: DataPAF**

☑ **Option name: alarm_Code**

☑ **Option value: number**

Meaning - the parameter determines the number of an alarm, generated by the driver in case of loss and re-establishing of connection with the station. The value of -1 (default) causes that alarms are not generated. In a situation of a connection loss, a number specifying the cause of connection loss is transferred together with the alarm code:
0 – complete lack of any answer from the station;
1 – timeout;
2 – line errors (frame, parity, overrun errors);
3 – checksum errors;
4,... - other errors.
This number determines the end status of the last attempt of connection establishing.

Default value - lack.

☑ **Section name: DataPAF**

☑ **Option name: energy_error**

☑ **Option value: number**

Meaning - determines situations, when the status of the XEN variable value assumes an error value and it is the sum of the following values:
1 error when a short decay of voltage;
2 error when a long decay of voltage;
4 error when a pause in input line of the impulse counter.

Default value - 0.

☑ **Section name: DataPAF**

☑ **Option name: mult**

☑ **Option value: number**

Meaning - defines a value of all input multipliers. Input multipliers are used for calculating the energy on the basis of the impulse number. If this parameter is given, then the driver will not read values of multipliers from the energy counter. If beside the parameter *mult*, parameters determining values of multipliers for individual channels (*multn*) are also used, then the parameter *mult* must be placed before all parameters *multn*.

Default value - lack.

Parameter:

number

- the multiplier is a floating-point number.

☑ **Section name: DataPAF**

☑ **Option name: multn**

☑ **Option value: number**

Meaning - defines an input multiplier value for a channel with the number n (1-31).

Input multipliers are used for calculating the energy on the basis of the impulse number. If this parameter is given, then the driver will not read values of multipliers from the energy counter. If the parameter *mult* is also given, then it must be placed before all parameters *multn*.

Default value - lack.

Parameter:

number - the multiplier is a floating-point number.

Driver Parameterization Examples

EXAMPLE

Channel declaration:

Channel / Name: KOMIN 2

Driver: DataPAF

Channel parameters: COM2

Driver parameters:

Section name: DataPAF:2

Option name: baud

Option value: 19200

Section name: DataPAF:2

Option name: Number

Option value: 4800

In the above example the station named KOMIN 2, connected to the port COM2, is defined. The transmission speed of 19200 bps will be used.

In case of time synchronization of the Asix station with the time of a chosen counter – the definition of this time should be placed in the ini section for the given counter. For this purpose the parameter *system_sync*, to which the value of allowed difference of times in seconds is assigned, is used.

EXAMPLE

Channel declaration:

Channel / Name: CHAN1

Driver: DataPAF

Channel parameters: COM2

Channel / Name: KANAL2

Driver: DataPAF

Channel parameters: COM4

Driver parameters:

Section name: DataPAF:2

Option name: baud

Option value: 19200

Section name: DataPAF:2

Option name: Number

Option value: 4800

Driver parameters:

Section name: CHAN1

Option name: system_sync

Option value: 5

Section name: CHAN1

Option name: log

Option value: DATAPAF.log

Section name: CHAN1

Option name: diagnostics

Option value: 14

In the example above the system time will be synchronized with the time of an energy counter connected to the port COM2. By placing the records *diagnostics=14* and *log=DATAPAF.log* in the counter section, it is possible to receive the record of time synchronization diagnostics in the file *DATAPAF.log*. The time is synchronized with an accuracy of 1 second.

1.19 DDE Driver

Driver Use

The driver DDE is used to define the channel of the ASMEN module referring the variables shared by the driver of industrial controller implemented as a DDE server (called further shortly a DDE server).

In the new version of the driver while defining the ASMEN module channel, besides a DDE server name, also a name of the service registered by the DDE server and a DDE connection name have to be declared. Thanks to association of a DDE connection with a channel instead of with each variables separately, the way of variable definition is significantly simplified and the definitions of variables are more legible.

Supporting the variable groups allows the DDE driver to receive data from a DDE server in form of groups of variables and not only in form of single variables. Thanks to such solution the performance of data transmission may increase enormously. The maximal transmission performance by using the DDE protocol amounts up to 150 single-element groups of variables per second (at a computer with PCU Pentium 166 MHz) and descends slowly when the group size increases. If a group contains only one variable, then it is possible to transfer 150 variables per second whereas the group size amounts e.g. 25 variables, then it is possible to transfer 3000 variables per second.

A DDE server within each connection may make available a special variable, the value of which defines whether the variables retrieved from this connection have correct values, whether the connection with an industrial controller works correctly. The DDE driver assumes that such special variable has the *Status* name, but it is possible to define such variable separately for each DDE connection.

External Specification

Declaration of the transmission channel utilizing the DDE driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: DDE

DDE tab:

Channel parameters:

service, *topic*

where:

service - service name registered by the DDE server;
topic - topic name of a connection supported by the DDE server.

The names of connection service and topic are specific for each driver of the industrial controller implemented in form of a DDE server and their description may be found in the documentation of a given driver.

EXAMPLE

Examples of channel definitions.

Channel / Name: KanAdam
Driver: DDE
Channel parameters: Adam, E2018

The ASMEN channel named KanAdam is associated with a DDE driver and the topic of connection named E2018, made available by the DDE server named Adam.

Channel / Name: KanGE
Driver: DDE
Channel parameters: GESNP, GE

The ASMEN channel named KanGE is associated with the DDE driver and the topic of connection named GE, shared by the DDE server named GENSP.

Variable Definitions

After the DDE driver start-up the ASMEN module transfers to the DDE driver an information about process variables taken from the definition file of variables. The definition of a variable used by the DDE driver is as follows:

asmen_variable, description, „item | number_in_group | type“, channel_name, quantity, refreshing_frequency, conversion_function

where:

- | | |
|------------------------|---|
| <i>asmen_name</i> | - variable name of the ASMEN module; |
| <i>item</i> | - name of a variable or a group of variables accessed by the DDE server, maximal length of this name amounts 255 characters (255 characters, it is the maximal length of text served by the DDE protocol); |
| <i>number_in_group</i> | - number of a variable in the group of variables to which the ASMEN variable refers; the enumeration begin from 1; if the DDE server as the <i>item</i> sends variables individually, then this parameter should have a value of 1; |
| <i>type</i> | - type of the ASMEN variable. |

As the *type* parameter it may be given the letter:

- S – short,
- W – word,
- L – long,
- D – double word,
- F – float.

The variable type definition is necessary to make possible the variable conversion to the binary form, used by the ASMEN module. The data from the DDE server are sent in text form and it is not possible to define their type unambiguously, therefore its type in variable definition is defined as public.

If a variable is to be not only read but also written, then the source of such variable in a DDE server must be a single variable. If to the ASMEN variable, which is not a part of variables group, you try to give a new value from the application level of Asix, then an error occurs. If it were possible to give a new variable to only one variable in the group, the DDE driver while sending this group to the server should send also new values of the other variables in this group. The use of recently sent values of the other variables in the group as their new values might cause hard perturbations.

EXAMPLE

Examples of Variable Definitions

Z1, "O1, 1, W", KanAdam, 1, 1, NOTHING

The ASMEN variable Z1 is associated with the first variable in the variable group named O1 taken from the DDE server specified in the definition of the KanAdam channel.

Z2, "%I1, 5, s", KanalGE, 1, 1, NOTHING

The ASMEN variable Z2 is associated with the fifth variable in the variable group named %I1 taken from the DDE server specified in the definition of the KanGE channel.

Driver Parameters

DDE driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

Section name: DDE

Option name: StatusVariable

Option value: service, topic, item

Meaning - the item of an initialization file, it defines the name of a variable handled by the DDE server. It allows to monitor the connection status of the DDE server with an industrial controller. If the value of this variable equals 1, the connection with the controller works correctly; if the variable value equals 0, the connection with the controller is broken. In order to define a status variable it is necessary in the initialization application file to define the item *StatusVariable* and to give to it a value in the format *service, topic, item*.

Default value - by default, it is assumed that there is no status variable within the connection.

Parameter:

service and *topic* - define the connection;

item - is the name of status variable within this connection.

A DDE server may support many DDE connections simultaneously and for each of them a status variable may be defined separately.

EXAMPLE

Examples of definition of status variable:

Section name: DDE

Option name: StatusVariable

Option value: TPERM, S1, Connected

Within the connection TPERM, S1 the name of the status variable is Connected.

Thread Priority of the Driver

PriData – value of thread priority of the driver sending data to the ASMEN module, the default value is set to 1.

Internal Specification

The driver, at the first reference to the DDE server described by a pair of *service, topic*, establishes a connection with this server and keeps it on continuously up to ending the activity of the driver or of the DDE server. At the first reading of the first variable belonging to the variable group a refreshing of this variables group begins. The new values are written to the internal buffer of the driver and transferred to the ASMEN module in case of reading of refresh type. In case of ordinary reading the data are read directly from the DDE server. If it is not possible to begin refreshing, the variable value is read at each reference of the ASMEN module to it. Writing operations are carried out always synchronously and they update the internal buffer of the variable.

In case of breaking the connection with a DDE server, the DDE driver tries to rebuild this connection.

1.20. CtDlms - Driver of Electric Energy Counter of ZxD/ZxG/ZxQ Type of Landys&Gyr Company

Driver Use

The driver is used for data exchange between the Asix system and electric energy counters of ZxD/ZxG/ZxQ type of Landys & Gyr company, using the DLMS protocol. The communication is performed through RS-485/RS-232 interface of the counters. The driver can not be used for data exchange using optical link.

The driver allows for:

- reading registers of the class 1, 3, 4, 5
- reading profiles of power, accounting periods and event logs (registerf of the class 7),
- recording in text files the profiles of power, accounting periods and event log.

Parameterization of CtDlms driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtDlms driver requires a channel with the following parameters to be added to the **Current data** module:

Standard tab:

Name: logical name of the transmission channel

Driver: Dlms

Dlms/Channel parameters tab:

where:

- | | |
|--------------------|--|
| <i>Serial port</i> | - serial port name (COM), |
| <i>Baud rate</i> | - baud rate between a computer and a device. The following values are possible: 2400, 4800, 9600, 19200, 38400 Bd. The default value is 9600 Bd, |
| <i>Period</i> | - period time (in seconds) between consecutive readouts of counter registers. Default values is 10 seconds. |

EXAMPLE

Exemplary channel declaration on COM2 port:

```
Serial port: 2;  
period: 20;  
Baud rate: 9600
```

Declaration of Current Variables

The syntax of current variable address:

```
[counter_name]/register_OBIS_code
```

where:

counter_name - (optional). It contains the unique address name of the counter used in multipoint installations to identify individual counters.
counter_name corresponds to 'Device address' according to PN-EN 61107. When connected point-to-point the *counter_name* may be omitted,

register_OBIS_code - register OBIS code of the counter compatible with the readout list which has been entered to the counter by the producer at the parameterization stage. If the last element of the OBIS (group F) code is the value 255, this element can be omitted.

NOTICE:

The register values transmitting numbers the driver converts to DOUBLE numbers.

EXAMPLE

```
/* 1-0:0.0.1 - id number of the counter 1*/  
JJ_01, id number of the counter 1, "/1-0:0.0.1", CHANNEL, 1, 1,  
NOTHING_FP  
  
/* 1-1:1.8.0 - register of taken active energy*/  
JJ_02, register of taken active energy, "/1-1:1.8.0", CHANNEL, 1, 1, NOTHING_FP
```

Declaration of Power Profile Variables

The access to power profile values needs the profile log file to be created, to which the driver will write the data of power profile data (read from the counter with the use of appropriate register of the class 7). The data from the latest entry in the profile log file is shared by the driver as current values of power profiles (with the time stamp taken from

the profile log). The older entries in profile log file are shared as historical values of power profiles (through access interface to historical data).

The address of power profile variable is built on the basis of current variable address by adding to it the suffix **.P**.

The syntax of power profile variable address is as follows:

[counter_name]/ register_OBIS_code.P

where:

- counter_name* - it has the same meaning as for current variable declaration,
- register_OBIS_code* - it has the same meaning as for current variable declaration,
- .P** - suffix used to distinguish the power profile variable address from the address of the corresponding current variable (if it exists).

EXAMPLE

Profile_1.4.0, profile 1.4.0,	"/1-1:1.4.0.P",	CHANNEL, 1, 1, NOTHING_FP
Profile_2.4.0, profile 2.4.0,	"/1-1:2.4.0.P",	CHANNEL, 1, 1, NOTHING_FP

Notice:

The number and addresses of power profile variable addresses are specific for each counter and are depended on the way of counter parameterization.

Declaration of Variables of Accounting Periods

The access to values of accounting periods needs the file of accounting periods, to which the driver will record the data of accounting periods, to be created. The data is read from the counter with the use of the appropriate register of the class 7). The data from the latest entry in the accounting period log file is shared by the driver as current values of accounting periods (with the time stamp taken from the profile log). The older entries in accounting period log file are shared as historical values of accounting periods (through access interface to historical data).

The address of accounting period variable is built on the basis of current variable address by adding to it the suffix **.A**.

The syntax of variable address is as follows:

[counter_name]/ register_OBIS_code.A

where:

- counter_name* - it has the same meaning as for current variable declaration,
- register_OBIS_code* - it has the same meaning as for current variable declaration,

.A - suffix used to distinguish the accounting period variable address from the address of the corresponding current variable (if it exists).

EXAMPLE

Period_1.8.1, rejestr arch 1.8.1, NOTHING_FP	"/1-1:1.8.1.A",	CHANNEL, 1, 1,
Period_1.8.2, rejestr arch 1.8.2, NOTHING_FP	"/1-1:1.8.2.A",	CHANNEL, 1, 1,

Notice:

The number and addresses of accounting period variable addresses are specific for each counter and are depended on the way of counter parameterization.

Driver Parameters

The driver configuration is defined in the *Current Data* module, in the channel operating according to DImS driver.

Log file

Meaning - The item allows to define a file where all diagnostic messages of the driver are written.

Default value - The log file is not created.

Parameter:
file_name

Log file size

Meaning - The item allows to specify the size of log file defined by the option: *Log file*.

Default value - 10 MB.

Parameter:
number - log file size in MB.

Log of telegrams

Meaning: The item allows to write to the log file the contents of telegrams sent between the driver and network clients. Writing the contents of telegrams to the log file should be used only while the Asix start-up.

Default value: NO.

Option value:
YES/NO

History log file

Meaning - The item allows to define a file where all diagnostic messages about operations performed with the use of interface of acces to variable historical values of power profiles and accounting periods. History log file is common for all counters.

The size of history log file is the same as for driver log file.
- The log file is not created.

Default value
Parameter:
log_file_name

Communication Drivers

Receive timeout

- Meaning - The option defines the timeout for the first response sign from the counter.
- Default value - 1000.
- Option value:
number - timeout in milliseconds.

Character timeout

- Meaning - The option defines the maximal time between successive characters of response from the counter.
- Default value - 100.
- Option value:
number - timeout in milliseconds.

EXAMPLE

An exemplary declaration

Log file: d:\tmp\CtDlms\dlms.log

Log file size: 10

Log of telegrams: YES

Receive timeout: 1500

Character timeout: 150

Parameterization of Individual Counters

Case 1

When using a point-point system the counter is parameterized using tabs activated by pushing the button *Add point-to-point* on the *Dlms/Counters* tab.

Basic tab:

Client address

- Meaning - the option defines the value of the parameter 'Client Address' in the parameters DLMS connection of the channel.
- Default value - 16.
- Option value:
number - client address in decimal format.

Server address

- Meaning - the option defines the value of the parameter 'Physical Server' in the parameters DLMS connection of the channel.
- Default value - 1.
- Option value:
number - server address in decimal format.

History data upload period

Meaning - the option defines the frequency of query sending by the driver to complete the historical data of power profiles, accounting periods and events.

Default value - by default, the driver completes historical data by sending queries every minute.

Option value:

number

- server address in decimal format.

Diagnostics tab:

Log file

Meaning - The item allows to define a file where all diagnostic messages generated in the given channel are written.

Default value - Messages generated in the channel are written to the driver log file.

Parameter:

file_name

Log file size

Meaning - The item allows to specify the size of log file size defined by the option: *Log file*.

Default value - The log file size is inherited from the driver log file.

Parameter:

number

- log file size in MB.

Log of telegrams

Meaning: The item allows to write to the log file the contents of telegrams sent in the given channel. Writing the contents of telegrams to the log file should be used only while the **Asix** start-up.

Default value: is inherited from the driver settings.

Option value:

YES/NO

Events tab:

Events log

Meaning - The events read from the counter are written to text 'csv' file. Each event is written in a separate line. The events in the file are ordered by increasing timestamps. An exemplary event form is as follows:

P.98;1;2005-05-10
08:14:33;0048;;3;;;F.F;;1.8.0;kWh;024;00000000;0000.0000

Default value The item allows to define a file where event log will be written.
- The log file is not created.

Communication Drivers

Events log file size

Meaning - The item allows to specify the size of log file defined by the option: *Events log*.

Default value - 10.

Option value:

number - log file size in MB.

Without events log

Meaning - Using the option it is possible to switch off reading the event log.

Default value - the driver reads event log.

Events log read period

Meaning - The option determines the cycle of reading the event log from the counter.

Default value - Every 1 hour.

Option value:

number - time in hours.

Events log history scope

Meaning - The option declares how far into the past history of events the driver will reach, reading event log.

Default value - By default, the driver goes back 130 days since the current 24 hour, reading the history of events.

Option value:

number of days

Power profiles tab:

Power profiles log

Meaning - Power profiles are read from the counter and saved to a text file in the format 'csv'. Each power profile is written in a separate line. Power profiles are ordered by increasing timestamps. An exemplary form of a singular power profile is as follows (the profile is divided into 2 text lines for the better clarity):

```
P.01;1;2005-05-10 12:45:00;0008;15;6;1.5.0;kW;5.5.0;kvar;8.5.0;kvar;32.7;V;52.7;V;72.7;V;5.123000;24.2438900;123.654320;---.-;---.-;---.-
```

The option allows to define the full path to the file where profile log will be written.

Default value - The log file is not created.

Power profiles log file size

Meaning - The item allows to specify the size of log file defined by the option: *Power profiles log*.

Default value - 10.

Option value:

number - log file size in MB.

Communication Drivers

number - log file size in MB.
Default value - 10.

Without billing periods log

Meaning - The option switches off reading accounting period log.
Default value - By default, the driver reads the accounting period profile log.

Billing periods log read period

Meaning - The option determines the cycle of reading the accounting period log from the counter.

Option value:

number - time in hours.
Default value - Every 1 hour.

Billing periods log history scope

Meaning - The option declares how far into the past history of events the driver will reach, reading accounting period log.

Default value - By default, the driver goes back 130 days since the current 24 hour, reading the history of accounting periods.

EXAMPLE

An exemplary counter declaration.

Log file: c:\tmp\CtDlms\kanal.log
Events log: c:\tmp\CtDlms\book.log
Events log file size: 15
Events log read period: 2
Power profiles log: c:\tmp\CtDlms\profile.log
Power profiles log file size: 20
Power profiles log read period: 4
Billing periods log: c:\tmp\CtDlms\billing.log
Log of telegrams: TAK
Events log history scope: 40

Case 2

When using a few counters - there are parameterized with the use of tabs activated by the pressing the button *Add new counter* on the *Dlms/Counters* tab.

The tabs and parameters are the same as for parameterization of one counter in point-point installation.

1.21 DMS285 - Driver of Protocol for DURAG DMS 285 Analyzers

Driver Use

The DMS285 protocol driver is designed to establish the communication between an Asix system computer and a DURAG D-MS285 computer for emission monitoring. The driver operates with devices supporting the protocol of version 1.22.

Parameterization of DMS285driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the DMS285driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: DMS285

DMS285/Channel parameters tab:

<i>Serial port</i>	- number of the serial port to which the network of DMS285 controllers is connected.
<i>Name</i>	- name of the DMS285 station; by default, a logical channel name is assumed as a station name; name is completed with spaces to the length of 8 characters.
<i>Alarm code</i>	- number of alarm generated by the driver in the case of loss and re-establishing connection with the station. A value of 1 (default) causes no generation of alarms. When losing the connection, the following number characterizing the cause of communication loss is transmitted with the alarm code: 0 – complete lack of any response from the station; 1 – timeout; 2 – line errors (errors of frame, parity, overrun); 3 – checksum errors; 4 – other errors.

This number determines the status of the end of the last attempt to establish communication.

Default value: none

Driver Configuration

DMS285 driver parameters are declared on *Driver parameters* tabs.

Option name: Baud

Option value: number

Meaning - determines transmission speed.

Default value - 9600.

Parameter:

number - number in Bd.

Option name: Parity

Option value: parity_parameter

Meaning - determines parity.

Default value - e.

Parameter:

parity_parameter - default value:
n - no parity bit,
o - odd parity check,
e - even parity check,
m - mark
s - space.

Option name: Stop bits

Option value: number

Meaning - determines number of stop bits.

Default value - 1.

Parameter:

number - admissible values are 1 and 2.

Option name: Word length

Option value: number

Meaning - word length.

Default value -8.

Parameter:

number - allowed values are from 5 to 8.

Option name: Timeout

Option value: number

Meaning - waiting time for answer from DMS285A.

Default value - 10.

Parameter:

number - number in seconds.

Option name: Log

Option value: file_name

Meaning - parameter determines a file name, to which additional diagnostic information will be written.

Default value - lack.

Option name: Bad Data Classes

Option value: class1, class2, ..., classN

Meaning - parameter determines numbers of classes, which cause invalidity of data 44.5K.n and 44.5M.n. The class number is taken up from the variable 44.1.n (Klassenangabe der Konz.).

Default value - lack (-) (class value has no influence on the validity of read data).

Parameter:

class1, class2, ..., classN - numbers of classes.

Option name: Bad Data Status

Option value: status1, status2, ..., statusN

Meaning - parameter determines values of the variable 43.3.n (Zustand des Kanals – Channel state), for which values of variables 43.7K.n, 43.7M.n, 43.9K.n, 43.9M.n, 43.10K.n and 43.10M.n are assumed as invalid.

Default value - lack (-) (value of the variable 43.3.n has no influence on validity of read data).

Parameter:

status1, status2, ..., statusN - values of the variable 43.3.n (Zustand des Kanals).

Option name: Bad Data Classes 2

Option value: class1, class2, ..., classN

Meaning - parameter determines numbers of classes, invalidity of data 44.5K.n and 44.5M.n while calculating 48-hour averages. The class number is taken up from the variable 44.1.n (Klassenangabe der Konz.).

Default value - lack (-) (class value has no influence on the validity of read data).

Parameter:

class1, class2, ..., classN - numbers of classes.

Option name: Minimal Measurements

Option value: number

Meaning - minimal number of measurements required for calculation of a 48-hour average.

Default value - lack.

Parameter:

number - number of measurements.

Option name: Max Time Difference

Option value: number

Meaning - determines the maximal difference in seconds between the Asix system time and DMS295 station time, after exceeding of which warnings will be output to 'Control Panel'. Station time is read only during reading of 43 and 50 type variables.

Default value - 60.

Parameter:

number - number in seconds.

Option name: AutoSync

Option value: number

Meaning - determines the maximal difference between the Asix system time and the DMS285 station time, after exceeding of which the driver will set the station time on the Asix system time. Time synchronization occurs only during data reading from the station. The minimal value of this parameter equals 10 seconds. If a smaller value is given, then 10 seconds will be assumed.

Default value - no time synchronization.

Parameter:

number - number in seconds.

Option name: MaxAutoSync

Option value: number

Meaning - determines the maximal value between the Asix system time and the DMS285 station time, after exceeding of which the driver will **not** synchronise the station time even if this difference exceeds the value determined by the *AutoSync* parameter.

Default value - 6800.

Parameter:

number - number in seconds.

Option name: Time limiter

Option value: number

Meaning - determines the maximal deviation of data time in hours in relation to the current system time, whose exceeding causes a data is found invalid. The time of a data read from DURAG computer must be contained in the time interval current time +- deviation, so that it might be found valid. If the parameter has a value of 0 then data time is not checked.

Default value - 24.

Parameter:

number - number in hours.

Option name: Alarm Code

Option value: alarm_number

Meaning - parameter determines the number of alarm generated by the driver in case of loss and re-establishing the connection with the station. The value of -1 (default) causes that the alarms are not generated. In case of connection loss, one of the following number specifying the reason for the dropped connection is relayed with the alarm code:

- 0 - complete lack of any answer from the station,
- 1 - timeout,
- 2 - errors of lines (errors of border, parity, overrun),
- 3 - errors of checksum,
- 4 - other errors.

This number determines the status of the end of last attempt made to establish a connection.

Default value - lack.

Parameter:

Alarm_number - alarm number.

Option name: Max history

Option value: number

Meaning - determines a time period, counted from the current moment backwards, for which historical data, stored in the station memory, will be read.

Default value - 20.

Parameter:
number - number in days.

Option name: Var_44_1_n

Option value: variable_name,channel_number

Meaning - name of the variable 44.1.n and archive type, which is saved in the archive and used simultaneously for calculation of 48-hour average 44.105K.n. After the variable name the archive type should be given after a comma. *n* signifies the channel number.

Default value - lack.

Parameter:
variable_name - determines the name of 44.1.n variable; *n* signifies the channel number.
channel_number - number of the channel.

NOTE While configuring the variable for ASPAD the option *DO_NOT_PACK* should be **absolutely** given!!!

Option name: Var_44_5K_n

Option value: variable_name,channel_number

Meaning - name of the variable 44.5K.n and archive type, which is saved in the archive and used simultaneously for calculation of 48-hours average 44.105K.n. After the variable name the archive type should be given after a comma. *n* signifies the channel number.

Default value - lack.

Parameter:
variable_name - determines the name of 44.5K.n variable; *n* signifies the channel number.
channel_number - number of the channel.

Examples of Driver Configuration

EXAMPLE 1

Channel declaration:

Chanel / Name: KOMIN 2

Driver: DMS285

Channel parameters:

Serial port: COM2

Driver parameters:

Option name: baud

Option value: 19200

Communication Drivers

In the above example a station named KOMIN 2 is connected to the COM2 port. The transmission speed of 19200 bps will be used.

EXAMPLE 2

Channel declarations:

Chanel / Name: KOMIN 1
Driver: DMS285
Channel parameters:

Serial port: COM2

Chanel / Name: KOMIN 2
Driver: DMS285
Channel parameters:

Serial port: COM2

Chanel / Name: KOMIN 3
Driver: DMS285
Channel parameters:

Serial port: COM2

Chanel / Name: KOMIN 4
Driver: DMS285
Channel parameters:

Serial port: COM3

Chanel / Name: KOMIN 5
Driver: DMS285
Channel parameters:

Serial port: COM3

Chanel / Name: KOMIN 6
Driver: DMS285
Channel parameters:

Serial port: COM4

Driver parameters:

Default values for all stations:

Option name: speed
Option value: 19200

Option name: Invalidation_Status
Option value: 1, 6, 14

Default values for stations connected to the COM3 port:

Option name: speed

Option value: 9600

Other parameters:

For channel: KOMIN 2
Option name: Bad Data Status
Option value: 5

For channel: KOMIN 4
Option name: Bad Data Status
Option value: -

In the above example the stations of names from KOMIN 1 up to KOMIN 6 are defined. The stations KOMIN 1, KOMIN 2 and KOMIN 3 are connected to the COM2 port. The stations KOMIN 4 and KOMIN 5 are connected to the COM3 port. The station KOMIN 6 is connected to the COM4 port. All the serial ports except COM3 will work with a speed of 19200 baud. The COM3 port will work with a speed of 9600 baud. All the stations except the stations KOMIN 2 and KOMIN 4 will use invalidity statuses 1, 6 and 14. The station KOMIN 2 uses a value of 5 as an invalidity status. The station KOMIN 4 does not use any invalidity status – setting parameter “-” was necessary to change the default values.

Defining the Process Variables

The variable definition is based on the DMS285 protocol description. The list of all the types of variables is given at the end of this chapter.

$$\text{type.subtype} \begin{bmatrix} K \\ M \end{bmatrix} \begin{bmatrix} [idx] \end{bmatrix} \begin{bmatrix} .Mxx \\ .subfield \end{bmatrix} \begin{bmatrix} .channel \end{bmatrix}$$

where:

<i>type</i>	- defines information type e.g.: 43 - instantaneous values, 44 - integrals, 17 - parameters;
<i>subtype</i>	- number of given information, e.g. 43 for instantaneous values defines actual current intensity in a given channel;
<i>K,P.</i>	- concentration/flow (only if the subtype contains data for both these categories);
<i>idx</i>	- index - only for indexed variables, e.g. classification; index is a number ≥ 1 ;
<i>channel</i>	- channel number; a channel number may be given only for the values related to the channel; in case of general information it should be omitted.
<i>Mxx</i>	- bit mask; xx is a number in hexadecimal code; on the datum received from the station, the AND operation with the number xx is executed;
<i>subfield</i>	- subfield name; for data representing time the following subfields are defined: SEC, MIN, HOUR, DAY, MONTH, YEAR - DWORD type, TIME, DATE, DATETIME - TEXT type.

In order to display values TIME, DATE, DATETIME the object STRING may be applied. The function NOTHING_TEXT must be use as the conversion function. The length of displayed string is given as the counter of elements.

EXAMPLE

An example of variable declaration:

```
ACT_TIME, actual date and time of the station, 43.1.DATETIME.1, CHANNEL-  
DMS285, 20,30, NOTHING_TEXT
```

Format of date and time:

```
dd-mm-rrrr gg:mm:ss.
```

EXAMPLE

43.11.1	- actual instantaneous value for the analog channel 1
43.1.DAY	- actual time of the station - month day number
43.7K.1	- actual concentration for the channel 1
43.2[2]	- digital inputs 16-23

Time of Data

The data are transferred by the driver to the Asix system together with the time of their reception (time of the DMS285 station). In case of other types than the type 43, which does NOT contain actual time, the time is established on the ground of previously received packet of the type 43 (variable 43.1) and time of its reading. The time defined by the variable 44.20 is assigned to the variables 44,1, 44.5K.n and 44.5M.n. The time of the variables of the packet 48 is rounded down to the hour 00:00. The variables of the packet 48 arriving at 00:00 +- 2 min are treated as invalid. The variables 44.105M.n and 44.105K.n have always the time 00:00.

Historical Data

For the variables 44.5K and 44.5M it is possible to read historical data.

List of All the Variable Types Supported by DMS285 Driver

See the following tables.

Table 8. List of All the Variable Types Supported by DMS285 Driver.

Nazwa	Opis	Typ
0.1.n	Analog-Eingangstrom	FLOAT
1.1.n	Physikalische Grosse	FLOAT
2.1.n	Momentane Konzentration	FLOAT
3.1.n	Momentaner Massenstrom	FLOAT
4.1.n	Festintegral Konzentration	FLOAT
5.1.n	Festintegral Massenstrom	FLOAT
6.1.n	Integrationszeit	WORD
6.2.n	Messzeit	WORD
6.3.n	Wartungszeit	WORD
6.4.n	Ausser-Betriebs-Zeit	WORD
6.5K.n	Festintegral Konzentration	FLOAT
6.5M.n	Festintegral Massenstrom	FLOAT

Table 9. List of All the Variable Types Supported by DMS285 Driver (continuation)

Nazwa	Opis	Typ
7.1.n	Letzter klassierter Konzentration	FLOAT
8.1.n	Letzter klassierter Massenstrom	FLOAT
9.1.n	Aktueller Tagesmittelwert Konzentration	FLOAT
10.1.n	Aktueller Tagesmittelwert Massenstrom	FLOAT
11.1.n	Letzter klassierter Tagesmittelwert Konzentration	FLOAT
12.1.n	Letzter klassierter Tagesmittelwert Massenstrom	FLOAT
13.1.n	Bisherige Summe der Jahresemission	FLOAT
14.1.n	Vorjahressumme der Emission	FLOAT
15.1.n	Tagesbetriebszeit in min	WORD
16.1.n	Jahresbetriebszeit in min	DWORD
	Parametryzacja stacji	
17.1.n	Parametr (n- numer parametru)	FLOAT
:	Fehlerzustand (x - fehlt)	
18.1.x	Untere Grenze	WORD
18.2.x	obere Grenze	WORD
18.3.x	Tagesmittelwert-uberschreitung	WORD
18.4.x	Ersatzwert	WORD
18.5.x	Allg. fehler	WORD
19.1[x].n	Klasseninhalt Konzentration x - numer klasy	WORD
20.1[x].n	Klasseninhalt Massenstrom x - numer klasy	WORD
21.1[1].n - 21.1[3].n	Aktuelles Mischungsverhältnis	FLOAT
22.1[1].n - 22.1[3].n	Integriertes Mischungsverhältnis	FLOAT
23.1[1] - 23.1[16]	Statussignale	BYTE
38.1.n	Trend der Konzentration	FLOAT
38.2.n	Freilast der Konzentration	FLOAT
39.1.n	Trend der Massenströme	FLOAT
39.2.n	Freilast der Massenströme	FLOAT
43.1	Datum/Uhrzeit	WORD
43.2[1] - 43.2[8]	Digital-Eingänge	BYTE
43.3.n	Zustand des Kanals	BYTE
43.4.n	Momentanes Mischungsverhältnis 1	FLOAT
43.5.n	Momentanes Mischungsverhältnis 2	FLOAT

Table 10. List of All the Variable Types Supported by DMS285 Driver (continuation).

Nazwa	Opis	Typ
43.6.n	Momentanes Mischungsverhältnis 3	FLOAT
43.7K.n	Momentane Konzentration	FLOAT
43.7M.n	Momentaner Massenstrom	FLOAT
43.8K.n	Festintegral Konzentration	FLOAT
43.8M.n	Festintegral Massenstrom	FLOAT
43.9K.n	hochgerechnete Konzentration	FLOAT
43.9M.n	hochgerechnete Massenstrom	FLOAT
43.10.c	Physikalische GroÙe	FLOAT
43.11.c	Analog Ausgangsstrom	FLOAT
43.12.n	Messzeit	WORD
43.13.n	abgelaufene Integrationszeit	WORD
43.14.n	Tagesbetriebszeit	WORD
43.15.n	Wartungszeit	WORD
43.16.n	Nummer der Klassierung	BYTE
43.17[1] - 43.17[18]	Fehlerzustand	BYTE
43.18K.n	Freilast Konzentration	FLOAT
43.18M.n	Freilast Mass.	FLOAT
43.19K.n	concentration limit	FLOAT
43.19M.n	flow limit	FLOAT
UWAGA	Status zmiennych 43.7.n, 43.9.n i 43.10.n jest uzalezniony od wartosci zmiennej 43.3.n (Zustand des Kanals). JeÙli wartoÙc zmiennej 43.3.n przyjmuje jedna z wartosci okreÙlonych w parametryzacji stacji to zmiennym przypisywany jest status bledu.	
44.1.n	Klassenangabe der Konzentrationsklassierung	BYTE
44.2.n	Integr Mischungsverhältnis 1	FLOAT
44.3.n	Integr Mischungsverhältnis 2	FLOAT
44.4.n	Integr Mischungsverhältnis 3	FLOAT
44.5K.n	Letzte klassierte Konzentration	FLOAT
44.5M.n	Letzter klassierter Massenstrom	FLOAT
44.6K.n	Akt Tagesmittelwert Konzentration	FLOAT
44.6M.n	Akt Tagesmittelwert Massenstrom	FLOAT
44.7K.n	Letzter klassierter Tagesmittelwert Konzentration	FLOAT
44.7M.n	Letzter klassierter Tagesmittelwert Massenstrom	FLOAT
44.8.n	Summe Jahresemission	FLOAT
44.9.n	Jahresbetriebszeit	DWORD
44.10.c	Integrierte physik. GroÙen	FLOAT
44.11[1] - 44.11[4]	Hauptalarm	BYTE
44.12K.n	Klassenbreite Tagesmittelwert Konzentration	FLOAT
44.12M.n	Klassenbreite Tagesmittelwert Massenstrom	FLOAT
44.13K.n	limit_concentration	FLOAT
44.13M.n	limit_mass	FLOAT
44.14K.n	Trendwert Tagesmittel Konz.	FLOAT
44.14M.n	Trendwert Tagesmittel Mass.	FLOAT
44.15[1] - 44.15[8]	Anlagenname*	BYTE
44.16K.n	Monatsmittelwert Konzentration	FLOAT
44.16M.n	Monatsmittelwert Massenstrom	FLOAT
44.17.n	Massenstrom klassiert in Klasse	BYTE
44.18.n	Zustand Integral	BYTE
44.19K.n	Überschreitungsmerker Konz.	BYTE
44.19M.n	Überschreitungsmerker Mass.	BYTE
44.20	Zeitpunkt der klassierung	WORD
44.21[1] - 44.21[4]	Störung integr. Physikalische werte V 3.22	BYTE

Table 11. List of All the Variable Types Supported by DMS285 Driver (continuation).

Nazwa	Opis	Typ
44.105K.n.	Letzte klassierte Konzentration - orednia 48-godzinna zmiennej 44.5K.n	FLOAT
44.105M.n.	Letzter klassierter Massenstrom - orednia 48-godzinna zmiennej 44.5M.n	FLOAT
UWAGA	Status zmiennych 44.5K.n i 44.5M.n jest uzależniony od wartości zmiennej 44.1.n (Klassenangabe der Konzentrationsklassierung). Jeśli wartość zmiennej 44.1.n przyjmuje jedną z wartości określonych w parametryzacji stacji to zmiennym przypisywany jest status błędu. Zmiennym 44.5K.n i 44.5M.n jest przypisywany czas określony zmienna 44.20.	
45.1.n	Summe vorjahremmission	FLOAT
45.2.n	Klassenbreiten KK	FLOAT
45.3.n	Klassenbreiten KL2K	FLOAT
45.4.n	Klassenbreiten KL3K	FLOAT
45.5.n	Klassenbreiten KM	FLOAT
45.6.n	Klassenbreiten KL2M	FLOAT
45.7.n	Klassenbreiten KL3M	FLOAT
45.8.n	Integrationszeiten	WORD
	Aktueller Stand der Klasseninhalte in Binar	
46.4.n	Dzienny czas pracy [min]	WORD
46.5.n	Roczny czas pracy [min]	DWORD
46.6.n	Czas początkowy	DWORD
46.8[1].n - 48.8[3].n	Czasy przestojów REA	WORD
46.9.n	Wyłączenie sieci - klasa 0	WORD
46.10[1].n - 48.10[21].n	klasa 1-21 (roczna, stężenie)	WORD
46.11.n	klasa 24 (roczna, stężenie)	WORD
46.12.n	klasa 25 (roczna, stężenie)	WORD
46.13.n	klasa 26 (roczna, stężenie)	WORD
46.14.n	klasa 23 (roczna, stężenie)	WORD
46.15.n	klasa 35 (roczna, stężenie)	WORD
46.16[1].n - 48.16[22].n	klasa 1-22 (dzienna, stężenie)	WORD
46.17.n	klasa 23 (dzienna, stężenie)	WORD
46.18.n	klasa 25 (dzienna, stężenie)	WORD
46.19.n	klasa 27 (dzienna, stężenie)	WORD
46.20.n	klasa 28 (dzienna, stężenie)	WORD
46.21.n	klasa 29 (dzienna, stężenie)	WORD
46.22.n	klasa 35 (dzienna, stężenie)	WORD
46.23.n	klasa 30 (dzienna, stężenie)	WORD
46.24.n	klasa 31 (dzienna, stężenie)	WORD
46.25.n	klasa 32 (dzienna, stężenie)	WORD
46.26.n	klasa 33 (dzienna, stężenie)	WORD
46.27[1].n - 48.27[21].n	klasa 1-21 (roczna, strumień masy)	WORD
46.28.n	klasa 27 (roczna, strumień masy)	WORD
46.29.n	klasa 28 (roczna, strumień masy)	WORD
46.30.n	klasa 29 (roczna, strumień masy)	WORD
46.31.n	klasa 23 (roczna, strumień masy)	WORD
46.32.n	klasa 34 (roczna, strumień masy)	WORD

Table 12. List of All the Variable Types Supported by DMS285 Driver (continuation).

Nazwa	Opis	Typ
46.33[1]n - 48.33[22]n	klasa 1-22 (dzienne, strumień masy)	WORD
46.34.n	klasa 23 (dzienna, strumień masy)	WORD
46.35.n	klasa 30 (dzienna, strumień masy)	WORD
46.36.n	klasa 31 (dzienna, strumień masy)	WORD
46.37.n	klasa 32 (dzienna, strumień masy)	WORD
46.38.n	klasa 36 (dzienna, strumień masy)	WORD
46.39.n	średnia wartość miesięczna stężenia	FLOAT
46.40.n	średnia wartość miesięczna strumienia masy	FLOAT
46.41.n	roczna emisja	FLOAT
46.42.n	ostatnie średnio-dobowe stężenie	FLOAT
46.43.n	ostatnia średnio-dobowa emisja	FLOAT
	Klasseninhalte beim lt. Tageswechsel in Binar	
47.4.n	Dzienny czas pracy [min]	WORD
47.5.n	Roczny czas pracy [min]	DWORD
47.6.n	Czas początkowy	DWORD
47.8[1]n - 48.8[3]n	Czasy przestojów REA	WORD
47.9.n	Wyłączenie sieci - klasa 0	WORD
47.10[1]n - 48.10[21]n	klasa 1-21 (roczna, stężenie)	WORD
47.11.n	klasa 24 (roczna, stężenie)	WORD
47.12.n	klasa 25 (roczna, stężenie)	WORD
47.13.n	klasa 26 (roczna, stężenie)	WORD
47.14.n	klasa 23 (roczna, stężenie)	WORD
47.15.n	klasa 35 (roczna, stężenie)	WORD
47.16[1]n - 48.16[22]n	klasa 1-22 (dzienne, stężenie)	WORD
47.17.n	klasa 23 (dzienna, stężenie)	WORD
47.18.n	klasa 25 (dzienna, stężenie)	WORD
47.19.n	klasa 27 (dzienna, stężenie)	WORD
47.20.n	klasa 28 (dzienna, stężenie)	WORD
47.21.n	klasa 29 (dzienna, stężenie)	WORD
47.22.n	klasa 35 (dzienna, stężenie)	WORD
47.23.n	klasa 30 (dzienna, stężenie)	WORD
47.24.n	klasa 31 (dzienna, stężenie)	WORD
47.25.n	klasa 32 (dzienna, stężenie)	WORD
47.26.n	klasa 33 (dzienna, stężenie)	WORD
47.27[1]n - 48.27[21]n	klasa 1-21 (roczna, strumień masy)	WORD
47.28.n	klasa 27 (roczna, strumień masy)	WORD
47.29.n	klasa 28 (roczna, strumień masy)	WORD
47.30.n	klasa 29 (roczna, strumień masy)	WORD
47.31.n	klasa 23 (roczna, strumień masy)	WORD
47.32.n	klasa 34 (roczna, strumień masy)	WORD
47.33[1]n - 48.33[22]n	klasa 1-22 (dzienne, strumień masy)	WORD
47.34.n	klasa 23 (dzienna, strumień masy)	WORD
47.35.n	klasa 30 (dzienna, strumień masy)	WORD
47.36.n	klasa 31 (dzienna, strumień masy)	WORD
47.37.n	klasa 32 (dzienna, strumień masy)	WORD
47.38.n	klasa 36 (dzienna, strumień masy)	WORD
47.39.n	średnia wartość miesięczna stężenia	FLOAT
47.40.n	średnia wartość miesięczna strumienia masy	FLOAT
47.41.n	roczna emisja	FLOAT
47.42.n	ostatnie średnio-dobowe stężenie	FLOAT
47.43.n	ostatnia średnio-dobowa emisja	FLOAT

Table 13. List of All the Variable Types Supported by DMS285 Driver (continuation).

Nazwa	Opis	Typ
	Gesamt-Klassinh. b. lt. Tagesw. in Binar	
48.4.n	Dzienny czas pracy [min]	WORD
48.5.n	Roczny czas pracy [min]	DWORD
48.6.n	Czas początkowy	DWORD
48.8[1].n - 48.8[3].n	Czasy przestojów REA	WORD
48.9.n	Wyłączenie sieci - klasa 0	WORD
48.10[1].n - 48.10[21].n	klasa 1-21 (roczne, stężenie)	WORD
48.11.n	klasa 24 (roczna, stężenie)	WORD
48.12.n	klasa 25 (roczna, stężenie)	WORD
48.13.n	klasa 26 (roczna, stężenie)	WORD
48.14.n	klasa 23 (roczna, stężenie)	WORD
48.15.n	klasa 35 (roczna, stężenie)	WORD
48.16[1].n - 48.16[22].n	klasa 1-22 (dzienne, stężenie)	WORD
48.17.n	klasa 23 (dzienna, stężenie)	WORD
48.18.n	klasa 25 (dzienna, stężenie)	WORD
48.19.n	klasa 27 (dzienna, stężenie)	WORD
48.20.n	klasa 28 (dzienna, stężenie)	WORD
48.21.n	klasa 29 (dzienna, stężenie)	WORD
48.22.n	klasa 35 (dzienna, stężenie)	WORD
48.23.n	klasa 30 (dzienna, stężenie)	WORD
48.24.n	klasa 31 (dzienna, stężenie)	WORD
48.25.n	klasa 32 (dzienna, stężenie)	WORD
48.26.n	klasa 33 (dzienna, stężenie)	WORD
48.27[1].n - 48.27[21].n	klasa 1-21 (roczna, strumień masy)	WORD
48.28.n	klasa 27 (roczna, strumień masy)	WORD
48.29.n	klasa 28 (roczna, strumień masy)	WORD
48.30.n	klasa 29 (roczna, strumień masy)	WORD
48.31.n	klasa 23 (roczna, strumień masy)	WORD
48.32.n	klasa 34 (roczna, strumień masy)	WORD
48.33[1].n - 48.33[22].n	klasa 1-22 (dzienne, strumień masy)	WORD
48.34.n	klasa 23 (dzienna, strumień masy)	WORD
48.35.n	klasa 30 (dzienna, strumień masy)	WORD
48.36.n	klasa 31 (dzienna, strumień masy)	WORD
48.37.n	klasa 32 (dzienna, strumień masy)	WORD
48.38.n	klasa 36 (dzienna, strumień masy)	WORD
48.39.n	średnia wartość miesięczna stężenia	FLOAT
48.40.n	średnia wartość miesięczna strumienia masy	FLOAT
48.41.n	roczna emisja	FLOAT
48.42.n	ostatnie średnio-dobowe stężenie	FLOAT
48.43.n	ostatnia średnio-dobowa emisja	FLOAT

1.22 DMS500 - Driver of Protocol for DURAG DMS 500 Analyzers

Driver Use

The DMS500 driver is designed for data exchange between the D-MS500 emission computer and the Asix system by using serial interfaces. The driver supports devices with implemented company software in versions DMS500 v. 1.23, 1.55, 1.59.

Parameterization of DMS500 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the DMS500 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: DMS500

DMS500 tab:

<i>Serial port</i>	- number of the serial port to which the network of DMS500 controllers is connected.
<i>Name</i>	- name of the DMS285 station; by default, a logical channel name is assumed as a station name; name is completed with spaces to the length of 8 characters.
<i>Report</i>	- the item allows to declare a place where the report read from a DMS computer will be sent by appropriate setting of pseudo-variable <i>REPORT</i> . As the purpose place of the report: <ul style="list-style-type: none">• printer name,• disk file name may be entered. Default value - by default, the report transferred from a DMS computer is sent to a printer (LPT1). Parameter: <i>name</i> - printer name or disk file name.

The DMS500 driver is loaded as a DLL automatically.

Addressing the Process Variables

The definition of process variables is based on the DMS protocol description titled "*Beschreibung der Kommunikation D-EVA mit DMS500*".

The syntax of symbolic address which is used for variables belonging to the DMS500 driver channel is as follows:

type.subtype [K|M] [idx] [.Mxx|.subfield] [.channel]

where:

<i>type</i>	- define the type of information: 43 - instantaneous values, 44 - integrals, 45 - parameters, 46 - classification of analog inputs - current results, 47 - classification of analog inputs - yearly results, 48 - classification of analog inputs - daily results, 56 - classification of digital inputs - current results, 57 - classification of digital inputs - yearly results, 58 - classification of digital inputs - daily results;
<i>subtype</i>	- number of required information; e.g. 13 for instantaneous values defines actual current intensity in a given channel;
<i>K,M</i>	- concentration/flow (only when a subtype contains data for both these categories);
<i>idx</i>	- index - only for indexed variables, e.g. classification; an index is a number bigger or equal to 1;
<i>Mxx</i>	- bit mask; xx is a number in hexadecimal code; on the data received from a DMS computer the AND operation with the number of xx is executed;
<i>Subfield</i>	- subfield name; for time values the following subfields are defined: SEC, MIN, HOUR, DAY, MONTH, YEAR;
<i>Channel</i>	- number of the channel; the channel number may be given only for the variables related to the channel. In case of general data it should be omitted.

EXAMPLES

43.14.1	actual instantaneous value of current for the analog channel 1
43.1.DAY	actual time of DMS computer - number of month day
43.17K.1	actual concentration for the channel 1
46.4K[5].1	actual value of the class 5 (concentration) for the channel 1

REPORT Special Variable

The special variable **REPORT** is a pseudo-variable of the 16-bit word type. Writing a given value to the REPORT variable causes reading an appropriate report (defined by this value) from the DMS computer. The report will be sent to a place defined in the **REPORT** item.

Access to Historical Data

The DMS500 driver enables the ASPAD module to access to the following historical data:

44.9K	- class number for concentration,
44.9M	- class number for flow,
44.16K	- concentration value,
44.16M	- flow value.

Time of Data

The data are transferred to the Asix system together with time of their retrieving. In case of the type 45, for which the data packet does **not** contain current time (field no. 1 or 10 for types 56,57,58), the time is determined on the ground of previously received packet

provided with time and on the ground of the time of its reading. Data packets do not contain the time for the type 45.

Incorrect Data

For the data 43.14 and 43.15, the DMS computer transfers status data (43.13). If any bit (specified in the protocol description) will be set, then such data is treated as incorrect.

Driver Configuration

DMS500 driver parameters are declared on *Driver parameters* tabs.

Option name: Transmission speed

Option value: number

Meaning - the item is used to declare a transmission speed.
Default value - by default, the transmission speed is equal to 9600 Bd.
Parameter:
number - transmission speed in bauds.

Option name: Parity

Option value: check_type

Meaning - the item is used to declare the kind of parity check.
Default value - by default, the parity check is even.
Parameter:
check_type - identifier of the kind of parity check:

n - no parity bit,
o - parity odd,
e - parity even,
m - mark,
s - space.

Option name: Stop bits

Option value: number

Meaning - the item is used to declare a number of stop bits.
Default value - by default, it is assumed to be 1 stop bit.
Parameter:
number - number of stop bits: 1 or 2.

Option name: Word length

Option value: number

Meaning - the item is used to declare a number of bits in a transmitted character.
Default value - by default, it is assumed that a character is of 8 bits in length.
Parameter:
number - number of bits in a character (5 to 8).

Option name: Timeout

Option value: number

Meaning - the item is used to declare waiting time for an answer from the DMS computer.
Default value - by default, it is assumed 10 seconds.
Parameter:
number - waiting time for an answer in seconds.

Option name: Auto sync

Option value: number

Meaning - the item is used to declare an automatic synchronization of an Asix system computer clock with a DMS computer clock. The parameter value determines maximal drift of time. The synchronization occurs when this drift limit is exceeded. The time from the DMS computer is received only during reading other data.

Default value - by default, the time is not synchronized.

Parameter:

number

- 0 (no synchronization) or maximal variance of times, (in seconds), after which the synchronization occurs.

Option name: History Buffer Removal

Option value: number

Meaning - the item is used to declare the time, after which buffers containing historical data that were read for needs of ASPAD are removed.

Default value - by default, history buffers are removed after 30 minutes.

Parameter:

number

- time (in minutes), after which history buffers are removed.

Option name: Max History Buffers

Option value: number

Meaning - the item is used to declare the maximal number of history buffers containing historical data that were read for needs of ASPAD. One buffer contains historical data for one channel. It is stored in the memory for a period defined in the item *History_Buffer_Removal*. One buffer occupies 30 bytes of memory. If archived data are stored by the DMS computer each 30 minutes then for 24 hours 48 buffers are needed.

Default value - by default, 50000 buffers are used.

Parameter:

number

- maximal number of buffers for historical data.

Option name: Time Difference

Option value: number

Meaning - the item is used to declare the time difference between clock indication of an Asix system computer and a DMS computer. Even if the time displayed on the DMS computer is the same as the time of the Asix system computer the time received by means of a serial interface, as a number of seconds from 01.01.1970, may be different from the actual time of the DMS computer.

Default value - by default, this time is equal 3600 seconds.

Parameter:

number

- time difference in seconds.

Option name: Report

Option value: name

Meaning - the item allows to declare a place where the report read from a DMS computer will be sent by appropriate setting of pseudo-variable *REPORT*. As the purpose place of the report:

- printer name,
- disk file name

may be entered.

Default value - by default, the report transferred from a DMS computer is sent to a printer (LPT1).
Parameter:
 name - printer name or disk file name.

Option name: Max history

Option value: number

Meaning - the item allows to declare a period of time counted from the current moment backwards, for which historical data in DMS computer memory will be read.

Default value - by default, it is a period of 35 days.

Parameter:
 number - time in days.

EXAMPLE 1

In the example a DMS computer named SIERSZA is defined. It is connected to the COM2 port. If the difference between the Asix system computer time and the DMS computer time will exceed 5 seconds, then a clock synchronization occurs.

Channel declaration:

Chanel / Name: SIERSZA

Driver: DMS500

Chanel parameters:

Serial port: COM2

Driver parameters:

Option name: Auto sync

Option value: 50

EXAMPLE 2

In the example the DMS computers with the following names are defined:

SIERSZA1,
SIERSZA2,
SIERSZA3,
SIERSZA4,
SIERSZA5,
SIERSZA6.

The DMS computers named as follows are connected to the COM2 port of the Asix system computer:

SIERSZA1,
SIERSZA2,
SIERSZA3.

The DMS computers named as follows are connected to the COM3 port of the Asix system computer:

SIERSZA4,
SIERSZA5.

The DMS computer named SIERSZA6 is connected to the COM4 port.

Communication Drivers

The COM2 and COM4 ports work with a speed of 19200 baud. The COM3 port works with a speed of 9600 baud.

The clocks of all DMS computers (except SIERSZA6) are synchronized with the clock of the Asix system computer when the time difference exceeds 60 seconds. The clock of the DMS computer SIERSZA6 is not synchronized.

Report read by means of the pseudo-variable REPORT are printed on the printer LPT1: An exception is the DMS computer SIERSZA6, the reports of which are stored in the file C:\RAP\SIERSZA6.RAP.

Channel declaration:

Chanel / Name: SIERSZA1
Driver: DMS500
Chanel parameters:
 Serial port: COM2

Chanel / Name: SIERSZA2
Driver: DMS500
Chanel parameters:
 Serial port: COM2

Chanel / Name: SIERSZA3
Driver: DMS500
Chanel parameters:
 Serial port: COM2

Chanel / Name: SIERSZA4
Driver: DMS500
Chanel parameters:
 Serial port: COM3

Chanel / Name: SIERSZA5
Driver: DMS500
Chanel parameters:
 Serial port: COM3

Chanel / Name: SIERSZA6
Driver: DMS500
Chanel parameters:
 Serial port: COM4

Driver parameters:

Default values for all DMS computers (parameters declared on *Driver parameters* tabs for one of the channel are valid for all the channels – unless you declare different values for the parameters on *Driver parameters* tabs for individual channel):

Option name: Auto Sync
Option value: 0

Option name: REPORT
Option value: C:\RAP\SIERSZA6.RAP

1.23. DNP3 - Driver of Distributed Network Protocol Version 3 for Electrical Power Engineering Control and Supervision Systems

Driver Use

The following description concerns the DNP3 driver. The driver services the communication with the use of serial links, TCP and UDP protocol.

Declaration of Transmission Channel

Declaration of the transmission channel using the DNP3 driver requires a channel with the following parameters to be added to the Current data module:

Standard tab:

Name: logical name of the transmission channel
Driver: DNP3

DNP3 tab:

Channel parameters:

communication_parameters, local_address, remote_address

where:

communication_parameters - determines the way of communication;
local_address - DNP3 address used by the driver;
remote_address - DNP3 address of remote device.

Communication parameters for serial links are as follows:

serial_port_name[:baud:data_bits:parity:stop_bits]

Example: „COM1:19200:8:n:1”

The parity may be the letter "n" (no parity bit), p (even parity), o (odd parity check), m (mark), s (space).

If the connection is supposed to work with parameters 9600:8:n:1, it is possible to omit them.

Communication parameters for the TCP and UDP protocol have the form:

protocol_name:ip_address[:port_number][[:ip_local_address]:local_port]

where:

protocol_name - TCP or UDP;
ip_address - IP address of a remote device (the name in DNS system is also possible);
port_number - port number on which a remote device waits for communication;
ip_local_address - local address of the network card to be used to establish connection;
local_port - local port to be used to establish connection.

If the device waits for the port 2000 to establish connection, the *port_number* parameter can be omitted.

The parameter *ip_local_address* is declared when there are multiple network adapters that can be used and only one of them can be used.

The *local_port* parameter is declared when the remote device waits for establishing connection with the use of one specific port.

EXAMPLE

Examples of channel declarations:

DNP3, COM1, 3, 4

This declaration is used to connect with a device of the address 4 via a serial port. The local address it is 3.

DNP3,TCP:192.168.0.15, 3, 4

This declaration is used to connect with a remote device with the address 192.168.0.15 with the use of TCP protocol. The remote device waits for connection on the port 2000, so it has been omitted. The remote device has the address DNP3 4. The local DNP3 address is 3.

DNP3,UDP:192.168.0.15|:20000, 3, 4

This declaration is used to connect with a remote device with the address 192.168.0.15 with the use of UDP protocol. The remote device waits for UDP packet reception on the port 20000, so it has been omitted. The device sends answers to received packets to the port 20000 and therefore the port on which the driver waits for these answers. The device directs answers to received packets to the port 20000 and then the port, on which the driver waits these responses, has been declared openly. The remote device has the address DNP3 4. The local DNP3 address is 3.

The channel parameters are specified in the item ***Driver/channel Parameters***.

Addressing the Process Variables

The following variables are available:

Tab. The set of variables for the driver DNP3.

Symbol	Description	Size of Conversion Function
In	The state of binary input with the address n. If the status bit "online" is set to 0 or the "communication lost" status bit is set, the variable receives bad quality.	1 byte
In.Onl or In.0	The "online" bit of the binary input with the address n.	1 byte
In.RS or In.1	The „restart“ bit state of the binary input with the address n.	1 byte
In.CL or In.2	The state of „communication lost“ status bit of the binary input with the address n.	1 byte
In.RF or In.3	The state of „remote forced“ status bit of the binary input with the address n.	1 byte
In.LF or In.4	The state of „local forced“ status bit of the binary input with the address n.	1 byte

In.CF or In.5	The state of „chatter filter” status bit of the binary input with the address n.	1 byte
In.Res or In.6	The state of „reserved” status bit of the binary input with the address n.	1 byte
In.ST or In.7	The binary input state with the address n. The quality of the variable with this address does not depend on bits: "communication lost" andi „online”.	1 byte
In.FL	The state of all status bits (flags) of binary input with the address n. Bits have the same numbers as in the addresses In.m (number m) above. The quality of the variable with this address does not depend on bits: "communication lost" andi „online”.	1 byte
IGn-m	The group of binary inputs with the addresses from n to m inclusive. The state of input n takes the bit 0 and the following bits correspond to the following inputs. If the status bit „communication lost” is set for any input or the „online” status bit is not set - the quality of variable is bad. As for individual binary inputs, you can add a dot and the number or the name of status bit to receive the group of values of these statuses.	1, 2 or 4 bytes depending on the number of bits
DIn	The state of 2-bit binary input with the address n. Addressing of inputs is the same as for binary inputs In, but the status bit „reserved” has the value of the second input bit.	1 byte
On	The state of binary output with the address n. If the status bit „online” has the value of 0 or the status bit „communcation lost” is set - the variable has the value bad.	1 byte
On.Onl or On.0	The state of bit „online” of binary output with the address n.	1 byte
On.RS or On.1	The state of bit „restart” of binary output with the address n.	1 byte
On.CL or On.2	The state of status bit „communication lost” of binary output with the address n.	1 byte
On.RF or On.3	The state of status bit „remote forced” of binary output with the address n.	1 byte
On.LF or On.4	The state of status bit „local forced” of binary output with the address n.	1 byte
On.Res1 or On.5	The state of status bit „reserved” of binary output with the address n.	1 byte
On.Res2 or On.6	The state of status bit „reserved” of binary output with the address n.	1 byte
On.ST or On.7	The state of binary output with the address n. The quality of the variable with this address is not depended on the bits: „communication lost” i „online”.	1 byte
On.FL	The state of all status bits (flags) of binary output with the address n. Bits have the same numbers as in the addresses In.m (number m) above. The quality of the variable with this address does not depend on bits: "communication lost" andi „online”.	1 byte
On. Code	Determining how to control the binary output. One of the following values is written to the variable: 0 – no operation	1 byte

	<p>1 – set output for the time specified by the variable with the address On.OnTime, and next reset it for the time specified by the variable OffTime (pulse on)</p> <p>2 – reset output for the time specified by the variable with the address On.OffTime, and next set it for the time specified by the variable On.OnTime (pulse off)</p> <p>3 – set output to 1 (latch on)</p> <p>4 – set output to 0 (latch off)</p>	
On.Close	<p>Determining how to control the output:</p> <p>0 – no operation or output activation</p> <p>1 – perform the operation „close“</p> <p>2 – perform the operation „trip“</p>	1 byte
On.Count	The value of the variable determines how many times the specified control have to be performed (by default, 1)	1 byte
On. Queue	If the variable is non-zero, the control operation is set at the end of queue for re-execution (by default, 0)	1 byte
On.Clear	If the variable is non-zero, the existing elements will be removed from the control queue (by default, 0)	1 byte
On.OnTime	It specifies the setting time of binary output to 1 for operations: „pulse on“ and „pulse off“	4 bytes
On.OffTime	It specifies the setting time of binary output to 0 for operations: „pulse on“ i „pulse off“	4 bytes
On.Exec	<p>Writing the appropriate value to the variable initiates the control. The values are as follows:</p> <p>2 - direct operate</p> <p>3 - direct operate, no acknowledge</p> <p>4 - operate (the operation have to be acknowledged by the operation <i>select</i> (5))</p> <p>5 - select</p> <p>6 - the driver will perform first the operation (5), and next (4)</p>	1 byte
On. CtlSts	<p>After sending control command the device sends the status of request back. The variable gets the value equal to this status. Possible status values:</p> <p>0 - control request has been accepted, initiated or queued</p> <p>1 - request has been rejected because the request of the operation "operate" (4). It was sent too late after sending the request "select" (5)</p> <p>2 - request was rejected because the operation "operate" (4) was not preceeded by an operation "select" (5)</p> <p>3 - request was rejected because of formatting errors</p> <p>4 - request was rejected because the binary output data does not perform such an operation</p> <p>5 - request was rejected because the queue is full or the output is active</p> <p>6 - request was rejected because of hardware problems</p>	1 byte
AIn	The state of analog input with the address	2 or 4 bytes,

	n. If the status bit "online" is set to 0 or the status bit "communication lost" is set, the variable takes the quality bad.	depending on the size of the data in device
AIn.Onl or AIn.0	The state of analog input with the address n. If the status bit "online" has the value of 0 or the status bit "communication lost", the variable has the quality bad. The state of bit "online" of analog input with the address n.	1 byte
AIn.RS or AIn.1	The state of bit "restart" of analog input with the address n.	1 byte
AIn.CL or AIn.2	The state of status bit "communication lost" of analog input with the address n.	1 byte
AIn.RF or AIn.3	The state of status bit "remote forced" of analog input with the address n.	1 byte
AIn.LF or AIn.4	The state of status bit "remote forced" of analog input with the address n.	1 byte
AIn.OR or AIn.5	The state of status bit of analog input with the address n.	1 byte
AIn.RC or AIn.6	The state of status bit "reference check" of analog input with the address n.	1 byte
AIn.Res or AIn.7	The state of status bit "reserved" of analog input with the address n.	1 byte
AIn.FL	The state of all status bits (flags) of analog input with the address n. Bits have the same numbers as in addresses above for AIn.m (number m) addressing. The variable quality with this address is not depended on the bits: „communication lost“ and „online“.	1 byte
AIn.Val	The value of analog input independent on status bits: „communication lost“ and „online“.	2 or 4 bytes, depending on the size of the data in device
AOn	The state of analog output with the address n. If the status bit "online" has the value of 0 or the status bit "communication lost" is set, the variable takes the quality bad.	2 or 4 bytes, depending on the size of the data in device
AOn.Onl or AOn.0	The state of bit "online" of analog output with the address n.	1 byte
AOn.RS or AOn.1	The state of bit "restart" of analog output with the address n.	1 byte
AOn.CL or AOn.2	The state of status bit "communication lost" of analog output with the address n.	1 byte
AOn.RF or AOn.3	The state of status bit "remote forced" of analog output with the address n.	1 byte
AOn.Res1 or AOn.4	The state of status bit "reserved" of analog output with the address n.	1 byte
AOn.Res2 or AOn.5	The state of status bit "reserved" of analog output with the address n.	1 byte
AOn.Res3 or AOn.6	The state of status bit "reserved" of analog output with the address n.	1 byte
AOn.Res4 or AOn.7	The state of status bit "reserved" of analog output with the address n.	1 byte
AOn.FL	The state of all status bits (flags) of analog output with the address n. The bits have the same numbers as in addresses above of AIn.m (number m) addressing. The variable quality with that address is not depended on the bits: „communication lost“ and „online“.	1 byte
AOn.CtIVal	The new value of analog output.	2 or 4 bytes, depending on the size of the data in device

AOn.Exec	Writing the appropriate value to the variable initiates the control. The values are as follows: 2 - direct operate 3 - direct operate, no acknowledge 4 - operate (the operation have to be acknowledged by the operation <i>select</i> (5)) 5 - select 6 - the driver will perform first the operation <i>select</i> (5), and next <i>operate</i> (4)	1 byte
AOn.CtISts	The control operation control. The meaning of the status is the same as for binary outputs.	1 byte
IIN	Internal Indications – set of tags attached by the device to any transmitted information at the application layer.	2 bytes
IIN.BCAST or IIN.0	The device received a message of "broadcast" type.	1 byte
IIN.C1 or IIN.1	The device has events of the 1 class in the buffer.	1 byte
IIN.C2 or IIN.2	The device has events of the class 2 in the buffer.	1 byte
IIN.C3 or IIN.3	The device has events of the class 3 in the buffer.	1 byte
IIN. TSYNC or IIN.4	The device requires time synchronization.	1 byte
IIN.LOC or IIN.5	Some or all the binary inputs are in local mode.	1 byte
IIN. DTRBL or IIN.6	The device signals problems.	1 byte
IIN. RSTRT or IIN.7	There was a device restart.	1 byte
IIN. NIMPL or IIN.8	Function not implemented.	1 byte
IIN. OUNK or IIN.9	Unknown object.	1 byte
IIN. INVPARAM or IIN.10	Invalid parameter.	1 byte
IIN. OVRFL or IIN.11	Event buffer overflow.	1 byte
IIN. EXEC or IIN.12	Control request is correct but the other control is being executed at the moment.	1 byte
IIN. CFGCORR or IIN.13	The device configuration is damaged.	1 byte
IIN.Res1 or IIN.14	Tag reserved.	1 byte
IIN.Res1 or IIN.15	Tag reserved.	1 byte

Control

The control of binary outputs means sending the set of data describing requested operation (control relay output block) to a device. For individual elements of this set the variables of the following addresses can be assigned: On.Code, On.Close, On.Clear, On.Queue, On.OnTime and On.OffTime (n means the number of binary output). The variable On.Code has to be defined at least. By writing specific values to these variable the content of sent data set is established. The meaning of these values is described in the section about addressing variables. In addition, you can define a variable On.CtISts, which takes the status of control performing after its sending. Sending the control is initiated by the recording of a specific value to the variable with the address On.Exec.

In the case of analog outputs, define the variable with the address AOn.CtIVal, to which the new value of analog output is written. Writing to the variable with the address AOn.Exec an appropriate value (with the same meaning as the value On.Exec) will initiate the control. The result of the operation will be written to the variable with the address AOn.CtISts.

Control can be realized by performing a complex action, consisting of a series of component operations setting the values of individual variables. The last action in the series should write an appropriate value to the variable with the address On.Exec.

An exemplary action sequence:

```
SET_BITS On.Codej 3_type_variable_name  
SET_BITS On.Exec 2_type_variable_name
```

can be used to set the output with the use of the „direct operate” operation.

Alarms

The change of DNP3 driver variable value can be linked with the generation of alarms. To do this, the additional parameter - alarm definition should be added to the variable address - including:

- alarm definition may take the form of:

ABalarm_no bit_no

or

AXalarm_no bit_no

or

ALalarm_no relacja wartość

and alarms associated with controls which are described later.

AB-type alarms are similar to the bitmap strategy of Asix system. Alarm_no defines the number of the first alarm. This alarm is associated with the variable value bit_no bit. Successive bits of variable value are associated with alarms of consecutive numbers. Setting the bit to 1 generates a new alarm and resetting the bit to 0 ends the alarm.

AX alarms operates in the same way as AB alarms, but the definition applies only to one specific bit bit_no. Other bits are not analyzed. The first bit of the value has the number 0.

The AL-type alarm is generated when the *value* of the variable meets the *relation*. The following relations are possible:

= or ==	- equality
!= or <>	- inequality
>	- greater than
>=	- greater or equal
<	- less than
<=	- less than or equal

Examples:

```
AI7[AL300=1:AL301=3]
```

The alarm 301 will be generated when the value of the variable (switch position) equals 1 (ON). The alarm 301 will be generated when the value of the variable equals 3 (intermediate switch position).

AI7[AL500>32,76]

The alarm will be generated when the value of the variable exceeds 32,76.

AI7[AX600 1]

Setting the bit no. 1 of the variable value will generate the alarm number 600. The parameter „Global_alarms” determines the type of generated alarms and if it is set to "Yes", global alarms are generated. As the parameter applies to the all driver, it can be declared in the section [DNP3DRV].

The first parameter of the generated alarm has the value that equals the value of the variable.

Alarms Associated with Control

Execution of control of binary and analog output can be associated with the generation of alarms.

These alarms take the form:

CAOalarm_no – alarm is generated when the operation "latch on" or "pulse on" or analog output control occurred

CAFalarm_no – alarm is generated when the operation „latch off” or „pulse off” occurred

CATalarm_no – alarm is generated when the operation "trip" occurred

CACalarm_no – alarm is generated when the operation "close" occurred

The first parameter of the generated alarm is the name of the user logged into the Asix system.

Driver/Channel Parameters

NOTICE: The driver parameters can be entered in the section with the same name as the name of communication channel or in the section named DNP3DRV. Entering any parameter in the section DNP3DRV allows to avoid entering the same parameter for each device - all the parameters from the section DNP3DRV become default values for all devices. However, if an individual device must have a value other than declared in the section DNP3DRV, such a parameter should be entered in the section with the same name as the communication channel name. The parameters from the communication channel section have a higher priority than the ones from the section DNP3DRV.

The parameters *Log* and *Dump* can contain the string „%s”, which will be replaced with the channel name for the parameter *Log* and the serial port name for the parameter *Dump*. Placing the parameter *Log* with stringg „%s” in the section DNP3DRV will create log file for each device. If the log file is not required for a device, you must specify "-".

The parameters defining a time period (e.g. the interval between consecutive queries about new events) have values in milliseconds. The letter designation of time units may be used: d – days, g i h – hours, m – minutes, s – seconds i ms – milisekundy, e.g. 2h 10m 5s - which means 2 hours, 9 minutes and 5 seconds.

Section name: DNP3DRV

Option name: AIPolIPd

Option value: number

Meaning: The interval between reading analog inputs. If the parameter equals 0, the analog inputs are not read.

Option value:
number – time in milliseconds.

Default value: 0.

Section name: DNP3DRV

Option name: AppTmo

Option value: number

Meaning: The timeout for device response.

Option value:

number - time in milliseconds (application layer).

Default value: 3000.

Section name: DNP3DRV

Option name: AppRetries

Option value: number

Meaning: Retries number to send requests to the device if the previous ones failed (application layer).

Option value:

number

Default value: 3.

Section name: DNP3DRV

Option name: BIPollPd

Option value: number

Meaning: The time interval between reading the binary inputs. If the parameter has the value of 0, binary inputs are not read. The parameter is used if the device does not inform automatically about the change of binary input states.

Option value:

number

- time in milliseconds

Default value: 0

Section name: DNP3DRV

Option name: ConfMode

Option value: never/ fragment/ always

Meaning: The message acknowledge mode in the data link layer:

never – the driver does not require confirmation of messages by the device;

fragment – the driver requires confirmations for messages consisting of multiple parts;

always – the driver always requires confirmation of sent messages.

Default value: never.

Section name: DNP3DRV

Option name: ConfTmo

Option value: number

Meaning: Timeout for the device response (data link layer). The parameter is relevant only if the parameter ConfMode has the value other than "never".

Option value:

number

- time in milliseconds

Default value: 2000.

Section name: DNP3DRV

Option name: DFCPd

Option value: umber

Meaning: The time interval between sending by the driver the message „Request Link Status“ to check the device status after receiving the information that its buffers may overflow - i.e. when the device set bits DFC (data flow control). The parameter of data link layer.

Option value:
number - time in milliseconds

Default value: 500.

Section name: DNP3DRV

Option name: LTestPd

Option value: number

Meaning: The time interval between sending by the driver the message „Test Link“. The message is sent when the link is inactive. The parameter is of data link layer. The value of 0 disables the link test.

Option value:
number - time in milliseconds

Default value: 1m.

Section name: DNP3DRV

option name: EventMode

Option value: none / poll / detect / unsol

Meaning: Event service mode:
none – the device does not generate events;
poll – the driver polls cyclically the device for the new events with the interval specified by the parameter EPollPd;
detect – while starting the driver sends a message that allows to determine if the device sends information about new events spontaneously;
unsol - the device on own initiative sends information on new events spontaneously.

Default value: detect.

Section name: DNP3DRV

Option name: EPollPd

Option value: number

Meaning: The time interval between polling the device for new events by the driver.

Option value:
number - time in millisecond

Default value: 5000.

Section name: DNP3DRV

Option name: IntgPd

Option value: number

Meaning: The time interval between the driver polls the device for current state of all data (integrity period). The value of 0 disables the device polling; it is done by the driver at the device start-up time and after device reboot.

Option value:
number - time in milliseconds

Default value: 0.

Section name: DNP3DRV

Option name: MaxFrame

Option value: number

Meaning: The maximum length of the message sent to the device.
Parameter of data link layer.

Option value:
number

Default value: 255.

Section name: DNP3DRV

Option name: MaxFragment

Option value: number

Meaning: The maximum length of a fragment of data sent by the device.
Transport layer parameter.

Option value:
number

Default value: 2048.

Section name: DNP3DRV

Option name: SendInterval

Option value: number

Meaning: The minimum time length between consecutive messages sent to
the device. Parameter of data link layer.

Option value:
number - time in milliseconds

Default value: 50.

Section name: DNP3DRV

Option name: Retries

Option value: number

Meaning: The number of retries of sending messages to the device if the
previous attempts failed. The parameter is used if the parameter
ConfMode requires confirmations. The parameter of data link
layer.

Option value:
number

Default value: 3.

Section name: DNP3DRV

Option name: TMeasDly

Option value: YES/NO

Meaning: The parameter determines if the device has the function of
transmission delay measurement. The measurement is performed
at the driver starting. If the parameter is set to NO, then the
measurement is not performed. The delay value can be given by
the parameter then.

Default value: YES.

Section name: DNP3DRV

Option name: TSyncDly

Option value: number

Meaning: The parameter determines the length of time that elapses from the moment of data preparation by the driver until the data are received by the driver. The driver automatically measures the delay if the device enables it and the parameter TMeasDly has the value YES.

Option value:
number - time in milliseconds

Default value: 0.

Section name: DNP3DRV

Option name: TSyncMode

Option value: NoSync / Master / FMaster/ Slave

Meaning: Time synchronization mode. The parameter can have the following values:

NoSync – no time synchronization;

Master – the driver sets the time of device when the device requests it;

FMaster – the driver sets the time of device periodically with the interval specified by the parameter TSyncPd;

Slave – the driver reads the time of device cyclically to determine the difference of times and to give time stamp to the data read from the device that does not have this stamp.

Default value: Master.

Section name: DNP3DRV

Option name: TSyncPd

Option value: number

Meaning: The time interval between setting or reading by the driver the time of a device depending on the parameter TSyncMode.

Option value:
number - time in hours

Default value: 1h.

Section name: DNP3DRV

Option name: Type

Option value XServer / Mikronika

Meaning: The device type. The parameter can be set to „XServer“ or „Mikronika“. Don't use the parameter for other devices.

Default value: no default value

Section name: DNP3DRV

Option name: UTC

Option value: YES/NO

Meaning: The parameter can take the value NO or YES and determines if the device supports UTC time.

Default value: YES.

Section name: DNP3DRV

Option name: Diag

Option value: information_group_name_list

Meaning: The parameter specifies the type of diagnostic information stored in *Log* parameter file. This is a list of information group names separated by commas (e.g. alhdr, objs, task, hdrs, rsptmr, tsync, iod).

Default value: no default value

Section name: DNP3DRV

Option name: Log

Option value: file_name

Meaning: The name of a file to which all the diagnostic information will be written, optionally with the full path to this file. After the file name you can declare the maximum file size (in megabytes). Name and size separate by a comma.

Default value: no default value

Section name: DNP3DRV

Option name: Dump

Option value: file_name

Meaning: The name of file to which all the information sent to/from the device will be written using the serial interface. After the comma you can declare in the option the maximum file size in megabytes. The parameter can be entered only in the section DNP3DRV. If the driver uses multiple serial ports, then you can specify the string „%s“ in the file name. The string will be replaced with the name of the serial port. If you use a sequence of „%s“ other characters should be added to the file name, because the file name can not be the same as the name of the serial port (e.g. %sData.dmp).

Default value: no default value

Exemplary Driver Configuration

Channel 1

Name: *DNP3_1*

Driver: *DNP3*

DNP3 tab:

Channel parameters:

UDP:192.168.0.31,3,4

Channel 2

Name: *DNP3_2*

Driver: *DNP3*

DNP3 tab:

Channel parameters:

UDP:192.168.0.32,3,4

Communication Drivers

Channel 3

Name: *DNP3_3*
Driver: *DNP3*

DNP3 tab:

Channel parameters:
UDP:192.168.0.33,3,4

Parameters declared on the tab: Architect > *Fields and Computers* > *Miscellaneous* > *Directly entered options*

Section name	Parameter name	Parameter value
DNP3DRV	Log	%s.log
DNP3DRV	EventMode	Poll
DNP3DRV	EPollPd	10s
DNP3_3	Log	-
DNP3_2	EPollPd	5s

In the example above, three channels were defined: DNP3_1, DNP3_2 and DNP3_3. For the devices DNP3_1 and DNP3_2 the following log file will be created: „DNP3_1.log“ and „DNP3_2.log“. The log file will not be created for the device DNP3_3. All the three devices will be cyclically polled for events - but the devices: DNP3_1 i DNP3_3 will be polled every 10 seconds and the device DNP3_2 every 5 seconds.

1.24 DP - Driver of PROFIBUS DP Network Protocol for PROFOboard Board

Driver Use

The DP driver is used for data exchange in the PROFIBUS network with devices operating according to the PROFIBUS DP standard. The Asix system computer must be provided with the PROFIboard NT communication processor board and with the PROFIboard NT v 5.20 software package of Softing GmbH.

Parameterization of DP driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the DP driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: DP

DP tab:

Channel parameters:

card_no, address, section_name

where:

board_no - number of the PROFIboard NT board which is used for communication with a given device (DP slave). In the present version the DP driver can control only one PROFIboard NT board;
address - address assigned to the DP device;
section_name - name of section in the application INI file, where the configuration parameters of the given DP device are contained.

The DP driver is loaded as a DLL automatically.

Configuration of DP Devices

Configuration parameters of each DP device (DP slave) should be declared in a separate section of the application INI file. These parameters should be accessible in the device specification or in the GSD file supplied by the manufacturer with the device. The section name is assigned by the user and must be unique in the application INI file.

The individual configuration parameters are transferred in separate items of the section. Each item is as follows:

parameter=value

where:

parameter - type of configuration parameter;
 value - parameter value (in decimal format !)

Types of configuration parameters, which **must be transferred** by the application designer are given below:

IDENT_NUMBER	device identifier	(PNO ident. number)
GROUP_IDENT	group identifier	(group member bits)
USER_PRM_DATA		(prm_user_data)
.. variable number of USER_RPM_DATA items		
.		
USER_PRM_DATA		(prm_user_data)
MODULE_ID		(cfg_data)
.. variable number of MODULE_ID items		
.		
MODULE_ID		(cfg_data)
<i>aat_data</i> parameters are optional and if not declared they are set to 0.		
NUMBER_OF_INPUTS		(aat_data)
NUMBER_OF_OUTPUTS		(aat_data)
OFFSET_OF_INPUTS		(aat_data)
OFFSET_OF_OUTPUTS		(aat_data)

slave_data parameters are optional and if not declared they are omitted.

SLAVE_DATA		(slave_user_data)
.. variable number of SLAVE_DATA items		
.		
SLAVE_DATA		(slave_user_data)

Addressing the Process Variables

The values transferred from modules connected to the DP device are written to an I/O buffer of the DP driver, in order resulting from arrangement of Input/Output modules in the cassette of the DP device. The addressing process variables requires an indication of:

- buffer type (input buffer or output buffer);
- byte no. (in the buffer), where the value of a given input/output is stored; depending on the type of process variable, the variable value occupies one byte (one-byte type variable) or 2 successive bytes (2-byte type variable);
- type of the variable (one-byte or 2-byte).

The syntax of symbolic address which is used for variables belonging to the DP driver channel is as follows:

<type><index>

where:

<i>type</i>	- type of process variables:
IB	- byte from the input buffer,
IW	- 2 successive bytes from the input buffer treated as a fixed-point unsigned number in INTEL format,
IDW	- 4 successive bytes from the input buffer treated as a double word in INTEL format,
IFP	- 4 successive bytes from the input buffer treated as a floating-point number in INTEL format,
IWM	- 2 successive bytes from the input buffer treated as a fixed-point unsigned number in MOTOROLA format,
IDWM	- 4 successive bytes from the input buffer treated as a double word in MOTOROLA format,
IFPM	- 4 successive bytes from the input buffer treated as a floating-point number in MOTOROLA format,

OB	- byte from the output buffer,
OW	- 2 successive bytes from the output buffer treated as a fixed-point unsigned number in INTEL format,
ODW	- 4 successive bytes from the output buffer treated as a double word in INTEL format,
OFP	- 4 successive bytes from the output buffer treated as a floating-point number in INTEL format,
OWM	- 2 successive bytes from the output buffer treated as a fixed-point unsigned number in MOTOROLA format,
ODWM	- 4 successive bytes from the output buffer treated as a double word in MOTOROLA format,
OFPM	- 4 successive bytes from the output buffer treated as a floating-point number in MOTOROLA format;
<i>Index</i>	- number of the byte in the input/output buffer.

EXAMPLE

IB9	- 9-th byte from the area of inputs
IW2	- word created from the 2-nd and 3-rd byte of the input area (INTEL format)
IWM2	- word created from the 3-rd and 2-nd byte of the input area (MOTOROLA format)
IDW5	- double word created from the 5-th, 6-th, 7-th and 8-th byte of the input area (INTEL format)
IDWM5	- double word created from the 8-th, 7-th, 6-th and 5-th byte of the input area (MOTOROLA format)

Driver Configuration

DP driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **DP** section.

Section name: DP

Option name: TRANSMISSION_SPEED

Option value: network_no,baud_id

Meaning - the item is used to declare the transmission speed in the PROFIBUS DP network.

Default value - by default, the transmission speed is set to 1,5 MB.

Parameter:

network_no - number of the PROFIBUS DP network (in the present version always set to 1),

baud_id - identifier of transmission speed in a PROFIBUS DP network:

- 0 - 9,6 kB
- 1 - 19,2 kB
- 2 - 93,75 kB
- 3 - 187,5 kB
- 4 - 500 kB
- 5 - 750 kB
- 6 - 1,5 MB
- 7 - 3 MB
- 8 - 6 MB
- 9 - 12 MB
- 11 - 45,45 kB

EXAMPLE

A declaration of transmission speed of 750 kB:

Section name: DP
Option name: TRANSMISSION_SPEED
Option value: 1, 5

Section name: DP

Option name: REFRESH_CYCLE

Option value: number

Meaning - the item is designed to declare an interval between successive data readings from buffers of the PROFIBoard NT board to the structures of the DP driver.

Default value - by default, the DP driver reads data from buffers of the PROFIBoard NT board every 0.5 second.

Parameter:
number - number of 0.5-second intervals, which must pass between successive data readings from buffers of the PROFIBoard NT board.

EXAMPLE

A declaration of data reading every 1 second:

Section name: DP
Option name: REFRESH_CYCLE
Option value: 2

Section name: DP

Option name: CONSOLE

Option value: YES|NO

Meaning - the item allows creating a console window where the DP driver messages, concerning the status of communication between an Asix system computer and DP devices, are displayed.

Default value - by default, the console window is not created.

Section name: DP

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file where all messages of the DP driver, concerning to the status of communication between an Asix system computer and DP devices, will be written. If the item does not define the full path, then the log file is created in the current directory.

Default value - by default, the log file is not created.

EXAMPLE

An example item declaring a transmission channel using the DP protocol for the communication with ET200U no. 7 unit is given below. The following input/output boards are connected to the ET200U (in order of their arrangement in the list):

- Digital Output module (8 outputs) 6ES5 461-8MA11 (identifier 32),
- Analog Input module (4 inputs) 6ES5 464-8ME11 (identifier 83),
- Digital Input module (8 inputs) 6ES5 431-8MA11(identifier 16).
- Digital Output module (8 outputs) 6ES5 461-8MA11 (identifier 32).

Channel declaration:

Channel / Name: CHAN1
Driver: DP
Channel parameters: 1,7,SIEM8008

The transmission channel named CHAN1 has the following parameters defined:

- DP protocol,
- communication by means of the PROFIBUS NT board with the number of 1,
- DP device has number 7 in the PROFIBUS DP network,
- configuration parameters of DP device are contained in the section SIEM8008.

The content of the section [SIEM8008] defining the sample configuration of the ET200U is as follows (all the values are decimal):

Section name: SIEM8008
Option name: IDENT_NR
Option value: 32776

Section name: SIEM8008
Option name: GROUP_IDENT
Option value: 0

Section name: SIEM8008
Option name: USER_PRM_DATA
Option value: 0

Section name: SIEM8008
Option name: MODULE_ID
Option value: 32

Section name: SIEM8008
Option name: MODULE_ID
Option value: 83

Section name: SIEM8008
Option name: MODULE_ID
Option value: 32

Section name: SIEM8008
Option name: MODULE_ID
Option value: 16

In the configuration under consideration the area of inputs has 9 bytes. The meaning of the bytes is as follows:

- bytes 1,2 - analog input 1
- bytes 3,4 - analog input 2
- bytes 5,6 - analog input 3
- bytes 7,8 - analog input 4
- byte 9 - digital input byte

In the configuration under consideration the area of outputs has 2 bytes. The meaning of the bytes is as follows:

- byte 1 - digital output byte (the first module 6ES5 451-8MA11)
- byte 2 - digital output byte (the second module 6ES5 451-8MA11)

EXAMPLE

Example declarations of process variables are given below:

```
# X1 - digital output - 1-st byte of output buffer
X1, OB1,    CHAN1,  1, 1, NOTHING_BYTE
# X2 - digital output - 2-nd byte of output buffer
X2, OB2,    CHAN1,  1, 1, NOTHING_BYTE
# X3 - digital input - 9-th byte of input buffer
X3, IB9,    CHAN1,  1, 1, NOTHING_BYTE
# X4 - analog input 1 - 1-st and 2-nd bytes of input buffer
X4, IW1,    CHAN1,  1, 1, NOTHING
# X5 - analog input 2 - 3-rd and 4-th byte of input buffer
X5, IW3,    CHAN1,  1, 1, NOTHING
# X6 - analog input 3 - 5-th and 6-th byte of input buffer
X6, IW5,    CHAN1,  1, 1, NOTHING
# X7 - analog input 4 - 7-th and 8-th byte of input buffer
X7,  IW7,   CHAN1,  1, 1, NOTHING
```

1.25 DP5412 - Driver of PROFIBUS DP Protocol for CP5412 Card

Driver Use

The DP5412 driver is used for data exchange in the PROFIBUS network with devices operating according to the PROFIBUS DP standard. The CP5412(A2) communication processor card and the DP-5412 software package (version 4.1 or higher) or the CP5613 card with the SIEMENS DP-5613 package must be installed on the Asix system computer.

Parameterization of DP5412 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the DP5412 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: DP5412

DP5412 tab:

Channel parameters:

card_no, address

where:

board_no - number of the CP5412 (A2) or CP5613 card used for communication with the given DP device (DP slave). In the present version the DP5412 driver may handle only one CP5412(A2) or CP5613 card,
address - address assigned to the DP device.

The DP5412 driver is loaded as a DLL.

Configuration of DP Devices

The DP devices (DP slave) configuration is performed by the COM PROFIBUS program included in the DP-5412 package.

The application designer must ensure the compatibility of numbers assigned to the DP devices during the DP network configuration with the program COM PROFIBUS and of DP device numbers declared in the Asix application INI file.

Addressing the Process Variables

The values transferred from modules connected to the DP device are written to an input buffer and to an output buffer of the DP5412 driver, in order according to the arrangement of Input/Output modules in the DP device cassette. The addressing the process variables consists in indication of:

- buffer type (input buffer or output buffer);
- byte no. (in the buffer), where the value of a given input/output is stored; depending on the type of process variable, the variable value occupies one byte (one-byte type variable) or 2 successive bytes (2-byte type variable);
- type of the variable (one-byte or 2-byte).

The syntax of symbolic address which is used for variables belonging to the DP5412 driver channel is as follows:

<type><index>

where:

<i>type</i>	- type of process variables:
IB	- byte from the input buffer,
IW	- 2 successive bytes from the input buffer treated as a fixed-point unsigned number in INTEL format,
IDW	- 4 successive bytes from the input buffer treated as a double word in INTEL format,
IFP	- 4 successive bytes from the input buffer treated as a floating-point number in INTEL format,
IWM	- 2 successive bytes from the input buffer treated as a fixed-point unsigned number in MOTOROLA format,
IDWM	- 4 successive bytes from the input buffer treated as a double word in MOTOROLA format,
IFPM	- 4 successive bytes from the input buffer treated as a floating-point number in MOTOROLA format,
OB	- byte from the output buffer,
OW	- 2 successive bytes from the output buffer treated as a fixed-point unsigned number in INTEL format,
ODW	- 4 successive bytes from the output buffer treated as a double word in INTEL format,
OFP	- 4 successive bytes from the output buffer treated as a floating-point number in INTEL format,
OWM	- 2 successive bytes from the output buffer treated as a fixed-point unsigned number in MOTOROLA format,
ODWM	- 4 successive bytes from the output buffer treated as a double word in MOTOROLA format,
OFPM	- 4 successive bytes from the output buffer treated as a floating-point number in MOTOROLA format;
<i>Index</i>	- number of the byte in the input/output buffer.

EXAMPLE

IB9	- 9-th byte from the area of inputs
IW2	- word created from the 2-nd and 3-rd byte of the area of inputs (INTEL format)
IWM2	- word created from the 3-rd and 2-nd byte of the area of inputs (MOTOROLA format)
IDW5	- double word created from the 5-th, 6-th, 7-th and 8-th byte of the area of inputs (INTEL format)
IDWM5	- double word created from the 8-th, 7-th, 6-th and 5-th byte of the area of inputs (MOTOROLA format)

Driver Configuration

DP5412 driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **DP5412** section.

Section name: DP5412

Option name: REFRESH_CYCLE

Option value: number

- Meaning - the item used to declare an interval between successive data readings from buffers of the CP5412(A2) or CP5613 CARD to the DP5412 driver structures.
- Default value - by default, the DP5412 driver reads data from buffers of the CP5412(A2) or CP5613 card every 0.5 second.
- Parameter:
 number - number of 0.5-second intervals, which must pass between successive data readings from buffers of the CP5412 (A2) or CP5613 card.

A declaration of data reading every 1 second:

Section name: CTLOGO

Option name: REFRESH_CYCLE

Option value: 2

Section name: DP5412

Option name: CONSOLE

Option value: YES|NO

- Meaning - the item allows to create a console window, where the DP5412 driver messages, concerning to status of communication between an Asix system computer and DP devices, are displayed.
- Default value - by default, the console window is not created.

Section name: DP5412

Option name: LOG_FILE

Option value: file_name

- Meaning - the item allows to define a file where all the DP5412 driver messages, concerning to the status of communication between an Asix system computer and DP devices, will be written. If the item does not define the full path, then the log file is created in the current directory.
- Default value - by default, the log file is not created.

EXAMPLE

An example item declaring a transmission channel using the DP5412 protocol for the communication with ET200U no. 7 is given below. The following input/output modules are connected to the ET200U (in order of their arrangement in the list):

- Digital Output module (8 outputs) 6ES5 461-8MA11,
- Analog Input module (4 inputs) 6ES5 464-8ME11,
- Digital Input module (8 inputs) 6ES5 431-8MA11.

Communication Drivers

- Digital Output module (8 outputs) 6ES5 461-8MA11.

Channel declaration:

Channel / Name: CHAN1

Driver: DP5412

Channel parameters: 1,7

The transmission channel named CHAN1 has the following parameters defined:

- DP5412 protocol,
- communication via the CP5412 (A2) card no. 1,
- DP device is assigned no. 7 in the PROFIBUS DP network.

In the considered configuration the area of inputs has 9 bytes. The meaning of the bytes is as follows:

- bytes 1,2 - analog input 1 (module 6ES5 431-8ME11),
- bytes 3,4 - analog input 2 (module 6ES5 431-8ME11),
- bytes 5,6 - analog input 3 (module 6ES5 431-8ME11),
- bytes 7,8 - analog input 4 (module 6ES5 431-8ME11),
- byte 9 - digital input byte (module 6ES5 431-8MA11).

In the considered configuration the area of outputs has 2 bytes. The meaning of the bytes is as follows:

- byte 1 - digital output byte (the first module 6ES5 451-8MA11)
- byte 2 - digital output byte (the second module 6ES5 451-8MA11)

Exemplary declarations of process variables are given below:

```
# X1 - digital output - 1-st byte of output buffer
X1,    OB1, CHAN1, 1, 1, NOTHING_BYTE
# X2 - digital output - 2-nd byte of output buffer
X2,    OB2, CHAN1, 1, 1, NOTHING_BYTE
# X3 - digital input - 9-th byte of input buffer
X3,    IB9, CHAN1, 1, 1, NOTHING_BYTE
# X4 - analog input 1 - 1-st and 2-nd bytes of input buffer
X4,    IW1, CHAN1, 1, 1, NOTHING
# X5 - analog input 2 - 3-rd and 4-th byte of input buffer
X5,    IW3, CHAN1, 1, 1, NOTHING
# X6 - analog input 3 - 5-th and 6-th byte of input buffer
X6,    IW5, CHAN1, 1, 1, NOTHING
# X7 - analog input 4 - 7-th and 8-th byte of input buffer
X7,    IW7, CHAN1, 1, 1, NOTHING
```

1.26 DSC - Driver of DSC PLC Protocol

Driver Use

The DSC driver is used for data exchange between an Asix system computer and the DSC 2000 PLC. The data exchange is performed by means of standard serial interfaces of the Asix system computer.

The cooperation of the Asix system with the DSC 2000 PLC does not require any controller's program adaptation.

Parameterization of DSC driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the DSC driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: DSC

DSC tab:

Channel parameters:

id,port

where:

id - number assigned to the DSC PLC,
port - name of the serial port e.g. COM1.

EXAMPLE

An example declaration of transmission channel based on the DSC Protocol.

Channel / Name: CHAN1
Driver: DSC
Channel parameters: 5,COM3

The logical channel named CHAN1 has the following parameters defined:

- DSC protocol,
- data exchange is performed with the controller no. 5,
- COM3 serial port is used for data exchange.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the DSC driver channel is as follows:

I<index>

where:

- I* - symbol of the variable type, the same for all process variables of the DSC protocol;
- index* - **number in hexadecimal format** identifying the process variable. Legal numbers are only those specified in the *Nummer* item in "*Beschreibung der Rechnerschnittstelle*", page 3.

All the variables except variables I10 and I11 (status of alarms) are variables the values of which may be read and written. The status of alarms may be read only.

Values of all process variables of the DSC 2000 controller are sent to the Asix system in the form of 16-bit fix-point unsigned number. This principle is valid for floating-point and fixed-point variables. For that reason in order to show a floating-point value of process variable it is necessary to convert the value received from the controller to the floating-point format by means of a conversion function (most often ANALOG_FP).

EXAMPLE

Examples of declaration of process variables:

```
# set value of chlorine - floating-point number, two decimal places  
X1, I17, CHAN1, 1, 1, ANALOG_FP,0,1000,0.0,10.0
```

```
# set value of pH - floating-point number, two decimal places  
X2, I2A, CHAN1, 1, 1, ANALOG_FP,0,1000,0.0,10.0
```

```
# alarms and flags 1 - 16-bit fixed-point number  
X3, I10, CHAN1, 1, 1, NOTHING
```

```
# alarms and flags 2 - 16-bit fixed-point number  
X4, I11, CHAN1, 1, 1, NOTHING
```

```
# access code to the operator panel - 16-bit fixed-point number  
X5, I15, CHAN1, 1, 1, NOTHING
```

The DSC driver is loaded as a DLL automatically.

1.27 DXF351 - Driver of Compart XF351 Device Protocol

Driver Use

The DXF351 driver is used for data exchange between Compart DXF351 devices of Endress+Hauser and an Asix system computer. The communication is performed by using serial interfaces in the RS232C standard.

Compart DXF351 must be set to the following mode:

RS 2323 USAGE - PRINTER
DEVICE ID - any
BAUD RATE - 9600
PARITY - NONE
HANDSHAKE - NONE

Settings in PRINT LIST:

ERRORS - NO
ALARMS - NO

The other items - freely chosen:
PRINT INTERVAL - 00:01 (data transfer every 1 minute)

Parameterization of DXF351 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the DXF351 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: DXF351

DXF351 tab:

Channel parameters:

port

where:

port - port name: COM1, COM2 etc.

EXAMPLE

The logical channel CHAN1 declaration working according to the DXF351 protocol on the COM2 port is as follows:

Channel / Name: CHAN1
Driver: DXF351
Channel parameters: COM2

The DXF351 driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the DXF351 driver channel is as follows:

P<index>

where:

index - number of measurement on the list PRINT LIST (see the table below).

Table 14. PRINT LIST.

P1	HEAT FLOW
P2	HEAT TOTAL
P3	HEAT GRAND TOTAL
P4	MASS FLOW
P5	MASS TOTAL
P6	MASS GRAND TOTAL
P7	COR. VOLUME FLOW
P8	COR. VOLUME TOTAL
P9	COR. VOL. GRAND TOTAL
P10	VOLUME FLOW
P11	VOLUME TOTAL
P12	VOL. GRAND TOTAL
P13	TEMPERATURE 1
P14	TEMPERATURE 2
P15	DELTA TEMPERATURE
P16	PROCESS PRESSURE
P17	DENSITY
P18	SPEC. ENTHALPY
P19	VISCOSITY
P20	REYNOLDS NUMBER

DXF351 transmits only these parameters, which are enclosed to the list **PRINT LIST** during configuring the Compart DXF351 device (group COMMUNICATION).

Raw values of all process variables are of FLOAT type.

An example of variable declarations:

```
X1, Mass Flow ,          P4,   CHAN1, 1, 1, NOTHING_FP
X2, Volume Flow,        P10,  CHAN1, 1, 1, NOTHING_FP
X3, Temperature 1,     P13,  CHAN1, 1, 1, NOTHING_FP
```

Driver Configuration

DXF351 driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **DXF351** section.

- ☑ **Section name: DXF351**
- ☑ **Option name: LOG_FILE**
- ☑ **Option value: file_name**

Meaning - the item allows to define a file where all diagnostic messages of the DXF351 driver and information about the content of telegrams received by the SPA driver will be written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

EXAMPLE

Section name: DXF351
Option name: LOG_FILE
Option value: D:\ASIX\DXF.LOG

- ☑ **Section name: DXF351**
- ☑ **Option name: CHAR_TIMEOUT**
- ☑ **Option value: number**

Meaning - the item allows to determine the maximal time, which may pass between successive characters of a data block from DXF351. After having exceeded this time the DXF351 driver assumes that message as finished and begins analyzing the message content.

Default value - by default, the item is set to 600 (millisecond).

Parameter:
number - number in milliseconds.

- ☑ **Section name: DXF351**
- ☑ **Option name: LIMIT_OF_ERRORS**
- ☑ **Option value: number**

Meaning - the item allows to define a number of successive transmission errors, after which an error status of measurement is set.

Default value - by default, the item has a value of 3.

Parameter:
number - number of successive transmission errors, after which an error status is set.

1.28. CtEcl - Driver for Communication with ECL Comfort 210/310 Controllers Made By Danfoss

Driver Use

The driver CtEcl is designed for data exchange between the Asix system and ECL Comfort 210/310 controllers made by Danfoss via an Ethernet network in the Open Modbus Tcp/Ip mode.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtEcl driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtEcl

CtEcl tab:

Channel parameters:

[Port=number;] serverIP=IPaddress; Nr=number [;AlarmNr=number]

where:

<i>Port</i>	- TCP port number in a controller. By default: 502,
<i>serverIp</i>	- controller IP address,
<i>Nr</i>	- number given to the controller in Modbus network,
<i>AlarmNr</i>	- alarm number in the case of no communication with the controller.

An exemplary declaration of transmission channel:

serverIP=10.10.105.21; Nr=10; AlarmNr=100

Process Variable Declaration

The following symbols of process variable types are allowable:

HR	- singular HR register
HRL format,	- 2 following HR registers treated as a double word in INTEL
HRF INTEL format,	- 2 following HR registers treated as a floating-point number in
HRLM MOTOROLA format,	- 2 following HR registers treated as a double word in
HRFM MOTOROLA format.	- 2 following HR registers treated as floating-point number in

Declaration of Areas Containing a Continuous Range of Addresses of Registers

ECL provides a fragmented range of register addresses (so-called PNU), which is specific for application realized by the controller. Implementation of Modbus protocol to the controller requires the inquiries referred to the controller concern only the register addresses defined in the controller. For this reason, the driver must have a database of legal controller register ranges for building inquiries. The database is supplied by the application development in a text file the consecutive lines of which contain definitions of continuous address ranges of HR or IR registers. The map does not have to include all continuous address ranges of controller registers - just, the map includes the definitions of those ranges to which registers used by Asix system variables belongs.

The form of a single definition of the area is as follows:

type, start, end

where:

type (HR or IR), - keyword specifying the type of registers that are in the range
start - address of the first register in the range,
end - address of the last register in the range.

Example:

Definitions of register address ranges when controller gives the access to the registers of HR10 ÷ HR14, HR21, HR30 ÷ HR50 numbers:

HR, 10, 14
HR, 21, 21
HR, 30, 50

Driver Parameters

CtEcl driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of CTECL section.

- Section name: CTECL**
- Option name: LOG_FILE**
- Option value: log_file_name**

Meaning: The item allows to define a file which all the diagnostic messages of the driver will be written to. The item is used for diagnostic purpose.

Option value:
log_file_name

Default value: By default, the log file is not created.

- Section name: CTECL**
- Option name: LOG_FILE_SIZE**
- Option value: number**

Meaning: The item allows to define the size of the log file defined with the use of LOG_FILE option.

Option value:
number - log file size in MB

Default value: 10 MB.

Section name: CTECL

Option name: LOG_OF_TELEGRAMS

Option value: YES/NO

Meaning: The option allows to write the content of telegrams sent/received between the driver and controllers to the log file (declared by means of the item LOG_FILE). Writing the content of telegrams should be used only while the Asix start-up.

Default value: NO.

Section name: CTECL

Option name: RANGE_DEFINITIONS_PATH

Option value: path

Meaning: The option defines the full path to the directory in which the driver will be searching for files with definitions of continuous ranges of addresses of controller registers.

Option value:
path - full path to the directory

Section name: CTECL

Option name: RECV_TIMEOUT

Option value: number

Meaning: The option allows to specify a waiting time for arriving the first character of an answer sent from a controller.

Option value:
number - time in milliseconds

Default value: 500.

Section name: CTECL

Option name: MAX_REGISTERS

Option value: number

Meaning: The option allows to define maximal number of registers which the driver may ask for in one command.

Option value:
number - max. number of registers.

Default value: 123.

Section name: CTECL

Option name: ADRES_IP

Option value: adres_IP

Meaning: The item allows to define IP address of computer network card through which the communication in all channels will be realized.

Option value:
IP_address - IP address of computer network card in IPv4 notation.

Default value: The card assigned by Windows.

Exemplary Driver Parameters

Section name: CTECL

Option name: LOG_FILE

Option value: d:\tmp\CtEcl\ecl.log

Section name: CTECL

Option name: LOG_FILE_SIZE

Option value: 20

Section name: CTECL

Option name: LOG_OF_TELEGRAMS

Option value: YES

Section name: CTECL
Option name: ADRES_IP
Option value: 10.10.110.24

Section name: CTECL
Option name: RANGE_DEFINITIONS_PATH
Option value: d:\defZakresow

Channel Parameters

Parameters declared in the section of the channel (in *Miscellaneous* module > *Directly entered options* tab).

Section name: <channel_name>

Option name: LOG_FILE

Option value: log_file_name

Meaning: The option allows to define a text file which all the diagnostic messages of the driver in a given channel will be written to.

Option value:
log_file_name

Section name: <channel_name>

Option name: LOG_FILE_SIZE

Option value: number

Meaning: The option allows to define the size of the log file defined with the use of LOG_FILE option.

Option value:
number - log file size in MB

Section name: <channel_name>

Option name: LOG_OF_TELEGRAMS

Option value: YES/NO

Meaning: The option allows to write the content of telegrams sent/received in a given channel between the driver and controllers to the log file (declared by means of the item LOG_FILE). Writing the content of telegrams should be used only while the Asix start-up. The option may overload the same option declared in the driver parameters.

Default value: NO.

Section name: <channel_name>

Option name: RECV_TIMEOUT

Option value: number

Meaning: The option allows to specify a waiting time for arriving the first character of an answer sent from a controller. The option may overload the same option declared in the driver parameters.

Option value:
number - timeout in milliseconds.

Section name: <channel_name>

Option name: MAX_REGISTERS

Option value: number

Meaning: The option allows to define maximal number of registers which the driver may ask for in one command in a given channel. The option may overload the same option declared in the driver parameters.

Option value:
number - max. number of registers.

Section name: <channel_name>

Option name: ADRES_IP

Option value: adres_IP

Meaning: The option allows to define IP address of computer network card through which the communication in a given channel will be realized. The option may overload the same option declared in the driver parameters.

Option value:
IP_address - IP address of computer network card in IPv4 notation.

Section name: <channel_name>

Option name: RANGE_DEFINITIONS_FILE

Option value: file_name

Meaning: The option allows to define the name of the file from which definitions of continuous ranges of addresses of controller registers will be read by a given channel. The file will be searched in the directory declared in the option RANGE_DEFINITIONS_PATH.

Option value:
file_name

If there is no RANGE_DEFINITIONS_FILE option declared, it is assumed that the regulator supported in a given channel supports the full address range of MODBUS protocol.

Exemplary Channel Parameters

[KANAL1]

Section name: KANAL1

Option name: LOG_FILE

Option value: d:\logi\kanal1.log

Section name: KANAL1

Option name: LOG_FILE_SIZE

Option value: 20

Section name: KANAL1

Option name: LOG_OF_TELEGRAMS

Option value: YES

Section name: <nazwa_kanału>

Option name: RECV_TIMEOUT

Option value: 750

Section name: <nazwa_kanału>

Option name: RANGE_DEFINITIONS_FILE

Option value: kanal1.def

1.29 CtEcoMUZ - Driver of ecoMUZ Protocol

Driver Use

The CtEcoMUZ driver is used for data exchange between the Asix system and Microprocessor Protecting ecoMUZ Devices made by JM Tronik. The transmission is performed through serial links by means of serial interfaces in the RS-232 or RS-485 standard, depending on ecoMUZ's serial interface type.

Parameterization of CtEcoMUZ driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the CtEcoMUZ driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtEcoMUZ

CtEcoMUZ tab:

Channel parameters:

Port=number; Nr=number [;Timeout=number]

where:

Port - number of the ecoMUZ's serial port,
Nr - number of an ecoMUZ serviced by the channel,
Timeout - max. timeout for the first character of the controller response (in milliseconds); it is passed 1000 milliseconds by default.

The following constant transmission parameters are passed:

- transmission speed - 9600 Bd,
- number of bits in a character - 8,
- parity check,
- number of stop bits - 1.

EXAMPLE

Exemplary declarations of channels for communication with the 1064 and 1125 ecoMUZs, by means of the COM2 serial port, and the 1068 ecoMUZ, by means of the COM1 serial port:

Channel / Name: K1064
Driver: CtEcoMUZ
Channel parameters: Port=2;Nr=1064

Channel / Name: K1066
Driver: CtEcoMUZ
Channel parameters: Port=2;Nr=1066

Channel / Name: K1068
Driver: CtEcoMUZ
Channel parameters: Port=1;Nr=1068

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the CtEcoMUZ driver channel is as follows:

`<type>[.<index>]`

where:

- | | |
|--------------|--|
| <i>type</i> | - variable type, |
| <i>index</i> | - index within the type – for the following types: |
| | • measurements, |
| | • settings of protections, |
| | • device state. |

Symbolic names of variable types (in parentheses the type of a raw variable value is given):

Read-only variable types:

- | | | |
|----------|---|---|
| P | - | measurements (FLOAT), index range 1- 4, |
| Z | - | settings of protections (FLOAT), index range 1 – 6, |
| S | - | device state (BYTE), index range 1 – 3. |

Write-only variable types:

- | | | |
|-----------|---|--|
| PP | - | activation of transmitters (WORD), |
| KS | - | signalling deletion (WORD), |
| ZI | - | protection test performance I>> i I>, |
| ZZ | - | performing the test of floating-short-circuit protection |

Read-only virtual variable:

- | | | |
|-----------|---|--|
| SK | - | communication status (WORD) (1 – o.k., 0 – lack or communication errors) |
|-----------|---|--|

EXAMPLE

Exemplary variable declarations – the K1064 channel services the 1064 ecoMUZ, the K1066 channel services the 1066 ecoMUZ:

```
JJ_10, value of current I1 MUZ1064, P1, K1064, 1, 1, NOTHING_FP
JJ_20, value of current I3 MUZ1066, P3, K1066, 1, 1, NOTHING_FP
JJ_30, setting of short-circuit unit current I>> MUZ1064, Z1, K1064, 1, 1, NOTHING
_FP
JJ_40, setting of short-circuit unit time I>> MUZ1066,Z4, K1066, 1, 1, NOTHING_FP
JJ_50, state of device MUZ1066, S1, K1066, 1, 1, NOTHING
_BYTE
JJ_60, configuration of device MUZ1064, S2, K1064 1, 1, NOTHING_BYTE
JJ_70, activation of transmitter MUZ1064, PP, K1064, 1, 1, NOTHING
JJ_80, deletion of signalling of MUZ1066, KS, K1066, 1, 1, NOTHING
JJ_90, status of communication with MUZ1064, SK, K1064, 1, 1, NOTHING
JJ_91, status of communication with MUZ1066, SK, K1066, 1, 1, NOTHING
```

Driver Configuration

CtEcoMUZ driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CtEcoMUZ** section.

Section name: CtEcoMUZ

Option name: LOG_FILE

Option value: log_file_name

Meaning - for diagnostic purposes the text-type log file, which messages about driver operation status are written into, is used.

Default value - by default, the log file is not created.

Defining - manual.

Section name: CtEcoMUZ

Option name: LOG_FILE_SIZE

Option value: number

Meaning - this item is used to define the size of the log file defined with use of the LOG_FILE item.

Default value - by default, the log file size is 10 MB.

Defining - manual.

Section name: CtEcoMUZ

Option name: LOG_OF_TELEGRAMS

Option value: YES | NO

Meaning - this item allows contents of telegrams transferred between the driver and controllers to be written into the log file (declared with use of the LOG_FILE item). The referred item should only be used in the Asix system start-up stage.

Default value - by default, value of this item is set to NO.

Defining - manual.

Exemplary Driver Section

Section name: CtEcoMUZ

Option name: LOG_FILE

Option value: d:\tmp\CtEcoMUZ\muz.log

Section name: CtEcoMUZ

Option name: LOG_FILE_SIZE

Option value: 20

Section name: CtEcoMUZ

Option name: LOG_OF_TELEGRAMS

Option value: YES

1.30. EcoMuz2 - driver of ecoMUZ-2 Protocol of JM Tronik

Driver Use

The ecoMuz2 driver is used for data exchange between the Asix system and Microprocessor Protecting ecoMuz-2 devices made by JM Tronik. The transmission is performed through serial links by means of serial interfaces in the RS-485 standard.

The driver realizes the following functions:

- current states and measurements readout,
- setpoints readout,
- settings readout,
- identifying data readout,
- events readout and reporting them to the Asix alarm system,
- interference readout and registering them in AsLogger (made by ASKOM Sp. z o.o.) database

The driver supports the following ecoMuz-2 types:

2G

BS

LR

PR

SR

TR

Support a device of other type demands modifications in the driver code.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the ecoMuz2 driver requires a channel with the following parameters to be added to the **Current data** module:

Standard tab:

Name: *logical name of the transmission channel*

Driver: EcoMuz2

EcoMuz2 tab:

Channel parameters:

Device number - network device number,
Device type - ecoMuz-2 type. Identifiers of supported types:
1 - 2G
2 - BS
3 - LR

- 4 – PR
- 5 – SR
- 6 – TR

After selecting the device type push the button *Show device parameters*. The detailed informations on device parameters and event parameters of selected type will be displayed in a web browser (at least IE6).

Run the mentioned window just once and select consecutive device types - the window content will be refreshed automatically.

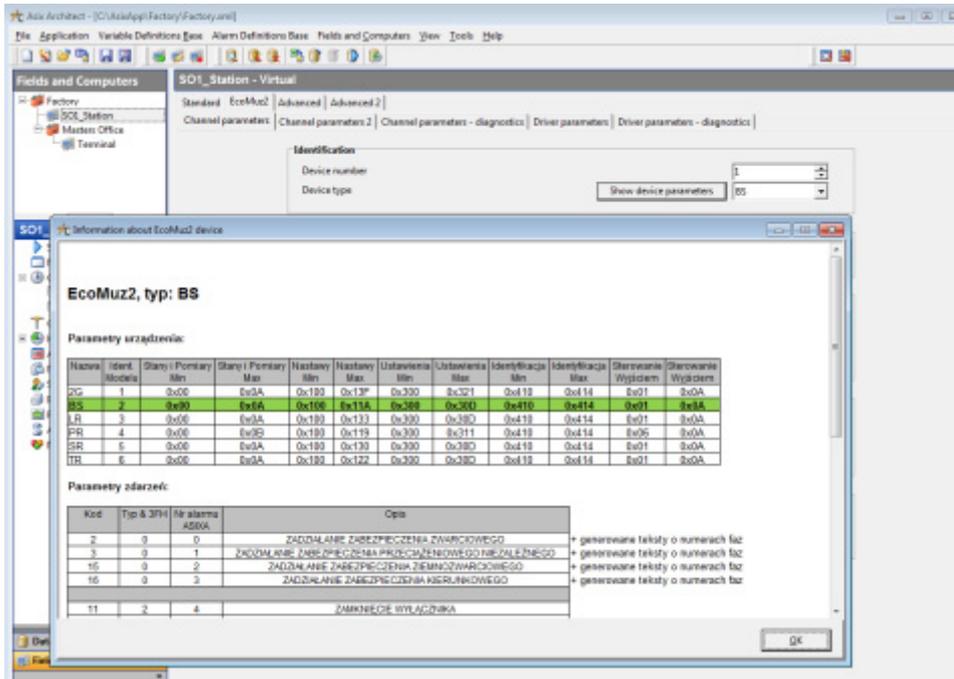


Fig. Information about EcoMuz2 device according to the selected type.

- Alarms offset** - offset added to the calculated Asix alarm number,
- Port** - serial port name,
- Baud rate** - 9600 or 19200 (for 2G type - 9600 only),
- Parity bit checking** - even or none (for 2G type - none only),
- Control variables:**

The name of the variable used to present the transmission status with ecoMuz-2.
 0 – transmission status ok,
 1 – no communication/errors of communication,
 2 –ecoMuz-2 off from the service,

The name of the variable to control the transmission state with ecoMuz-2:
 1 – request to exclude ecoMuz-2 from the service,
 0 – include ecoMuz-2 to the service.

Time synchronization - period of ecoMuz-2 time synchronization (in seconds). The value 0 meansno time synchronization (default value).

Notice:

- a/ control variables have to belong to the NOEN type channel.
- b/ constant transmission parameters: number of bits - 8, number of stop bits – 1.

EXAMPLE

Below there is an exemplary declaration of the channel: *KSR_67*, in which *ecoMuz-2* with network number 5, of LR type is serviced, on COM1 port and with alarm offset: 200. The channel state is indicated by the variable: *MuzStat05*, the channel control is enabled by the variable: *MuzCtrl05*, time synchronization is done every 60 seconds.

Name: KSR_67
Driver: ecoMuz2
Device number: 5
Device type: 3
Alarms offset: 200
Port: COM1
Baud rate: 19200
Parity bit checking: even
Name of the variable used for showing transmission status: MuzStat05
Name of the variable used for controlling transmission state: MuzCtrl05
Time synchronization: 60

Addressing the Process Variables

The driver makes the following variable types of MODBUS protocol:

CS	- binary value	(write),
HR	- 16-bit register	(readout)

and internal driver variables:

MN	- <i>ecoMuz-2</i> network number, from which the register is/was read (readout)
RN	- the number of currently/recently read recorder (readout)
RQ	- recorder readout request (write)
RR	- the status of currently/recently read recorder (readout)
RS	- recorder release reason (readout)
RT	- recorder release time (readout)
SN	- the number of recently read recorder sample (readout)

The syntax of symbolic address which is used for variables belonging to the *ecoMuz2* driver channel is as follows:

Type[index]

where:

<i>Type</i>	- variable type,
<i>Index</i>	- index of variable within declared types.

REMARKS:

- indexes are not declared for the types: *MN*, *RN*, *RQ*, *RR* and *SN*
- for the types: *RS*, *RT* the range of indexes depends on the number of sectors defined in the device,
- the parameter of sector readout request (*RQ* type) is the sector number; the sectors are numbered w.e.f. 1. If 0 is set as the parameter, that means the interrupt request of sector current readout;
- ranges for *HR* types are depended on the device type,
- to present the sector release time, use the conversion function *DATETIME_MUZ*, that convert the number of *double* type into the following string:

yyyy-mm-dd hh:nn:ss.zzz

EXAMPLE

Examples of variable declarations (variable values are taken from the *LR* type device through the channel *KLR_01*):

```
ZM_01, I1 value,                HR1,   KLR_01, 1, 1, NOTHING
ZM_02, activating protections of 1, HR6,   KLR_01, 1, 1, NOTHING
ZM_03, number of not read events,   HR11,  KLR_01, 1, 1, NOTHING
ZM_06, time of release time of recorder 1, RT1,   KLR_01, 1,1, DATETIME_MUZ
```

Example of variable declaration without parameters (variable values taken from the device of *LR* type available through the channel *KLR_01*):

```
ZM_07, recorder readout request,   RQ, KLR_01,1,1, NOTHING
ZM_08, number of read recorder,     RN, KLR_01,1,1, NOTHING
ZM_09, status of recorder readout,  RR, KLR_01,1,1, NOTHING
ZM_10, number of the sample read from recorder, SN, KLR_01,1,1, NOTHING
ZM_11, number of device being read,  MN, KLR_01,1,1, NOTHING
```

Interference Recording

The driver allows for automatic registration of interferences in AsLogger database. The registered items can be reviewed only by AsLogger software.

The recording of interference values demands declaration of **Registration of disturbances in AsLogger database** option (**EcoMuz2** tab / **Driver parameters**). It contains:

- MSSQL server name,
- database name,

where the interference values will be written.

The driver does not register the trends automatically - registration has to be initiated any time by the Asix system operator by execution of control with the use of RQ type variable. The control value is the number of recorder the value of which should be read from ecoMuz-2 and written to AsLogger database. If control value equals 0, it means the interrupt request of sector current readout.

While the sector readout the readout state tracking is possible with the use of driver internal variables of symbolic addresses:

- a/ *MN* - number of read ecoMuz-2,
- b/ *RN* - number of read recorder,
- c/ *RR* - status of recorder readout:

0 - readout is not active or finished OK,
1 - readout is in progress,
2 - readout finished with error.

- d/ *SN* - number of recently read sample.

The recording of interferences is realized according to recording plans. The names of recording plans may be:

- a/ defined by the user,
- b/ generated automatically by the driver.

While the recording the driver writes to AsLogger database the following interference items:

- a/ full set of plan items, i.e.:

currents: I0, I1, I2, I3
tensions: U0, U1, U2, U3
angle: fi0

inputs states: WE01 ... WE08
output states: WY01 ... WY08
states of interference boost states 1: PZ01 ... PZ16
states of protection working 1: ZZ01 ... ZZ16

The set of parameters and number of plan items concerned the states of protection boost and working are specific for each ecoMuz-2 type,

b/ creates the plan archive,

c/ wyznacza max i min wartości dla prądów i napięć w rejestrowanym zakłóceniu – będą ew. korygowane przy odczycie kolejnych zakłóceń dla danego planu.

c/ determines max and min values for current and voltage in recorded interference – if need they will be corrected during reading the successive interferences for the given plan.

Defining the Names of Recording Plans by the User

The user can define the names of recording plans in text files with the extension '.def'. To do this for each communication channel (channel of Asmen) one should create the separate file and write to them the definitions of recording plan names for interferences recorded in this channel. The files with the plan definitions should be located in the common directory the name of which should be declared as the **Directory with files containing registration plan names** option (**EcoMuz2** tab / **Driver parameters**).

The syntax of definition for recording plan name defined in '.def' file is as follows:

Channel, Cause, Table [, Commentary]

where:

Channel	- Asmen channel name,
Cause	- number identifying the cause of recorder release (number from 0-15),
Table	- recording plan name assigned to the interference,
Commentary	- komentarz

EXAMPLE

The definitions of recording plan names for interferences:

- release from the current I (release reason no. 0)
- release from the current IO (release reason no. 1)
- release from the tension U0 (release reason no. 2)
- release from the logic (release reason no. 3) in Asmen channel KTR_06:

```
KTR_06, 0, Field06ReleaseI, release from the current I  
KTR_06, 1, Field06ReleaseIO, release from the current IO  
KTR_06, 2, Field06ReleaseU0, release from the tension U0  
KTR_06, 3, Field06Logic, release from the logic
```

The Default Recording Plan Names

If the user does not define its own recording plan names, the driver will create the name of recording plan automatically.

The syntax of interference recording plan name generated by the driver is as follows:

NrxxxpyyyReason

where:

xxx	- ecoMuz-2 network number,
yyy	- COM port number,
Reason	- identifier of recorder release cause.

Example:

For interference caused by the recorder release from the user's logic in ecoMuz-2 no. 2 and COM5 the recording plan will be:

Nr002P005logika

Event Signalling

Signalling events is checked periodically, the frequency of check is determined by the global option

Event check period (see: *Driver parameters*). Event read from the devices are converted to the corresponding numbers in the Asix system alarms.

The conversion is performed based on the mapping prepared for each type of ecoMuz-2 and offset defined in Asmen channel declaration. There are two types of Asix alarms:

- a/ text only,
- b/ text and one numerical parameter.

The events of 0 are converted to Asix alarms of text type + one numerical parameter (of int type) + text parameter (max 3 characters), involving the number of phases.

The ecoMuz-2 events of the type no. 2 are converted to Asix alarms of text type.

Example 1:

The event *Turning off the switching from telemechanics* in ecoMuz-2 of LR type (the event of text type) is mapped to the Asix alarm number with the value of 8. If the alarm offset with the value of 400 has been declared in the Asmen channel declaration servicing this protection, then the definition of the alarm in Asix alarm definition file will have the form (400 + 8 = 407):

407, al, turning off the switching from telemechanics

Example 2:

The event *Activation of short-circuit protection* in ecoMuz-2 of LR type (the event of text type and two parameters: numerical and text) is mapped to Asix alarm number with the value of 0. If the alarm offset with the value of 100 has been declared in the Asmen channel declaration servicing this protection, then the definition of the alarm in Asix alarm definition file will have the form (100 + 0 = 100):

100, al, Activation of short-circuit protection %f, fazy %s

Mapping the events of ecoMuz-2 types on the numbers of Asix alarms are displayed in browser window after selection of the given device type and pushing the button **Show device parameters**.

Driver Parameters

The driver configuration is defined in the *Current Data* module, in the channel operating according to ecoMuz2 driver.

Log file

Meaning: The item allows to define a file where all diagnostic messages of the driver are written.

Default value: By default, the log file is not created.

Option value:

log_file_name

Disturbances log file

Meaning: The item allows to define a file where all diagnostic messages on read disturbances are written.

Default value: The log file is not created.

Option value:

log_file_name

Log file size

Meaning: The item allows to specify the size of log file size defined by the option: *Log file*.

Default value: 10 MB.

Option value:

number - rozmiar pliku logu w MB.

Log of telegrams

Meaning: The item allows to write to the log file the contents of telegrams sent between the driver and network clients. Writing the contents of telegrams to the log file should be used only while the **Asix** start-up.

Default value: NO.

Option value:

YES/NO

Number of repetitions

Meaning: The option defines the maximal number of connection repetitions in case of transmission error.

Default value: 3.

Option value:

number - the number of connection repetitions.

Response timeout

Meaning: The option defines the maximal time of waiting for response from ecoMuz-2 by the driver. The option is global but its value may be overloaded by the channel individual settings.

Default value: 1000.

Option value:

number - timeout in milliseconds.

Character timeout

Meaning: The option defines the maximal time between characters of response from EcoMuz-2. The option is global but its value may be overloaded by the channel individual settings.

Default value: 100.

Option value:

number - timeout in milliseconds.

Event check period

Meaning: The option defines the number of seconds between event register readout of the consecutive device connected to the same serial port servicing by the driver.

Default value: 10.

Option value:

number - time in seconds.

Registration of disturbances in AsLogger database

Meaning: The option changes over the driver to the mode of disturbances recording. It defines the database in which disturbance samples will be recorded.

Default value: Disturbances are not recorded.

Option value:

ServerName - MSSQL server name

DatabaseName - database name on the *ServerName*

Directory with files containing registration plan names

Meaning: The option defines full path to the directory of files with recording plan definitions.

Default value: -.

Option value:

path - full path to the directory.

Channel Parameters

The channel parameters are defined in the *Current Data* module, in the channel operating according to ecoMuz2 driver.

Log file

Meaning: The item allows to define a file where all diagnostic messages of the driver in the given communication channel are written.

Default value: The log file is defined by the driver option.

Option value:

log_file_name

Log file size

Meaning: The item allows to specify the size of log file size defined by the option *Log file* of the given channel.

Default value: 10.

Option value:

number - log file size in MB.

Log of telegrams

Meaning: The item allows to write to the log file the contents of telegrams sent between the driver and network clients in the given channel. Writing the contents of telegrams to the log file should be used only while the **Asix** start-up.

Default value: Settings defined by the driver option.

Option value:
YES/NO

Response timeout

Meaning: The option defines the maximal time of waiting for response from the device.

Default value: 1000.

Option value:
number - timeout in milliseconds.

Character timeout

Meaning: The option defines the maximal time between characters of response from EcoMuz-2. The option overloads the driver option.

Default value: 100.

Option value:
number - timeout in milliseconds.

Without events

Meaning: The option is used to switch off the event readout function in the given channel.

Default value: the readout is switch on.

Option value:
YES/NO

Without registrar

Meaning: The option is used to switch off the function of recorder interference readout in the channel.

Default value: recorder interference readout is enabled.

Option value:
YES/NO

EXAMPLE

Exemplary driver parameters.

Driver: EcoMuz2
Log file: c:\tmp\muz.log
Disturbances log file: c:\tmp\zaklocenia.log
Log file size: 30

Log of telegrams: YES
Registration of disturbances in AsLogger database: SERWER_RO6, BAZA_RO6
Directory with files containing registration plan names: c:\tmp\DefZaklocen

EXAMPLE

Exemplary channel parameters

Name: KANALX
Log file: c:\tmp\kanalx.log
Log file size: 20
Log of telegrams: YES
Character timeout: 200
Response timeout: 1500

1.31 CtEQABP - driver for electricity meters EQABP of POZYTON

Driver Use

The driver is used to exchange data between the Asix system and electricity meters EQABP, produced by Zakład Elektronicznych Urządzeń Pomiarowych POZYTON sp. z o.o. in Częstochowa.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtEQABP driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: EQABP

EQABP tab:

Channel parameters:
Port=port_number; *Baud*=transmission_speed; *Period*=period_number

where:

port_number - number of serial port to which the meter is connected (1...16); specifying the parameter is mandatory;
transmission_speed - transmission speed between your computer and device in bauds (300, 1200, 2400, 4800, 9600, 19200 or 38400); default value: 9600;
period_number - interval between successive readings of current meter indications in seconds; default: 10.

Declaration of Variables

Identifiers of variables consist of two parts: the address of device (if several devices were connected with one port) and the name of variable, joined by the character '/'. The address of device may be omitted only if there is one device connected with one port, but the character '/' can not be omitted.

Example of variable declarations (logical name of the channel – EQUABP).

```
#energy meters P- in zones 1, 2, 3 i 4:  
/1.8.1, /1.8.1, /1.8.1, EQABP, 1, 1, NOTHING_FP  
/1.8.2, /1.8.2, /1.8.2, EQABP, 1, 1, NOTHING_FP  
/1.8.3, /1.8.3, /1.8.3, EQABP, 1, 1, NOTHING_FP  
/1.8.4, /1.8.4, /1.8.4, EQABP, 1, 1, NOTHING_FP
```

```
#energy meters P+ in zones 1, 2, 3, 4 (X=1, 2, 3, 4)
```

```

/0.8.X,      /0.8.X,      /0.8.X,      EQABP, 1, 1, NOTHING_FP
#energy meters Q+ in zones 1, 2, 3, 4 (X=1, 2, 3, 4)
/2.8.X,      /2.8.X,      /2.8.X,      EQABP, 1, 1, NOTHING_FP
#energy meters Q- in zones 1, 2, 3, 4 (X=1, 2, 3, 4)
/3.8.X,      /3.8.X,      /3.8.X,      EQABP, 1, 1, NOTHING_FP
#sum of energy meters P-/P+/Q+/Q- in all zones (X=1,0,2,3)
/X.8.0,      /X.8.0,      /X.8.0,      EQABP, 1, 1, NOTHING_FP
#power in previous cycle (P+, P-, Q+, Q-)
/0.4.1_0,    /0.4.1_0,    /0.4.1_0,    EQABP, 1, 1, NOTHING_FP
/0.4.1_1,    /0.4.1_1,    /0.4.1_1,    EQABP, 1, 1, NOTHING_FP
/0.4.1_2,    /0.4.1_2,    /0.4.1_2,    EQABP, 1, 1, NOTHING_FP
/0.4.1_3,    /0.4.1_3,    /0.4.1_3,    EQABP, 1, 1, NOTHING_FP
#phase voltages
/97.5.5_0,   /97.5.5_0,   /97.5.5_0,   EQABP, 1, 1, NOTHING_FP
/97.5.5_1,   /97.5.5_1,   /97.5.5_1,   EQABP, 1, 1, NOTHING_FP
/97.5.5_2,   /97.5.5_2,   /97.5.5_2,   EQABP, 1, 1, NOTHING_FP
#currents for each phase
/97.4.4_0,   /97.4.4_0,   /97.4.4_0,   EQABP, 1, 1, NOTHING_FP
/97.4.4_1,   /97.4.4_1,   /97.4.4_1,   EQABP, 1, 1, NOTHING_FP
/97.4.4_2,   /97.4.4_2,   /97.4.4_2,   EQABP, 1, 1, NOTHING_FP
#temporary power active for each phase
/107_1,      /107_1,      /107_1,      EQABP, 1, 1, NOTHING_FP
/107_2,      /107_2,      /107_2,      EQABP, 1, 1, NOTHING_FP
/107_3,      /107_3,      /107_3,      EQABP, 1, 1, NOTHING_FP
#power meters S+ and S-
/4.8.0, /4.8.0, /4.8.0, EQABP, 1, 1, NOTHING_FP
/5.8.0, /5.8.0, /5.8.0, EQABP, 1, 1, NOTHING_FP

```

Driver Configuration

CtEQABP driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CtEQABP** section.

Section name: CTEQABP

Option name: LOG_FILE

Option value: log_file_name

Meaning - for diagnostic purposes the text-type log file, which messages about driver operation status are written into, is used.

Default value - by default, the log file is not created.

Defining - manual.

Section name: CTEQABP

Option name: LOG_FILE_SIZE

Option value: number

Meaning - this item is used to define the size of the log file defined with use of the LOG_FILE item.

Default value - by default, the log file size is 10 MB.

Defining - manual.

Section name: CTEQABP

Option name: LOG_OF_TELEGRAMS

Option value: YES | NO

Meaning - this item allows contents of telegrams transferred between the driver and controllers to be written into the log file (declared with use of the LOG_FILE item). The referred item should only be used in the Asix system start-up stage.

Default value - by default, value of this item is set to NO.

Defining - manual.

EXAMPLE

Driver parameters:

Section name: CTEQABP

Option name: LOG_FILE

Option value: d:\tmp\test\licznik.log

Section name: CTEQABP

Option name: LOG_FILE_SIZE

Option value: 3

Section name: CTEQABP

Option name: LOG_OF_TELEGRAMS

Option value: TAK

1.32. CtEsser - Honeywell Esser 8008 Fire Protection Unit Driver

Driver Use

The CtEsser driver allows data exchange between the Asix system and the Honeywell Esser 8008 fire protection unit control system. Communication takes place by means of the fire protection unit RS-232 serial connection operating in the 'RA LCD/POSP not supervised' mode.

CtEsser driver configuration is performed using the Architect application.

Transmission Channel Declaration

Declaration of the transmission channel using the CtEsser driver requires adding a channel with the following parameters to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: Esser

Esser tab:

Channel parameters:

Port=nrPortu; *Timeout*=timeout; *Alarm*=AlarmuNo

where:

Port - COM port number.

Timeout - Time (in seconds) between two telegrams (from the fire protection unit control system) after which data provided by the driver will be invalidated. The default parameter value is 8 seconds,

Alarm - The number of an alarm reported to the Asix alarm system in the absence of communication with the fire protection unit control system.

The transmission is carried out at fixed settings:

600 Bd, 8 bits per character, no parity, 1 stop bit.

Declaration of Variables

The driver provides the following types of variables:

C - detector state
G - group state
K - communication line state
Z - power state

Depending on the variable type, variable address has the following form:

C.GroupNo.SensorNo[.AlarmNo]
G.GroupNo[.AlarmNo]
K[.AlarmNo]
Z[.AlarmNo]

where:

AlarmNo - is an optional parameter that is used for declaring the base alarm number for alarms that can be generated for a given variable.

All variables are of WORD type.

The value of the variable is a bitmap of all states, which are indicated for the given variable on the Esser fire protection unit control system (a bit value of 1 means that the state is indicated in the control system). The range of indicated states depends on the type of the variable.

Below is a summary of states indicated depending on the variable type together with the assignment of the states indicated to individual bits of the variable:

For the state of the detector:

Bit 0 - ON (eingeschaltet)
Bit 1 - OFF (abgeschaltet)
Bit 2 - TROUBLE (stoerung)
Bit 3 - FIRE (feuer)
Bit 4 - FORALARM (voralarm)
Bit 5 - TECHALARM (tech alarm)

For the state of the communication line:

Bit 0 - TROUBLE (stoerung)

For the group state:

Bit 0 - ON (eingeschaltet)
Bit 1 - OFF (abgeschaltet)
Bit 2 - TROUBLE (stoerung)
Bit 3 - FIRE (feuer)
Bit 4 - FORALARM (voralarm)
Bit 5 - TECHALARM (tech alarm)
Bit 6 - TEST (pruefbetrieb)
Bit 7 - ALARM_HZ (alarm HZ-gruppe)
Bit 8 - ACTIVATED (erregt)

For the power state:

Bit 0 - TROUBLE (stoerung)

Examples of variable declarations (the base alarm number is given as the last parameter in the symbolic address of each variable; the variables belong to the logical CHANNEL):

JJ_11, group state 1, G.1.1, CHANNEL, 1, 1, NOTHING
JJ_12, group state 2, G.2.10, CHANNEL, 1, 1, NOTHING

JJ_13, group state 3, G.3.19, CHANNEL, 1, 1, NOTHING
JJ_16, detector 1 state in group 1, C.1.1.28, CHANNEL, 1, 1, NOTHING
JJ_17, detector 2 state in group 1, C.1.2.34, CHANNEL, 1, 1, NOTHING
JJ_18, detector 1 state in group 2, C.2.1.40, CHANNEL, 1, 1, NOTHING
JJ_19, connection status, K.46, CHANNEL, 1, 1, NOTHING
JJ_20, power status, Z.47, CHANNEL, 1, 1, NOTHING

Alarms Declaration

If the optional parameter [AlarmNo] is used in the variable address, then the driver will monitor the status of individual bits of a variable, notifying Asix alarm system of:

- a / the initiation of the alarm when the bit value changes from 0 to 1,
- b / the termination of the alarm when the bit value changes from 1 to 0,

Bit 0 of the variable value is assigned the [AlarmNo] alarm number, bit 1 is assigned the [AlarmNo] + 1 alarm number and so on until all indicated states in the type assigned to the variable are exhausted.

When the application is started, variables (which are assigned alarms) are initiated in accordance with the state of alarms retrieved from the Asix alarm system table and the status of these variables is set to OPC_QUALITY_GOOD. Other variables assume the value of 0 and the OPC_QUALITY_OUT_OF_SERVICE status.

Driver Parameters

The CtEsser driver parameters are declared in the *Miscellaneous* module, in the *Directly Entered options* tab.

The driver configuration is done using a separate section called CTESSER.

Section name: CTESSER

Option name: LOG_FILE

Option value: file_name

Purpose: the text log file to which driver status messages are stored is used for diagnostic purposes.

The default value: By default, no log file is created.

Section name: CTESSER

Option name: LOG_FILE_SIZE

Option value: number

Purpose: this option is used to determine the size of the log file defined using LOG_FILE item.

Option value:

number - the size of the log file in MB.

The default value: the default log file size is 10 MB.

Section name: CTESSER

Option name: LOG_OF_TELEGRAMS

Option value: YES | NO

Purpose: this option allows writing the contents of messages communicated between the driver and the controllers to the log file (declared using the LOG_FILE item)

The item in question should only be used during the Asix system start-up.

The default value: default value of the option is NO.

EXAMPLE

Sample driver parameterization

- Section name:* CTESSER
- Option name:* LOG_FILE
- Option value:* d:\tmp\test\centrala.log

- Section name:* CTESSER
- Option name:* LOG_FILE_SIZE
- Option value:* 30

- Section name:* CTESSER
- Option name:* LOG_OF_TELEGRAMS
- Option value:* YES

1.33 FESTO - Driver of Diagnostic Interface for FESTO PLCs

Driver Use

The FESTO driver is used for data exchange with FESTO FST-103, FST-405, FST IPC PLCs by means of a diagnostic interface. Required version of firmware: 2.20 or later. The transmission is executed by means of serial interfaces in the V24 (RS232C) standard by using the standard serial ports of an Asix system computer.

The operation of the Asix system with FESTO PLCs by using a diagnostic interface does not require any controller's program adaptation.

Parameterization of FESTO driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the FESTO driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: *FESTO*

FESTO tab:

Channel parameters:
port, [*baud*, *character*, *parity*, *stop*, *cpu_no*]

where:

<i>port</i>	- name of the serial port;
<i>baud</i>	- transmission speed in baud;
<i>character</i>	- number of bits in a transmitted character;
<i>parity</i>	- parity check type;
<i>stop</i>	- number of stop bits,
<i>cpu_no</i>	- CPU number in the controller.

Parameters *baud*, *character*, *parity*, *stop*, *cpu_no* are optional. In case of omitting them the following default values are assumed:

- transmission speed - 9600 Bd,
- number of bits in a character - 8,
- parity check type - no parity check,
- number of stop bits - 1,
- CPU number - 0.

EXAMPLE

Example items declaring the use of two transmission channel working according to the protocol of FESTO controller diagnostic interface are given below. In both

channels the communication is performed by means of the same physical interface but the data are exchanged with other CPUs:

Channel / Name: CHAN2
Driver: FESTO
Channel parameters: COM1,9600,8,none,1,2,8

Channel / Name: CHAN3
Driver: FESTO
Channel parameters: COM1,9600,8,none,1,3,8

In the example above the declaration of channels differs only with the number of CPU. The CHAN2 channel allows for data exchange with the CPU numbered 2 whereas the CHAN3 channel with the CPU no. 3. The other parameters in the channel declarations are identical:

- port COM1,
- transmission speed of 9600 Bd,
- transmitted character length - 8 bits,
- no parity check,
- one stop bit.

Addressing the Process Variables

The syntax of symbolic address used for process variables supported by the FESTO driver:

VARIABLE_TYPE *variable_index*

where:

VARIABLE_TYPE - string identifying the variable type,
variable_index - variable index within the given type.

The following symbols of process variable types are allowable (range of variable indexes is specific for different types of controllers):

EW - input words,
AW - output words,
ESW - words of input statuses,
ASW - words of output statuses,
MW - words of buffers,
TW - current readings of timers,
TV - set values of timers,
TA - attributes of timers,
T - readings of timers,
ZW - current readings of counters ,
ZV - set values of counters,
Z - counter readings,
R - registers.

EXAMPLES

R15 - register no. 15
EW0 - input word 0
AW8 - input output 8

All process variables are treated as 16-bit unsigned numbers.

The FESTO driver is loaded as a DDL automatically.

1.34 FILE2ASIX – Driver for Data Import from Files

Driver Use

FILE2ASIX is used for importing data into the Asix system from text files of the following structure:

Opening line
Line containing variable 1 value
Line containing variable 2 value
...
Line containing variable n value
Closing Line

Each line has the following form:

P1<sep>P2<sep>P3<sep>P4<sep>P5

where:

<i><sep></i>	- delimiter `;`
<i>P1</i>	- for opening and closing line it is the file saving date and time in UTC format; - for other lines it is the variable reading time in UTC format;
<i>P2</i>	- symbolic address of the variable (it must not contain exclamation character `!`);
<i>P3</i>	- quality of the variable in one of forms given below: BAD , UNCERTAIN , GOOD;
<i>P4</i>	- value of the variable in integer or floating-point form (`,` as a delimiter)
<i>P5</i>	- name of the device path.

Fields: *P2*, *P3*, *P4* and *P5* have to remain empty for opening and closing line.

The UTC time format is as follows:

YYYY-MM-DD<SP>GG:NN:SS,MS

where:

<i>YYYY</i>	- 4 digits indicating a year,
<i>MM</i>	- 2 digits indicating a month,
<i>DD</i>	- 2 digits indicating a day,
<i>SP</i>	- white space character,
<i>HH</i>	- 2 digits indicating an hour,
<i>NN</i>	- 2 digits indicating minutes,
<i>SS</i>	- 2 digits indicating seconds,
<i>MS</i>	- 2 digits indicating milliseconds.

NOTICE *The file is treated as correct if first and last line are exactly the same.*

Parameterization of FILE2ASIX driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the FILE2ASIX driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: FILE2ASIX

FILE2ASIX tab:

Channel parameters:
file_path [, *period*]

where:

file_path - path to file containing variable values;
period - time (given in seconds) between consecutive file reading (10 seconds are the default value).

EXAMPLE

reading from the file [\\komp\c\\$\data\data.csv](#) with 5 second interval
 CHANNEL1 = FILE2ASIX, \\KOMP\C\$\Data\Data.csv, 5

reading from the file *n:Data\data.csv* with 10 second interval (default value)
 CHANNEL2 = FILE2ASIX, n:Data\Data.csv

Addressing the Process Variables

The ASMEN process variable address may take one of the forms given below:

"access_path ! address"
"address"

where:

access_path - generalized path to the device (value of the *P5* field),
address - address of the variable in the path scope (value of the *P2* field).

The second form of addressing (*"address"*) is used when an access path is an empty string (*P5* field has no value).

Only a single variable may be passed through the file, thus a number of elements in the ASMEN variable declaration has to be equal to 1.

The driver automatically converts the type of the variable read from the file to a raw type, which is required by the conversion function given in the declaration of the ASMEN variable.

EXAMPLE

An example of the file which passes the values of ZMIENNA_FP and ZMIENNA_WORD variables:

```
2002-10-04 12:23:37,004;;;
2002-10-04 12:23:26,999;ZMIENNA_FP;GOOD;32.4436;PLC:S7[BEL_SPREZ]
2002-10-04 12:23:26,999;ZMIENNA_WORD;GOOD;32;
2002-10-04 12:23:37,004;;;
```

EXAMPLE

Examples of the ASMEN variable declaration for the above file:

```
JJ_1, "PLC:S7[BEL_SPREZ] ! ZMIENNA_FP", KANAL, 1, 1, NOTHING_FP
```

```
JJ_2, "ZMIENNA_WORD", KANAL, 1, 1, NOTHING
```

Driver Configuration

FILE2ASIX driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **FILE2ASIX** section.

Section name: FILE2ASIX

Option name: LOG_FILE

Option value: file_name

Meaning - it allows definition of a file in which all diagnostic messages of the driver will be saved. If position does not define full path, then the log file will be created in the current directory. The log file should only be used at the stage of the Asix system start-up.

Default value - by default, no log file is created.

Section name: FILE2ASIX

Option name: LOG_FILE_SIZE

Option value: number

Meaning - it allows to specify the log file size (using MB unit).

Default value - by default, 1MB size is assumed.

Parameter:

number - a size of the log file in MB.

Section name: FILE2ASIX

Option name: DATA_VALIDITY_PERIOD

Option value: number

Meaning - this entry is used for monitoring cases when a data file with a given interval reading fail. The entry defines the number of consecutive failed readings, after which status of the variables will be set to BAD.

Default value - by default, a period of data validity is equal to two cycles of data reading from a joint computer.

Parameter:

number - a number of failed reading cycles, after which an error status is set.

1.35 FP1001 - Driver of METRONIC Measurer Protocol

Driver Use

The FP1001 driver is used for data exchange between FP1001 3.W or FP1001 3.4 flow monitors manufactured by METRONIC Kraków and an Asix system computer provided with a serial interface in the RS485 standard.

Parameterization of FP1001 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the FP1001 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: FP1001

FP1001 tab:

Channel parameters:

Device ID - device no. in the network;

Device type - device type:

1 - steam flow monitor FP1001 3.4,

2 - water flow monitor FP1001 3.W;

Port - name of the serial port;

Transmission speed in bauds - transmission speed (by default 9600).

The FP1001 driver is loaded as a DLL automatically.

Addressing the Process Variables

The way of addressing the process variables is given in the following tables.

Table 15. Addressing the FP1001 3.W Meter (Water Monitor).

Symb. Address	Variable in FP-1001	Conversion Type	Operation
	Values of basic measurements		
P1	Instantaneous value Fm	Byte7->Float	Reading
P2	Instantaneous value Q	Byte7->Float	Reading
P3	Instantaneous value p	Byte4->Float	Reading
P4	Instantaneous value T	Byte3->Float	Reading
P5	Instantaneous value Tw	Byte3->Float	Reading
P6	Calculation value u water	Byte6->Float	Reading
P7	Adder state Fm	Byte10->Float	Reading
P8	Adder state Q	Byte10->Float	Reading
	Alarms and markers		
F1	Marker of unit "M" or "G"	Byte->Word	Reading
F2	Marker of emergency value substitution for T "A" or " "	Byte->Word	Reading
F3	Marker of emergency value substitution for "A" or " "	Byte->Word	Reading
F4	State of alarms for Fm : "X", "L" or "H"	Byte->Word	Reading
F5	State of alarms for Q : "X", "L" or "H"	Byte->Word	Reading
F6	State of alarms for p : "X", "L" or "H"	Byte->Word	Reading
F7	State of alarms for T : "X", "L" or "H"	Byte->Word	Reading
	Programmed discrete parameters		
ND1	Input type F (0-20mA, 4-20mA)	Byte->Word	Reading
ND2	Input type p (0-20mA, 4-20mA)	Byte->Word	Reading
ND3	Characteristic	Byte->Word	Reading
ND4	Measurement unit (kg/h and MJ/h or t/h and GJ/h)	Byte->Word	Reading
ND5	Measurement of pressure p (absolute or manometer))	Byte->Word	Reading
ND6	Output 4-20mA (Fm or Q)	Byte->Word	Reading
ND7	Impulse output (Fm or Q)	Byte->Word	Reading
ND8	Alarm Fm (H) (off, on)	Byte->Word	Reading
ND9	Alarm Fm (L) (off, on)	Byte->Word	Reading
ND10	Alarm Q (H) (off, on)	Byte->Word	Reading
ND11	Alarm Q (L) (off, on)	Byte->Word	Reading
ND12	Alarm p (H) (off, on)	Byte->Word	Reading
ND13	Alarm p (L) (off, on)	Byte->Word	Reading
ND14	Alarm T (H) (off, on)	Byte->Word	Reading
ND15	Alarm T (L) (off, on)	Byte->Word	Reading

Table 16. Addressing the FP1001 3.W Meter (Water Monitor) (continuation).

Symb. Address	Variable in FP-1001	Conversion Type	Allowed Operation
	Programmed numeric parameters		
NL1	Range F max	Byte5->Float	Reading
NL2	Cut-off level Fc	Byte5->Float	Reading
NL3	Range p max	Byte4->Float	Reading
NL4	Emergency temperature TA	Byte3->Float	Reading
NL5	Emergency water temperature TwA	Byte3->Float	Reading
NL6	Design temperature To	Byte3->Float	Reading
NL7	Output current range	Byte5->Float	Reading
NL8	Alarm level Fm (H)	Byte5->Float	Reading
NL9	Alarm level Fm (L)	Byte5->Float	Reading
NL10	Alarm level Q (H)	Byte5->Float	Reading
NL11	Alarm level Q (L)	Byte5->Float	Reading
NL12	Alarm level p (H)	Byte4->Float	Reading
NL13	Alarm level p (L)	Byte4->Float	Reading
NL14	Alarm level T (H)	Byte3->Float	Reading
NL15	Alarm level T (L)	Byte3->Float	Reading
	Working times		
T1	Working time of device	Byte5+2->Dword	Reading
	Conversion of letter and digital markers on bits		
	letter "A"	bit 0	
	letter "G"	bit 1	
	letter "H"	bit 2	
	letter "L"	bit 3	
	letter "M"	bit 4	
	letter "N"	bit 5	
	letter "S"	bit 6	
	letter "X"	bit 8	
	space	bit 9	
	digit "0"	bit 0	
	digit "1"	bit 1	

Table 17. Addressing the FP1001 3.4 Meter (Steam Monitor).

Symb. Address	Variable in FP-1001	Conversion Type	ration
	Values of basic measurements		
P1	Instantaneous value Fm	Byte7->Float	Reading
P2	Instantaneous value Fw	Byte6->Float	Reading
P3	Instantaneous value Q	Byte7->Float	Reading
P4	Instantaneous value Qw	Byte7->Float	Reading
P5	Instantaneous value deltaQ	Byte7->Float	Reading
P6	Instantaneous value p	Byte4->Float	Reading
P7	Instantaneous value T	Byte3->Float	Reading
P8	Calculation value p	Byte6->Float	Reading
P9	Calculation value u	Byte6->Float	Reading
P10	Instantaneous value Tw	Byte3->Float	Reading
P11	Calculation value u water	Byte6->Float	Reading
P12	Adder state Fm	Byte10->Float	Reading
P13	Adder state Fw	Byte10->Float	Reading
P14	Adder state Q	Byte10->Float	Reading
P15	Adder state Qw	Byte10->Float	Reading
P16	Adder state delta Q	Byte10->Float	Reading
	Alarms and markers		
F1	Marker of unit "M" or "G"	Byte->Word	Reading
F2	Marker of emergency value substitution for p "A" or " "	Byte->Word	Reading
F3	Marker of emergency value substitution for T "A" or " "	Byte->Word	Reading
F4	Marker of steam type "N", "S" or "A"	Byte->Word	Reading
F5	State of alarms for Fm : "X", "L" or "H"	Byte->Word	Reading
F6	State of alarms for Q : "X", "L" or "H"	Byte->Word	Reading
F7	State of alarms for p : "X", "L" or "H"	Byte->Word	Reading
F8	State of alarms for T : "X", "L" or "H"	Byte->Word	Reading

Table 18. Addressing the FP1001 3.4 Meter (Steam Monitor) (continuation).

Symb. Address	Variable in FP-1001	Conversion Type	ration
	Values of conditional adders		
S1	Fm for saturated steam	Byte10->Float	Reading
S2	Fm for >Fm (H)	Byte10->Float	Reading
S3	Fm for <Fm (L)	Byte10->Float	Reading
S4	Fm for >Q (H)	Byte10->Float	Reading
S5	Fm for <Q (L)	Byte10->Float	Reading
S6	Fm for >p (H)	Byte10->Float	Reading
S7	Fm for <p (L)	Byte10->Float	Reading
S8	Fm for >T (H)	Byte10->Float	Reading
S9	Fm for <T (L)	Byte10->Float	Reading
S10	Q for saturated steam	Byte10->Float	Reading
S11	Q for >Fm (H)	Byte10->Float	Reading
S12	Q for <Fm (L)	Byte10->Float	Reading
S13	Q for >Q (H)	Byte10->Float	Reading
S14	Q for <Q (L)	Byte10->Float	Reading
S15	Q for >p (H)	Byte10->Float	Reading
S16	Q for <p (L)	Byte10->Float	Reading
S17	Q for >T (H)	Byte10->Float	Reading
S18	Q for <T (L)	Byte10->Float	Reading
	Programmed discrete parameters		
ND1	Steam type (dry or saturated)	Byte->Word	Reading
ND2	Measurement (p or T)	Byte->Word	Reading
ND3	Measuring method (reducer or Vortex)	Byte->Word	Reading
ND4	Return water (lack, only Tw, Tw and Fw)	Byte->Word	Reading
ND5	Input type F (0-20mA, 4-20mA,0-10kHz,01kHz)	Byte->Word	Reading
ND6	Input type Fw (0-20mA, 4-20mA,0-10kHz,01kHz)	Byte->Word	Reading
ND7	Input type p (0-20mA, 4-20mA,0-10kHz,01kHz)	Byte->Word	Reading
ND8	Input type T (0-20mA, 4-20mA,Pt100)	Byte->Word	Reading
ND9	Characteristic F	Byte->Word	Reading
ND10	Measurement unit (kg/h and MJ/h or t/h and GJ/h)	Byte->Word	Reading
ND11	Pressure measurement p (absolute or manometer.)	Byte->Word	Reading
ND12	Output 4-20mA (Fm or delta Q)	Byte->Word	Reading
ND13	Impulse output (Fm or delta Q)	Byte->Word	Reading
ND14	Alarm Fm (H) (off, on)	Byte->Word	Reading
ND15	Alarm Fm (L) (off, on)	Byte->Word	Reading
ND16	Alarm Q (H) (off, on)	Byte->Word	Reading
ND17	Alarm Q (L) (off, on)	Byte->Word	Reading
ND18	Alarm p (H) (off, on)	Byte->Word	Reading
ND19	Alarm p (L) (off, on)	Byte->Word	Reading
ND20	Alarm T (H) (off, on)	Byte->Word	Reading
ND21	Alarm T (L) (off, on)	Byte->Word	Reading

Table 19. Addressing the FP1001 3.4 Meter (Steam Monitor) (continuation).

Symb. Address	Variable in FP-1001	Conversion Type	Allowed Operation
	Programmed Discrete Parameters		
ND22	Conditional adder Fm for saturated steam (off, on)	Byte->Word	Reading
ND23	Conditional adder Fm for >Fm (H) (off, on)	Byte->Word	Reading
ND24	Conditional adder Fm for <Fm (L) (off, on)	Byte->Word	Reading
ND25	Conditional adder Fm for >Q (H) (off, on)	Byte->Word	Reading
ND26	Conditional adder Fm for <Q (L) (off, on)	Byte->Word	Reading
ND27	Conditional adder Fm for >p (H) (off, on)	Byte->Word	Reading
ND28	Conditional adder Fm for <p (L) (off, on)	Byte->Word	Reading
ND29	Conditional adder Fm for >T (H) (off, on)	Byte->Word	Reading
ND30	Conditional adder Fm for <T (L) (off, on)	Byte->Word	Reading
ND31	Conditional adder Q for saturated steam (off, on)	Byte->Word	Reading
ND32	Conditional adder Q for >Fm (H) (off, on)	Byte->Word	Reading
ND33	Conditional adder Q for <Fm (L) (off, on)	Byte->Word	Reading
ND34	Conditional adder Q for >Q (H) (off, on)	Byte->Word	Reading
ND35	Conditional adder Q for <Q (L) (off, on)	Byte->Word	Reading
ND36	Conditional adder Q for >p (H) (off, on)	Byte->Word	Reading
ND37	Conditional adder Q for <p (L) (off, on)	Byte->Word	Reading
ND38	Conditional adder Q for >T (H) (off, on)	Byte->Word	Reading
ND39	Conditional adder Q for <T (L) (off, on)	Byte->Word	Reading
	Programmed Numeric Parameters		
NL1	Range F max	Byte5->Float	Reading
NL2	Cut-off level Fc	Byte5->Float	Reading
NL3	Range Fw max	Byte5->Float	Reading
NL4	Cut-off level for Fw	Byte5->Float	Reading
NL5	Range p max	Byte4->Float	Reading
NL6	Emergency pressure pA	Byte4->Float	Reading
NL7	Design pressure	Byte4->Float	Reading
NL8	Range T min	Byte3->Float	Reading
NL9	Range T max	Byte3->Float	Reading
NL10	Emergency temperature TA	Byte3->Float	Reading
NL11	Design temperature	Byte3->Float	Reading
NL12	Emergency water temperature	Byte3->Float	Reading
NL13	Output current range	Byte5->Float	Reading
NL14	Alarm level Fm (H)	Byte5->Float	Reading
NL15	Alarm level Fm (L)	Byte5->Float	Reading
NL16	Alarm level Q (H)	Byte5->Float	Reading
NL17	Alarm level Q (L)	Byte5->Float	Reading
NL18	Alarm level p (H)	Byte4->Float	Reading
NL19	Alarm level p (L)	Byte4->Float	Reading
NL20	Alarm level T (H)	Byte3->Float	Reading
NL21	Alarm level T (L)	Byte3->Float	Reading

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to FP1001 driver.

Log file

Meaning

- the item allows to define a file to which all the diagnostic messages of the FP1001 driver and the information about the content of the telegrams received and sent by the FP1001 driver will be written. If the item doesn't define its full path, the log file will be created in the current directory.

Default value

- by default, the file log isn't created.

Telegrams log

Meaning

- the item allows to write to the log file the content of telegrams transmitted between Asix and FP1001 devices. Writing the telegrams content to the log, file should be used only during the Asix start-up.

Default value

- by default, the FP1001 driver does not write the content of telegrams to the log file.

Transmission delay

Meaning

- the item is used to declare a pause between transmissions. The pause is expressed as a number of 10 ms intervals.

Default value

- by default, the item is set to 1 (10 msec).

Updating

Meaning

- the item defines a number of seconds, after which the driver updates the contents of its internal buffers by reading the measure data from FP1001 devices FP1001.

Default value

- by default, the item is set to 1 (updating every 1 second).

Number of repetitions

Meaning

- the item allows to define a number of repetitions in case of occurring the transmission error.

Default value

- by default, the item is set to 0 (no repetitions).

1.36 GFCAN - Driver of CANBUS Protocol for CanCard

Driver Use

The GFCAN driver is used for data exchange between devices with the CAN network interface and an Asix system computer provided with a CAN network communication processor card manufactured by Garz & Fricke Industrieautomation GmbH and provided with the Garz & Fricke CAN driver for Windows NT" version 1.0.

Parameterization of GFCAN driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the GFCAN driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: GFCAN

The GFCAN driver is loaded as a DLL automatically.

Addressing the Process Variables

Values of process variables are transferred in telegrams sent by controllers connected to the CAN network. Each telegram consists maximally of 8 bytes, which may be identified as:

bytes with indexes 1 - 8	(type BY),
16-bit numbers with indexes 1 - 4	(type WD),
32-bit numbers with indexes 1 - 2	(type DW),
32-bit floating-point numbers with indexes 1 - 2	(type FP).

The GFCAN driver differs the following access types to process variables:

read only	(type R_),
write only	(type W_),
write/read	(type RW_).

The addressing the process variables consists in the indication of:

- access type (R_, W_ or RW_);
- variable type (BY, WD, DW, FP);
- telegram no. (for variables with RW_ access type it is the telegram number that is used to read the variable);
- index within the telegram (for variables with RW_ access type it is the index in the telegram that is used to read the variable);
- for variables with RW_ access type it is necessary to declare additionally:
 - a/ telegram number that is used to read the variable,
 - b/ index in the telegram that is used to write the variable.

The syntax of symbolic address which is used for variables belonging to the GFCAN driver channel is as follows:

`<access_type><variable_type><tel>.<index>[.<tel>.<index>]`

where:

- access type* - access type to a process variable:
 - R_ - only reading,
 - W_ - only writing,
 - RW_ - reading and writing,
- variable_type* - process variable type:
 - BY - variable of the byte type,
 - WB - variable of the 16-bit number type,
 - DW - variable of the 32-bit number type,
 - FP - variable of the 32-bit floating-point number type.
- tel* - telegram number,
- index* - index within the telegram.

EXAMPLE

X1, bytes 1-4 of telegram 31,R_FP31.2,	NONE, 1, 1, NOTHING_FP
X2, word no. 3 of telegram 31,R_WD31.3,	NONE, 1, 1, NOTHING
X3, state of burners, RW_BY31.1.35.3,	NONE, 1, 1, NOTHING_BYTE
X4, valve setting, RW_WD32.1.34.1,	NONE, 1, 1, NOTHING

The variable X1 is a variable of the 32-bit floating-point number type transferred to the Asix system in bytes 1,2,3 and 4 of the telegram no. 31.

The variable X2 is a variable of the 16-bit number type, the value of which is transferred to the Asix system by bytes 5 and 6 (third word) of telegram no.31. The value of the variable can't be modified by the application (variable only to read).

Value of the variable X3 is transferred to the Asix system by means of the byte no. 1 of the telegram no. 31. The value exchange of the variable X3 consists in sending from the Asix system the telegram no. 35, the byte no. 3 of which includes the required value of the variable X3.

Driver Configuration

GFCAN driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **GFCAN** section.

- Section name: GFCAN**
- Option name: TRANSMISSION_SPEED**
- Option value: baud_id**

Meaning - the item is used to declare a transmission speed in the CAN network.

Default value - by default, the item is set to 500 kB.

Parameter:

baud_id - identifier of transmission speed in the CAN network:

- 1000 - 1 MB
- 800 - 800 kB
- 500 - 500 kB

250	-	250 kB
125	-	125 kB
100	-	100 kB
50	-	50 kB
20	-	20 kB
10	-	10 kB

EXAMPLE

An exemplary declaration of the transmission speed of 125 kB:

Section name: GFCAN
Option name: TRANSMISSION_SPEED
Option value: 125

- Section name: GFCAN**
- Option name: NETWORK_CONTROL**
- Option value: number**

Meaning - the item allows to test the reception of telegrams from the CAN network. It defines the maximal time between receptions of successive telegrams with the same number. In case of exceeding this time, the process variables bound with such telegram will be provided with an error status. If additionally in the same time any telegram was not received from the CAN network, a message about a lack of telegrams in network is generated in 'Control Panel'.

Default value - by default, the GFCAN driver does not check reception of telegrams.

Parameter:
number - maximal number of seconds, which may pass between successive telegrams with the same number.

EXAMPLE

An exemplary declaration of checking reception of telegrams every 5 seconds:

Section name: GFCAN
Option name: NETWORK_CONTROL
Option value: 5

- Section name: GFCAN**
- Option name: TELEGRAM_TRACE**
- Option value: YES|NO**

Meaning - the item controls transferring to the operator panel the messages about telegrams that have been received from the CAN network. A message includes the number of telegram, number of bytes and content of individual telegrams in hexadecimal form.

Default value - by default, the contents of telegrams are not displayed.

EXAMPLE

An exemplary declaration of tracing the content of received telegrams:

Section name: GFCAN
Option name: TELEGRAM_TRACE
Option value: YES

- ☑ **Section name: GFCAN**
- ☑ **Option name: CONTROL_TRACE**
- ☑ **Option value: YES|NO**

Meaning - the item controls transferring to the operator panel the messages about control telegrams that have been sent from the asix system computer to controllers. A message includes the number of control telegram, number of bytes and telegram contents in hexadecimal form.

Default value - by default, the contents of telegrams are not displayed.

EXAMPLE

An example of tracing the control telegrams:

Section name: GFCAN
Option name: CONTROL_TRACE
Option value: YES

- ☑ **Section name: GFCAN**
- ☑ **Option name: LOG_FILE**
- ☑ **Option value: file_name**

Meaning - the item allows to define a file to which all diagnostic messages of GFCAN driver and information about content of telegrams received and sent by the GFCAN driver will be written. If the item does not define a full path, the log file will be created in the current directory. The log file should be used only while the asix system start-up.

Default value - by default, the contents of telegrams are not displayed.

- ☑ **Section name: GFCAN**
- ☑ **Option name: MAX_MOTOROLA_TEL**
- ☑ **Option value: number**

Meaning - the item allows to specify a maximal number of telegram, the content of which will be converted according to MOTOROLA format. All the telegrams with numbers, which are bigger than declared by means of the item MAX_MOTOROLA_TEL, will be converted according to INTEL format.

Default value - by default it is assumed that all telegrams are converted according to INTEL format.

EXAMPLE

An example of declaration as a result of which the telegrams with numbers up to 150 inclusive are converted according to MOTOROLA format:

Section name: GFCAN
Option name: MAX_MOTOROLA_TEL
Option value: 150

1.37 CtGlobal - exchange of data between the Asix system application and a swap file

Driver Use

CtGlobal driver is used to exchange data between the Asix system application and a so-called swap file, which is a container for the driver's current variable parameters (name, status, value, timestamp). In an application run across multiple computers, the contents of the swap file can be synchronized between different computers. This way changes in variable values occurring on a single computer can be propagated to all other computers.

Parameterization of CtGlobal driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtGlobal driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtGlobal

CtGlobal / Channel parameters tab:

Swap file
Other server directories
Synchronization period
Log file
Log file size

where:

- Swap file* - name of the swap file in which the variables will be stored;
default value: global.cfg
- Other server directories* - option is used to determine directories in which the driver will search swap files to synchronize the content of swap file declared in *Swap file* option; the name of searched file is the same as the name of file declared in *Swap file* option. Item applies to installation in which the driver CtGlobal is used to exchange data between computers.
- Synchronization period* - period (in milliseconds) between successive tries to synchronize the contents of a swap file (important for multicomputer applications). The default value is 1000 milliseconds.
- Log file* - all diagnostic messages about driver work are saved into a text log file. Default value: ctglobal.log.
- Log file size* - the item allows to define the log file size in MB; by default, it is assumed that the log file has a size of 10 MB.

EXAMPLE

Name: KANAL
Driver: CtGlobal

Channel parameters:

Other server directories:
x:\tmp\Global
y:\tmp\Global
z:\tmp\Global

Log file: d:\tmp\test\kanalGlobal.log
Log file size: 20

Driver parameters

The driver configuration is defined in the *Current Data* module, in the channel operating according to CtGlobal driver.

Log file

Meaning - the option allows to define a file to which all diagnostic messages of the CtGlobal driver are written.

Option value:
file_name - file name.
Default value: ctglobal.log.

Log file size

Meaning - the item allows to define the log file size.

Option value:
number - number in MB.
Default value: 10.

EXAMPLE

Log file: d:\tmp\test\ctGlobal.log
Log file size: 30

1.38 IEC61850 - Driver for IEC61850 Protocol

Driver Use

The following document refers to the IEC61850 protocol.

Declaration of Transmission Channel

The IEC61850 driver channel is a group of Asix system variables supported in the same way, which values are located in a single IED device (Intelligent Electronic Device).

Declaration of the transmission channel is as follows:

Standard tab:

Name: *logical name of the transmission channel*

Driver: IEC61850

IEC61850 tab:

Channel parameters

The channel parameters are listed in the section *Channel Parameters*.

The channel parameters can be placed in the section with the same name as the channel name, but the parameters that define the address of remote device have to be declared in the channel declaration. The parameters defining the connection with a remote device - there are: **ip**, **aeq**, **apid**, **psel**, **sse** and **tsel**. If you have the file of the SCL type (Substation Configuration Language), e.g. **icd** or **cid** file, the above parameters can be replaced by the parameter **scl**. An exemplary channel declaration could be in the following form:

```
IEC1 = IEC61850, scl=Siprotec.icd
```

If, however, address parameters included in the file SCL are not compatible with the reality, they can be corrected by declaring them in the channel declaration. E.g. if the actual device IP address differs, it can be defined in the declaration:

```
IEC1 = IEC61850, scl=Turow.cid, IP=192.168.0.5
```

Some of the channel parameters refers to the connection with a remote device but not to an individual specified channel. In such a case the parameters have to be identical in all channel declarations or omitted, with the exception of declaration of first channel for the given connection. These parameters include: **ied**, **ied2**, **log**, **dump**, **ExpITmo**, **itcom**. Multiple channels can be connected with an individual IED device.

The SCL file is not demanded for proper operation of the driver, but its declaration is recommended.

The values of Asix application (except pseudovariables) are the values of IED data attributes. Linking an Asix application variable with a datum specified attribute is realized

by declaring the name (precise reference) of datum attribute as the address of the variable. Addressing the variables is described in the section *Variable Declaration*.

- **Channels for Polling**

The channel declaration without the parameters `brcb` and `urcb` defines the group of variables which values will be read from IED by sending to a device read requests in accordance with sampling period (polling) declared for a specific variable.

Due to increased traffic in the network, this type of reading variables is not recommended.

- **Channels with Reporting**

The channel based on the reporting receives the variable values sent spontaneously by a device at the moment of change, actualization or quality change of the variable value. The channel declaration based on reporting has to contain the parameter **brbc** or **urcb**. This parameter specifies the name (exactly reference) of reporting block included in IED. Reporting block contains all the parameters specifying the way of reporting. One channel with reporting can be associated with exactly one reporting block.

DataSet

The list of Asix variables to be reported defines the object DataSet included in IED. It contains the list of names (exactly reference) of IED device data attributes which are to be reported. One DataSet can be associated with multiple reporting blocks. If the reporting block is not permanently associated with a DataSet, then its name should be given by the parameter **ds**. In this case, the driver will automatically associate DataSet with the reporting block. If DataSet defined like this does not exist, the driver will create a new DataSet. If the list of data attributes included in the existing DataSet does not include all the Asix application variables defined in the channel, then the driver will remove the previous DataSet and will create the new one. If the existing DataSet includes redundant data attributes, the driver will call an appropriate warnings to the application control panel.

If the device does not allow for dynamic creation of DataSet, then the parameter **ConfDS** = Tak should be declared, which means that DataSet is permanently configured by the use of a suitable program or by the manufacturer. In this case, the driver will call warning to the control panel only when the contents of DataSet is not compatible with the channel variable list.

If the device requires manual configuration of DataSet, you should remember to include the parameters `„q“` and `„t“` to the DataSet if it includes attributes with which quality and time stamp are associated. The quality (`„q“`) is associated with the following attribute names:

"stVal", "general", "phsA", "phsB", "phsC", "dirGeneral", "dirPhsA", "dirPhsB", "dirPhsC", "dirNeut", "cnt", "actVal", "mag", "range", "cVal", "instMag", "Har", "phsAHar", ".phsBHar", ".phsCHar", "neutHar", "netHar", "resHar", „phsABHar", "phsBCHar", "phsCAHar", "valWTr", "setMag", "neut".

All these attributes (except `„instCMag“`) have the associated attribute `„t“` being a time stamp. If the attributes `„q“` and `„t“` are not associated, the driver will assign the current time and the quality good to the variable.

Options of Triggering Reports

The reports can be triggered as a result of attribute value: change (**dchg**), actualization (**dupd**), quality change (**qchg**), integrity control (**integ**) as well as request of reading reported values (**GI** – general interrogation). The triggering options are defined by the parameter **TrgOps** which is the list of option names given below in parentheses separated

by commas. If the name of option is prefixed with „-„ (minus), then the given option is disabled. The option **GI** is determined automatically by the driver and its change by parameterization is ineffective. Similarly, the option **integ** is set automatically if the parameter **IntgPd** of the channel has the value greater than zero. Other options are set by default. If the given option is not required, it should be replaced in the parameter **TrgOps**, prefixing it with „-„ (minus). For example, according to the documentation of MICOM device, reporting can not be triggered when the option **dupd** is enabled. In this case, „TrgOps = -**dupd**” should be declared.

In the channels with reporting you can place the variable with the address „@GI” (general interrogation). Writing a non-zero value to this variable will cause triggering the report.

Channels with Unbuffered Reporting

Channels with unbuffered reporting are used when potential loss of attribute value changes, caused by closing the application, is irrelevant. An unbuffered channel has to include the parameter **urcb**. In the case of unbuffered channels, DataSet can be temporary, as long as the device allows it. A temporary DataSet is removed from IED after connection break. The driver creates automatically the temporary DataSet after establishing connection. For a temporary DataSet the parameter **ds** has the following form:

```
ds = @[dataset_name]
```

If dataset_name is omitted, then the driver will create a DataSet with the same name as the channel name. If a device does not support a temporary DataSet, then they are supported in the way described in the previous section.

Channels with Buffered Reporting

The channels with buffered reporting are used all changes of attribute values are to be recorded in IED at the time when the Asix application does not work. It applies to especially variables which are associated with alarms. The channel with buffered reporting has to have the parameter **brcb** defined.

Each report stored in the buffered report block IED has a unique identifier with the name **EntryId**. The **EntryId** identifier is transferred together with the report. If the driver IEC61850 will process all the data contained in the report (also generate reports), the value of this identifier is stored in the file named:

```
IEC61850-channel_name.EntryID
```

After closing the Asix application, the file is read and its contents is sent to IED to indicate which parameters have already been handled and to prevent their retransfer and regeneration of false alarms. In the case of change of channel name the name of the file should also be changed adequately. The driver can signal the error of sending ID to IED - when e.g. the device was reset and reporting block did not contain any reports.

Starting the Asix application after a break causes that for a certain time the driver will be receiving reports about events from the past. It may cause showing outdated states of process variables. To avoid this, the driver reads identifier of the latest report and updates the variables only after receiving a current report. This procedure is possible only for devices meeting Technical Issue nr 190. If the device does not meet this requirement (e.g. MiCOM P139), then the parameter „ToESync = Tak” should be declared - and the driver will use the field **TimeOfEntry** for synchronization. It will also cause sending additional value with each report. To disable synchronization, the parameter „BRCBSync = nie” should be declared.

In the buffered channel you can define pseudovvariable with the address **@BufOvfl** (**NIC_BYTE**), which takes the value of 1 if there was buffer overflow in the reporting block and data loss. The driver can associate an alarm with this variable.

In the case of devices which meet the requirements of Technical Issue 300 (e.g. SIPROTEC), it is necessary to send the ResvTms parameter value to the device to start buffered reporting. There is the time in seconds running from the moment of connection loss with the device, during which the device reserves reporting block for the application establishing connection with the same address as before. After this time, any application in the network can reserve that reporting block. The default value of this parameter is 600 seconds. Notice that after ip address change on which the application is run there will be no possible to run reporting until this time expires.

It is possible to put a variable with the address „@Purge” in the channels with buffered reporting. Writing a non-zero value of this variable will remove all reports from the buffer.

- **Examples of Channel Declaration**

Declaration of buffered channel:

Section	Parameter	Value
ASMEN	IEC1	IEC61850, scl=SIPROTEC.icd, brcb=CTRL/LLN0.brcaA01
IEC1	ds	CTRL/LLN0.AsixDs
IEC1	Log	Iec1.log
IEC1	Dump	Iec1.xml

The reporting block has the name (reference) „CTRL/LLN0.brcaA01”. The block reports the attributes contained in DataSet named „CTRL/LLN0.AsixDs”. Diagnostic informations will be recorded to the file „iec1.log” and detailed informations concerning data exchange will be stored in the file „iec1.xml”.

Declaration of unbuffered channel.

Section	Parameter	Value
ASMEN	IEC1	IEC61850, scl=SIPROTEC.icd, urcb=CTRL/LLN0.urcaA01
IEC1	ds	@

The reporting block has the name (reference) „CTRL/LLN0.urcaA01”. The block reports the attributes contained in dynamically created temporary DataSet named „@IEC1”.

Variable Declaration

The declaration of a variable associated with a data attribute in IED is as follows:

datum_attribute_reference[[*additional_parameters*]]

Datum_attribute_reference is a device logical name in IEDended with a slash and then a name of logical node, datum name and attribute names separated by dots. The name of logical device should be the same as the one in the given device documentation or in SCL files, i.e. it can not be preceded by the IED name. For example, if the logical device named TurowSystem is in the device physically, then variable names will begin with the name System, e.g.:

Measurements/MmuPriMSTA1.MaxAmps.mag.f

Dditional_parameters have the following form:

Par1:par2:....

Possible parameters:

Alarm_definition (described in the section *Alarms*)

P – variable supported in polling mode

CMn – declaration of control model for the variable (described in the section *Control*).

Control

For MiCOM P139 it is possible to control only the data which was properly configured for this purpose with the use of IED Configurator from MiCOM S1 Studio.

To actuate a given variable, look through the attribute „Oper\$ctlVal“ by IEC Browser and determine the address of Asix variable for the attribute, as it is describe in the previous section. For this address add .@CM at the end.

I.E. Control/CSWI1.Pos.Oper.ctlVal.@CM.

For the driver MiCOM P139 it can not be read form the device the way the control has to be performed, it should be indicated by adding „[CMn]“ to the address, where "n" is the number of control method determined by the program IED Configurator. The "n" can have the following values:

- 1 - direct-with-normal-security
- 2 - sbo-with-normal-security
- 3 - direct-with-enhanced-security
- 4 - sbo-with-enhanced-security

For example:

Control/CSWI1.Pos.Oper.ctlVal.@CM[CM3]

Giving the parameter CMn for other devices is not necessary if the device has properly set the value of the attribute „ctlModel“ of controlled datum. The variable with this address should have the conversion function NOTHING_BYTE. Writing the value of 1 to this variable will cause activation to the state ON, and the value of 0 will cause actuation to the state OFF. The Asmen channel of controlled variable has to have the parameter „Simple_Control=Tak“ declared.

The string „.Oper“ can be omitted in control variable (there is only one dot).

Actuation of variables of „....-enhanced-security“ types causes that the device generates the report with control results. To read the results, the following variables have to be defined as follows:

Control/CSWI1.Pos.@Err (conversion function NOTHING_DW)

and

Control/CSWI1.Pos.@AddCause (conversion function NOTHING_DW)

According to the IEC61850 standard the variable with the address „....@Err „ can take the following values:

- (0) No Error
- (1) Unknown
- (2) Timeout Test Not OK
- (3) Operator Test Not OK

The variable with the address „....@AddCause“ can take the following values:

Unknown	0
Not-supported	1
Blocked-by-switching-hierarchy	2
Select-failed	3
Invalid-position	4
Position-reached	5
Parameter-change-in-execution	6
Step-limit	7
Blocked-by-Mode	8
Blocked-by-process	9
Blocked-by-interlocking	10
Blocked-by-synchrocheck	11
Command-already-in-execution	12
Blocked-by-health	13
1-of-n-control	14
Abortion-by-cancel	15
Time-limit-over	16
Abortion-by-trip	17
Object-not-selected	18

Alarms

The change of IEC61850 driver variable can be associated with alarm generation. To do this, the additional parameter - alarms definition should be added:

The alarm definition can take the following form:

ABalarm_no bit_no

or

AXalarm_no bit_no

or

ALalarm_no relation value

AB-type alarms are similar to the bitmap strategy of *Asix*. The *Alarm_no* defines the first alarm number. This alarm is associated with the bit *bit_no* of a variable value. Consecutive bits of the variable value are associated with alarms with sequential numbers. Setting the bit to 1 generates a new alarm and setting the bit to 0 end the alarm.

AX alarms work in the same way as AB alarms, but the definition refers only to one particular bit *bit_no*. Other bits are not analyzed. The first bit of a value has the number 0.

AL-type alarm is generated when the variable value meets the relation. There are the following relations possible:

= or ==	- equality
!= or <>	- inequality
>	- greater than
>=	- greater than or equal
<	- less than
<=	- less than or equal

Examples:

Control/CSWI2.Pos.stVal[AL300=1:AL301=3]

The alarm 301 will be generated when the value of the variable (switch position) is 1 (ON). The alarm 301 will be generated when the value of the variable is 3 (intermediate switch position).

MEAS/MMXU1.PPV.phsAB.instCVal.mag.f[AL500>32,76]

The alarm will be generated if the variable value exceeds 32,76.

CTRL/LLN0.Mod.stVal[AX600 1]

Setting the bit 1 of the variable value will generate the alarm with the number 600. The parameter „Global_alarms” defines type generated alarms and if the parameter has the value of "YES", then global alarms are generated. Because the parameter applies to the driver, it can be declared in the section " IEC61850".

Switching Setpoint Sets

To change the number of current setpoint set, the variable with the address LD/LLN0.SGCB.ActSG should be defined:

where:

LD – is the name of logical device containing sets of setpoints (e.g. System/LLN0.SGCB.ActSG)

Writing the value to this variable will activate the appropriate set of setpoints.

List of Channel Parameters

Name	Description	Default value
IP	Address of the remote device IED	No default value
aeq	Application entity qualifier	12
appid	Application identifier	1.1.1.999.1
psel	Presentation selector	1
ssel	Session selector	1
tssel	Transport selector	1
ExplTmo	The maximum period of time (in seconds) for initial readout of data from the device.	40
scl	The path and name of the configuration file SCL.	No default value
ied	IED name	IED name in the file *.icd, *.cid
ied2	The name IED - if there is the other than actual name of the device declared.	No default value
itcom	If the option is set to "Yes", the communication module of the driver IEC61850 is started as a separate process (COM server). The option should be used if there is a suspicion that the driver is in conflict with other Asix system drivers using the protocol TCP/UDP. You have to restart the program ITLibCOMServer.exe (COM server) with the use of the command ITLibCOMServer.exe .regserver before using the	No

Communication Drivers

	option.	
origin	Text specifying the object that executes datum control	Asix
interlock	This parameter determines whether interlock is to be used when executing control operation. Possible values: "Yes", "No".	No
synchrocheck	This parameter determines whether synchrocheck is to be used when executing control operation. possible values: "Yes", "No".	No
test	This parameter determines whether when executing control operation, it have to be performed in test mode. Possible values: "Yes", "No".	No
ConfDS	The parameter determines whether DataSet used in the channel with reporting is to be reconfigured in the device or created by the driver. Possible values: "Yes", "No".	No
ToESync	This parameter determines whether the report field TimeOfEntry instead of the field EntryID is to be used to determine received report as historical or current one. Possible values: "Yes", "No".	No
BRCBSync	The parameter determines whether the channel is to be synchronized to take into account only current reports to determine Asix variable values. Possible values: "Yes", "No".	Yes
TrgOps	The parameter is the list of names of events that trigger report generation. The name can be preceded by a "-" (minus), which means that the name will be disabled. Acceptable names of events that trigger reports: dchg – datum value change qchg – datum quality change dupd – datum value updating GI – general inquiry integ – periodical inquiry all – all options	dchg, dupd, qchg
OptFlds	The parameter is the list of names of report generated by IED components. Acceptable names of events that trigger reports: SqN – consecutive number Toe – report generation time rc – report generation reason ds. – DataSet reference dr – report data reference bo – buffer overflow ei – report ID cf – report configuration version seg – report segment number all – all components of the report	No default value
Simple_Control	This parameter determines whether simplified control is to be used in the channel.	No
ds	Reference to DataSet	No default value
BufTm	Timeout (in milliseconds) from the first event triggering the report to consecutive events	-1 (parameter will

	before the report will be generated.	not be set, i.e. the previous time will be used)
IntgPd	The interval (in milliseconds) of sending periodical reports by IED.	-1 (parameter will not be set, i.e. the previous time will be used)
ResvTms	Time (in seconds) of buffered report block reservation for a particular client after losing connection with IED.	600
Diag	The parameter specifies the kind of additional diagnostic information stored in the file specified by the parameter "Log". It is the list of information group separated by commas.	No default value
Log	The name of the file to which all the diagnostic information will be written. Optionally, the name can be preceded by the full path. After the name you can declare log file size (in MB).	No default value
Dump	The name of the file to which all the information sent to/from IED will be written. After the name you can declare the maximum file size (in MB).	No default value
CurrTm	If the parameter is set to "Yes", all the variables will be stamped with the time equal the current PC time.	No

1.39 K3N - Driver of OMRON's K3N Meters Family Protocol

Driver Use

The K3N driver is used for data exchange between the OMRON's K3N meters family and Asix system computers. The communication is executed according to the CompoWay/F protocol from OMRON via standard serial ports of an Asix computer.

Parameterization of K3N driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the K3N driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: K3N

K3N tab:

Channel parameters:

id, port [, baud, character, parity, stop]

where:

<i>id</i>	- controller number in the K3N network;
<i>port</i>	- port name: COM1, COM2 etc.;
optional parameters:	
<i>baud</i>	- transmission speed;
<i>character</i>	- number of bits in a character;
<i>parity</i>	- parity check type;
<i>stop</i>	- number of stop bits.

If the optional parameters are not given, then the factory settings of meter are assumed as default values, i.e.:

- transmission speed: 9600 baud,
- bits in a character: 7,
- parity check: EVEN,
- number of stop bits: 2.

EXAMPLE

The declaration of the logic channel named CHAN1, which operates according to the K3N protocol and exchanges data with the meter numbered 1 through the COM2 port with default transmission parameters:

Channel / Name: CHAN1

Driver: K3N

Channel parameters: COM2

The K3N driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the K3N driver channel is as follows:

`<type>[.<category>.<index>]`

where:

<i>type</i>	- variable type;
<i>category</i>	- category within the type (for some types);
<i>index</i>	- index within the category (for some types).

Symbols of variable types (in parentheses the type of raw variable value is given):

VW - values of variables transferred in the form of 16-bit unsigned numbers (WORD). It concerns to Status data variable (category C0, index 3);

VL - values of variables transferred in the form of 32-bit signed numbers (LONG). It concerns the variables of the category C0 except the variable Status data;

PW - values of parameters transferred in the form of 16-bit unsigned numbers (WORD). It concerns to all the variables of the category 8000 and 8824;

PL - values of parameters transferred in the form of 32-bit signed numbers (LONG). It concerns to all the variables of the category C00C and 8824;

STAT - status of work mode (WORD);

INFO - supplemental information transferred with the status of work mode (WORD);

RST - execution of the command *reset of minimal and maximal values* (WORD);

FCLR - execution of the command *clear forced-zero setting* (WORD);

MODE - setting the operating mode of the meter (*Run or Setting Mode*) (WORD);

CTRL - setting the programming mode of the meter (*Remote programming or Local programming*) (WORD).

Category and *index* must be given for types **VW**, **VL**, **PW**, **PL**. The list of legal symbols (numbers) of category and index ranges within individual category contains the documentation "*Communication Output-type Intelligent Signal Processor – OPERATION MANUAL*" Cat. No. N96-E1-1 (pkt 1-5 'Memory/Parameters Area Details').

Values of **VW**, **VL**, **PW** or **PL** type variables may be read and modified. A correct reading of the **VW**, **VL**, **PW**, **PL** type variables is possible only when the meter is set in the *Run mode*.

Values of **INFO**, **STAT** type variables may be only read.

The **RST**, **FCLR**, **MODE**, **CTRL** type variables are used only to execute commands controlling the operating mode of the meter and it is not possible to read them.

Sending the control by using a **MODE** type variable causes:

- switching the meter to the *Run mode* if the control value of the variable is set on 0,
- switching the meter to *Setting mode* if the control value of the variable is different from 0.

Sending the control by using a **CTRL** type variable causes:

- switching the meter to the *Local programming* mode if the control value of the variable is set on 0,
- switching the meter to the *Remote programming* mode if the control value is different from 0.

EXAMPLES OF VARIABLE DECLARATIONS

```
# Present value: variable no. 0 from the category C0
JJ_0, VL.C0.0, CHAN1, 1, 1, NOTHING_LONG

# Maximum value: variable no. 1 from the category C0
JJ_1, VL.C0.1, CHAN1, 1, 1, NOTHING_LONG

# status value (Status data): variable no 3 from the category C0
JJ_2, VW.C0.3, CHAN1, 1, 1, NOTHING

# current operating mode of the meter (Run, Setting mode)
JJ_10, STAT, CHAN1, 1, 1, NOTHING

# supplement information transferred with the meter status
# (HOLD status, RESET status, Local/Remote programming)
JJ_11, INFO, CHAN1, 1, 1, NOTHING

# execution of the command: reset of minimal and maximal values of the meter
JJ_12, RST, CHAN1, 1, 1, NOTHING

# execution of the command: Clear forced-zero setting
JJ_13, FCLR, CHAN1, 1, 1, NOTHING

# execution of the command: Switch mode
JJ_14, MODE, CHAN1, 1, 1, NOTHING

# execution of the command: Remote/Local programming
JJ_14, CTRL, CHAN1, 1, 1, NOTHING

# parameter input range of the K3NX meter
JJ_20, PW.8000.0, CHAN1, 1, 1, NOTHING

# parameter scaling display value 2 of the K3NX meter
JJ_21, PL.C00C.1, CHAN1, 1, 1, NOTHING_LONG

# parameter power supply frequency of the K3NX meter
JJ_22, PW.8824.0, CHAN1, 1, 1, NOTHING

# parameter input mode of the K3NC meter
JJ_30, PW.8000.0, CHAN1, 1, 1, NOTHING

# parameter power failure memory of the K3NC meter
JJ_31, PW.8824.1, CHAN1, 1, 1, NOTHING

# parameter compensation value of the K3NC meter
JJ_32, PW.C82A.0, CHAN1, 1, 1, NOTHING_LONG
```

Driver Configuration

K3N driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **K3N** section.

☑ **Section name: K3N**

☑ **Option name: LOG_FILE**

☑ **Option value: file_name**

Meaning - the item allows to define a file where all diagnostic messages of the K3N driver and information about the contents of telegrams received by the driver will be written. If the item does not define its full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, any log file is not created.

☑ **Section name: K3N**

☑ **Option name: LOG_FILE_SIZE**

☑ **Option value: number**

Meaning - the item allows to define the log file size in MB.

Default value - by default, it is assumed that the log file has a size of 1 MB.

☑ **Section name: K3N**

☑ **Option name: LOG_OF_TELEGRAMS**

☑ **Option value: YES|NO**

Meaning - the item allows to write to a log file (declared by using the item LOG_FILE) the contents of telegrams sent within the communication with the meter. Writing the contents of telegrams to the log file should be used only while the asix start-up.

Default value - by default, the telegrams are not written.

☑ **Section name: K3N**

☑ **Option name: RECV_TIMEOUT**

☑ **Option value: id,number**

Meaning - the item allows to determine a maximal waiting time for arriving the first character of the answer from a given meter. After overflow of this time it is assumed that the considered meter is turned off and the transmission session ends with an error.

Default value - by default, it is assumed that the maximal waiting time for the first character of the answer is equal to 1000 milliseconds.

Parameter:

id

number

- meter no. in the K3N network,
- time in milliseconds (from 100 up to 5000).

☑ **Section name: K3N**

☑ **Option name: CHAR_TIMEOUT**

☑ **Option value: id,number**

Meaning - the item allows to determine a maximal time between successive characters of the answer from a given meter. After having exceeded this time it is assumed that the considered meter does not work correctly and the transmission session ends with an error.

Default value - by default, it is assumed that the maximal time between successive characters of the answer is equal 50 milliseconds.

Parameter:

id

number

- number of the meter in the network,
- time in milliseconds (from 10 up to 300).

Communication Drivers

Section name: K3N

Option name: NUMBER_OF_REPETITIONS

Option value: number

Meaning - the item allows to determine a number of repetitions in case of occurring the transmission error.

Default value - by default, the item receives a value of 0 (no repetition).

1.40 K-BUS - Driver of Protocol for VIESSMANN Decamatic Boiler PLCs

Driver Use

The K-BUS driver is used for data exchange between VIESSMANN Dekamatic boiler controllers connected to the Dekatel-G (Vitocom 200) concentrator and an Asix system computer. For communication with Asix an interface of the RS-232C standard is used.

Parameterization of K-BUS driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the K-BUS driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: K-BUS

K-BUS tab:

Channel parameters:

id, port [, alarm_offset]

where:

id - identifier of the regulator,

port - port name: COM1, COM2 etc.,

optional parameters:

alarm_offset - offset added to the number of alarm sent from the regulator. By default, the value of offset equals 0.

The list of identifiers assigned to individual regulators is given below:

- | | | |
|----|---|---|
| 1 | - | Dekamatic-D1/Dekamatic-DE |
| 2 | - | Dekamatic-D2 (Kesselregelung 2. Kessel) |
| 3 | - | Dekamatic-D2 (Kesselregelung 3. Kessel) |
| 4 | - | Dekamatic-HK (1. und 2. Heizkreis) |
| 5 | - | Dekamatic-HK (3. und 4. Heizkreis) |
| 6 | - | Dekamatic-HK (5. und 6. Heizkreis) |
| 7 | - | Dekamatic-HK (7. und 8. Heizkreis) |
| 8 | - | Dekamatic-HK (9. und 10. Heizkreis) |
| 9 | - | Dekamatic-HK (11. und 12. Heizkreis) |
| 10 | - | Dekamatic-HK (13. und 14. Heizkreis) |
| 11 | - | Dekamatic-HK (15. und 16. Heizkreis) |

Transmission parameters are constant:

- 1200 Bd,
- 8 bits of a character,
- parity check: even,
- one stop bit.

EXAMPLE

A declaration of the logical channel named CHAN1, which works according to the K-BUS protocol and exchanges the data with the regulator Dekamatic-DE (id 1) through the COM2 port is as follows:

Channel / Name: CHAN1
Driver: K-BUS
Channel parameters: 1, COM2

The K-BUS driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the K-BUS driver channel is as follows:

V<index>

where:

V - fixed symbol of the variable type,
index - variable index, compatible to the table of addresses of variables for the controller under consideration (given in HEX form).

Raw values of the variables are transferred by the driver as numbers of WORD type.

EXAMPLES

Examples of declaration of variables:

```
# max boiler temperature (id 12 HEX)  
JJ_1, V12, CHAN1, 1, 1, NOTHING
```

```
# external temperature (id 25 HEX )  
JJ_2, V25, CHAN1, 1, 1, NOTHING
```

Driver Configuration

K-BUS driver parameters are declared in the Miscellaneous module, the *Directly entered options* tab.

The driver is parameterized with use of **K-BUS** section.

Section name: K-BUS

Option name: LOG_FILE

Option value: file_name

Meaning

- the item allows to define a file where all diagnostic messages of the K-BUS driver and information about the content of telegrams received by the driver are written. If the item does not define its full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value

- by default, the log file is not created.

- ☑ **Section name: K-BUS**
- ☑ **Option name: LOG_OF_TELEGRAMS**
- ☑ **Option value: YES|NO**

Meaning - the item allows to write to the log file (declared by using the item LOG_FILE) the contents of telegrams sent within the communication with regulators. Writing the contents of telegrams to the log file should be used only while the Asix start-up.

Default value - by default, the telegrams are not written.

- ☑ **Section name: K-BUS**
- ☑ **Option name: LOG_FILE_SIZE**
- ☑ **Option value: number**

Meaning - the item allows to define the log file size in MB.

Default value - by default, it is assumed that the log file has a size of 1 MB.

- ☑ **Section name: K-BUS**
- ☑ **Option name: RECV_TIMEOUT**
- ☑ **Option value: id,number**

Meaning - the item allows to determine a maximal waiting time for arriving the first character of the answer from a given regulator. After this time is over it is assumed that the controller under consideration is turned off and the transmission session ends with an error.

Default value - by default, it is assumed that the maximal waiting for the first character of the answer is equal to 1000 milliseconds.

Parameter:

id - number of the regulator,
number - time in milliseconds (from 100 up to 5000).

- ☑ **Section name: K-BUS**
- ☑ **Option name: CHAR_TIMEOUT**
- ☑ **Option value: id,number**

Meaning - the item allows to determine a maximal time between successive characters of the answer from a given regulator. After having exceeded this time it is assumed that the regulator under consideration does not work correctly and the transmission session ends with an error.

Default value - by default, it is assumed that the maximal time between successive characters of the answer is equal to 50 milliseconds.

Parameter:

id - number of the regulator,
number - time in milliseconds (from 10 up to 300).

Delay After Having Mapped the Data in Concentrator Dekatel-G (Vitocom 200)

Dekatel-G (Vitocom 200) concentrators allow simultaneous reading 8 variables maximally. The work mode with the concentrator consists in successive execution of the following functions for the successive group of variables:

- transfer of a list of maximally 8 variables to the concentrator (so called concentrator mapping),
- wait for updating the variables in the concentrator after mapping,
- reading the variables from the concentrator.

- ☑ **Section name: K-BUS**
- ☑ **Option name: MAPPING_DELAY**
- ☑ **Option value: number**

Meaning - the item allows to determine the time, which must elapse between mapping and the first reading of data from the concentrator so that the read data might be assumed as reliable. In case of too short delay the risk of reading the values of variables which were registered in the concentrator before mapping exists.

Default value - by default, the parameter assumes a value of 35 seconds.

Parameter:
number - time in seconds.

NOTE The protocol specification does not give the formula to calculate the delay after concentrator mapping, therefore this parameter must be determined experimentally by the user.

- ☑ **Section name: K-BUS**
- ☑ **Option name: GLOBAL_ALARMS**
- ☑ **Option value: YES|NO**

Meaning - the item controls the way of transferring alarms read from regulators to the alarms system of Asix start-up.

Default value - by default, the alarms are transferred to the alarms system as global alarms (transferred to the alarms system by means of the function `AsixAddAlarmGlobalMili()`). Setting the value of the item GLOBAL_ALARMS on NO causes that the alarms are transferred to the alarms system by means of the function `AsixAddAlarmMili()`.

- ☑ **Section name: K-BUS**
- ☑ **Option name: SIGNED_VARIABLE**
- ☑ **Option value: YES/NO**

Meaning - the item determines the way of interpretation of the BYTE variable. Setting the value on NO makes the UNSIGNED CHAR interpretation be given to the variable.

Default value - by default, and in the case of setting the variable on YES the variable of the BYTE type assumes the SIGNED CHAR interpretation – it allows transferring the negatives.

1.41 CtLG - Driver of Dedicated Protocol of LG Master-K and Glofa GM PLCs

Driver Use

The CtLG driver is designed to exchange data between the Asix system and LG Industrial Systems Master – K and Glofa GM PLCs with use of an RS232 port. The driver enables access to LG PLC data addressed directly by passing the address of the variable within the device. The driver allows simultaneous handling of many LG PLCs.

Parameterization of CtLG driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the CtLG driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: CtLG

CtLG tab:

Channel parameters:

Port=*port_number*; *Speed*=*transmission_speed*;
StopBits=*number_of_stop_bits*; *ParityBit*=*control_of_frame_parity*;
DataBits=*number_of_data_bits*; *NrOfBlocks*=*number_of_blocks*;
TimeSynchr=*address[:period]*;

where:

<i>Port</i>	- number of the COM serial port;
<i>Speed</i>	- speed of transmission between computer and device; the following speeds are acceptable: 1200, 2400, 4800, 9600, 19200, 38400, 56000, 57600, 115200, 128000; every speed is given in bits per second, i.e. bauds; a default value is 1200 Bd;
<i>StopBits</i>	- number of stop bits: 1 or 2; for the GlofaGM6 PLC this parameter is built into the controller on a permanent basis and amounts to 1; a default value of the parameter is 1;
<i>ParityBit</i>	- defines the method of frame parity control; available options: no, <i>parity_control</i> , <i>odd_parity_control</i> ; as substitutes for these options you may use, respectively: 0, 1, 2; for GlofaGM6 PLC this parameter is built into the controller on a permanent basis and amounts to 0, i.e. no; a default value of the parameter is <i>parity_control</i> ;
<i>DataBits</i>	- number of data bits per frame: 7 or 8; for the GlofaGM6 PLC this parameter is built into the controller on a permanent basis and amounts to 8; a default value of the parameter is 8;
<i>NrOfBlocks</i>	- max number of blocks specifying variables in a single read operation; a maximum value of the parameter is 16; the parameter has been introduced because GLOFA PLC properly executes queries for max 4 blocks (inconsistently with specification); a default value of the parameter is 16;

TimeSynchr - for Glofa PLCs it is a direct address of the table of 9 bytes, in the controller that PC's system time is to be entered into. The table will be filled in with BCD-code numbers as follows:

time[0] = two younger digits of year
time[1] = month
time[2] = day of month
time[3] = hour
time[4] = minutes
time[5] = seconds
time[6] = day of week (Monday - 0, Tuesday - 1,... Sunday - 6)
time[7] = two older digits of year
time[8] = 1

e.g. 2001 - 03 - 15 18:30:45 Tuesday: time[0] = 01, time[1] = 03, time[2] = 15, time[3] = 18, time[4] = 30, time[5] = 45, time[6] = 03, time[7] = 20,

On Glofa controller's side, you should execute the command RTC_SET argument. The argument is a symbolic address of the table of 8 bytes. When declaring this variable, in the Memory allocation field select the Assign(AT) option and pass the direct address of the variable in the transmission channel declaration. Upon the system time is rewritten from the PC to the controller, the value 1 is assigned to the ninth element of the table.

In case of the MASTER-K PLC, TimeSynchr is the address of the table of word type consisting of five elements, which is available in the controller N. The table is filled in with BCD-code numbers as follows:

time[0] = older byte = 2 younger digits of year, younger byte = month (1..12)
time[1] = older byte = day of month (1..31), younger byte = hour
time[2] = older byte = minutes, younger byte = seconds
time[3] = older byte = 2 older digits of year, younger byte = day of week (Sunday - 0, Monday - 1...Saturday - 6)
time[4] = 1

With the exception of *time[4]*, these words should be rewritten into a special area of the memory and the appropriate bit should be set.

period - default parameter to define the interval in seconds at which time will be rewritten from the PC to the controller. By default, the synchronization time is 60 seconds.

EXAMPLE

An example of declaration of channel in which time will be synchronised for the controller numbered 6 (GLOFA type) by the write into the area starting with MB10 (every 25 seconds):

Channel / Name: PLC1

Driver: CtLG

Channel parameters: Port=2;Speed=9600; StopBits=1; ParityBit=odd_parity_control; DataBits=8; TimeSynchr=6.MB10:25

Addressing the Process Variables

Addressing the Variables in Master - K family

The following direct address is only acceptable:

ControllerNo.TypeOfDevice.Address

where:

- Controller no* - number between 0 and 31.
- Type of device* - (see: the table below).

Table 20. Types of Devices in Master-K Family.

Type of Device	Range of Device	Read/Write	Bit/Word
P (Input/Output relay)	P0 ~ P0031 (32 words) P0.0 ~ P31.15 (32 × 16 bits)	Read/Write	Both
M (auxiliary relay)	M0 ~ M191 (192 words) M0.0 ~ M191.15 (192 × 16 bits)	Read/Write	Both
K (keep relay)	K0 ~ K31 (32 words) K0.0 ~ K31.15 (32 × 16 bits)	Read/Write	Both
L (link relay)	L0 ~ L63 (64 words) L0.0 ~ L63.15 (64 × 16 bits)	Read/Write	Both
F (special relay)	F0 ~ F63 (64 words) F0.0 ~ F63.15 (64 × 16 bits)	Read	Both
T (timer contact relay)	T0.0 ~ T0.255 (256 bits)	Read/Write	Both
T (timer elapsed value)	T0 ~ T255 (256 words)	Read/Write	Both
C (counter contact relay)	C0.0 ~ C0.255 (256 bits)	Read/Write	Both
C (counter elapsed value)	C0 ~ C255 (256 words)	Read/Write	Both
S (step controller)	S0 ~ S99 (100 sets)	Read/Write	Word only
D (data register)	D0 ~ D4999 (5000 words)	Read/Write	Word only

NOTE *T and C devices should not be used for bit addressing because it does not work due to error in the controller's operating system.*

There are two types of variables:

- bit,
- word.

The variable address may contain up to 8 characters (without device type character and 'r;' character, if any). The address is given in decimal format. When bit is addressed within a word, the bit number (from 0 to 15) is given after a dot. An exception to this rule is Timer and Counter types. As you can see in the above table, bits for these types are addressed from 0 to 255.

For example, 0. M5 – word with the address 5
0. M5.10 – eleventh bit in the word with the address 5

EXAMPLE

Examples of variable declarations:

JJ_00, variable of WORD type with address M1, 0.M1, PLC1, 1, 1, NIC
JJ_01, variable of BIT type with address M5.10, 0.M5.10, PLC1, 1, 1, NIC

Addressing the Variables in Glofa – GM Family

The direct address has the following format:

ControllerNo.TypeOfDevice.TypeOfVariable.Address

where:

- ControllerNo* - defines the controller number and is a number between 0 and 31;
TypeOfDevice - defines the device type; the following types are available:
- M (internal memory),
 - Q (output),
 - I (Input).

The range of addressing for these devices is configurable and depends on the type of device.

All of these devices can be both written to and read from.

TypeOfVariable - defines the variable type. The following types are available:

- X - bit,
- B - byte
- W - word,
- D - double word.

For the M device the address is given in decimal format and may contain maximum 13 characters, without the character of the device and variable type, e.g.:

3.MW1 - word with the address 1 from the dictionary no 3

If you want to address a bit in the M device within a byte, word or double word, the bit number (counted from 0) in decimal format should be given after a dot, for example:

4.MW1.14 - fourteenth bit in the word 1 from the dictionary 4

5.MD2.30 - thirteenth bit in the double word 2 from the dictionary 5

Bit can also be addressed directly using the X character, e.g.:

0.MX10 - tenth bit.

In case of addressing Q and I devices, the address is given in decimal format. These are three numbers (*base, slot, number*) separated with the 'r;.' character, e.g.:

2.QX3.1.4 - controller no 2, 3 base, 1 slot, 4th bit,

3.IW2.4.1 - controller no 3, 2 base, 4 slot, 1st word.

EXAMPLE

Examples of variable declarations:

JJ_00, VARIABLE OF WORD TYPE WITH ADDRESS MW1, 0.MW1, PLC1, 1, 1, NIC

JJ_01, variable of BIT type with address QX3.1.4, 0.QX3.1.4, PLC1, 1, 1, NIC

Time Marker

Values of variables read from LG are assigned a PC's time stamp.

Driver Parameterization

CtLG driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of CtLG section.

Section name: CtLG

☑ **Option name: LOG_FILE**

☑ **Option value: log_file_name**

Meaning - for diagnostic purposes the text-type log file into which messages about driver operation status are written is used.

Default value - by default, the log file is not created.

Defining - manual.

☑ **Section name: CtLG**

☑ **Option name: LOG_FILE_SIZE**

☑ **Option value: number**

Meaning - this item is used to define the size of the log file defined with use of the LOG_FILE item.

Default value - by default, the log file size is 1 MB.

Defining - manual.

☑ **Section name: CtLG**

☑ **Option name: LOG_OF_TELEGRAMS**

☑ **Option value: yes | No**

Meaning - this item allows contents of telegrams transferred between the driver and controllers to be written into the log file (declared with use of the LOG_FILE item). The referred item should only be used in the Asix system start-up stage.

Default value - by default, value of this item is set to NO.

Defining - manual.

EXAMPLE

An example of the driver section:

Section name: CtLG

Option name: LOG_FILE

Option value: d:\tmp\ctLG\LG.log

Section name: CtLG

Option name: LOG_FILE_SIZE

Option value: 3

1.42 CtLogo - DRIVER of Logo OBA5 controllers from SIEMENS

Driver Use

CtLogo protocol driver is used to exchange data between Asix system and Logo OBA5 controller from SIEMENS with the use of the programmer link of the mentioned controller. The transmission is executed with the use of serial links by means of standard computer serial ports in RS 232 standard.

Parameterization of CtM200 driver is performed with the use of Architect application.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the CtLogo driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtLogo

CtLg tab:

Channel parameters:
Port=*number*; Type=*number* [;*Timeout=number*]

where:

Port - serial port number,
Type - Logo controller type ID. At the moment, only Logo OBA5 is supported (ID is 1),
Timeout - max. waiting time for the first character of response (in milliseconds). By default, it is 1000 milliseconds.

Transmission parameters are constant and have the following values:

- transmission speed 9600 Bd,
- 8 character bits,
- parity control,
- 1 stop bit.

EXAMPLE

Example of the declaration of the KLOGO transmission channel used to communicate with the Logo OBA5 controller through the COM2 serial port:

Name: KLOGO
Driver: CtLogo
Driver parameters Port=2;Type=1

Variable Declaration

The symbolic address of the process variable has the following syntax:

<type><index>

where:

type - variable type,
index - index within type.

The set of types and index range are specific for the determined type of Logo controller.

NOTE *Variable values can be only read – the protocol does not allow for the performance of controls.*

Variable types markings (in the brackets, the raw variable value type is given):

Types of variables:

DI	- digital input	(WORD),
DQ	- digital output	(WORD),
DM	- digital flag	(WORD),
AI	- analog input	(WORD),
AQ	- analog output	(WORD),
AM	- analog flag	(WORD).

EXAMPLE

Examples of variables declaration:

DI1, digital input 1,	DI1, KLOGO,1,1,NIC
DQ3, digital output 3,	DQ3, KLOGO,1,1,NIC
DM13,digital flag 13,	DM13, KLOGO,1,1,NIC
AI2, analog input 2,	AI2, KLOGO,1,1,NIC
AQ1, analog output 1,	AQ1, KLOGO,1,1,NIC
AM2, analog flag 2,	AM2, KLOGO,1,1,NIC

Driver Parameterization

CtLogo driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CTLOGO** section.

Section name: CTLOGO

Option name: LOG_FILE

Option value: log_filename

Meaning: the diagnostic purposes are fulfilled by a text log file, where the driver operation status messages are entered.

Default value: by default, the log file is not created.

Section name: CTLOGO

Option name: LOG_FILE_SIZE

Option value: number

Meaning: the option is used to determine the log file size.

Option value: *number* - file size in MB.

Default value: default log file size is 10 MB.

Section name: CTLOGO

Option name: LOG_OF_TELEGRAMS

Option value: YES | NO

Meaning: option allows the contents of telegrams sent between the driver and controllers to the log file to be saved (declared with use of *LOG_FILE* option). The option allows the log file size to be determined. The subject option should be used only during the start-up of Asix system.

Default value: by default, the option value is set to NO.

EXAMPLE

Example of driver section:

Section name: CTLOGO

Option name: LOG_FILE

Option value: d:\tmp\CtLogo\logo.log

Section name: CTLOGO

Option name: LOG_FILE_SIZE

Option value: 20

Section name: CTLOGO

Option name: LOG_OF_TELEGRAMS

Option value: YES

1.43 LUMBUS - Driver for LUMEL Meters

Driver Use

The LUMBUS driver is used for data exchange between RG72 controllers manufactured by Lubuskie Zakłady Aparatów Elektrycznych (Electrical Measuring Instrument Works) "LUMEL" in Zielona Góra and an asix system computer. The communication is executed by means of serial interfaces in the RS485 standard.

Parameterization of LUMBUS driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the LUMBUS driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: LUMBUS

LUMBUS tab:

Channel parameters:

number, port, baud

where:

number

port

baud

- controller no. in the network,

- port name: COM1, COM2 etc.,

- transmission speed in the range 1200 – 9600 Bd.

By default it is assumed:

- transmission speed 9600 Bd,
- number of character bits - 8,
- without parity check (PARITY NONE),
- number of stop bits - 1.

EXAMPLE

The declaration of the logical channel named CHANNEL, which works according to the LUMBUS driver protocol and exchanges data with the RG72 regulator numbered 1 through the COM2 port with a speed of 4800 Bd, is as follows:

Channel / Name: CHANNEL
Driver: LUMBUS
Channel parameters: 1, COM2, 4800

The LUMBUS driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the LUMBUS driver channel is as follows:

`<type><index>[.subindex]`

where:

- | | |
|-----------------|--|
| <i>type</i> | - variable type; allowed types:
P - single measurement,
PT - table of measurements,
WT - array of free days,
DT - array of holiday's dates; |
| <i>index</i> | - according to the specification given in point 3 of the "Serial interface RS-485 in RG7-07/2 controller" documentation;
for single measures <i>index</i> takes the index value assigned to the measurement in the table;
for the values transferred in the form of arrays <i>index</i> takes the index value assigned to the array, and the item of the variable under consideration in the array is specified by <i>subindex</i> ; |
| <i>subindex</i> | - applies to the specification of variables transferred in the form of arrays and determines the variable location in the array; the subindex of the first element in the array takes a value of 0. |

The raw value of measure is of FLOAT type.

The raw value of free day and holiday date is an ASCII string in dd.mm.yyyy format ended by zero (including 11 character).

Examples

Examples of declarations of variables the values of which are transferred individually:

X13, hour of turning on night reduction, P13, CHANNEL, 1, 1, NOTHING_FP
 X23, set temperature c.w.u, P23, CHANNEL, 1, 1, NOTHING_FP

Examples of declarations of variables, the values of which are transferred in form of arrays:

X39, set temperature in control room, PT38.0, CHANNEL, 1, 1, NOTHING_FP
 X40, ext. temp (A) – initial point of curve, PT38.1, CHANNEL, 1, 1, NOTHING_FP
 X50, max. allowed temperature of return, PT48.1, CHANNEL, 1, 1, NOTHING_FP
 X56, dead band of c.h., PT52.3, CHANNEL, 1, 1, NOTHING_FP

X68, economies – holidays day 1, WT67.0, CHANNEL, 11, 1, NOTHING_TEXT
 X69, economies – holidays day 2, WT67.1, CHANNEL, 11, 1, NOTHING_TEXT
 X70, economies – holidays day 3, WT67.2, CHANNEL, 11, 1, NOTHING_TEXT

X119, first period of vacation – from, DT119.0, CHANNEL, 11, 1,NOTHING_TEXT
 X120, first period of vacation – from, DT119.1, CHANNEL, 11, 1,NOTHING_TEXT
 X121, second period of vacation – from, DT121.0, CHANNEL, 11, 1,NOTHING_TEXT
 X122, second period of vacation – from, DT121.1, CHANNEL, 11, 1,NOTHING_TEXT
 X123, third period of vacation – from, DT123.0, CHANNEL, 11, 1,NOTHING_TEXT
 X124, third period of vacation – from, DT123.1, CHANNEL, 11, 1,NOTHING_TEXT

Driver Configuration

LUMBUS driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **LUMBUS** section.

- Section name: LUMBUS**
- Option name: LOG_FILE**
- Option value: file_name**

Meaning - the item allows to define a file where all diagnostic messages of the LUMBUS driver and the information about the contents of telegrams received by the driver are written. If the item does not define the full path, then the LOG_FILE is created in the current directory. The log file should be used only while the asix start-up.

Default value - by default, the log file is not created.

EXAMPLE

Section name: LUMBUS
Option name: LOG_FILE
Option value: D:\asix\LUMBUS.LOG

- Section name: LUMBUS**
- Option name: LOG_OF_TELEGRAMS**
- Option value: YES|NO**

Meaning -the item allows to write to the log file (declared by using the item LOG_FILE) the contents of telegrams sent within the communication with the RG72 regulator. Writing the contents of telegrams to the log file should be used only while the asix start-up.

Default value - by default, telegrams are not written.

- Section name: LUMBUS**
- Option name: NUMBER_OF_REPETITIONS**
- Option value: number**

Meaning - the item allows to determine a number of repetitions in case of an appearance of transmission error.

Default value - by default, the item assumes a value of 0 (no repetitions).

Table 4. List of Symbolic Addresses.

Symb. Address	Index	Designation of Measurements From RG72	Conversion Type	Allowed Operation
P9	9		Word->Float	R
P10	10	f.active	Byte->Float	RW
P11	11	Tpwrt	Word->Float	RW
P12	12	DeltaT	Float->Float	RW
P13	13	night hours	Char->Float	RW
P14	14	day hours	Char->Float	RW
P15	15	free days	Byte->Float	RW
P16	16	temp. of summer	Float->Float	RW
P17	17	l. Days	Char->Float	RW
P18	18	hours Pom	Char->Float	RW
P19	19	Pump	Byte->Float	RW
P20	20	cw_oszcz	Byte->Float	RW
P21	21	Tzew	Byte->Float	RW
P22	22	St.pompa	Byte->Float	RW
P23	23	T.zad.cw	Float->Float	RW
P24	24	Priority	Byte->Float	RW
P25	25	t.prio	Byte->Float	RW
P26	26	t_pwrcwu	Byte->Float	RW
P27	27	t_progcwu	Byte->Float	RW
P28	28	Disinfection	Byte->Float	RW
P29	29	clock mode	Byte->Float	RW
PT31.0	31	Lkan	Char->Float	R
PT31.1	31	selection of curve, Sommer_is	Char->Float	R
P36	36	lock_full	Bit->Float	W
P37	37	lock_part	Bit->Float	W
		co - heating function		
PT38.0	39	T.zad.pk	Float->Float	RW
PT38.1	40	T.zew(A)	Float->Float	RW
PT38.2	41	T.co(A)	Float->Float	RW
PT38.3	42	tg.alfa	Float->Float	RW
PT38.4	43	T.zew(B)	Float->Float	RW
PT38.5	44	tg.beta	Float->Float	RW
PT38.6	45	T.co_max	Float->Float	RW
PT38.7	46	delta_co	Float->Float	RW
P47	47	T.freeze	Float->Float	RW
		co (centr. heat.) - return curve		

Table 5. List of Symbolic Addresses (continuation).

Symb. Address	Index	Designation of Measurements from RG72	Conversion Type	Allowed Operation
PT48.0	49	T.pwr_min	Float->Float	RW
PT48.1	50	T.pwr_max	Float->Float	RW
PT48.2	51	tg (pwrt)	Float->Float	RW
		Pid		
PT52.0	53	xp co	Int->Float	RW
PT52.1	54	ti co	Int->Float	RW
PT52.2	55	td co	Int->Float	RW
PT52.3	56	2N co	Int->Float	RW
PT52.4	57	H co	Int->Float	RW
PT52.5	58	to co	Int->Float	RW
PT52.6	59	tp co	Int->Float	RW
PT52.7	60	xp cw	Int->Float	RW
PT52.8	61	ti cw	Int->Float	RW
PT52.9	62	td cw	Int->Float	RW
PT52.10	63	2N cw	Int->Float	RW
PT52.11	64	H cw	Int->Float	RW
PT52.12	65	to cw	Int->Float	RW
PT52.13	66	tp cw	Int->Float	RW
		Holidays and free days		
WT67.0	68	holidays/free no. 1	Word->ASCII(11)	RW
WT67.1	69	holidays/free no. 2	Word->ASCII(11)	RW
WT67.2	70	holidays/free no. 3	Word->ASCII(11)	RW
WT67.3	71	holidays/free no. 4	Word->ASCII(11)	RW
WT67.4	72	holidays/free no. 5	Word->ASCII(11)	RW
WT67.5	73	holidays/free no. 6	Word->ASCII(11)	RW
WT67.6	74	holidays/free no. 7	Word->ASCII(11)	RW
WT67.7	75	holidays/free no. 8	Word->ASCII(11)	RW
WT67.8	76	holidays/free no. 9	Word->ASCII(11)	RW
WT67.9	77	holidays/free no. 10	Word->ASCII(11)	RW
WT67.10	78	holidays/free no. 11	Word->ASCII(11)	RW
WT67.11	79	holidays/free no. 12	Word->ASCII(11)	RW
WT67.12	80	holidays/free no. 13	Word->ASCII(11)	RW
WT67.13	81	holidays/free no. 14	Word->ASCII(11)	RW
WT67.14	82	holidays/free no. 15	Word->ASCII(11)	RW
WT67.15	83	holidays/free no. 16	Word->ASCII(11)	RW
WT67.16	84	holidays/free no. 17	Word->ASCII(11)	RW
WT67.17	85	holidays/free no. 18	Word->ASCII(11)	RW
WT67.18	86	holidays/free no. 19	Word->ASCII(11)	RW
WT67.19	87	holidays/free no. 20	Word->ASCII(11)	RW

Table 6. List of Symbolic Addresses (continuation).

Symb. Address	Index	Designation of Measurements from RG72	Conversion Type	Allowed Operation
WT67.20	88	holidays/free no. 21	Word->ASCII(11)	RW
WT67.21	89	holidays/free no. 22	Word->ASCII(11)	RW
WT67.22	90	holidays/free no. 23	Word->ASCII(11)	RW
WT67.23	91	holidays/free no. 24	Word->ASCII(11)	RW
WT67.24	92	holidays/free no. 25	Word->ASCII(11)	RW
WT67.25	93	holidays/free no. 26	Word->ASCII(11)	RW
WT67.26	94	holidays/free no. 27	Word->ASCII(11)	RW
WT67.27	95	holidays/free no. 28	Word->ASCII(11)	RW
WT67.28	96	holidays/free no. 29	Word->ASCII(11)	RW
WT67.29	97	holidays/free no. 30	Word->ASCII(11)	RW
WT67.30	98	holidays/free no. 31	Word->ASCII(11)	RW
WT67.31	99	holidays/free no. 32	Word->ASCII(11)	RW
WT67.32	100	holidays/free no. 33	Word->ASCII(11)	RW
WT67.33	101	holidays/free no. 34	Word->ASCII(11)	RW
WT67.34	102	holidays/free no. 35	Word->ASCII(11)	RW
WT67.35	103	holidays/free no. 36	Word->ASCII(11)	RW
WT67.36	104	holidays/free no. 37	Word->ASCII(11)	RW
WT67.37	105	holidays/free no. 38	Word->ASCII(11)	RW
WT67.38	106	holidays/free no. 39	Word->ASCII(11)	RW
WT67.39	107	holidays/free no. 40	Word->ASCII(11)	RW
WT67.40	108	holidays/free no. 41	Word->ASCII(11)	RW
WT67.41	109	holidays/free no. 42	Word->ASCII(11)	RW
WT67.42	110	holidays/free no. 43	Word->ASCII(11)	RW
WT67.43	111	holidays/free no. 44	Word->ASCII(11)	RW
WT67.44	112	holidays/free no. 45	Word->ASCII(11)	RW
WT67.45	113	holidays/free no. 46	Word->ASCII(11)	RW
WT67.46	114	holidays/free no. 47	Word->ASCII(11)	RW
WT67.47	115	holidays/free no. 48	Word->ASCII(11)	RW
WT67.48	116	holidays/free no. 49	Word->ASCII(11)	RW
WT67.49	117	holidays/free no. 50	Word->ASCII(11)	RW
		Holidays and free days		
DT119.0	119	first period of vacation (from)	Int->ASCII(11)	RW
DT119.1	120	first period of vacation (from)	Int->ASCII(11)	RW
DT121.0	121	second period of vacation (from)	Int->ASCII(11)	RW
DT121.1	122	second period of vacation (from)	Int->ASCII(11)	RW
DT123.0	123	third period of vacation (from)	Int->ASCII(11)	RW
DT123.1	124	third period of vacation (from)	Int->ASCII(11)	RW
DT125.0	125	forth period of vacation (from)	Int->ASCII(11)	RW
DT125.1	126	forth period of vacation (from)	Int->ASCII(11)	RW
DT127.0	127	fifth period of vacation (from)	Int->ASCII(11)	RW
DT127.1	128	fifth period of vacation (from)	Int->ASCII(11)	RW
		presence or lack of sensors		

Table 7. List of Symbolic Addresses (continuation).

Symb. Address	Index	Designation of Measurements from RG72	Conversion Type	Allowed Operation
PT129.0	130	sensor 1	Byte->Float	RW
PT129.1	131	sensor 2	Byte->Float	RW
PT129.2	132	sensor 3	Byte->Float	RW
PT129.3	133	sensor 4	Byte->Float	RW
PT129.4	134	sensor 5	Byte->Float	RW
PT129.5	135	sensor 6	Byte->Float	RW
		temperature differences for sensors		
PT136.0	137	sensor 1	Byte->Float	RW
PT136.1	138	sensor 2	Byte->Float	RW
PT136.2	139	sensor 3	Byte->Float	RW
PT136.3	140	sensor 4	Byte->Float	RW
PT136.4	141	sensor 5	Byte->Float	RW
PT136.5	142	sensor 6	Byte->Float	RW
		time of full valve opening		
PT143.0	144		Byte->Float	RW
PT143.1	145		Byte->Float	RW
		start/stop		
PT146.0	147		Byte->Float	RW
PT146.1	148		Byte->Float	RW
		safety codes		
PT149.0	150		Word->Float	RW
PT149.1	151		Word->Float	RW
PT149.2	152		Word->Float	RW
		current time		
PT153.0	154	Year	Byte->Float	RW
PT153.1	155	Month	Byte->Float	RW
PT153.2	156	Day	Byte->Float	RW
PT153.3	157	Hour	Byte->Float	RW
PT153.4	158	Minute	Byte->Float	RW
		sensor error		
PT173.0	174	error of sensor 1	Char->Float	R
PT173.1	175	error of sensor 2	Char->Float	R
PT173.2	176	error of sensor 3	Char->Float	R
PT173.3	177	error of sensor 4	Char->Float	R
PT173.4	178	error of sensor 5	Char->Float	R
PT173.5	179	error of sensor 6	Char->Float	R
		control signal		
PT180.0	181		Float->Float	R
PT180.1	182		Float->Float	R

Table 8. List of Symbolic Addresses (continuation).

Symb. Address	Index	Designation of Measurements from RG72	Conversion Type	Allowed Operation
		measured temperatures		
PT183.0	184	temperature 1	Float->Float	R
PT183.1	185	temperature 2	Float->Float	R
PT183.2	186	temperature 3	Float->Float	R
PT183.3	187	temperature 4	Float->Float	R
PT183.4	188	temperature 5	Float->Float	R
PT183.5	189	temperature 6	Float->Float	R
		alarm data		
PT240.0	241	alarm 1	Float->Float	R
PT240.1	242	alarm 2	Float->Float	R
PT240.2	243	alarm 3	Float->Float	R
		remote control of valve of centr. heat. (co) and heat water (cw)		
PT247.0	248		Char->Float	RW
PT247.1	249		Char->Float	RW
		remote control of pump of co and cw		
PT250.0	251		Char->Float	RW
PT250.1	252		Char->Float	RW
		switching on/off the pump of co and cw		
PT253.0	254		Char->Float	W
PT253.1	255		Char->Float	W
		opening the valve of co and cw		
PT256.0	257		Char->Float	W
PT256.1	258		Char->Float	W
		closing the valve of co, cw		
PT259.0	260		Char->Float	W
PT259.1	261		Char->Float	W
		factory settings		
P262	262		Byte->Float	W
P263	263	fact. settings Co	Byte->Float	W
P264	264	fact. settings Cwu	Byte->Float	W
P265	265	fact. settings Others	Byte->Float	W

1.44 CtLZQM - driver of LZQM electricity meters

Driver Use

The driver CtLZQM for exchange of data with LZQM electricity meters, produced by POZYTON Electronic Measuring Instruments Facility in Częstochowa. Communication takes place by means of a serial communication according to CLO standard.

Parameterization of the driver is performed by the Architect application.

Declaration of Transmission Channel

The declaration of transmission channel using the driver CtLZQM requires the channel with the following parameters to the *Current data* module to be added:

Standard tab:

Name: logical name of the transmission channel
Driver: CtLZQM

CtLZQM tab:

Channel parameters:

Port=number [; *TransmissionSpeed=number*] [; *Period=number*]

where:

Port - number of serial port COM.

TransmissionSpeed - transmission speed between a computer and a counter.
Default value: 4800 Bd.

Period - time interval (in seconds) between successive readouts of a counter.
Default values: 10 seconds.

Declaration of Variables

Variable address is as follows:

"number_of_counter/name_of_register"

where:

number_of_counter - number of 8-digit counter (read from a front panel of a counter and possibly completed by leading zeros);

name_of_register - name of count register in the form of X.X.X read from a reading array of a counter.

EXAMPLE

Exemplary declaration of variables (logical name of the transmission channel – PTY, number of a counter 121825):

KP_01, meter reading of energy EP+, "00121825/0.8.0", PTY, 1, 1, nothing_fp
KP_02, meter reading of energy EP-, "00121825/1.8.0", PTY, 1, 1, nothing_fp

Declaration of Internal Variables

The data contained in a block of the last accounting period are internal variables of the driver.

"number_of_counter/number_of_register.A"

where:

number_of_counter - number of 8-digit counter (read from a front panel of a counter and possibly completed by leading zeros);

number_of_register - name of count register in the form of X.X.X read from a reading array of a counter.

.A - suffix used to distinguish internal variables.

EXAMPLE

A_0.6.1, highest power of P+ in zone 1, "00121825//0.6.1.A", PTY, 1, 1, nothing_fp
A_0.8.1, power meter reading EP+ in zone 1, "00121825//0.8.1.A", PTY, 1, 1, nothing_fp

Driver Parameters

The CtLZQM driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CtLZQM** section.

Section name: CtLZQM

Option name: LOG_FILE

Option value: file_name

Meaning: allows to define a file to which all the diagnostic messages of the driver will be written.

Default value: by default, the log file is not created.

- ☑ **Section name: CtLZQM**
- ☑ **Option name: LOG_FILE_SIZE**
- ☑ **Option value: number**

Meaning: this item is used to define the size of the log file defined with use of the LOG_FILE item.

Option value: *number* - log file size in MB.

Default value: by default, the log file size is 1 MB.

- ☑ **Section name: CtLZQM**
- ☑ **Option name: LOG_OF_TELEGRAMS**
- ☑ **Option value: YES | NO**

Meaning: this item allows contents of telegrams transferred between driver and controllers to be written into the log file (declared with use of the LOG_FILE item). The referred item should only be used in the asix system start-up.

Default value: by default, value of this item is set to NO.

Defining: manual.

- ☑ **Section name: CtLZQM**
- ☑ **Option name: TRANSMISSION_DELAY**
- ☑ **Option value: number**

Meaning: The item defines the time interval between data receiving and sending the next inquiry to the counter. The option can be necessary for reading in registering mode.

Option value: *number* - time in milliseconds.

Default value: 75 ms (according to the manufacturer it can be too few).

- ☑ **Section name: CtLZQM**
- ☑ **Option name: NUMBER_OF_REPETITIONS**
- ☑ **Option value: YES | NO**

Meaning: The item specifies the number of retransmissions in the case of communication errors. It applies to register array readout and instantaneous quantity.

Option value: *number* - number of repetitions.

Default value: 0 (no repetitions).

EXAMPLE

```
[CTLZQM]
LOG_FILE =d:\tmp\test\licznik.log
LOG_FILE_SIZE =30
LOG_OF_TELEGRAMS = YES
```

Channel Parameters

Parameters declared in the section of the channel (in *Miscellaneous* module > *Directly entered options* tab).

- ☑ **Section name: CtLZQM**
- ☑ **Option name: LICZBA_POWTORZEN**
- ☑ **Option value: YES | NO**

Meaning: The item specifies the number of retransmissions in the case of communication errors. It applies to register array readout and instantaneous quantity.

Option value: *number* - number of repetitions.

Default value: 0 (no repetitions).

Parameterization of Individual Counters

The driver allows the set of individual parameters concerning service of particular counters to be transferred in separate sections. The name of such section is a composite of the following elements:

channel_name:counter_name

where:

channel_name - ASMEN's channel name in which the given counter is serviced;
counter_name - number of 8-digit counter (possibly with leading zeros)

EXAMPLE 1:

ASMEN's channel name KANAL
 Counter name 00121825
 Section name KANAL:00121825

A parameterization of the counter may be performed by the following items:

- date/time maker,
- log book data.

- ☑ **Section name: channel_name:number_of_counter**
- ☑ **Option name: TIME_MAKER**
- ☑ **Option value: register_code [,register_code]**

Meaning - it allows to define a register (or two registers), that includes the data and time stamp transmitted from the counter. It is assumed that, if one register is declared, it contains data and time in the 'YY-MM-DD hh:mm:ss' format. If the couple of registers is declared, it is assumed that the first register contains data in the 'YY-MM-DD' format, and the second one contains time in the 'hh:mm:ss' format.

Default value - by default, it is assumed that the PC's data and time stamp from the moment of the end of data receiving will be assigned to values transmitted from the counter.

Section_name: channel_name:number_of_counter

Option name: LOG_BOOK_DATA

Option value: YES/NO

Meaning - it allows to declare whether detailed description of parsing of particular event log lines should be entered to the driver log. The log file should be used only while the Asix system start-up.

Default value - by default, event parsing details are not written to the driver log.

EXAMPLE

There is an exemplary section describing the counter in the channel PTY. The number of a counter is: 00121825.

```
[PTY:00121825]
TIME_MAKER = 29., 28.
LOG_BOOK_DATA = YES
```

1.45 CtM200 - Spirax Sarco M200 Flow Computer Driver

Driver Use

The CtM200 driver is designed for data exchange between the Asix system and the M210G flow computer from Spirax Sarco. Communication is performed by the use of serial links in standard RS-232.

Parameterization of the CtM200 driver is performed by the Architect application.

Declaration of Transmission Channel

The declaration of the transmission channel utilizing the CtM200 driver requires the channel with the following parameters to the *Current data* module to be added:

Standard tab:

Name: logical name of the transmission channel
Driver: CtM200

CtM200 tab:

Channel parameters:

Port=number [*;* *Baudrate=number*] [*;* *Parity=number*] [*;* *WordLen=number*]
[*;* *StopBits=number*] [*;* *ServiceType=number*] [*;* *TimeSynchr=number*]

where:

<i>Port</i>	- computer serial port number;
<i>Baudrate</i>	- transmission speed in Bd; by default, 9600 Bd;
<i>Parity</i>	- EVEN, ODD or NONE; by default NONE;
<i>WordLen</i>	- number of character bits (7 or 8); by default 8;
<i>StopBits</i>	- number of stop bits (1 or 2); by default 1;
<i>ServiceType</i>	- RS-232 interface (mode 1) or RS-485 interface with ADAM-4521 modules (mode 2); default mode is mode 1;
<i>TimeSynchr</i>	- time (in minutes) between the subsequent recording of time to the flow computer. It is possible to disable the time synchronization by setting the <i>TimeSynchr</i> parameter to 0. By default, time synchronization is performed every 1 minute.

NOTE In the case of the use of addressable ADAM-4521 modules, the following parameters should be set in ADAM-4521 module:

- a/** delimiter - { (factory preset);
- b/** add cr - no (factory preset - yes);
- c/** address in RS-485 network (different address for each module);
- d/** baud rate - compliant with the speed set in the flow computer.

By default, the following transmission parameters are used:

- transmission speed 9600 Bd,
- number of bits in character – 8,
- parity control – NONE,
- number of stop bits – 1,
- communication through RS-232 link.

EXAMPLE

An example of the declaration of a channel utilizing the CtM200 driver on the COM2 port in RS-232 mode with default settings and time synchronization every 10 minutes:

Name: PLC1

Driver: CTM200

Driver parameters: Port=2; TimeSynchr=10

Addressing Variables

Symbolic address has the following syntax:

V.address.id

where:

address - address of the addressable ADAM-4251 module, if operating in RS-485 mode. In RS-232 mode, the address is irrelevant, but must be given,

id - flow computer parameter id. The following ids are allowed:
B - pressure (reading),
C - temperature (reading),
T - total (reading),
R - flow-rate (reading),
M - set metric units (writing),
P - set imperial units (writing).

If the heat metering unit is applied, it is also possible to use the following identifiers:

E - net energy (reading),
N - net power (reading),
W - condensate temperature (reading).

All raw variable values are of FLOAT type.

EXAMPLE

Examples of variables declaration:

JJ_01, flowrate, V.1.R, PLC1, 1, 1, NIC_FP
JJ_02, Total, V.1.T, PLC1, 1, 1, NIC_FP
JJ_03, Pressure, V.1.B, PLC1, 1, 1, NIC_FP
JJ_04, Temperature, V.1.C, PLC1, 1, 1, NIC_FP

Time Stamp

Values of variables read from the M210G flow computer are marked with a PC local time stamp.

Driver Parameters

CtM200 driver parameters are declared in the *Miscellaneous* module, on *Directly entered options* tab.

Driver parameterization is performed with the use of a separate section named **CTM200**.

Section name: CtM200

Option name: LOG_FILE

Option value: file_name

Meaning: option allows a file to be defined, where all driver diagnostic messages will be saved. If the LOG_FILE option does not define a full path, a log file will be created in the current folder. The log file should only be used during the start-up of the Asix system.

Default value: by default, a log file is not created.

Section name: CtM200

Option name: LOG_FILE_SIZE

Option value: number

Meaning: the option allows the log file size to be determined.

Option value:

number – log file size in MB.

Default value: default log file size is 10 MB.

Section name: CtM200

Option name: LOG_OF_TELEGRAMS

Option value: =YES|NO

Meaning: option allows the contents of telegrams sent and received from the controller to the log file (declared with use of LOG_FILE option) to be saved. The subject option should be used only during the start-up of the Asix system.

Default value: by default, the option value is set to NO.

Section name: CtM200

Option name: RECV_TIMEOUT

Option value: number

Meaning: option allows the timeout for receiving the first response character from the flow computer to be set. This option is set globally for all devices managed by the CTM200 driver.

Option value:

number – value expressed in milliseconds.

Default value: by default the option value is 1000 (milliseconds).

Section name: CtM200

Option name: CHAR_TIMEOUT

Option value: number

Meaning: option allows the timeout between subsequent response characters from the flow computer to be set. This option is set globally for all supported flow computers.

Option value:

number – value expressed in milliseconds.

Default value: by default the option value is 50 (milliseconds).

1.46 MACMAT - Driver of GAZ_MODEM Protocol for MACMAT Station

Driver Use

The MACMAT driver is used for communication with the MACMAT station. The driver supports the stations signed as Korektor Impulsowy (Impulse Corrector) 01723 CMK 01 97/01/02 manufactured by COMMON Ltd. and PKNMiJ 03-03-93 RP T-Zw5-1 manufactured by the PLUM company.

Parameterization of MACMAT driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MACMAT driver requires a channel with the following parameters to be added to the Current data module:

Standard tab:

Name: logical name of the transmission channel
Driver: MACMAT

MACMAT tab:

Channel parameters:

address,COMn

where:

n - number of the serial port to which the network of MACMAT stations is connected;
address - station address.

Driver Configuration

MACMAT driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

Each defined channel may have its own section, name of which is its logical name i.e. *logical_name*. The COMn port may also have its own section named **MACMAT:n**. Values defined in such section become default values for all stations connected to a given port. If in the INI file a section named **MACMAT** is placed, then the values placed in such section become default values for all stations supported by the controller. Values placed in the section of a given station (*logical_name*) have a priority before values placed in the section of a given serial port and the last ones have a priority before values placed in the MACMAT section. If the parameter is not present in any section, then its default value is taken according to the description below. In particular, the initialization file may not include any sections parameterizing stations. Only appropriate channel declaration is required.

Parameters of transmission with use of a serial interface cannot be placed in sections concerning individual stations.

Section name: MACMAT

Option name: Auto_sync

Option value: number

Meaning - if the parameter is different from 0, then automatic synchronization of the computer clock with the MACMAT station clock. The parameter value determines the minimal time between sequent comparisons of station and computer clocks. A comparison of clocks is performed only during other data reading from the station.

Default value - 3600 (1 hour).

Parameter:
number - time in seconds.

Section name: MACMAT

Option name: Alt_port

Option value: COMm, metod_of_switching_to_alternative_port, metod_of_switching_to_basic_port

Meaning - (See: Definition of alternative ports).

Section name: MACMAT

Option name: AsComm

Option value: yes/no

Meaning - if yes is given, then the driver will use AsComm Connection Manager to establish connections with MACMAT stations.

Default value - No.

Section name: MACMAT

Option name: No_Errors

Option value: Yes/No

Meaning - if yes is given, then the driver will not output the messages on errors in lines and timeout.

Default value - No.

Section name: MACMAT

Option name: Max_History_Buffers

Option value: number

Meaning - determines the maximal number of buffers containing historical data, read for needs of the archiving module. One buffer includes historical data from one time interval for one variable. It is stored in the memory within the time specified by the parameter *Max_History_Buffers*. One buffer occupies about 400 bytes of memory and can contain 50 values. If archive data are saved by the station every 15 minutes thus, for 24 hours, 2 buffers for one variable are necessary. Historical buffers are used by the data archiving program ASPAD during completing a B type archive. After the time determined by the parameter *History_Buffer_Removal* buffers are removed from the memory.

Default value - 5000.

Parameter:
number - number of buffers.

Section name: MACMAT

Option name: Max_history

Option value: number

Meaning - determines a time period in days, counted from the current moment backwards, for which historical data, stored in the station memory, will be read.

Default value - 35.

Parameter:

number - time in days.

Section name: MACMAT

Option name: Max_Time_Difference

Option value: number

Meaning - the maximal time difference between indications of a station clock and a computer clock, after exceeding of which synchronization of clocks occurs. The parameter has a meaning only when the *Auto_sync* parameter is different from zero.

Default value - 60.

Parameter:

number - time in seconds.

Section name: MACMAT

Option name: Status_Mask

Option value: number

Meaning - a number determining which values of the variable status cause non-validity of the variable value. The variable status is read from the MACMAT station together with its value. This status is a bitmap; meaning of bits is described in the station documentation. The driver executes the logical operation AND on the variable status received from the controller and on the value of the parameter *Status_Mask*. If the result of this operation is different from zero, then the data value is invalid. The data value is invalid too if the variable status has a value of 0 (i.e. lack of data).

Default value - the default, value of 6 means that values, exceeding the measuring range, are non-validated. As the parameter value, an integer, whose individual bits correspond to appropriate bits of the status, should be given.

Parameter:

number - time in seconds.

Section name: MACMAT

Option name: Counter_Ratio

Option value: number

Meaning - gas flow counter is transmitted in the form of two floating-point numbers *Vn0* and *Vn1*.

Protocol specification states that the counter value is calculated according to the formula:

$$Vn0 + Vn1*10000$$

However, some stations use the formula:

$$Vn0 + Vn1*100000$$

Parameter defines the value, by which the quantity $Vn1$ should be multiplied:

$$Vn0 + Vn1 * Counter_Ratio.$$

Default value - 10000.

Section name: MACMAT

Option name: P_Ratio

Option value: number

Meaning - according to the MacMAT station specification, the pressure is expressed in kPa. However, some stations transfer the pressure expressed in MPa. It concerns only archive (register) data. The parameter determines, by what factor the pressure, transferred by the station, should be multiplied.

Default value - 1000.

Section name: MACMAT

Option name: baud

Option value: number

Or

Section name: MACMAT

Option name: bps

Option value: number

Meaning - transmission speed.

Default value - 9600.

Parameter:

number - value passed in Bd.

Section name: MACMAT

Option name: parity

Option value: parity_parameter

Meaning - item determines a parity type.

Default value - n.

Parameter:

number - parity type:
n - no parity but,
o - odd parity check,
e - even parity check,
m - mark,
s - space.

Section name: MACMAT

Option name: retries

Option value: number

Or

Section name: MACMAT

Option name: retry

Option value: number

Meaning - number of transmission repetitions in case of transmission errors.

Default value - 5.

Section name: MACMAT

Option name: word

Option value: number

Or

Section name: MACMAT

Option name: word_length

Option value: number

Meaning - word length.

Default value - 8.

Parameter:

number - number from the range from 5 to 8 bits.

Section name: MACMAT

Option name: time-out

Option value: number

Or

Section name: MACMAT

Option name: timeout

Option value: number

Meaning - waiting time for station answer in seconds.

Default value - 2.

Section name: MACMAT

Option name: History_Buffer_Removal

Option value: number

Meaning - parameter determines time after which buffers containing historical data, read for needs of the archiving module, are removed.

Default value - 30.

Parameter:

number - the time is given in minutes.

Section name: MACMAT

Option name: AllErrors

Option value: yes/no

Meaning - if the parameter has a value of no, then the information on *timeout* errors will appear in 'Control Panel' only when the transmission missed in spite of attempts of its repetition. If it has a value of yes, then the information on all errors is transmitted to 'Control Panel'.

Default value - no.

Section name: MACMAT

Option name: RTS

Option value: yes/no

Meaning - if yes is given, then data sending to the station will occur by means of the RTS line set on high state and the reception on low state.

Default value - no.

- Section name: MACMAT**
- Option name: RTS_OFF_Delay**
- Option value: yes/no**

Meaning - time after which the RTS line will be zeroed after having sent data to the station. The parameter has meaning only when the control by means of the RTS line is switched on.

Default value - 10.

Parameter:
number - time in milliseconds.

- Section name: MACMAT**
- Option name: Ignore_Source_Address**
- Option value: yes/no**

Meaning - each packet sent by the station includes the station address. The station address is verified by the controller. In case of incompatibility to the station number it is rejected. Setting yes will cause the controller to stop the sender address verification.

Default value - no.

EXAMPLE 1

Channel declaration:

Channel / Name: MAC
Driver: MACMAT
Channel parameters: 2,COM2

Driver parameters:

Section name: MAC
Option name: Auto_Sync
Option value: 60

Section name: MAC
Option name: Max_time_difference
Option value: 10

In the example above the station named MAC connected to the COM2 port is defined. The synchronization of computer and station clocks will be performed every 1 minute. If the difference is at least 10 seconds, then the synchronization of clocks occurs.

EXAMPLE 2

Channel declarations:

Channel / Name: MAC1
Driver: MACMAT
Channel parameters: 1,COM2

Channel / Name: MAC2
Driver: MACMAT
Channel parameters: 2,COM2

Channel / Name: MAC3
Driver: MACMAT
Channel parameters: 3,COM2

Channel / Name: MAC4
Driver: MACMAT

Channel parameters: 4,COM3

Channel / Name: MAC5

Driver: MACMAT

Channel parameters: 5,COM3

Channel / Name: MAC6

Driver: MACMAT

Channel parameters: 6,COM4

Driver parameters:

Default value for all stations:

Section name: MACMAT

Option name: baud

Option value: 19200

Default values for stations connected to the COM3 port:

Section name: MACMAT:3

Option name: baud

Option value: 9600

Other parameters:

Section name: MAC6

Option name: Auto_Sync

Option value: 0

In the example above stations with names from MAC1 to MAC6 are defined. The stations MAC1, MAC2 and MAC3 are connected to the COM2 port. The stations MAC4 and MAC5 are connected to the COM3 port. The station MAC6 is connected to the COM4 port. All serial ports except COM3 will work with a speed of 19200 baud. The COM3 port will work with a speed of 9600 baud. The clock of the station MAC6 will not be synchronized.

Defining the Process Variables

Current Measure Data

Variables allowing to access to current measure data have the following form:

B_n

Where:

n - is the number of a datum according to the station specification:

B1 - value of a gas flow counter

B2 - Q_n

B3 - Q_r

..... etc.

The value of B_n variable is a floating-point number.

The variable B_0 is not used.

Access to Registered Values

For measures marked according to the specification with numbers 0/1 and from 2 to 8, the access to their values remembered by the station as registered data or twenty-four-

hours data (for a flow counter) is possible. The value of a registered variable is the value remembered by the station in the last registration period. An access to older measures is possible by the B type archiving. The registered variables have the following form:

- R0 - gas flow counter (in the end of last twenty-four hours)
- R2 - Qn
- R3 - Qr
- ..
- R8 - rez2

Access to the list of alarms by using the number of the successive alarm in the list:

Variables allowing to access to the list of alarms have the following form:

An.type

where:

- n* - alarm no.
- type* - type of information on an alarm according to the table below.

Table 26. Type of Information on an Alarm.

Type Name	Meaning	Type of Received Value
c, code	alarm code (according to the station documentation)	integer number (1 byte)
v, val	increase of counter value in time of alarm duration	floating-point number (4 bytes)
sec0	the second of alarm beginning	integer number (1 byte)
m0, min0	the minute of alarm beginning	integer number (1 byte)
h0, hour0	the hour of alarm beginning	integer number (1 byte)
day0	the day of alarm beginning	integer number (1 byte)
mon0	the month of alarm beginning	integer number (1 byte)
y0,year0	the year of alarm beginning	integer number (2 bytes)
sec1	the second of alarm end	integer number (1 byte)
m1, min1	the minute of alarm end	integer number (1 byte)
h1, hour1	the hour of alarm end	integer number (1 byte)
day1	the day of alarm end	integer number (1 byte)
mon1	the month of alarm end	integer number (1 byte)
y1,year1	the year of end alarm	integer number (2 bytes)

Access to the list of alarms by means of a code of alarms:

Variables allowing to access to the list of alarms by means of an alarm code have the following form:

En or $En.type$

where:

- n - alarm code according to the documentation;
- $type$ - type of information about the alarm according to the table presented above.

Variable E allows to access to the information about the alarm with a given code. If the list of alarms does not include the code of a required alarm, then a value of 0 (integer type – 1 byte) is returned. If the list contains many alarms with a given code, then the information about the alarm which occurred as latest of all is returned. If the variable type was omitted, then a value of 1 is returned if the alarm with a given code is active, and a value of 0 otherwise. If the variable type is given, then the value from the table presented above is returned.

Access to the List of Alarms as Bit Mask

The variable has the form:

EBn

where:

- n - number of byte 0-31.

By means of the EB variable it is possible to read information about active alarms in groups of 8 alarms:

- EB0 - alarms with codes 0- 7
- EB1 - alarms with codes 8-15
- EB2 - alarms with codes 16-23
- ...
- EB31 - alarms with codes 248-255

The variable value is an integer number of 1 byte length. Individual bytes of a variable value are assigned to adequate alarms. If the bit is set, then the alarm corresponding with it is active. The EB type variable allows to bind the alarms with bit strategy of identifying the alarms of Asix.

Access to Twenty-Four-Hours Data

The variable has the form:

Dn

where:

- n - is a number of data in accordance to the station documentation.

The D0 variable has the same meaning as the R0 variable.

Access to Statistical Data

The MACMAT controller enables to access to statistical data referring to the quantity of transmitted data and quantity of errors of the transmission. Variables allowing to access to statistical data have the following form (see: the following table).

Table 27. Variables Allowing to Access to Statistical Data.

Address	Meaning	Type of Received Value
SBS	quantity of sent bytes	Integer number (4 bytes)
SBR	quantity of sent bytes	Integer number (4 bytes)
SFS	quantity of sent frames	Integer number (4 bytes)
SFR	quantity of sent frames	Integer number (4 bytes)
SPE	quantity of errors of parity	Integer number (4 bytes)
SFE	(frame errors) quantity of frame errors	Integer number (4 bytes)
SOE	quantity of errors of overrun	Integer number (4 bytes)
SLE	quantity of line errors (the amount of parity errors, frames, overrun and etc.)	Integer number (4 bytes)
STE	quantity of timeout errors	Integer number (4 bytes)
SPRE	quantity of protocol errors	Integer number (4 bytes)
SCE	quantity of checksum errors	Integer number (4 bytes)
SLGE	quantity of logical errors (lack of data in the controller, incorrect address etc.)	Integer number (4 bytes)
SERR	amount of all errors (SLE, STE, SPRE, SCE and SLGE). The saving of any value into ERR variable is causes zeroing the following variables: SBS, SBR, SFS, SFR, SPE, SFE, SOE, SLE, STE, SPRE, SCE and SLGE.	Integer number (4 bytes)
TSBS	quantity of sent bytes (from the beginning of driver working)	Integer number (4 bytes)
TSBR	quantity of received bytes (from the beginning of driver working)	Integer number (4 bytes)
TSFS	quantity of sent frames (from the beginning of driver working)	Integer number (4 bytes)
TSFR	quantity of received frames (from the beginning of driver working)	Integer number (4 bytes)
TSPE	quantity of errors of the parity (from the beginning of driver working)	Integer number (4 bytes)
TSFE	quantity of the frame errors (from the beginning of driver working)	Integer number (4 bytes)
TSOE	quantity of errors of overrun (from the beginning of driver working)	Integer number (4 bytes)
TSLE	quantity of errors of the line (the amount of errors of parity, frames, overrun and etc.)	Integer number (4 bytes)
TSTE	quantity of timeout errors (from the beginning of driver working)	Integer number (4 bytes)
TSPRE	quantity of protocol errors (from the beginning of driver working)	Integer number (4 bytes)
TSCE	quantity of checksum errors (from the beginning of driver working)	Integer number (4 bytes)
TERR	amount of errors determined with following variables: TSLE, TSTE, TSPRE, TSCE, TSOE	Integer number (4 bytes)

Access to Historical Data (for the Version with Access to Historical Data)

The MACMAT controller enables the archive ASPAD module to access to historical data for variables from B1 to B8 and R0 and from R2 to R8 as well as for all variables of D and X type:

- for variables R0 and B1, daily data are read;
- for variables B2 and B3, registered data of flow increment are read.; these data are scaled so that they express a flow per 1 hour; the data are scaled in the basis of registration frequency read from the station;

- for variable B4 to B8 and R2 to R8, adequate registered historical data are read.

Cooperation with AsComm Manager of Connections

In order to use the AsComm manager of connections to establish connections with MACMAT stations you should declare the following option in the application configuration file with use of Architect module:

Section name: MACMAT or MACMAT:n, where n is the number of declared serial port
Option name: AsComm
Option value: Tak

Option should be declared in:

Architect > *Fields and Computers* > *Miscellaneous* module > *Directly entered options* tab

In case of cooperation with the AsComm module, the port number from the channel declaration is used to create the name, which is used by the driver to exchange data with the AsComm module. The name has a form of *MacMAT-n*, where *n* is the number of the serial port from the channel declaration.

EXAMPLE

Channel declaration:

Channel / Name: MAC
Driver: MACMAT
Channel parameters: 2,COM2

Driver parameters:

Section name: MACMAT
Option name: AsComm
Option value: Yes

The example above defines driver of the name MacMAT-2 as a client of AsComm. This name is also the name of the section, in which parameters of connections established by the AsComm module such as modem name, telephone number, etc. are placed. The description of parameters, which should be placed in such section, may be found in the manual of the AsComm module. You should notice that the number of the serial port may refer, but it has not, to the physical serial port. This number signifies the real serial port only when in the section (named 'r;MacMAT-n') for parameterization of connections established by the AsComm module other records defining truly used port (e.g. modem name) are not given.

An example of configuring the AsComm module for dial-up connections is given below:

Channel declaration:

Channel / Name: MAC
Driver: MACMAT
Channel parameters: 2,COM2

Driver parameters:

Section name: MACMAT
Option name: AsComm

Option value: Yes

Section name: MACMAT-2
Option name: switched_line
Option value: Yes

Section name: MACMAT-2
Option name: Modem
Option value: Sportster Flash

Section name: MACMAT-2
Option name: Interval
Option value: 5m

Section name: MACMAT-2
Option name: Max_Connection_Time
Option value: 2m

Section name: MACMAT-2
Option name: Number
Option value: 12345678

In order to establish connections the modem Sportster Flash will be used. Connections will be established every 5 minutes with the number 12345678. Maximal connection duration time is equal to 2 minutes.

Definition of Alternative Ports

The MACMAT driver allows using alternative serial ports in case of communication problems occurring when using the basic port (that appears in the definition of the logical channel). The parameter declaring the alternative port may be inserted into the 'MacMAT' or 'MacMAT:n' section and has the following form:

Alt_port = COMm, metod_of_switching_to_alternative_port,
metod_of_switching_to_basic_port

Option should be declared with use of Architect module in the following way:

Section name: MACMAT or MACMAT:n, where n is the number of declared serial port
Option name: Alt_port
Option value: COMm, metod_of_switching_to_alternative_port,
metod_of_switching_to_basic_port

Option should be declared in:

Architect > *Fields and Computers* > *Miscellaneous* module > *Directly entered options* tab

The parametr defines the COMm serial port used in case of communication problems in the COMn port (determined in the logical channel definition). The parameter may occur only one time (only one alternative port is permissible). The COMm alternative port is not allowed to be declared as the basic port in the other ASMEN channel definition.

Switching to the alternative port occurs after fulfilling the following condition:

Errors_number[/time_period]

When a number of missed reading attempts determined by *Errors_number* occurs in *time_period*, switching to the alternative port follows. The quantity of errors also includes the quantity of the transmission operation repetitions performed by the driver. That means, that if the occurrence of 3 errors is the condition of switching and the number of

repetitions is 5, switching may occur during the time of current request performing and this request has a chance to be performed correctly through using the alternative channel. If not, the request will be performed with an error status and the switching to the alternative port will occur during performing next ASMEN requests. The *time_period* parameter may be omitted - in such case, the switching will occur after *Errors_number* appearance. The *time_period* parameter is passed in seconds.

The return to using the basic port occurs after a number of seconds determined by the *metod_of_switching_to_basic_port* parameter since the moment of switching to the alternative channel. It doesn't mean that the modem connection will be realized all the time (if the alternative channel is that connection). This connection will be served like so far, it means it will be disconnected as a result of the AsComm module parameterization or when all ASMEN requests are realized. The parameters of the serial port should be defined in the 'MacMAT' section if they are supposed to be other than the ones applied in case of the basic port.

EXAMPLE

An example of the alternative channel parametrization:

Channel declaration:

Channel / Name: MAC1
Driver: MACMAT
Channel parameters: 220,COM1

Driver parameters:

Section name: MACMAT
Option name: Baud
Option value: 9600

Switching to the alternative channel, after 3 following errors have occurred, and return switching after 2 minutes:

Section name: MACMAT
Option name: Alt_Port
Option value: COM2, 3, 120
Section name: MACMAT
Option name: Alt_Port
Option value: COM2, 15/60, 120

1.47 CtMax1000 - drajwer protokołu systemu MAX-1000 firmy ULTRAK

CtMax1000. Communication based on the so-called "Network protocol" with the MAX 1000 camera management system by ULTRAK. The driver only carries out the camera switching and time synchronization functions (the driver provides time stamp). Communication takes place using the RS-232 serial interface.

Parameterization of M-Bus driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the CtMax1000 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: Max1000

Max1000 tab:

Channel parameters:

```
Port=PortNo; Node=NodeNo [; Baudrate=baud]
[;SynchrNode=SynchrNodeNo [; SynchrUTC=YES|NO ]
```

where:

Port - number of a serial port COM through which Asix communicates with the network MAX-1000.

Node - number of a broadcasting node of MAX-1000 network assigned to Asix. This number will be used as a parameter {TX} in telegrams sent to the system MAX 1000 (parameter {RX} will be downloaded from the symbolic address of variable).

Baudrate - optional parameter. It is used to determine the transmission speed of serial link. Acceptable parameters are 9600 and 19200. Default: 19200 Bd.

SynchrNode - optional parameter. It is used to synchronize the time of MAX-1000. It contains the number of MAX-1000 network node to which the current date and time of Asix will be sent every minute. By default, the driver does not synchronize the time.

SynchrUTC - optional parameter. It is used to determine the type of time (UTC or local) sent to MAX-1000 during time synchronization. By default, the driver sends local time during time synchronization. Transmission is carried out at constant settings: 7 bits of mark, even parity check, 1 stop bit.

EXAMPLE

An exemplary declaration of a channel in which a node with the number 5 of MAX-1000 is assigned to Asix:

Name: CHANNEL

Driver: Max1000

Driver parameters: Port=1; Node=5

Addressing the Process Variables

The driver provides only one type of variable:

K - camera

The syntax of symbolic address which is used for variables belonging to the CtMax1000 driver channel is as follows:

K.<CameraNo>.<NodeNo>

where:

CameraNo - global number of camera;

NodeNo - number of node, in which the camera is installed. The parameter is used as the parameter {RX} of the command switching over between cameras.

All the variables are of WORD type.

Variables are used only to send controls related to the switching of cameras - therefore when reading variables the value of 0 and the status OPC_QUALITY_BAD are returned.

For controls (switching the camera) the number of monitor, to which the image of a camera assigned to a given variable will be switched over, should be declared as a control value.

EXAMPLE

Exemplary declaration of variables:

```
JJ_11, camera 1 node 1, K.1.1, CHANNEL, 1, 1, NOTHING
JJ_12, camera 2 node 1, K.2.1, CHANNEL, 1, 1, NOTHING
JJ_13, camera 3 node 1, K.3.1, CHANNEL, 1, 1, NOTHING
JJ_14, camera 1 node 2, K.1.2, CHANNEL, 1, 1, NOTHING
JJ_15, camera 2 node 2, K.2.2, CHANNEL, 1, 1, NOTHING
JJ_16, camera 3 node 2, K.3.2, CHANNEL, 1, 1, NOTHING
JJ_17, camera 1 node 3, K.1.3, CHANNEL, 1, 1, NOTHING
```

Parameters of Driver

CtMax1000 driver parameters are declared in the *Miscellaneous* module, on the *Directly entered options* tab.

The driver is parameterized with use of **CtMax1000** section.

Section name: CtMax1000

Option name: LOG_FILE

Option value: file_name

Meaning - allows to define a file where all diagnostic messages of the CtMax1000 driver and information about the contents of telegrams received and sent by the CtMax1000 driver will be written.

Default value - by default, the contents of telegrams are not written to the log file.

Section name: CtMax1000

Option name: LOG_FILE_SIZE

Option value: number

Meaning - allows to specify the size of log file in MB.

Default value - 10 MB.

Section name: CtMax1000

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - allows to write to the log file (declared by using the item LOG_FILE) the contents of telegrams sent by the CtMax1000 driver within the reading/writing process variables. The log file should be used only while the Asix start-up.

Default value - NO.

EXAMPLE

```
[CTMAX1000]
LOG_FILE =d:\tmp\test\max1000.log
LOG_FILE_SIZE =30
LOG_OF_TELEGRAMS =YES
```

1.48 M-BUS - Driver of M-BUS Protocol

Driver Use

The M-Bus standard was developed as a standard for communication with heat counters and is the most widespread in this branch. This protocol was tested and developed in connection with MULTICAL heat meters of KAMSTRUP A/S.

Parameterization of M-Bus driver is performed with the use of Architect module.

Driver Configuration

Declaration of the transmission channel utilizing the M-Bus driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: M-Bus

Defining the Process Variables

The set of variables handled by the driver may be divided into several groups:

- sequential variables, i.e. the variables the address of which is the number of the datum transferred by the M-BUS device;
- variables, the address of which contains the name of measured variable;
- variables, which enable to read the manufacturer's data and other variables.

Sequential Variables

The definition of sequential variables needs the sequence in which the M-BUS device sends measured data to be known.

The address of sequential variables is as follows:

P_n

where n is a variable order number.

Addressing by Means of Variable Name

The variable address is as follows:

$Name [.Un][.Tn][.Sn]$

where:

$Name$ - name of a measured variable;

Un *n* - unit number (if omitted, then it is assumed to be equal to 0). The unit number is applied when the device consists of several units;
Tn *n* - tariff number (if omitted, then it is assumed to be equal to 0);
Sn *n* - cell number to store historical data (storage) (if omitted, then it is assumed to be equal to 0).

It is allowed to use the following names (see: the following table).

Table 28. Set of Acceptable Measured Variable Names.

Name	Meaning
ACCESSNUMBER	Next number of data reading
ACTDURATION	Duration time in seconds
AVGDURATION	Duration time in seconds
BAUDRATE	Transmission speed
BUSADD	Device address
CREDIT	Credit
CUSTOMERLOC	Localization of client
DEBIT	Debit
DIGINPUT	Digital input
DIGOUTPUT	Digital output
EIDENT	Extended identification
ELCURRENT	Current in amperes
ENERGY	Energy
FABRNO	Factory number
FLOWTEMP	Temperature
FVERSION	Firmware version
HVERSION	Equipment version
MANUFACTURER	Manufacturer
MASS	Mass
MASSFLOW	Masse flow
MEDIUM	Code of measured medium
MODEL	Model
ONTIME	Time from turning on
OPERTIME	Work time
PARAMSETID	Identification of parameters
POWER	Power
PRESS	Pressure
RESPDELAY	Delay of device response
RETTEMP	Return temperature
SVERSION	Software version
TEMPDIFF	Difference of temperatures
TIMEPOINT	Time stamp
VOLUME	Volume
VOLFLOW	Volume flow
XVOLFLOW	External volume flow
XTEMP	External temperature

Addressing the Manufacturer’s Data

Manufacturer’s data are the data, that are not described in the protocol definition. To read them, the knowledge of manufacturer’s data structure of a given device is necessary.

The address of a manufacturer’s datum is as follows:

Mposition.length

where:

- position* - byte number in the manufacturer's data block, from which a given value begins; the first byte has the number 0;
- length* - data length in bytes.

The driver assumes that the manufacturer's data are expressed in the BCD code.

Access to Unit Symbol of Measurement

For sequential variables and variables addressed with a variable name it is allowed to define variables that return the symbol of a measured physical unit (e.g. Wh for energy). To do it, you should add /UNIT to the variable address e.g. ENERGY/UNIT. As a conversion function you should define NOTHING_TEXT. In order to display the unit on technological diagram you can use the object STRING.

Other Data

Data transferred by the M-BUS device may be provided with a header. Variables allowing to access the data in a header:

Table 29. Set of Variables Allowing to Access the Data in a Header.

Address	Meaning	Type
H.IDENT	Identifier of device	DWORD
H.MANUFACTURER	Manufacturer code	
H.VERSION	Version	DWORD
H.MEDIUM	Medium code	BYTE
H.ACCESSNO	Next number of reading	BYTE
H.STATUS	Data status	BYTE

Data Status

Devices operating according to the M-BUS protocol make available the datum of 1 byte length, the individual bits of which determine the device status in the following way (see: **Table 29**):

Table 30. Data Statuses for M-BUS Devices.

Number	Meaning	Byte Number
1	application engaged	0
2	application error	1
3	voltage drop	2
4	constant error	3
5	temporary error	4
6	error specific for the device	5
7	error specific for the device	6
8	error specific for the device	7

Statuses with the successive number from 1 to 5 cause all the data sent by the device to be cancelled by the driver i.e. they take the status *bad datum*. It doesn't apply to the data contained in the header described in point Other Data. This default operation of the driver may be changed by the parameter *Invalid_Statuses* (see: *Driver Configuration*). The datum containing the device status may be read by the variable H.STATUS described in point Other Data. The first column of the above table determines the byte number, which corresponds to the specified status, in the variable.

Not all the devices make available the statuses 1 and 2. The meaning of statuses 6,7 and 8 is defined by the manufacturer.

Driver Parameterization

The driver configuration is defined in the *Current Data* module, in the channel operating according to M-Bus driver.

Channel parameters - transmission tab:

Port and transmission parameters

Port number

Meaning - It specifies the serial port used for communication. The parameter is obligatory.
 Default value - COM1.

Baud rate

Default value - 9600.

Word length

Default value - 8.

Parity

Default value - even.

Number of stop bits

Default value - 11.

Address of the device

Address of the M-BUS device

Meaning - determines the address of a given M-BUS device. The parameter is an obligatory parameter.
 Default value - no default value.
 Parameter:
 number - the parameter is a number from a range 1 to 250.

The parameter *Port* is obligatory. If transmission parameter was omitted, then the default values are taken. The port number must be always given.

Channel parameters - advanced tab:

Refresh period

Meaning - determines an interval by means of which the driver reads data from the M-BUS device.
Default value - 15.
Parameter:
 number - is passed in seconds.

Refresh delay

Meaning - the parameter determines the minimal time between successive data readings from the M-BUS device. Some devices (e.g. MULTICAL) needs a considerable time to prepare data. The parameter determines the time necessary for preparing data by the M-BUS device.
Default value - 12.
Parameter:
 number - is passed in seconds.

Double read

Meaning - some devices (e.g. MULTICAL) return the data prepared after a previous reading. If the parameter has a value Yes, then driver will do two successive reading in order to obtain the most actual data.
Default value - Yes.

Response timeout

Meaning - the parameter determines a maximal waiting time for an answer. The time is expressed in milliseconds.
Default value - 0.
Parameter:
 number - time in milliseconds.

Character timeout

Meaning - the parameter determines the maximal waiting time to receive one character.
Default value - 0.
Parameter:
 number - time in milliseconds.

Channel parameters - advanced 2 tab:

Invalid statuses

Meaning - the M-BUS device send a status byte with measured data. Each of bits of this byte determines a specified data value. The parameter determines what status bits make the received data invalid.
Default value - +1,+2,+3,+4,+5.
Parameter:
 number,number,... - the parameter has a form of set of bit numbers separated with the '+' character. The least significant bit has the number 1. The default value (1,2) means that the data are found incorrect if the device signals the error "application busy" (1),

"application error" (2), "power drop" (3), "constant error" (4) and "temporary error" (5). The manufacturer may define additional statuses.

Channel parameters - alarms tab:

Alarm code

Meaning - the parameter determines the alarm number in the Asix system which is generated by the driver after a lost of connection with the M-BUS device.
Default value - no default value.

Alarms

Meaning - is a set of parameters with names from *Alarm0* to *Alarm7*. Each parameter determines a number of Asix system alarm, which will be generated by the driver after appearance of an analogous alarm in the M-BUS device. The meanings of alarms generated by the M-BUS device is specified by the manufacturer.
Default value - no default value.

Channel parameters - diagnostics tab:

Log file

Meaning - the parameter value is a name of file where diagnostic information is written. The parameter may be used only for diagnostic purposes.
Default value - no default value.

Dump file

Meaning - the parameter value is a name of the file where the data will be written. The parameter may be used only for diagnostic purposes.
Default value - no default value.

1.49 MEC - Driver of MEC07 and MEC08 Heat Meter Protocol

Driver Use

The driver is designed for data exchange between the Asix system and MEC07 and MEC08 heat meters manufactured by the Instytut Techniki Ciepłej (Institute of Thermal Technology) in Łódź. Data exchange is executed by means of a serial interface in the RS-232 standard. For switching serial line between counters a multiplexer, controlled by RTS (switching to the first channel) and DTR (switching to the next channel) lines, is used.

Parameterization of MEC driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MEC driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: MEC

MEC tab:

Channel parameters:

port [,*max_no*]

where:

- | | |
|---------------|--|
| <i>port</i> | - name of the serial port connected to the multiplexer of MEC heat meters, e.g. COM1, |
| <i>max_no</i> | - optional number of multiplexer channels to which the MEC heat meters are connected (by default 5). |

EXAMPLE

An exemplary declaration of transmission channel CHANNEL used for communication with MEC heat meters connected to the multiplexer channels numbered from 1 to 8. Data exchange is executed through the serial port COM2.

Channel / Name: CHANNEL

Driver: MEC

Channel parameters: COM2, 8

Types of Process Variables

In the driver one type of process variables is defined:

V - value of transferred measurement.

All process variables are of FLOAT type and may be only read. A time stamp is given by a heat counter and sent with values of process variables within a common telegram. The time stamp is given with the accuracy of one minute.

The syntax of symbolic address used for variables belonging to the MEC driver channel is as follows:

$V<nrFabr>.<nrOdb>.<index>$

where:

nrFabr - factory number of the MEC heat meter;
nrOdb - number of the receiver from which the measurement is transferred; allowed value is 1 or 2;
index - variable number in a table of variables transferred from the meter.

The list of indexes and variables corresponding with them are given in tables 1 and 2.

Raw values of variables read from heat counters should be converted following the conversion function NOTHING_FP or FACTOR_FP. The column *Factor* in both tables contains factors **A** of the conversion function FACTOR_FP for measurements with known conversion method of raw value (factors **B** are equal to 0). For the other measurements the calculation method of real value of the measurement should be agreed with the user of heat meters.

Table 31. Variables Transferred from MEC07.

Variable Name	Index	Factor
Factory number	1	1
Number of receiver	2	1
Status	3	1
Time of exceeding Max	4	
Time of exceeding Min	5	
Time of range exceeding	6	
Total time	7	0.1
Time of damage	8	
Total masse	9	10
Number of exceeding	10	
	11	
Number of feed decays	12	
Actual power	13	0.001
Current of break. PDPO	14	
Flux of masse	15	0.01
Ordered power	16	0.001
Delta of energy	17	
Qmax (exceeding)	18	
Qmin (exceeding)	19	
Qsum (total energy)	20	
Duration time of exceeding	21	
Max power of exceeding	22	
Energy of exceeding	23	
Volume of exceeding.	24	
V/Vz of exceeding.	25	

Air temperature (Tpow)	26	0.01
Delta T (Trozn)	27	0.01
Average air temp. (Tsrpow)	28	0.01
Delta T average (Tsroz)	29	0.01
Temp.of feed. (Tzas)	30	0.01

Table 32. Variables Transferred from MEC08.

Variable Name	Index	Factor
Factory number	1	1
Receiver number	2	1
Status	3	1
Pressure	4	0.001
Time of exceeding.	5	
Time in exceeding min.	6	
Time in feed.	7	
Time of range exceeding	8	
Time of range exceed. of condens.	9	
Total time	10	0.1
Time of damage	11	
Close time	12	
Close time of feed	13	
Enthalpy	14	1
Enthalpy of condens.	15	0.1
Total masse of condens..	16	0.1
Total masse	17	0.1
Number of exceedings	18	
Number of feed decays	19	
Steam power	20	0.01
Current of break. PDP0	21	
Current of break. PDP1	22	
Power of condens.	23	0.01
Ordered power	24	0.01
Energy in exceeding	25	
Energy in exceeding min.	26	
Energy in feed..	27	
Energy of condens.	28	0.1
Total energy	29	0.1
Duration time of exceeding.	30	
Max power of exceeding.	31	
Energy of exceeding.	32	
Flux of condens. masse	33	0.01
Flux of masse	34	0.01
Overheat (delta T)	35	0.1

EXAMPLE

Examples of declarations of variables.

```

A0, time 7502,          V7502.1.00, CHANNEL, 17, 1, DATETIME_MEC
A1, pressure 7502,     V7502.1.04, CHANNEL, 1, 1, FACTOR_FP, 0.001, 0
A2, temp. of feed 7502, V7502.1.37, CHANNEL, 1, 1, FACTOR_FP, 0.1, 0
A3, total time 8502,   V8502.1.07, CHANNEL, 1, 1, FACTOR_FP, 0.1, 0
A4, factory no 7502,   V7502.1.01, CHANNEL, 1, 1, NOTHING_FP

```

Driver Configuration

MEC driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **MEC** section.

Section name: MEC

Option name: LOG_FILE

Option value: file_name

Meaning - allows to define a file to which all diagnostic driver messages and information about contents of telegrams received by the driver are written. If the item does not define the full path, the log file will be created in the current directory. The log file should be used only in the stage of the Asix start-up.

Default value - log file is not created.

Defining - manual.

Section name: MEC

Option name: LOG_FILE_SIZE

Option value: number

Meaning - allows to specify the log file size in MB.

Default value - 1MB.

Defining - manual.

Section name: MEC

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - item allows to write to the log file (declared by use of the item LOG_FILE) the contents of telegrams received by the driver. Writing the contents of telegrams to the log file should be used only in the stage of the Asix system start-up.

Default value - NO.

Defining - manual.

Section name: MEC

Option name: DATA_VALID_TIME

Option value: number

Meaning - for each MEC counter the time of the last reading is checked. If it exceeds the declared value, then the data from the actually read MEC counter receive an error status.

Default value - 1min.

Defining - manual.

Section name: MEC

Option name: STROBE_TIME

Option value: number

Meaning - allows to determine the duration time (in milliseconds) of the RTS and DTR strobe while controlling the switching of multiplexer channels.

Default value - 60 ms.

Defining - manual.

Section name: MEC

Option name: NUMBER_OF_REPETITIONS

Option value: number

Meaning - allows to determine the number of repetitions for all channels of multiplexer.

Default value - 1 repetition.

Defining - manual.

1.50 MELSECA - Driver of MITSUBISHI MELSEC-A PLC Protocol

Driver Use

The MELSECA driver is used for data exchange between Asix computers and the A1SJ71C24-R2 communication processor of MITSUBISHI MELSEC-A PLCs. The transmission is executed by means of serial interfaces by using standard serial ports of an Asix system computer.

The cooperation of Asix with the controller by using the MELSECA protocol does not require any controller's program adaptation.

Parameterization of MELSECA driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MELSECA driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MELSECA

MELSECA tab:

Channel parameters:

type,pc_cpu,port,[baud,character,parity,stop]

where:

<i>type</i>	- set of realized commands: ACPU or AnCPU;
<i>pc_cpu</i>	- PC CPU number; in case of connection point-point it should be given ff (<i>self PC CPU number</i>),
<i>port</i>	- serial port name;
<i>baud</i>	- transmission speed in baud;
<i>character</i>	- number of bits in a transmitted character;
<i>parity</i>	- parity check type (even,odd,none);
<i>stop</i>	- number of stop bits.

Parameters *baud*, *character*, *parity*, *stop* and *buffer* are optional. In case of omitting them the default values are taken as follows:

- transmission speed - 9600 Bd,
- number of bits in a character - 8,
- parity check type - parity check (none),
- number of stop bits - 1.

EXAMPLE

An example of declaration of transmission channel operating according to the MELSECA protocol is given below:

Channel / Name: CHAN1
 Driver: MELSECA
 Channel parameters: AnCPU,ff,COM1,9600,8,even,1

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the MELSECA driver channel is as follows:

VARIABLE_TYPE *variable_index*

where:

VARIABLE_TYPE - string identifying the variable type in the MELSECA protocol,
variable_index - index within a given type.

The following symbol of types of process variables are allowed (in columns on the right side the range of variable indexes for the ACPU and AnCPU sets of commands are given).

	ACPU	AnCPU	
X	- Input X	0 - 7FF	0 - 7FF
Y	- Output Y	0 - 7FF	0 - 7FF
M	- Internal relay M	0 - 2047	0 - 8191
L	- Latch relay L	0 - 2047	0 - 8191
S	- Step relay S	0 - 2047	0 - 8191
B	- Link relay B	0 - 3FF	0 - 0FFF
F	- Annunciator F	0 - 255	0 - 2047
TS	- Timer (contact) T0	0 - 255	0 - 2047
TC	- Timer (coil) T	0 - 255	0 - 2047
TN	- Timer (present value) T0	0 - 255	0 - 2047
CS	- Counter (contact) C	0 - 255	0 - 1023
CC	- Counter (coil) C	0 - 255	0 - 1023
CN	- Counter (present value) C	0 - 255	0 - 1023
MS	- Special relay M	9000 - 9255	9000 - 9255
D	- Data register D	0 - 1023	0 - 6143
W	- Link register W	0 - 3FF	0 - 0FFF
R	- File register R	0 - 8191	0 - 8191
DS	- Special register D	9000 - 9255	9000 - 9255

The variable index for types X, Y, B and W is given in hexadecimal form, at the same time the indexes beginning with a letter should be preceded by digit 0, e.g. a correct declaration of input no. E has a form of X0E (declaration XE will be rejected as wrong).

Indexes of the other types are given in decimal format.

EXAMPLE

X0A2 - value of input no. A2
 D1010 - value of register D no. 1010

All process variables are treated as 16-bit numbers.

A correct operation of a communication processor A1SJ71C24-R2 requires appropriate setting of switches SW04 - SW12 and MODE (work mode) on the front panel. The MODE switch should be unconditionally set to position 1, because the MELSECA driver is based on the dedicated protocol with number 1. The SW04 switch should be set to ON if the application executes controls (state ON of the switch allows to write data in RUN mode). The SW12 switch should be set to ON (counting and verification of a checksum). The state

of switches SW05 - SW11 should be set according to transmission parameters given in the item declaring a MELSECA transmission channel:

(transmission speed, number of characters in a word, number of stop bits, manner of parity check).

The cable connecting a communication processor A1SJ71C24-R2 with an Asix system computer should be made according to the pattern given for the connection with a device which does not use signals DTR/DTS for transmission check (*see: chapter 4.5 External Wiring of documentation 'Computer Link Module type A1SJ71C24-R2'*).

The MELSECA driver is installed as a DLL automatically.

Driver Configuration

MELSECA driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **MELSECA** section.

Section name: MELSECA

Option name: LOG_FILE

Option value: file_name

Meaning - allows to define a file where all diagnostic messages of the MELSECA driver and information about the contents of telegrams received and sent by the MELSECA driver will be written.

Default value - by default, the contents of telegrams are not written to the log file.

Section name: MELSECA

Option name: CHECKSUM

Option value: YES|NO

Meaning - allows to use a checksum in the protocol.

Default value - YES.

Section name: MELSECA

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - allows to write to the log file (declared by using the item LOG_FILE) the contents of telegrams sent and received by the MELSECA driver within the reading/writing process variables.

Default value - NO.

Section name: MELSECA

Option name: LOG_FILE_SIZE

Option value: number

Meaning - allows to specify the size of log file in MB.

Default value - 1 MB.

1.51 MEVAS - Driver of MEVAS Analyzers

Driver Use

The MEVAS driver is used for data exchange between MEVAS emission computers and an Asix system computer. The communication is executed by means of serial interfaces. The driver realizes the protocol described in "*Bedienungsanleitung Rechnerschnittstelle MEVAS (vorläufige Version 1.00). Telegrammverkehr über eine serielle Schnittstelle. Stand: 26.03.1993*".

Parameterization of MEVAS driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MEVAS driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: MEVAS

MEVAS tab:

Channel parameters:

COMn, Mevas_Address

where:

COMn - number of the serial port to which the network of MEVAS controllers is connected;

Mevas_Address - number identifying the MEVAS emission computer; the number is assigned on the stage of the MEVAS emission computer parameterization.

Driver Configuration

MEVAS driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

Each defined channel may have its own section, the name of which is the logical name of the channel. A given COMn port may also have its own section named **MEVAS:n**. Values defined in such section become the default values for individual stations. The default values for individual serial interfaces are taken from the section named **MEVAS**. Transmission parameters by means of a serial interface cannot be placed in sections concerning individual stations, i.e. they may be located only in sections MEVAS and MEVAS:n.

Section name: MEVAS

Option name: baud

Option value: number

Or

Section name: MEVAS

Option name: bps

Option value: number

Meaning - determines transmission speed.

Default value - 9600

Parameter:

number - number passed in Bd.

Section name: MEVAS

Option name: parity

Option value: parity_number

Meaning - determines parity.

Default value - n

Parameter:

number - allowed values:

- n - no parity bit,
- o - odd parity check,
- e - even parity check,
- m - mark,
- s - space.

Section name: MEVAS

Option name: retries

Option value: number

Meaning - number of repetitions of missed reading operations from a MEVAS station.

Default value - 3

Section name: MEVAS

Option name: stop_bits

Option value: number

Meaning - determines number of stop bits.

Default value - 1

Parameter:

number - allowed values are 1 and 2.

Section name: MEVAS

Option name: word

Option value: number

Or

Section name: MEVAS

Option name: word_length

Option value: number

Meaning - word length.

Default value - 8

Parameter:

number - allowed values are from interval 5 to 8.

- ☑ **Section name: MEVAS**
- ☑ **Option name: time_out**
- ☑ **Option value: number**

Or

- ☑ **Section name: MEVAS**
- ☑ **Option name: timeout**
- ☑ **Option value: number**

Meaning - waiting time for DMS285 answer.
 Default value - 10000
 Parameter:
 number - number passed in milliseconds.

- ☑ **Section name: MEVAS**
- ☑ **Option name: bad_data_statuses**
- ☑ **Option value: status1,status2,...,statusN**

Meaning - determines numbers of data status, for which the data are found invalid. Status 13 (no data) causes that the data is always treated as invalid, independently of parameter value.
 Default value - 0,13
 Parameter:
 - format: status1, status2, ..., statusN
 or the character - (lack of the *bad data* status, except 13).

- ☑ **Section name: MEVAS**
- ☑ **Option name: log**
- ☑ **Option value: log_file**

Meaning - parameter determines the name of file to which additional diagnostic information will be written.
 Default value - lack

- ☑ **Section name: MEVAS**
- ☑ **Option name: alarm_code**
- ☑ **Option value: alarm_number**

Meaning - parameter determines a number of alarm generated by the driver in case of loss and re-establishing a connection with the station. The value of -1 (by default) causes that alarms are not generated. In a situation of connection loss, the following number specifying the cause of connection loss is transmitted together with an alarm code:
 0 - complete lack of any answer from the station;
 1 - timeout;
 2 - line errors (frame, parity, overrun errors);
 3 - checksum errors;
 4 - other errors;
 5 - MEVAS was reset;
 6 - timeout on the MEVAS side;
 7 - checksum error on the MEVAS side.
 This number determines the end status of last attempt to establish the connection.
 Default value - -1

- ☑ **Section name: MEVAS**
- ☑ **Option name: simulation**
- ☑ **Option value: number**

Meaning - if the parameter value is 1, then the driver works in simulation mode and does not communicate with the station. Values of all variables are random.

Default value - 0

- ☑ **Section name: MEVAS**
- ☑ **Option name: Refresh1,...,Refresh10**
- ☑ **Option value: number**

Meaning - parameters determine how often the driver has to transfer to the MEVAS station requests of preparing a new data set for later reading. Each parameter corresponds to a definite variable group. The parameter *Refresh1* refers to all variables. The parameter has a form of two numbers. The first number determines frequency of request sending, the second one determines a shift in time of request sending. For instant, if 60s, 10s is given, then requests of preparing new data may be sent at hours: 12:00:10, 12:01:10, 12:02:10 etc.

The parameter determines only the maximal frequency of request sending. If the driver does not receive requests to read new data from the other components of the Asix system (ASMEN), then requests to prepare new data are not sent to the MEVAS station.

If the parameter *Refresh1* and one of parameters *Refresh2-Refresh10* has a non-zero value, then the requests to prepare a data collection, defined by this last parameter, will be sent at moments fulfilling criteria defined by both the parameters simultaneously i.e. with a frequency equal to the minimal value of both the parameters.

If the parameter *Refresh1* has value 0,0, then corresponding to them other parameters should have non-zero values. Data read from the MEVAS station – except the D28 data (integrals) – receive a time stamp transferred by the MEVAS station at the moment of receiving a request to prepare a new data collection.

Default value - Refresh1=60s,10s (other parameters have values 0,00).

Parameter:
number - both the numbers have a format *nnn[s|m|g|h]* where *nnn* determines the time and the letter designation determines the base of time (second, minute, hour, hour respectively). If time unit designation is omitted, then the second is assumed.

- ☑ **Section name: MEVAS**
- ☑ **Option name: Round_28**
- ☑ **Option value: yes/no**

Meaning - if the parameter has a value yes, then the time of the D28 data is rounded up to a full hour. The rounding refers only to data with time in form *hh:59:00*. Other time values are not rounded. To switch off the rounding one should give no as the parameter value.

Default value - 15

- ☑ **Section name: MEVAS**
- ☑ **Option name: Round_28_Time**
- ☑ **Option value: yes/no**

Meaning - time in minutes determining the time rounding range of hour integrals. If the integral time is included in the range: the nearest full hour +/- parameter value, then the integral time will be rounded to the nearest full hour. By example, if the parameter

value is 15 minutes, then times of integrals from the range 9:45:00 to 10:15:00 will be rounded to 10:00:00. The rounding occurs if the value of parameter *Round_28* is yes.

If the parameter value is 0, then the rounding does not occur.

Default value - 15

Section name: MEVAS

Option name: Time_Read

Option value: number

Meaning - the parameter determines a time interval in seconds, with which the driver updates the station time. The driver cyclically reads the station time with a given interval. The MEVAS station time is used for determining the time, at which requests to prepare new data should be sent to the MEVAS station.

Default value - 3600.

Parameter:
number - time in seconds.

Section name: MEVAS

Option name: Max_D28_Time

Option value: number

Meaning - determines the way of driver reaction to lack of the D28 data (integrals) during historical data completing. It is the time of data lack, in seconds, after which the driver will assume that historical data do not exist and transfer such information to write in the archive. The parameter is used only in the situation when the MEVAS station reports a lack of any values referring to a definite channel and the value type (Knr/Wsl). The parameter does not concern a situation when only a part of possible 52 historical values is not available. In this last case it is assumed that such situation will not change later.

Default value - 4200

Parameter:
number - time in seconds.

EXAMPLE

Examples of the MEVAS driver configuration.

Example 1:

Channel declaration:

Channel / Name: MVS_1

Driver: MEVAS

Channel parameters: COM2,3

Driver parameters:

Section name: MEVAS:2

Option name: baud

Option value: 19200

In the example above the station named MVS_1 connected to the COM2 port was defined. The transmission speed of 19200 bps will be used. The station has an identifier of 3.

Communication Drivers

Example 2:

Channel declarations:

Channel / Name: MVS_1
Driver: MEVAS
Channel parameters: COM1,1

Channel / Name: MVS_2
Driver: MEVAS
Channel parameters: COM2,2

Channel / Name: MVS_2
Driver: MEVAS
Channel parameters: COM3,1

Channel / Name: MVS_2
Driver: MEVAS
Channel parameters: COM4,1

Channel / Name:
Driver: MEVAS
Channel parameters: COM5,4

Channel / Name:
Driver: MEVAS
Channel parameters: COM6,5

Driver parameters:

Default values for all stations:

Section name: MEVAS
Option name: baud
Option value: 19200

Section name: MEVAS
Option name: Invalidity_Status
Option value: 1, 6, 14

Default values for stations connected to the COM3 port:

Section name: MEVAS:3
Option name: baud
Option value: 9600

Other parameters:

Section name: MVS_2
Option name: Invalidity_Status
Option value: 5

Section name: MVS_3
Option name: Invalidity_Status
Option value: 0,13

In the example above stations with names from MVS_1 to MVS_6 connected to ports from COM1 to COM6 are defined. All serial ports except COM3 will work with a speed of 19200 baud. The COM3 port will work with a speed of 9600 baud. All stations except MVS_2 and MVS_3 stations will use invalidity statuses 1, 6 and 14. The MVS_2 station uses a value of 5 as an invalidity status. The MVS_3 status does not use any invalidity status – setting parameter "-" was necessary to change the default values set in the MEVAS section.

Time Stamp

Other data than D28 are transferred by driver to the Asix system together with a time received from the MEVAS station while executing a request from the MEVAS station to prepare new data for reading. The frequency of sending request is specified by parameters *Refresh1*, ..., *Refresh10*.

For data D28 (integrals) the MEVAS stations send a set of maximally 52 values. Each of these values is provided with its own time, which usually has a form of hh:59 (for 1-hour cycle of integration). This time is rounded up by driver to a full hour. The rounding may be turned off by means of parameter *Round_28*. Range of rounding defines a parameter *Round_Time_28*.

Although each D28 datum has its own time, for the variables of this type it is also necessary to send to the MEVAS station a request to prepare new data and if the parameter *Refresh1* has a value of 0,0 then the parameter *Refresh5* must have a not zero value in order to read data correctly (historical data too).

Defining the Process Variables

The variable definition is based on the MEVAS protocol description.

List of all types of variables is given in the end of this point.

name [.arg1[.arg2[.arg3]]]

where:

argn - may be: number, number preceded by text or text.

Square brackets [and] include parts, which may be absent in a variable definition.

The variable name may be a number of the value described in an appropriate query (of D type) of the communication protocol with the MEVAS system. The number may be preceded by a letter D. Variables defining data of other queries of the protocol are the numbers preceded by the query type e.g. X1 to X5 and S1 to S5.

A record <n..m> signifies a numerical value from a range n to m. A vertical line "r;r;" signifies that it is allowed to choose one of text on either side of the line.

In the table below all the types of variables are placed. The column *Number of parameter Refresh* specifies, which of parameters from *Refresh2* to *Refresh10* concerns a given variable. The value of variables from X1 to X10 is a time of preparing a specific data group by the MEVAS station as a result of the lately sent request. Writing any value to these variables causes sending to the MEVAS station a request of preparing new data for reading.

If the *Status* column contains Yes, then a given variable is transferred to the Asix system with the status defined by the parameter *Invalidity_Statues*. Such variable is accessed by the MEVAS station together with the status defined by the protocol. This status is converted to a numerical value and compared with values defined by the parameter *Invalidity_Statues*. If the value of converted status is compatible to one of values defined by the parameter *Invalidity_Statues*, then the data is regarded as invalid. The data with a status of 13 (no data) is always regarded as invalid.

Table 33. Format of Variable Name.

Format of Variable Name	TYPE	Number of Parameter Refresh	Status	Record	Example
[D]1.[Knr ch]<1..48>	WORD	2			D1.Knr1
[D]2.[Knr ch]<1..48>	FLOAT	2	Yes		D2.Knr1
[D]2.[Knr ch]<1..48>.F VAL	FLOAT	2			D2.Knr1.F
[D]2.[Knr ch]<1..48>.SS STS STA	WORD	2			D2.Knr1.SS
[D]3.[Knr ch]<1..48>	FLOAT	2	Yes		D3.Knr1
[D]3.[Knr ch]<1..48>.F VAL]	FLOAT	2			D3.Knr1.F
[D]3.[Knr ch]<1..48>.SS STS STA	WORD	2			D3.Knr1.SS
[D]4.[Knr ch]<1..48>	FLOAT	2	Yes		D4.Knr1
[D]4.[Knr ch]<1..48>.F VAL	FLOAT	2			D4.Knr1.F
[D]4.[Knr ch]<1..48>.S STS STA	WORD	2			D4.Knr1.S
[D]4.[Knr ch]<1..48>.int i	WORD	2			D4.Knr1.int
[D]5.[Knr ch]<1..48>	FLOAT	2	Yes		D5.Knr1
[D]5.[Knr ch]<1..48>.F VAL	FLOAT	2			D5.Knr1.F
[D]5.[Knr ch]<1..48>.S STS STA	WORD	2			D5.Knr1.S
[D]5.[Knr ch]<1..48>.int i	WORD	2			D5.Knr1.int
[D]6.[Knr ch]<1..48>	FLOAT	2	Yes		D6.Knr1
[D]6.[Knr ch]<1..48>.F VAL	FLOAT	2			D6.Knr1.F
[D]6.[Knr ch]<1..48>.S STS STA	WORD	2			D6.Knr1.S
[D]6.[Knr ch]<1..48>.int i	WORD	2			D6.Knr1.int
[D]7.[Knr ch]<1..48>.[int i val]	WORD	2			D7.Knr1.int
[D]8.[Knr ch]<1..48>	FLOAT	2	Yes		D8.Knr1
[D]8.[Knr ch]<1..48>.F VAL	FLOAT	2			D8.Knr1.F
[D]8.[Knr ch]<1..48>.S STS STA	WORD	2			D8.Knr1.S
[D]8.[Knr ch]<1..48>.int i	WORD	2			D8.Knr1.int
[D]9.[Knr ch]<1..48>	FLOAT	2	Yes		D9.Knr1
[D]9.[Knr ch]<1..48>.F VAL	FLOAT	2			D9.Knr1.F
[D]9.[Knr ch]<1..48>.S STS STA	WORD	2			D9.Knr1.S
[D]9.[Knr ch]<1..48>.int i	WORD	2			D9.Knr1.int
[D]10.[Knr ch]<1..48>	FLOAT	2	Yes		D10.Knr1
[D]10.[Knr ch]<1..48>.F VAL	FLOAT	2			D10.Knr1.F
[D]10.[Knr ch]<1..48>.S STS STA	WORD	2			D10.Knr1.S
[D]10.[Knr ch]<1..48>.int i	WORD	2			D10.Knr1.int
[D]11.[Knr ch]<1..48>	FLOAT	2	Yes		D11.Knr1
[D]11.[Knr ch]<1..48>.F VAL	FLOAT	2			D11.Knr1.F
[D]11.[Knr ch]<1..48>.S STS STA	WORD	2			D11.Knr1.S
[D]11.[Knr ch]<1..48>.int i	WORD	2			D11.Knr1.int
[D]12.[Knr ch]<1..48>.[F VAL]	FLOAT	2			D12.Knr1.F
[D]12.[Knr ch]<1..48>.Ag cnt	WORD	2			D12.Knr1.Ag
[D]13.[Knr ch]<1..48>.[F VAL]	FLOAT	2			D13.Knr1.F
[D]13.[Knr ch]<1..48>.Ag cnt	WORD	2			D13.Knr1.Ag
[D]14.[Knr ch]<1..48>.[F VAL]	FLOAT	2			D14.Knr1.F
[D]14.[Knr ch]<1..48>.Ag cnt	WORD	2			D14.Knr1.Ag
[D]15.[Knr ch]<1..48>.[F VAL]	FLOAT	2			D15.Knr1.F
[D]15.[Knr ch]<1..48>.Ag cnt	WORD	2			D15.Knr1.Ag

Table 34. Format of Variable Name (continuation).

Format of Variable Name	TYPE	Number of Parameter Refresh	Status	Record	Example
[D]16.[Knr ch]<1..48>.[F VAL]	FLOAT	2			D16.Knr1.F
[D]16.[Knr ch]<1..48>.Ag cnt	WORD	2			D16.Knr1.Ag
[D]17.[Knr ch]<1..48>.[F VAL]	FLOAT	2			D17.Knr1.F
[D]17.[Knr ch]<1..48>.Ag cnt	WORD	2			D17.Knr1.Ag
[D]18.[Knr ch]<1..48>.[I VAL]	WORD	6			D18.Knr1.I
[D]19.[Knr ch]<1..48>.[F VAL]	FLOAT	6			D19.Knr1.F
[D]20.[Knr ch]<1..48>.[F VAL]	FLOAT	6			D20.Knr1.F
[D]21.[Knr ch]<1..48>	DWORD	2			D21.Knr1
[D]21.[Knr ch]<1..48>.val j jjjjmm jjjjjmm	DWORD	2			D21.Knr1.val
[D]21.[Knr ch]<1..48>.t ttttmm ttttmm	DWORD	2			D21.Knr1.t
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL0 CL0 0	WORD	3			D24.Bnr1.Bsl1.KL0
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL1 CL1 1	WORD	3			D24.Bnr1.Bsl1.KL1
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL2 CL2 2	WORD	3			D24.Bnr1.Bsl1.KL2
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL3 CL3 3	WORD	3			D24.Bnr1.Bsl1.KL3
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL4 CL4 4	WORD	3			D24.Bnr1.Bsl1.KL4
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL5 CL5 5	WORD	3			D24.Bnr1.Bsl1.KL5
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL6 CL6 6	WORD	3			D24.Bnr1.Bsl1.KL6
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL7 CL7 7	WORD	3			D24.Bnr1.Bsl1.KL7
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL8 CL8 8	WORD	3			D24.Bnr1.Bsl1.KL8
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL9 CL9 9	WORD	3			D24.Bnr1.Bsl1.KL9
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL10 CL10 10	WORD	3			D24.Bnr1.Bsl1.KL10
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL11 CL11 11	WORD	3			D24.Bnr1.Bsl1.KL11
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL12 CL12 12	WORD	3			D24.Bnr1.Bsl1.KL12
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL13 CL13 13	WORD	3			D24.Bnr1.Bsl1.KL13
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL14 CL14 14	WORD	3			D24.Bnr1.Bsl1.KL14
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL15 CL15 15	WORD	3			D24.Bnr1.Bsl1.KL15
[D]24.[Bnr Bl]<1..96>.[Bsl Typ]<1..3>.KL16 CL16 16	WORD	3			D24.Bnr1.Bsl1.KL16

Table 35. Format of Variable Name (continuation).

Format of Variable Name	TYPE	Number of Parameter Refresh	Status	Record	Example
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL17 CL17 17	WORD	3			D24.Bnr1.Bsl1.KL17
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL18 CL18 18	WORD	3			D24.Bnr1.Bsl1.KL18
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL19 CL19 19	WORD	3			D24.Bnr1.Bsl1.KL19
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL20 CL20 20	WORD	3			D24.Bnr1.Bsl1.KL20
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL21 CL21 21	WORD	3			D24.Bnr1.Bsl1.KL21
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL22 CL22 22	WORD	3			D24.Bnr1.Bsl1.KL22
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL23 CL23 23	WORD	3			D24.Bnr1.Bsl1.KL23
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL24 CL24 24	WORD	3			D24.Bnr1.Bsl1.KL24
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL25 CL25 25	WORD	3			D24.Bnr1.Bsl1.KL25
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL26 CL26 26	WORD	3			D24.Bnr1.Bsl1.KL26
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL27 CL27 27	WORD	3			D24.Bnr1.Bsl1.KL27
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL28 CL28 28	WORD	3			D24.Bnr1.Bsl1.KL28
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL29 CL29 29	WORD	3			D24.Bnr1.Bsl1.KL29
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL30 CL30 30	WORD	3			D24.Bnr1.Bsl1.KL30
[D]24.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.KL31 CL31 31	WORD	3			D24.Bnr1.Bsl1.KL31
[D]25.[Bnr Bl <1..96>.[Bsl Typ] <1..3>.Kl c <1..31>	WORD	3			D25.Bnr1.Bsl1.Kl1
[D]26.[Bnr Bl <1..96>	DWORD	3			D26.Bnr1
[D]26.[Bnr Bl <1..96>.TOT TOTAL h hhhhmm hhhhmm	DWORD	3			D26.Bnr1.TOT
[D]26.[Bnr Bl <1..96>.ACT A aaaamm aaaaamm	DWORD	3			D26.Bnr1.ACT
[D]26.[Bnr Bl <1..96>.CNT u uuu	WORD	3			D26.Bnr1.CNT
[D]27.[Bnr Bl <1..96>	DWORD	3			D27.Bnr1
[D]28.[Wnr <1..52>.[Knr ch] <1..48>.Wsl <1..3>	FLOAT	5	Yes		D28.Wnr1.Knr1.Wsl1
[D]28.[Wnr <1..52>.[Knr ch] <1..48>.Wsl <1..3>.F VAL	FLOAT	5			D28.Wnr1.Knr1.Wsl1.F

Table 36. Format of Variable Name (continuation).

Status	Format of Variable Name	TYPE	Number of Parameter Refresh	Record	Example
	[D]28.[Wnr]<1..52>.[Knr ch]<1..48>.Wsl<1..3>.TIM TIME	WORD	5		D28.Wnr1.Knr1.Wsl1.TIM
	[D]28.[Wnr]<1..52>.[Knr ch]<1..48>.Wsl<1..3>.SEC	WORD	5		D28.Wnr1.Knr1.Wsl1.SEC
	[D]29.<1..16>.day	WORD	4		D29.1.day
	[D]29.<1..16>.year	WORD	4		D29.1.year
	[D]29.<1..16>.YSEC	DWORD	4		D29.1.YSEC
	[D]29.<1..16>.DSEC	DWORD	4		D29.1.DSEC
	[D]30	DWORD	9		D30
	[D]31.s	WORD	Lack		D31.s
	[D]31.p	WORD	Lack		D31.p
Yes	[D]32.[Egnr]<1..100>.Lnr no	WORD	Lack		D32.Egnr1.Lnr
Yes	[D]32.[Egnr]<1..100>.Knr ch	WORD	10		D32.Egnr1.Knr
Yes	[D]32.[Egnr]<1..100>.Hk	WORD	10		D32.Egnr1.Hk
Yes	[D]32.[Egnr]<1..100>.Gk	WORD	10		D32.Egnr1.Gk
Yes	[D]32.[Egnr]<1..100>.[F VAL]	FLOAT	10		D32.Egnr1.F
Yes	[D]32.[Egnr]<1..100>.time t	DWORD	10		D32.Egnr1.time
	[D]33.[Knr ch]<1..48>.[F VAL]	FLOAT	2		D33.Knr1.F
	[D]34.[Knr ch]<1..48>.[F VAL]	FLOAT	2		D34.Knr1.F
Yes	[D]35.[Knr ch]<1..48>	FLOAT	2		D35.Knr1
	[D]35.[Knr ch]<1..48>.[F VAL]	FLOAT	2		D35.Knr1.F
	[D]35.[Knr ch]<1..48>.S STS STA	WORD	2		D35.Knr1.S
	[D]35.[Knr ch]<1..48>.int i	WORD	2		D35.Knr1.int
	S1.start	WORD	N/A		S1.start
	S1.end	WORD	N/A		S1.end
	S2.start	WORD	N/A		S2.start
	S2.end	WORD	N/A		S2.end
	S3.start	WORD	N/A		S3.start
	S3.end	WORD	N/A		S3.end
	S4.start	WORD	N/A		S4.start
	S4.end	WORD	N/A		S4.end
	S5.start	WORD	N/A		S5.start
	S5.end	WORD	N/A		S5.end
	X1	DWORD	N/A	Yes	X1
	X2	DWORD	N/A	Yes	X2
	X3	DWORD	N/A	Yes	X3
	X4	DWORD	N/A	Yes	X4
	X5	DWORD	N/A	Yes	X5
	X6	DWORD	N/A	Yes	X6
	X7	DWORD	N/A	Yes	X7
	X8	DWORD	N/A	Yes	X8
	X9	DWORD	N/A	Yes	X9
	X10	DWORD	N/A	Yes	X10

Table 37. List of Data Statuses.

Number	Status Character According to Protocol	Description Following the Protocol
0	A	Anlage AUS – Device OFF
1	S	Störung EIN – Failure ON
2	W	Wartung – Maintenance
3	w	Wartung manuell – Manual maintenance
4	T	Test
5	P	Plausibilität AUS – Plausibility OFF
6	M	Verrechnungsfehler – Allocation error
7	E	Ersatzwertsteuerung EIN – Replacement value control ON
8	s	Ersatzwertsteuerung Störung – Failure of replacement value control
9	u	ungültig Anfahrbetrieb – invalid startup
10	U	ungültig (durch Anlage-AUS oder Klassenblockwechsel) – invalid (by device OFF or class block changes)
11	*	nicht belegt – not occupied
12	?	unknown status
13	*****	No data (only for D28 and D32)

Historical Data

An access to historical data is possible for the D28 type. The data are available from the current day beginning (maximum 52 values). The data for the last hour of the previous day are available only in the period 23:59-00:05 (circa). It means that a pause in communication in this period results in an irreparable loss of values for the last hour of a day. The current values of the data (integral) should be obtained by using a D28 variable with the parameter *Wnr1*.

1.52 MicroSmart – driver for data exchange with MicroSmart controllers from IDEC

Driver Use

The MicroSmart protocol driver allows data with MicroSmart controllers from IDEC to be exchanged.

The transmission is executed with the use of serial ports by means of standard Asix system computer serial ports. Cooperation of the Asix system with the MicroSmart controller does not require any intervention in the driver program.

The parameterization of the MicroSmart driver is performed by the Architect application.

Declaration of Transmission Channel

The declaration of the transmission channel utilizing the MicroSmart driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MicroSmart

MicroSmart tab:

Device number – number between 0-31 or 255; number 255
can only be used when a device is connected to the
port

Port – serial port name (COM1 ... COM256)

Transmission speed in bauds

Word length

Parity checking – parity control type:

- no control
- even control
- odd control
- mark
- space

Stop bits – values: 1; 1.5; 2

Transmission speed in bauds, *Word length*, *Parity checking* and *Stop bits* are optional. If those are ignored, the following default values are adopted:

Transmission speed: 75,
Word length: 7,
Parity checking: no parity control,
Stop bits: 1

EXAMPLE

An example of channel declaration:

Name: MicroSmart
Driver: MicroSmart
Device number: 5
Port: COM1

Addressing the Process Variables

The symbolic address for variables belonging to the MicroSmart channel has the following syntax:

*variable_type**variable_index*

where:

- variable_type* - string identifying the variable type in the controller;
- variable_index* - variable index within the given type; in the case of data blocks, this is the word number in the data block.

The following marking of the process variables types are allowed:

- Q - single input status
- QB - statuses of outputs, transmitted in bytes,
- QW - statuses of inputs, transmitted in words,
- I - single input status,
- IB - statuses of inputs, transmitted in bytes,
- IW - statuses of inputs, transmitted in words,
- M - single flag status,
- MB - statuses of flags, transmitted in bytes,
- MW - statuses of flags, transmitted in words,
- R - status of single shift register bit,
- RB - statuses of shift registers, transmitted in bytes,
- RW - statuses of shift registers, transmitted in words,
- T - clock status as a byte of the following value:
 - 0 - when the time is measured
 - 1 - when the time measurement is over (timeout)
- TC - current values of clocks, transmitted in words,
- TP - setting values for clocks, transmitted in words,
- TS - clock status bytes
- TPVCS - byte of value 1, when the clock setting value was changed, and of value 0 in the opposite case
- C - counter status as a byte of the following value:
 - 0 - when the counter is counting
 - 1 - when the counting is over (countout)
- CC - current statuses of counters, transmitted in words,
- CP - setting values for counters, transmitted in words,
- CS - counter status bytes
- CPVCS - byte of value 1, when the counter setting value was changed, and of value 0 in the opposite case
- D - data word
- DD - double data word
- E - error code as a word (index may have a value of 0-5)

EXAMPLES

- M0003 - flag no. 3
- MB0005 - byte containing 8 subsequent flags starting from flag 0005
- T1 - status of clock no.1

CPVCS7 - byte determining whether the setting value of counter 7 was changed

NOTE

The last digit of the variable index I,IB,IW,Q,QB,QW,M,MB,MW is an octal digit.

1.53 MODBUS - Driver of MODBUS/RTU Protocol for MASTER Mode

Driver Use

The MODBUS driver is used for data exchange with controllers or devices operating according to the MODBUS protocol. The transmission is executed by means of serial interfaces with the use of standard serial ports of an Asix system computer.

The cooperation of Asix with the controller by using the MODBUS protocol does not require any controller's program adaptation for data exchange.

(While implementing the MODBUS protocol the RTU mode, which enables a larger capacity of the interface, was used).

The driver has the following data types implemented:

HR	(holding registers),
IR	(input registers),
CS	(coil status),
IS	(input status).

and the following functions of the MODBUS protocol:

Read Coil Status	(function 01),
Read Input Status	(function 02),
Read Holding Registers	(function 03),
Read Input Registers	(function 04),
Force Single Coil	(function 05),
Preset Single Register	(function 06),
Force Multiple Coils	(function 15),
Preset Multiple Registers	(function 16).

Parameterization of MODBUS driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MODBUS driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MODBUS

MODBUS/Channel parameters tab:

Identification

Device identifier (slave id);

Transmission parameters

- Port** - serial port name (max number of handled ports: 32);
Transmission speed in bauds - transmission speed in baud; max transmission speed is equal to 115 kBd;
Number of bits in a character - number of bits in a transmitted character;
Parity checking - parity check type (even,odd,none);
Number of stop bits - number of stop bits;

Device

- Maximal number of inputs/outputs...** - maximal number of inputs/outputs, the value of which may be transferred by devices within one cycle (max 127*16 i/o states);
Maximal number of registers... - maximal number of registers, the state of which may be transferred by the device within one cycle (max 127 registers).

ASCII mode

Enable ASCII mode for this device

Write using 'Preset Multiple Registers' function - Write the registers using the function no. 16 - *option has been introduced to enable writing in counters of N30 series of LUMEL company (firmware of these counters have only the function no. 16 implemented); by default, writing is realized with the use of the function no. 6 (Preset Single Register).*

Parameters *baud*, *character*, *parity*, *stop*, *max_i/o*, *max_register* and *buffer* are optional. In case of omitting them the following default values are taken:

- transmission speed - 9600 Bd,
- number of bits in a character - 8,
- type of parity check - parity check,
- number of stop bits - 1,
- default number of inputs/outputs - 16,
- default number of registers - 4.

EXAMPLE

An example of declaration of transmission channel working according to the MODBUS protocol is given below:

Channel / Name: CHAN1
Driver: MODBUS
Device identifier: 2
Port: COM1
Transmission speed in bauds: 9600
Number of bits in a character: 8
Parity checking: parzystość
Number of stop bits: 1
Maximal number of inputs/outputs...: 40
Maximal number of registers...: 16

The transmission channel with the logical name CHAN1 has the following parameters defined:

- MODBUS protocol using a serial interface;
- device identifier (slave id) 2;
- port COM1;
- transmission speed of 9600 Bd;
- transmitted character length - 8 bits;
- parity check;
- one stop bit.

Addressing the Process Variables

The syntax of symbolic address used for variables belonging to the MODBUS driver channel is as follows:

VARIABLE_TYPE *variable_index*

where:

- variable_type* - string identifying the variable type in the MODBUS protocol;
- variable_index* - variable index within a given type.

The following symbols of types of process variables are allowable:

- CS - Coil Status (0X reference);
- IS - Input Status (1X reference);
- HR - Holding Register (4X reference);
- IR - Input Register (3X reference);
- HRL - 2 successive Holding Registers treated as a double word in INTEL format;
- HRF - 2 successive Holding Registers treated as a floating-point number in INTEL format;
- HRLM - 2 successive Holding Registers treated as a double word in MOTOROLA format;
- HRFM - 2 successive Holding Registers treated as a floating-point number in MOTOROLA format;
- IRL - 2 successive Input Registers treated as a double word in INTEL format;
- IRF - 2 successive Input Registers treated as a floating-point number in INTEL format;
- IRLM - 2 successive Input Registers treated as a double word in MOTOROLA format;
- IRFM - 2 successive Input Registers treated as a floating-point number in MOTOROLA format.

EXAMPLES

- CS22 - Coil 22
- IS197 - Input 197
- HR118 - Holding Register 118
- IR25 - Input Register 25

The MODBUS driver is loaded as a DLL automatically.

Considering the appearance of controllers using 32-bit registers, the MODBUS driver was extended with the support of 32-bit registers HR and IR:

- HR32L - 32-bit register HR of DWORD type (requires a calculation function based on DWORD, e.g. NOTHING_DW);

- HR32F - 32-bit register HR of FLOAT type (requires a calculation function based on FLOAT, e.g. NOTHING_FP);
- IR32L - 32-bit register of DWORD type (requires a calculation function based on DWORD, e.g. NOTHING_DW);
- IR32F - 32-bit register of FLOAT type (requires a calculation function based on FLOAT, e.g. NOTHING_FP).

EXAMPLE

X1, register HR no 10 as DWORD, HR32L10, CHAN32, 1, 1, NOTHING_DW
 X2, register IR no 20 as FLOAT, IR32F20, CHAN32, 1, 1, NOTHING_FP

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to MODBUS driver.

Driver parameters tab:

Number of repetitions

Meaning the item allows to define maximal number of trials to do the command in case of transmission errors.
 Default value - by default, max. 3 repetitions are executed.
 Parameter:
number - number of repetitions.

Transmission delay

Meaning - the item allows to declare a time interval between the end of receiving the answer and sending the successive query to the remote device.
 Default value - by default, the item assumes a value of transmission time of 3,5 characters.
 Parameter:
number - time; the maximal value is equal to 55 ms.

Block read

Option value: **NO/YES[,slave1, slave2, ... slaven]**

Meaning - the item enables to set an operation mode, in which values of registers and coils are read individually (the function of block data reading is not used). It is valid for ALL the variables supported by the driver.
 Default value - by default, the mode of block data reading is used.

Parameters:

- NO,slave1, slave2, ... slaven* - numbers of slaves the variable values will be read from one by one (without block read);
- YES,slave1, slave2, ... slaven* - numbers of slaves the variable values will be read from by means of block read.

Driver parameters 2 tab:

Timeouts of receive operation

Meaning - the item allows to specify a maximal waiting time for arriving the first character of an answer from a specified remote device. After passage of this time it is assumed that the device under consideration does not work correctly and the transmission session ends with an error.

Default value - by default, it is assumed that the maximal waiting time for the first character of an answer is equal to 1000 milliseconds.

Parameter:

slave_no

- number of slave placed in the declaration of the transmission channel using the MODBUS protocol;

time

- ber from a range of 100 - 65000 milliseconds.

Timeouts of receiving successive characters

Meaning - the item allows to specify a maximal waiting time for arriving the successive character of the answer from a specified remote device. After passage of this time it is assumed that the device under consideration does not work correctly and the transmission session ends with an error.

Default value - by default, it is assumed that the maximal waiting time for the successive character of the answer is equal to 100 milliseconds.

Parameter:

slave_no

- slave no. placed in the declaration of transmission channel using the MODBUS protocol;

time

- number from a range of 10 - 2000 milliseconds.

Turning off AsComm module

Option value: **NO/YES**

Meaning - don't use AsComm module for initialization of the connections. AsComm module should be entered only in case of using switched line connections.

Default value - Yes.

Driver parameters - diagnostics tab:

Log file

Meaning - the item allows to define a file where all diagnostic messages of MODBUS driver and information about the contents of telegrams received and sent by the MODBUS driver will be written. If the item does not define the full path, then the log file will be created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

Parameter:

log_file_name

Log file size

Meaning - determines the log file size in MB.

Default value - 1 MB.

Parameter:

number

- number in MB.

Log of telegrams

Meaning - the item allows to write to the log file (declared by using the item *Log file*) the contents of telegrams sent and received by the MODBUS driver within the reading/writing process variables. Writing the contents of telegrams to the log file should be used only while the Asix start-up.

Default value - by default, the contents of telegrams are not written to the log file.

Connection by Means of Modem

EXAMPLE

The MODBUS protocol may also exchange data by means of a modem connection.

The MODBUS driver channel is a client of server AsComm named MODBUS:n, where *n* is a number of the serial port.

If the channel declaration is as follows:

Channel name: logical_name

Channel driver: Modbus

Device identifier: 4

Port: COM3

the name of client will be 'MODBUS:3'

To establish the communication with AsComm it is important to set up the **Switched line** parameter:

Architect > *Fields and Computers* > *Current data* module > declared channel parameters > **AsComm server client** tab

If the modem is connected to an other port than COMn, then you should give the number of this port by means of the parameter **Modem port** or specify the modem name by means of the parameter **Modem name**. You should also give a telephone number and define other parameters required. If MODBUS driver has to communicate with many controllers by means of the same modem, then one should define suitable number of channels assuming the parameter **Modem port** as a virtual transmission channel and specify for each channel an appropriate telephone number.

EXAMPLE

Channel declarations:

Name: Chan1

Driver: MODBUS

Device identifier: 1

Port: COM11

Transmission speed in bauds: 9600

Number of bits In a character: 8

Parity checking: none

Number of stop bits: 1

Maximal number of inputs/outputs: 16

Maximal number o registers: 16

Declaration of 'Chan1' as AsComm server client:

Switched line / Use a modem for connection initialization – the parameter set up
Define modem by name: US Robotics

Communication Drivers

Phone number: 11111111

*Name: Chan2
Driver: MODBUS
Device identifier: 1
Port: COM12
Transmission speed in bauds: 9600
Number of bits In a character: 8
Parity checking: none
Number of stop bits: 1
Maximal number of inputs/outputs: 16
Maximal number o registers: 16*

Declaration of 'Chan2' as AsComm server client:

*Switched line / Use a modem for connection initialization – the parameter set up
Define modem by name: US Robotics
 Phone number: 22222222*

In the example above Chan1 will communicate with a controller placed under the telephone number 11111111, and the Chan2 with a controller placed under the telephone number 22222222. The US Robotics modem will be used. The **Modem name** parameter may be replaced by the parameter **Modem port**, which specifies the number of the serial port to which the modem is connected.

You should notice the given above description of using the MODBUS driver on switched links does not include the modem parameterization. The modem configuration depends on types of used modems.

1.54 MODBUS_TCPIP - Driver of MODBUS_TCP/IP Protocol for OPEN MODBUS/TCP Mode

Driver Use

The driver MODBUS_TCPIP is designed for data exchange between the Asix system and other computers/devices with use of the MODBUS protocol realized via an Ethernet network with the TCP/IP protocol. The default operating mode of the MODBUS_TCPIP driver is the Open Modbus/TCP mode, developed on the base of specification titled: "*OPEN MODBUS/TCP Specification*" Release 1.0, issued 29.03.1999 by the firm Schneider Electric. The driver allows simultaneous operation in both SLAVE and MASTER modes.

Parameterization of MODBUS_TCPIP driver is performed with the use of Architect module.

SLAVE Mode

The SLAVE mode consists in executing the read/write commands for the ASMEN data sent from other computers/devices, which are defined as MASTER in the MODBUS network. It is allowed to connect many computers operating as MASTER in the network.

The ASMEN variables are accessed in the SLAVE mode as MODBUS variables from one of the types specified below:

- CS (coil status),
- HR (holding registers),
- IR (input registers).

Declarations of assignment (mapping) of the ASMEN variables to the MODBUS variables are placed by the application designer in text files, which are read by the driver during starting the Asix system (see: an example on the end of the chapter).

To read the ASMEN variables the following functions of the MODBUS protocol are implemented:

- Read Coil Status (function 01),
- Read Holding Registers (function 03),
- Read Input Registers (function 04).

To write the ASMEN variables the following functions of the MODBUS protocol are used:

- Preset Single Coil (function 05),
- Preset Single Register (function 06),
- Preset Multiple Coils (function 15),
- Preset Multiple Registers (function 16).

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MODBUS_TCPIP driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: *MODBUS_TCPIP*

MODBUS_TCPIP/Mode tab:

Mode: Slave

MODBUS_TCPIP/Channel parameters tab:

Identification

***Asix application number in MODBUS network
Computer number***

NOTE *It is allowed to declare only one transmission channel executing the SLAVE mode.*

SLAVE Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to MODBUS_TCPIP driver. The *Slave* mode has to be switched on on *Modbus_TCPIP > Mode* tab).

Driver parameters tab:

IP address

Meaning - IP address through which the driver communicates with the controller.

Default value - the driver uses the IP provided by Windows operation system.

Refreshing Variables Accessed by the Driver

The driver may use one of two strategies of handling the variables exported from the Asix system.

The strategy I (default) assumes that all the variables, the names of which were declared in the file with mapping declarations, are periodically read by a separate driver thread from the ASMEN cache and placed in a common accessible driver buffer. Threads supporting connection with clients build response telegrams on the basis of this buffer content, without necessity to access to the ASMEN API.

The period of reading from the ASMEN cache to shared driver buffer is configured by means of the option:

Data buffer update period

Meaning - enables declaring the period of reading from the ASMEN cache to shared driver buffer.

Default value - by default the period of reading is equal to 1 second.

Parameter:

number - period of reading from the ASMEN cache in seconds.

The strategy II (option) assumes that each thread takes data from the ASMEN cache individually in response to the queries sent by the client. As a result the thread reads from the ASMEN cache only these data, which are required by the client at that moment.

The strategy II should be also activated when Asix uses the driver only to import data from an other system. In such mode periodical refreshing of contents of driver buffers has no sense.

The strategy II is activated by means of the item:

Reading on request

Values of variables, which are in the ASMEN cache in the moment of executing the read command, may be out-of-date because in the period preceding the client query the refreshing of variables under consideration might be inactive (the Asix system was just run or none of ASMEN clients was interested in refreshing these variables). Therefore the thread preparing a transfer for the client checks the time stamp actually accessed variables values. If the time stamp value is not contained in the range of *credibility_time* specified in the variable mapping declaration, then the thread reads the variable value directly from the driver and just then returns the answer to the client.

By default, the driver realizes the strategy I with a frequency of updating the content of common accessible buffer equal to 1 second.

Driver parameters - log tab:

Log file

Meaning - the item allows to define a file where all diagnostic messages of the driver in the SLAVE mode and the information about contents of telegrams received/sent by the driver in this mode are written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.
file name - log file name.

Log of telegrams

Meaning - the item allows to write to the log file the contents of telegrams sent between the driver working in the SLAVE mode and network clients. Writing the contents of telegrams to the log file should be used only while the Asix start-up.

Default value - by default, the driver does not write the contents of telegrams to the log file.

Log file size

Meaning - the item allows to specify the log file size.

Default value - by default, the item assumes that the log file has a size of 1 MB.

Parameter:
number - log file size in MB.

Driver parameters tab:

Declaration of MODBUS RTU operation mode

Meaning - the support of stations operating according to the specification MODBUS RTU requires to use an item.

Parameter:
IP address - address of the station operating as the master.
OVATION

IP address with **Read only option**

Meaning - to the Asix system only the clients which have an access permission may connect.

Default value - by default, each client may read and write Asix system variables. It is possible to limit clients access only for reading the variables by using the read only option. In this situation an attempt to write is acknowledged by sending a response telegram of the exception type with a code 1 which signifies an illegal function.

Parameter:
IP address - IP address of the client accepted by the driver;
Read only - option allowing the client to read data only.

Number of client declarations not limited.

Example:

A declaration of the client with IP address 10.10.10.84 with unrestricted access to the Asix system:

IP address: 10.10.10.84

Connection timeout declared for individual IP address

Meaning - the maximal time, which may elapse between successive queries from client (connection timeout), is declared for each connected client. After exceeding the connection timeout, the connection with the client is broken. In case of clients, for which the timeout declaration of is not defined, a default value of 5 minutes is assumed.

Parameter:
IP address - IP address of a client,
Timeout - timeout in minutes

Example:

The declaration of 10-minute connection timeout for the client with the address IP 10.10.10.84:

Connection timeout:
P address: 10.10.10.84
Timeout: 10

Transferring Status of Variables in Separate Registers and Coils

Meaning	<p>- the MODBUS protocol does not use a status with reference to transferred values of registers and coils. For this reason the status may be joined to the standard MODBUS transfer only in an artificial way. The driver under consideration may transfer the Asix variable status by placing it in the next element following one which contains the variable value. For registers it is the next register, for coils – the next coil. In case of registers the space for status is sufficient (16 bits), for coils the status must be limited to two states (0 - good , 1 - bad).</p> <p>By example, if the variable value is transferred as the register 10, then the status is transferred as the register 11. If the coil state is transferred in the bit no. 5, then the coil status is transferred in the bit no. 6.</p> <p>The applied method allows to send the variable value and its status in the same telegram which ensures the data compactness.</p> <p>The mode of status transferring is declared individually for each client, separately for registers and for coils. Declarations enable:</p> <ul style="list-style-type: none">- transferring status of registers,- transferring status of coils.
Default value for coils.	<p>- by default, the status is not transferred either for registers or for coils.</p>
Parameters:	
Registers status	<p>- transferring status of register,</p>
Coils status	<p>- transferring status of coils,</p>
IP address	<p>- client IP address.</p>

Transferring Status of Variables Without Using Separate Registers or Coils

Meaning	<p>- in case of work without transferring statuses in separate registers or coils, a problem of transferring the information that the variable value is invalid (e.g. errors of communication with data source) arises. The convention is assumed, according to which it is possible to declare the value transferred in case of incorrect status for registers (by default, 0xffff).</p>
Parameter:	
IP address	<p>- client IP address;</p>
Register error status	<p>- 16-bit value (HEX), transferred in case of an incorrect variable status.</p>

NOTE *In case of coils, because of a binary character of a variable, there is no possibility to transfer the information about the status in such way that it might differ from the correct variable value. Considering it you should also be assumed as a rule that in the work mode without status transferring the registers should be used.*

Declaration of Mapping MODBUS Variables to the ASMEN Variables

Declarations of mappings of MODBUS variables to ASMEN variables are placed in text files. Localization of files with d mapping declarations is specified by means of the item:

Meaning	<p>- localization of files with declarations of mappings.</p>
Parameter:	
IP address	<p>- client IP address;</p>

Map file - name of a file containing declaration of mappings.

The purpose of connection of a file with a client IP address is to enable individual clients an independent way of mapping.

The number of items with declarations of mapping files is unlimited.

Because the MODBUS protocol does not use any names of variables but numbers of registers and coils, it is necessary to prepare configuration files for mapping MODBUS variables to ASMEN variables.

The declaration of mapping a MODBUS variable to an ASMEN variable is as follows:

Asix_name, MODBUS_address [, credibility_time]

where:

- Asix_name* - process variable name of the Asix system; it must have its equivalent amongst names of process variables in ASMEN files;
- MODBUS_address* - type and index of a MODBUS variable, by means of which the process variable value is accessed; depending on the MODBUS variable type, its value is transferred as one bit, one register (a variable of SHORT or USHORT type) or two successive registers (a variable of type FLOAT, LONG or ULONG);
- validity_time* - time interval (in seconds), in which the variable value is assumed to be correct. This time is defined as a difference between the time stamp of a query from client and time stamp of an actually accessed variable value. By default, it is equal to 5.

An accepted format of the MODBUS address is as follows:

HR<reg_no> or IR<reg_no> or CS<coil_no>

where:

- reg_no* - number of register HR or IR;
- coil_no* - number of coil.

The number of MODBUS registers used for transferring the variable value is closely related to the ASMEN variable type:

- for WORD type variables it is one register or one coil;
- for INT16 type variables it is one register;
- for DWORD, LONG or FLOAT type variables it is two registers;

or in case of status transfer:

- for WORD type variables it is two registers or two coils;
- for INT16 type variables it is two registers;
- for DWORD, LONG or FLOAT type variables it is two registers.

The method of register content interpretation for FLOAT, LONG and ULONG type numbers of MODBUS:

First register																Second register															
1	1	1	1	1	1	9	8	7	6	5	4	3	2	1	0	1	1	1	1	1	1	9	8	7	6	5	4	3	2	1	0
5	4	3	2	1	0											5	4	3	2	1	0										
Mantissa – less significant bits																Z		Exponent													

Figure 1. Format FLOAT (IEEE 745).

First register																Second register															
1	1	1	1	1	1	9	8	7	6	5	4	3	2	1	0	1	1	1	1	1	1	9	8	7	6	5	4	3	2	1	0
5	4	3	2	1	0											5	4	3	2	1	0										
Z		More significant bits														Less significant bits															

Figure 2. Format LONG.

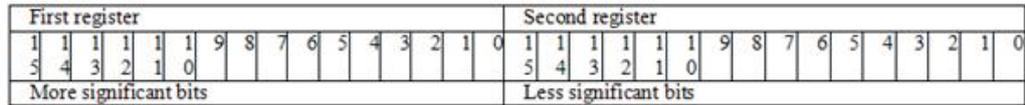


Figure 3. Format ULONG.

EXAMPLE

In ASMEN the variables X_WORD, X_INT, X_DWORD, X_LONG, X_FLOAT are defined as follows:

- X_WORD, ED120.2, CHAN1, 1, 1, NOTHING
- X_INT, ED130.2, CHAN1, 1, 1, NOTHING_INT
- X_DWORD, EL140.2, CHAN1, 1, 1, NOTHING_DW
- X_LONG, EL150.2, CHAN1, 1, 1, NOTHING_LONG
- X_FLOAT, EG160.2, CHAN1, 1, 1, NOTHING_FP

Mapping the values of these variables to a continuous area of registers beginning from the register HR1 (without status transferring) is as follows:

- X_WORD, HR1
- X_INT, HR2
- X_DWORD, HR3
- X_LONG, HR5
- X_FLOAT, HR7

Mapping the values of these variables to a continuous area of registers beginning from the register HR1 (with status transferring) is as follows:

- X_WORD, HR1
- X_INT, HR3
- X_DWORD, HR5
- X_LONG, HR8
- X_FLOAT, HR11

MASTER Mode

The MASTER mode is the MASTER function implementation in the MODBUS network protocol (in RTU mode) based on ETHERNET with the TCP/IP protocol.

The MASTER mode has implemented the following data types:

- CS - Coil Statuses;
- IS - Input Statuses;
- HR - Holding Registers;
- IR - Input Registers;
- HRL - 2 successive Holding Registers treated as a double word in INTEL format;
- HRF - 2 successive Holding Registers treated as a floating-point number in INTEL format;
- HRLM - 2 successive Holding Registers treated as a double word in MOTOROLA format;
- HRFM - 2 successive Holding Registers treated as a floating-point number in MOTOROLA format;
- IRL - 2 successive Input Registers treated as a double word in INTEL format;
- IRF - 2 successive Input Registers treated as a floating-point number in INTEL format;
- IRLM - 2 successive Input Registers treated as a double word in MOTOROLA format;

IRFM - 2 successive Input Registers treated as floating-point number in MOTOROLA format.

EXAMPLES

CS22 - Coil 22
IS197 - Input 197
HR118 - Holding Register 118
IR25 - Input Register 25

and the following functions of the MODBUS protocol:

Read Coil Statuses (function 01),
Read Input Statuses (function 02),
Read Holding Registers (function 03),
Read Input Registers (function 04),
Preset Single Coil (function 05),
Preset Single Register (function 06),
Preset Multiple Registers (function 16 limited to writing a pair of registers).

The MODBUS driver is loaded as a DLL automatically.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MODBUS_TCPIP driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MODBUS_TCPIP

MODBUS_TCPIP/Mode tab:

Mode: Master

MODBUS_TCPIP/Channel parameters tab:

Port number - number of the port by means of which the connection with a slave type device numbered *number* will be executed;
IP_address of the device - IP address of the device;
Device number - number of the slave type device supported in this channel (by default, 1);
Maximal number of binary variables... - maximal number of binary signals in one query (by default, 32*8);
Maximal number of registers... - maximal number of registers in one query (by default, 127).

For each slave type device supported in the MASTER mode a separate declaration of transmission channel is required.

MASTER Mode Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to MODBUS_TCPIP driver (*Modbus_TCPIP > Driver parameters* tab). The *Master* mode has to be switched on on *Modbus_TCPIP > Mode* tab).

Driver parameters tab:

IP address

Meaning - IP address through which the driver communicates with the controller.

Default value - the driver uses the IP provided by Windows operation system.

Declaration of Startup Time

Establishing connections with slaves is executed on the startup stage of the driver. The default time of startup duration is equal to 3 seconds. It may be modified by means of the item:

Startup time

Meaning - startup time of the driver, during which connections are established with slaves.

Default value - 3 s.

Defining - manual.

Driver parameters - log tab:

Log file

Meaning - the item allows to define a file to which all diagnostic messages of the driver generated in the MASTER mode and the information about the contents of telegrams sent/received in this mode by the driver are written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

Defining - manual.

Parameter:
file_name - log file name.

Log of telegrams

Meaning - the item allows to write to the log file (declared by means of the item LOG_FILE) the contents of telegrams sent between the driver operating in the MASTER mode and slave type devices. Writing the contents of telegrams should be used only while the Asix start-up.

Default value - by default, the driver does not write the contents of telegrams to the log file.

Defining - manual.

Log file size

Communication Drivers

Meaning - the item allows to specify a log file size.
Default value - by default, the log file size is equal to 1 MB.
Parameter:
 number - log file size in MB.

Driver parameters tab:

Declaration of MODBUS RTU operation mode

Meaning - the support of stations working according to the specification MODBUS RTU requires to use the item.

Parameter:
 IP_address - address of the station being a slave.
 OVATION

Declaration of receiving timeout

Meaning - for each slave type device a maximal time, which may elapse between sending a query and receiving an answer (so called receiving timeout) is determined. After exceeding the timeout the connection is broken (and re-established). The timeout value is determined individually for each slave type device.

Default value - in case of slave type devices, for which any timeout declaration is not defined, it is assumed 5 seconds by default.

Defining - manual.

Parameter:
 Client IP address - IP address of a slave type device,
 Timeout - timeout value expressed in seconds.

Additional Driver Parameter (MASTER Mode)

The parameter is declared in the *Miscellaneous* module, the *Directly entered options* tab.

- Section name: MODBUS_TCPIP_MASTER**
- Option name: WRITE_WITH_FUNCTION_16**
- Option value: YES/NO**

Meaning: Setting the function to the value of YES initiates that writing a single register HR is performed by the function 16.

Default value: NO.

Additional Channel Parameter (MASTER Mode)

- Section name: *channel_name***
- Option name: WRITE_WITH_FUNCTION_16**
- Option value: YES/NO**

Meaning: Setting the function to the value of YES initiates that writing a single register HR is performed by the function 16.

Default value: NO.

1.55 MODBUSSLV - Driver of MODBUS/RTU Protocol for SLAVE Mode

Driver Use

The MODBUSSLV driver is used to access the process variables values of the Asix system to other systems by means of a serial interface and the MODBUS protocol operating in RTU mode. In such connection the Asix system operates as a subordinate device (SLAVE) of the MODBUS protocol.

The MODBUSSLV protocol has the following types of variables implemented:

HR (holding registers),
IR (input registers),
CS (coil status).

and the following functions of the MODBUS protocol:

Read Coil Status (function 01),
Read Holding Registers (function 03),
Read Input Registers (function 04),
Force Single Coil (function 05),
Preset Single Register (function 06),
Return Query Data (function 08, subfunction 00 00),
Force Multiple Coils (function 15),
Preset Multiple Registers (function 16).

The function *Preset Multiple Registers* is limited to write the value of one process variable of the Asix system.

The function *Return Query Data* is needed for proper cooperation of Asix system with Symphony system (ABB).

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MODBUSSLV driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MODBUSSLV

MODBUSSLV/Channel parameters tab:

Asix application number in MODBUS network - number of a remote device of the MODBUS network assigned to Asix;
Port - name of the serial port;
Transmission speed in bauds - transmission speed, max 115 kBd;
Number of bits in a character - number of bits in a character;
Parity checking - parity check type;
Number of stop bits - number of stop bits.

EXAMPLE

The declaration of the logical channel named CHAN1, which works according to the MODBUSSLV protocol and with parameters as below:

- number - 4

Communication Drivers

- port - COM1
- transmission speed - 9600 Bd
- number of bits in a character - 8
- parity check type - parity check
- number of stop bits - 1

is as follows:

Channel / Name: KANAL1
Driver: MODBUSSLV
Asix application number in MODBUS network: 1
Port: COM1
Transmission speed in bauds: 9600
Number of bits in a character: 8
Parity checking: even
Number of stop bits: 1

The MODBUSSLV driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the MODBUSSLV driver channel is as follows:

name, address [,scale] [,WITHOUT_STATUS |WITH_STATUS]

where:

<i>name</i>	- name of the Asix process variable; it must have its equivalent among process variables declared in ASMEN files;
<i>address</i>	- type and number of the register by means of which the value of process variable is accessed; depending on the process variable type its value is transferred by means of one register (WORD or INT16 type variable) or two successive registers (FLOAT or DWORD type variable); there is a possibility to convert FLOAT type variables to a INT16 type variables;
<i>scale</i>	- <i>scale</i> determines a sort of operation ('-' division) and exponent of power of 10 when scaling values (value scaling is currently available for all variable types); it is used in case of converting the value of FLOAT type variables to a INT16 type number with simultaneous scaling (multiplication or division by power of 10), for example;
<i>WITHOUT_STATUS</i>	- variable value is transferred without status;
<i>WITH_STATUS</i>	- variable value is transferred with the status - the status occupies the next register after the register assigned to the variable.

EXAMPLE

A value of the variable X1 is transferred by means of the register HR1. The variable is of FLOAT type and its value is converted to INT16. Before the conversion the variable value is multiplied by 100. Independently of the value of the item WITH_STATUS the status (occupying the RH2 register) is transferred after the variable value.

X1, HR1, 2, WITH_STATUS

The value of the variable X2 is transferred by the HR2 register. Depending on the variable type it occupies only the HR2 register (WORD or INT16 type variable) or HR2 and HR3

registers (FLOAT and DWORD type variable). The variable value is transferred without the status independently of the value of the item WITH_STATUS.

X2, HR2, WITHOUT_STATUS

The value of the X3 variable is transferred by means of the HR3 register (if the variable is of WORD or INT16 type) or HR3 and HR4 registers (if the variable is of FLOAT or DWORD type). If the value of the item WITH_STATUS is YES, then the variable X3 status is transferred in the register HR4 (WORD or INT16 type variable) or HR5 (FLOAT or DWORD type variable).

X3, HR3

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to ADAM driver.

Data file

Meaning - the item allows to declare a file name in which the declarations of mapping the process variables of Asix to the registers HR and IR of MODBUS. The section may include many DATA FILE items.

Default value - lack of default file.

Declaration of Transferring Statuses of Variables

Transferring of status

Meaning - the item allows to define globally the way of transferring the status of Asix system process variables. The value of the item equal to YES signifies that status is sent with the value of the Asix system process variable. The status is transferred in a register following the last register assigned to the process variable.

Default value - by default, the value of the item is equal to NO.

If the variable is of DWORD type and if the following declaration is given:

X1, HR3

then the variable status is transferred in the register HR5 (the X1 variable value is transferred in HR3 and HR4 registers).

If the variable X2 is of WORD type and if the following declaration is given:

X2, HR3

then the variable status is transferred in the register HR4 (the X2 variable value is transferred in the register HR3).

The *Transferring of status* item value equal to NO signifies that the process variable status is not transferred. It is possible to force the global settings by giving the component WITH_STATUS or WITHOUT_STATUS in the declaration of the process variable mapping. The declaration WITH_STATUS signifies that, irrespective of the WITH_STATUS value, the register following registers with the value of the considered variable contains the variable status. The declaration WITHOUT_STATUS signifies that, irrespective of the WITH_STATUS value, the variable status is not transferred.

Casting Variables of FLOAT Type to INT16

Data type cast

Meaning - the item equal to YES allows converting the values of FLOAT type to INT16 type. Before converting it is possible to scale the FLOAT value by multiplication by a power of 10. The power value is given optionally in the declaration of the ASMEN variable (component *scale*) mapping.

Default value - by default, the **Data type cast** item value is equal to NO.

The declaration:

X1, HR1, -2

signifies that the value of X1 process variable will be divided by 100, and then it will be converted to a INT16 type number accessed in the register HR1.

The declaration:

X2, HR2, 3

signifies that the value of the X2 process variable will be multiplied by 1000, and then it will be converted to a INT16 type number accessed in the HR2 register.

Frequency of Refreshing Contents of Registers

Data update period

Meaning - the values of registers are currently updated by reading data from ASMEN. The item determines a refreshing cycle (in seconds).

Default value - by default, the refreshing cycle is equal to 1 second.

Time of Answer Preparation

Reply timeout

Meaning - time of elaborating an answer (in milliseconds) is controlled by the value of the item REPLY_TIMEOUT. If in the time period passed by the REPLY_TIMEOUT item the driver is not able to prepare data required by the MASTER, then it does not send any reply.

Default value - by default, the answer preparation time is set to 200 milliseconds.

Maximal Number of Registers Given in a Query

Number of registers in a telegram

Meaning - the item determines a maximal number of registers that may be asked by MASTER in one query. If the number of registers specified in this item is too large, then the driver sends an answer of the EXCEPTION type with the code 4 (SLAVE DEVICE FAILURE).

Default value - by default, it is allowed to send queries including up to 128 registers.

Log file

Meaning - the item allows to define a file to which all diagnostic messages of the MODBUSSLV driver are written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

1.56 MPI - Driver of MPI Protocol for SIMATIC S7 PLCs

Driver Use

The MPI driver is used for data exchange with SIMATIC S7 PLCs by means of the MPI interface. The transmission is executed by serial interfaces in the V24 (RS232C) standard with use of standard serial ports of an Asix system computer.

Operation of the Asix system with the SIMATIC S7 PLCs by using the MPI interface does not require any controller's program adaptation in order to perform data exchange.

Parameterization of MPI driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MPI driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MPI

MPI/Channel parameters tab:

Port - name of the serial port;
PC Address - PC address;
Address of controller on MPI bus - controller address on the MPI bus;
Transmission speed in bauds - transmission speed in bauds;
Number of bits in a character - number of bits in a transmitted character;
Parity checking - parity check type,
Number of stop bits - number of stop bits.

The parameters *PCaddress*, *MPIaddress*, *baud*, *character*, *parity*, *stop* are optional parameters. In case of omitting them the default values are taken:

- transmission speed - 19200 Bd,
- number of bits in a character - 8,
- type of parity check - odd parity check,
- number of stop bits - 1,
- address of S7 controller - 2,
- address of PC - 0.

EXAMPLE

Exemplary options declaring the transmission channel operating according to the MPI protocol are given below:

Channel / Name: CHAN2
Driver: MPI
Port: COM1
Adres PC: 0
Address of controller on MPI bus: 2
Transmission speed in bauds: 19200
Number of bits in a character: 8
Parity checking: kontrola nieparzystości
Number of stop bits: 1

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the MPI driver channel is as follows:

VARIABLE_TYPE *variable_index*

where:

VARIABLE_TYPE - string identifying the variable type in the MPI protocol;
variable_index - variable index within a given type.

The following symbols of process variable types are allowable (the range of variable indexes is specific for different types of controllers):

EA	- output bytes,
EAW	- output words,
EAD	- output double words,
EE	- input bytes,
EEW	- input words ,
EDI	- 16-byte words in INTEL convention,
EDD	- input double words,
EM	- bytes of flags,
EMW	- words of flags,
EMD	- double words of flags,
EZ	- counter word,
ET	- timer word,
ED	- word in a data block,
EL	- double word in a data block,
ER	- floating-point number in a data block.

In case of data in a data block, after having given the type (EL or ED), you should give the data block number ended with a dot and then the word number.

EXAMPLES

EMW15	- word of flags 15
EE0	- input word 0
EAW8	- output word 8
ED5.3	- word DW3 in data block DB5

The MPI driver is loaded as a DLL automatically.

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to MPI driver.

Data transfer

Meaning - when the value yes is declared, transferring 32-byte data from DB is realized as a transfer of two 16-byte words; when the value no is declared, transferring 32-byte data from DB is realized as a transfer of one double word.

Default value - no.

1.57 MPS - Driver of MPS Protocol for Power Network Parameter Meters

Driver Use

The MPS driver is used for communication with MPS power network parameter meters made by OBR Metrologii Elektrycznej in Zielona Góra, by means of a serial interface.

Parameterization of MPS driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MPS driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MPS

MPS tab:

Channel parameters:
controller address,COMn

where:

COMn - is the number of the serial port to which the MPS controllers network is connected.

EXAMPLE

An example of the channel definition. In this case, the channel is a logical name of the MPS controller.

Channel / Name: MPS1
Driver: MPS
Channel parameters: 1,COM2

Names of MPS Controller Variables

A variable may be defined by means of the name *FCnn* where *nn* is a number of a variable in the controller according to the description of the controller manufacturer. It is allowed also to use symbolic names. Letter case does not matter.

Table 38. Symbolic Names of MPS Controller Variables.

FC1 - U1	FC30 - Z1
FC2 - U2	FC31 - Z2
FC3 - U3	FC32 - Z3
FC4 - I1	FC33 - R
FC5 - I2	FC34 - R1
FC6 - I3	FC35 - R2
FC7 - P	FC36 - R3
FC8 - Q	FC37 - FI
FC9 - S	FC38 - FI1
FC10 - f	FC39 - FI2
FC11 - cos	FC40 - FI3
FC12 - P15	FC41 - P1s
FC13 - P1	FC42 - P2s
FC14 - P2	FC43 - P3s
FC15 - P3	FC44 - U1m
FC16 - Q1	FC45 - U2m
FC17 - Q2	FC46 - U3m
FC18 - Q3	FC47 - I1m
FC19 - S1	FC48 - I2m
FC20 - S2	FC49 - I3m
FC21 - S3	FC50 - KsU1
FC22 - cos1	FC51 - KsU2
FC23 - cos2	FC52 - KsU3
FC24 - cos3	FC53 - KsI1
FC25 - sin	FC54 - KsI2
FC26 - sin1	FC55 - KsI3
FC27 - sin2	FC56 - Hour
FC28 - sin3	FC57 - Min
FC29 - Z	FC58 - Sec

Definition of Nominal Values

In order to improve the reading of measure values you should define nominal value of voltage, of current and of power (UL, IL, P, Q, S). These values may be given for each station. To do this you should entered in Architect in the *Miscellaneous* module, the *Directly entered options* tab:

EXAMPLE

Section name: ASMEN
Option name: MPS1
Option value: MPS,1,COM2

Section name: ASMEN
Option name: MPS2
Option value: MPS,2,COM2

Section name: MPS1
Option name: UL
Option value: 660

Section name: MPS1
Option name: IL
Option value: 100

Section name: MPS2
Option name: UL
Option value: 380

Section name: MPS2
Option name: IL
Option value: 100

Driver Configuration

MPS driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **MPS** section.
Diagnostic option:

- Section name: MPS**
- Option name: Sleep**
- Option value: YES/NO**

Meaning - yes causes a change of the manner of short time period timing.

Default value - default value is equal to no.

1.58 MSP1X - Driver of Protocol for MSP-1x ELMONTEX PLCs

Driver Use

The MSP1X driver is used for data exchange between MSP1X PLCs made by ELMONTEX and an Asix system computer. The communication is executed in the RS485 standard according to the protocol developed for MSP1X PLCs by ELMONTEX (no official specification).

Parameterization of MSP1X driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MSP1X driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MSP1X

MSP1X tab:

Channel parameters:
group_no, device_no, port [, baud]

where:

<i>group_no</i>	- number of the group to which the controller belongs;
<i>device_no</i>	- number of a controller within the group;
<i>port</i>	- port name: COM1, COM2 etc.;
<i>baud</i>	- transmission channel (by default, 9600).

Other parameters are default:

- 8 bits in a character,
- without parity check (NONE),
- 1 stop bit.

EXAMPLE

The declaration of the logical channel named CHAN1, which works according the MSP1X protocol and exchanges data with the controller with the number 1, within the group with the number 5, by means of the COM2 port, with default transmission parameters:

Channel / Name: CHAN1
Driver: MSP1X
Channel parameters: 5, 1, COM2

The MSP1X driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the MSP1X driver channel is as follows:

<type><index>

where:

type - variable type,
index - index within the type.

Symbols of variable types (the raw variable value type is given in parentheses):

AI	- Analog Input	(WORD),
AO	- Analog Output	(WORD),
BI	- Binary Input	(WORD),
BO	- Binary Output	(WORD),
PV	- Preset Value	(WORD),
PD	- Delta Preset Value	(WORD),
IS	- Binary Input Status	(WORD),
OS	- Binary Output Status	(WORD).

EXAMPLE

Examples of declarations of process variables:

X4, analog input nr 1, AI1, CHAN1, 1, 1, NOTHING
X5, binary output nr 15, BO15, CHAN1, 1, 1, NOTHING

Driver Configuration

MSP1X driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **MSP1X** section.

Section name: MSP1X

Option name: REINITIALIZATION

Option value: YES/NO

Meaning - allows to re-initiate a serial port before each communication session with the controller.

Default value - NO.

Defining - manual.

Section name: MSP1X

Option name: WRITE_DELAY

Option value: number

Meaning - declares a time interval (in milliseconds) between the data writing to the controller and the next session of data exchange with the controller.

Default value - 1200.

Defining - manual.

- ☑ **Section name: MSP1X**
- ☑ **Option name: HEADER_DELAY**
- ☑ **Option value: number**

Meaning - declares a time interval (in milliseconds) between the characters of a command sent to the controller from the Asix system.

Default value - 50.

Defining - manual.

- ☑ **Section name: MSP1X**
- ☑ **Option name: DTR_DELAY**
- ☑ **Option value: number**

Meaning - declares a time interval (in milliseconds) between sending a command to the controller and setting DTR signaling readiness for data receiving by the Asix system.

Default value - 2.

Defining - manual.

- ☑ **Section name: MSP1X**
- ☑ **Option name: UPDATE**
- ☑ **Option value: number**

Meaning - declares a time interval (in milliseconds) between the next data reading from the controller to internal driver buffers.

Default value - 5.

Defining - manual.

1.59. CtMuel - MUEL System Driver

Driver Use

CtMuel protocol driver is used to exchange data between the Asix system and a MUEL system maintenance computer. Transmission is implemented using standard RS-232 computer serial ports.

CtMuel driver configuration is performed using the Architect application.

Transmission Channel Declaration

Declaration of the transmission channel utilizing the CtMuel driver requires adding a channel with the following parameters to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: Muel

Muel tab:

Channel parameters:

Port=number

where:

Port - Serial port number

Transmission parameters are fixed at:

baud rate of 9600 Bd,
8-bit character
no parity,
1 stop bit.

EXAMPLE

Example of transmission channel declaration:

Port=1

Declaration of Variables

The general syntax of the process variable symbolic address is as follows:

<object><type>[.<index>]

where:

object - the object number
type - The variable type,
index - Index within the type;

Variable type symbols (raw variable value type is given in parentheses):

The types of variables with an index (read):

AI - the voltage on the analogue input, index range 1 - 4 (FLOAT)
DI - digital input state, index range 1 - 8 (WORD)
DO - digital input state, index range 1 - 4 (WORD)

The types of variables without an index (read):

T - temperature (WORD)
STSA - A status value (WORD)
BLTS - B status value (WORD)
DI - status of all digital inputs (WORD)
DO - status of all digital outputs (WORD)
CON - The connection status of the object (WORD)

Examples of variable declarations for an object No 38:

JJ_11, AI No. 1, 38.AI.1, CHAN1, 1, 1, NOTHING_FP
JJ_13, DI No. 2, 38.DI.2, CHAN1, 1, 1, NOTHING
JJ_14, DO No. 3, 38.DO.3, CHAN1, 1, 1, NOTHING
JJ_15, temperature, 38.T, CHAN1, 1, 1, NOTHING
JJ_16, all DI, 38.DI, CHAN1, 1, 1, NOTHING
JJ_17, all DO, 38.DO, CHAN1, 1, 1, NOTHING
JJ_18, A status, 38.STSA, CHAN1, 1, 1, NOTHING
JJ_19, B status, 38.STSB, CHAN1, 1, 1, NOTHING
JJ_20, connection status, 38.CON, CHAN1, 1, 1, NOTHING

Driver Parameters

The CtMuel driver parameters are declared in the *Miscellaneous* module, in the *Directly Entered options* tab.

The driver configuration is done using a separate section called **CTMUEL**.

- Section name: CTMUEL**
- Option name: LOG_FILE**
- Option value: file_name**

Purpose: the text log file to which driver status messages are stored is used for diagnostic purposes.

The default value: By default the log file is not created.

- Section name: CTMUEL**
- Option name: LOG_FILE_SIZE**
- Option value: number**

Purpose: this option is used to determine the size of the log file defined using LOG_FILE item.

Option value: *number* - the size of the log file in MB.

The default value: the default log file size is 10 MB.

- ☑ **Section name: CTMUJEL**
- ☑ **Option name: LOG_OF_TELEGRAMS**
- ☑ **Option value: YES | NO**

Purpose: the option allows writing the contents of messages communicated between the driver and the controllers to the log file (declared using the LOG_FILE item)

The item in question should only be used during the Asix system start-up.

The default value: default value of the option is NO.

- ☑ **Section name: CTMUJEL**
- ☑ **Option name: REFRESH_PERIOD**
- ☑ **Option value: number**

Purpose: this option is used to specify the maximum time (in seconds) after which the driver will read the data independently from the station. This option can be used in version 1.1.2.

The default value: By default, the time between readings is 30 seconds.

Option value:

number - The time between readings in seconds

EXAMPLE

Sample driver parameterization

- ☑ *Section name: CTMUJEL*
- ☑ *Option name: LOG_FILE*
- ☑ *Option value: d:\tmp\CtMuel\muel.log*

- ☑ *Section name: CTMUJEL*
- ☑ *Option name: LOG_FILE_SIZE*
- ☑ *Option value: 20*

- ☑ *Section name: CTMUJEL*
- ☑ *Option name: LOG_OF_TELEGRAMS*
- ☑ *Option value: TAK*

1.60 MultiMuz - Driver for MultiMUZ Microprocessor-Based Security Devices from JM-Tronik

Driver Use

The MultiMuz protocol driver is used to exchange data between the Asix system and te MultiMUZ microprocessor-based security devices manufactured by Warsaw-based JM-Tronik. Communication is executed with the use of serial interfaces.

The driver executes the following functions:

- reading current statuses and measurements,
- reading events and reporting them to the Asix alarms system,
- reading troubles and logging them in the database in the format of the DataLogger application, developed by ASKOM Sp. z o.o.

The driver supports the following types of MultiMuz devices:

CR 001

LR 001
LR 001
LR 064
LR 067
LZ 001
PR 001
SR 001
SR 067
TR 001

The support of other MultiMuz devices requires changes in the driver code.

The parameterization of the MultiMuz driver is performed by the Architect program.

Declaration of Transmission Channel

The declaration of the transmission channel operating according to MultiMuz protocol requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: *MultiMuz*

MultiMuz/Channel parameters tab:

Identification

Device number
Device type – IDs of the supported types:
1 – CR 001
2 – LR 001

- 3 – LR 064
- 4 – LR 067
- 5 – LZ 001
- 6 – PR 001
- 7 – SR 001
- 8 – SR 067
- 9 – TR 001

Transmission parameters

Port – serial port number (COM)

Alarms offset

Offset added to the calculated alarm number sent to the Asix system

After selecting the device type push the button Show device parameters. The detailed informations on device parameters and event parameters of selected type will be displayed in a web browser (at least IE6).

Run the mentioned window just once and select consecutive device types - the window content will be refreshed automatically.

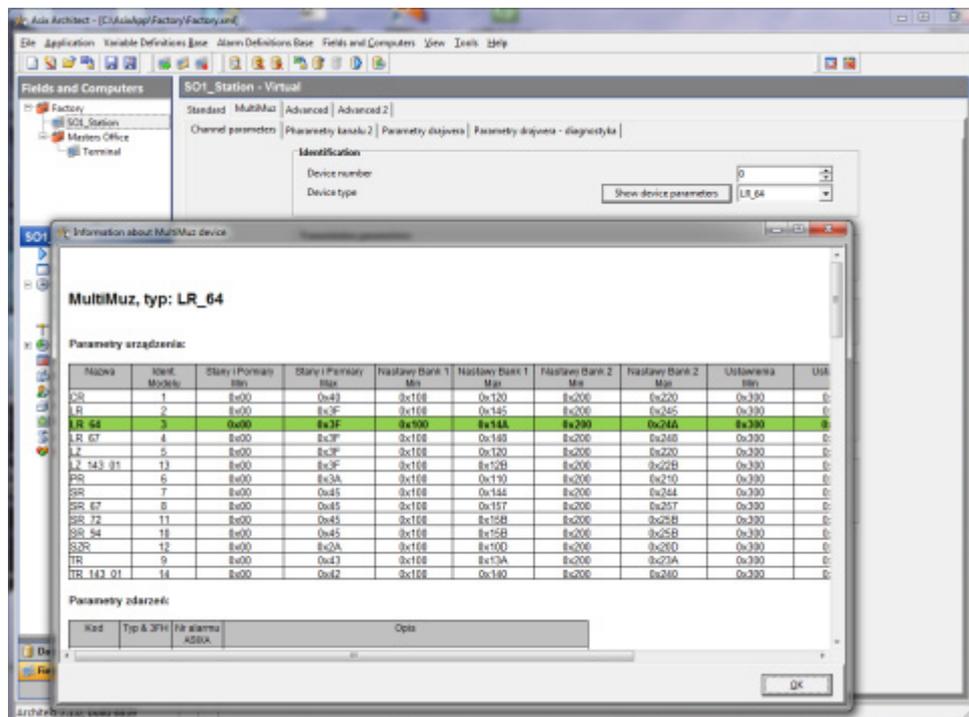


Fig. Information about MultiMuz device according to the selected type.

Control variables

Name of the variable used for showing transmission status

(0 – transmission status o.k.; 1 – lack of communication/communication errors; 2 – disabling MultiMuz support)

Name of the variable used for controlling transmission state

(0 – on; 1 – off)

NOTE Variables: both variable name should be entered. The variables have to belong to the channel of NONE type.

Time synchronization

Period of device current time synchronizing in seconds (0 - no synchronization)

Parameters of transmission to MultiMuz devices are constant:

- transmission speed 9600 Bd,
- 8 character bits,
- parity control,
- 1 stop bit.

EXAMPLE

Below is an example of a KSR_67 channel declaration, which served by MultiMuz of network number 5, type SR 067 and alarm offset 200. The channel status is presented by variable MuzStat05, channel control is possible with the use of variable MuzCtrl05, time synchronization is performed every 60 seconds. Communication is executed through COM2 port:

*Name: KSR_67
 Driver: MULTIMUZ
 Device number: 5
 Device type: SR 067
 Port: COM2
 Offset added to the calculated alarm number sent to the Asix system: 200
 Name of the variable used for showing transmission status: MuzStat05
 Name of the variable used for controlling transmission state: MuzCtrl05
 Period of device current time synchronizing in seconds: 60*

Variable Declaration

The driver provides the following variable types of MODBUS protocol:

CS	- binary value	(writing),
HR	- 16-bit log	(reading)
HRF	- 32-bit log of FLOAT type	(reading)

and internal driver variable:

RS	- reason for logger triggering	(reading)
RQ	- logger reading request	(writing),
RT	- logger triggering time	(reading)
MN	- network number of MultiMuz, from which the logger is/was read	(reading)
RN	- number of currently/recently read logger	(reading)
RR	- status of currently/recently read logger	(reading)
SN	- number of recently read logger sample	(reading)

The variable address has the following syntax:

Type[Index]

where:

Type: - variable type,
Index - variable index within 'Type' variable type.

NOTE Variables: the variable used to monitor the channel status and the variable used to disable the channel support must belong to a channel of NONE type.

1/ indexes are not given for types: *MN, RN, RR, RQ* and *SN*;

2/ in the case of *RS* and *RT* types, the range of indexes depends on the number of loggers defined in the device;

3/ the parameter of the logger reading request (*RQ* type) is the logger number. Loggers are numbered, starting from 1. If 0 is given as a parameter, it is equivalent to the request of

stopping the currently executed logger reading;
4/ ranges for *HR* and *HRF* types depend on the device type;
4/ in order to present the logger triggering time, use the conversion function *DATAZAS_MUZ*, which converts the *double*-type number to a character string in the following format:

yyyy-mm-dd hh:nn:ss.zzz

EXAMPLE

Examples of variable declaration (variable values are taken from a device of the *LR 001* type available through the *KLR_01* channel):

ZM_01, positive active energy meter,	HRF5, KLR_01, 1, 1, NIC_FP
ZM_02, protection triggering 1,	HR19, KLR_01, 1, 1, NIC
ZM_03, measurement I1,	HRF28, KLR_01,1,1,NIC_FP
ZM_04, switch control,	CS2, KLR_01,1,1, NIC
ZM_05, change of settings bank,	CS10, KLR_01,1,1, NIC
ZM_06, logger triggering time 1,	RT1, KLR_01, 1,1, DATAZAS_MUZ

Examples of variable declaration without parameters (variable values are taken from a device of the *LR 001* type available through the *KLR_01* channel):

ZM_07, logger reading request,	RQ, KLR_01,1,1,NIC
ZM_08, read logger number,	RN, KLR_01,1,1,NIC
ZM_09, logger reading status,	RR, KLR_01,1,1,NIC
ZM_10, read logger sample number,	SN, KLR_01,1,1,NIC
ZM_11, read device number,	MN, KLR_01,1,1,NIC

Trouble Logging

The driver enables the automatic logging of troubles in the DataLogger application database. In order to activate the trouble logging mode, declare the option *Logging troubles on SQL server in AsLogger program base*, which defines:

- MS SQL server name,
- database name,

where the driver will save the read trouble samples.

The driver does not perform an automatic trouble logging - the logging must be initiated by the **asix** system operator each time by the execution of control with the use of the RQ-type variable. As the control value, give the number of the logger, whose contents should be read from MultiMuz and saved to the DataLogger program base. If the control value is 0, it is interpreted as the request to stop the currently performed logger reading.

During logger reading, it is possible to track the reading status. This is executed with the use of the internal driver variables of symbolic addresses:

- a/ *MN* - number of read MultiMuz device,
- b/ *RN* - number of read logger,
- c/ *RR* - logger reading status:
 - inactive or completed ok.,
 - reading in progress,
 - reading terminated with error.
- d/ *SN* - number of recently read sample.

Trouble logging is performed in accordance to the logging plans. The names of the logging plans are not declared in the application (this would be too difficult, due to the number of devices in the switching stations, and due to the fact that each device can log troubles resulting from several causes). The driver assumes that the MultiMuz logging plans names have the following syntax:

NrxxxpyyReason

where:

- xxx* - MultiMuz network number,
- yy* - number of serial port, which MultiMuz is connected to,
- Reason* - abbreviation determining the reason for logger triggering.

EXAMPLE

For trouble caused by a logger triggering by user logic in MultiMuz no. 2 on port COM11, the logging plan of the following name will be created:

Nr002p11log_trig_by_user_logic

Logging plans can be created with the use of the DataLogger program, but can also be created automatically by the driver during its operation. The second case occurs when after trouble reading, the driver does not locate the logging plan of the name appropriate for the read trouble parameters (*NoxxxpyyReason*) in the database. In this case, the driver automatically creates a new logging plan of the name compliant with the syntax *NoxxxpyyReasone*, and adds to it:

a/ full set of plan items, including:

- currents: I0, I1, I2, I3
- voltages: U0, U1, U2, U3
- input states: WE01 ... WE20
- output states: WY01 ... WY20
- protection 1 triggering states: PZ01 ... PZ16
- protection 1 operation states: ZZ01 ... ZZ16

The number of plan items related to protection triggering and operation states is specific for each type of MultiMuz,
b/ creates a plan archive,
c/ sets the maximum and minimum values for currents and voltages in the logged trouble – those will be corrected, if necessary, during reading the further troubles for the given plan.

Event Signaling

Event signaling is checked cyclically, checking the frequency is determined by the *Event checking period* parameter. Events read from MultiMuz are converted to the appropriate Asix system alarm numbers. This conversion is performed on the basis of mapping presented for each MultiMuz type and offset presented in the ASMENA channel declaration. Two types of Asix alarms are possible:

- a/ text only
- b/ text and one numerical parameter

Events from MultiMuz of type no. 2 are converted to Asix alarms of *text* type, while the remaining MultiMuz events (types 0, 1, 3 and 4) are changed to Asix alarms of *text + one numerical parameter* (of *float* type) type.

EXAMPLE 1

Event *Closing switch from controller* in MultiMuz of type LR 001 (*text*-type event) is mapped to the Asix alarm number of value 160. If in the declaration of the ASMENA channel supporting MultiMuz LR 001, the alarm offset of value 400 is given, the alarm definition in the Asix alarm definition file will have the form of (400 + 160 = 560):

560, al, closing switch from controller

EXAMPLE 2

Event *Circuit protection triggering* in MultiMuz of type SR 067 (*text and one numerical parameter*-type event) is mapped to the Asix alarm number of value 0. If in the declaration of the ASMENA channel supporting MultiMuz SR 067, the alarm offset of value 100 is given, the alarm definition in the the Asix alarm definition file will have the form of (100 +0 = 100):

100, al, circuit protection triggering %f

Mapping the events of specific MultiMuz types to Asix alarm numbers is presented in the *NumeryAlarmowAsixa.xls* file.

Driver Parameters

The MultiMuz driver parameters are declared in the *Current data* module on *MultiMuz* tab of the channel operating on the basis of MultiMuz driver protocol. Parameters placed on the tab *Driver parameters* refers to all the channels operating on the basis of the same driver. If one of that channel is parameterized on the *Driver parameters* tab, settings of the parameters will automatically appear on the *Driver parameters* tabs in definitions of other channels.

Driver parameters - diagnostic tab:

Log file

Meaning - the diagnostic purposes are fulfilled by a text log file, where the driver operation status messages are entered.

Default value - by default, the log file is not created.

Parameter:

file_name

Log file size

Meaning - option is used to determine the size of the log file defined with the use of the *Log file* option.

Parameter:

number

Default value - log file size in MB.
- default log file size is 1 MB.

Log of telegrams

Meaning - option allows the contents of telegrams sent between the driver and controllers to the log file (declared with use of *Log file* option) to be saved. The subject option should be used only during the start-up of the Asix system.

Default value - by default, the option is disabled.

Disturbances log file

Meaning - the diagnostic purposes are fulfilled by a text log file, where the disturbance readout is entered.

Parameter:

file_name

Default value - by default, the log file is not created.

Driver parameters tab:

Number of repetition

Meaning: the option is used to specify the max number of repetitions in the case of transmission errors.

Default value: 3.

Option value:

number - max. liczba powtórzeń w przypadku błędów transmisji.

Response timeout

Meaning: This option specifies the max time the driver waits for responses from MultiMuz. The option is global and its value can be overloaded by individual option from the channel.

Default value: 1000.

Option value:

number - time in milliseconds.

Char timeout

Meaning: The option specifies the maximum time between characters of responses from MultiMuz. The option is global and its value can be overloaded by individual option from the channel.

Default value: 100.

Option value:

number - time in milliseconds.

Events checking period

Meaning - option declares the interval (in seconds) between reading the event log of the subsequent device connected to the same serial port supported by the driver.

Default value - by default the option value is 10 seconds.

Troubles logging in SQL server's database of AsLogger

Meaning - the option switches the driver to trouble logging mode. This option defines the server name and the database name, in which the trouble samples will be logged.

Default value - by default, the troubles are not logged.

Parameters:

ServerName - MSSQL server name

BaseName - base name on *ServerName* server

Directory with files containing registration plan names

Meaning: This option defines the full path to the directory the driver will use looking for files with definitions of interference plan names.

Default value: -.
Option value: *path* - full path to the file directory.

EXAMPLE

Example of driver parameters:

Log file: d:\tmp\multimuz\muz.log

Log file size: 3

Telegrams log: YES

Troubles logging in SQL server's database of AsLogger: SERVER_RO6, BASE_RO6

Channel Parameters

Channel parameters 2 tab:

Baud rate

Meaning: The option defines baud rate: 9600 or 19200 (for 2G only 9600).

Default value: - 9600.

Response timeout

Meaning: This option specifies the max time the driver waits for responses from MultiMuz. The option overloads the option from driver parameters.

Default value: 1000.

Option value:

number - time in milliseconds.

Char timeout

Meaning: The option specifies the maximum time between characters of responses from MultiMuz. The option overloads the option from driver parameters.

Default value: 100.

Option value:

number - time in milliseconds.

Without events

Meaning: The option used to disable the function of event reading in the channel.

Default value: Event readout is enabled.

Option value:

YES/NO

Without registrar

Meaning: The option used to disable the function of registrar reading in the channel.

Default value: Event readout is enabled.

Option value:

YES/NO

1.61 MultiMuz_tcpip - Driver for MultiMUZ Microprocessor-Based Security Devices from JM-Tronik

Driver Use

The MultiMuz protocol driver is used to exchange data between the Asix system and te MultiMUZ microprocessor-based security devices manufactured by Warsaw-based JM-Tronik. Communication is executed in Ethernet with the use of TCP or UDP protocol.

The driver executes the following functions:

- reading current statuses and measurements,
- reading events and reporting them to the Asix alarms system,
- reading troubles and logging them in the database in the format of the DataLogger application, developed by ASKOM Sp. z o.o.

The driver supports the following types of MultiMuz devices:

CR 001
LR 001
LR 001
LR 064
LR 067
LZ 001
PR 001
SR 001
SR 067
TR 001
megaMUZ TR
megaMUZ TR 082

The support of other MultiMuz devices requires changes in the driver code.

The parameterization of the MultiMuz_TCPIP driver is performed by the Architect program.

Declaration of Transmission Channel

The declaration of the transmission channel operating according to MultiMuz_TCPIP protocol requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MultiMuz_TCPIP

MultiMuz_TCPIP tab:

Channel parameters:

number, type, alarmOff, port, status_var, control_var [,period]

where:

number - network device number,

type - MultiMuz type; identifiers of supported types:

- 1 - CR 001
- 2 - LR 001
- 3 - LR 064
- 4 - LR 067
- 5 - LZ 001
- 6 - PR 001
- 7 - SR 001
- 8 - SR 067
- 9 - TR 001
- 13 - megaMUZ TR
- 14 - megaMUZ TR 082

alarmOff - offset added to the calculated number of Asix alarm;

Port - serial port number (TCPIP) and IP address;

status_var - name of the variable used for channel status monitoring
(0 - transmission status o.k.; 1 - lack of communication/communication errors; 2 - disabling MultiMuz support)

control_var - name of the variable used for channel disabling
(1 - request to disable MultiMuz support; 0 - enabling MultiMuz support)

period - period of time synchronization with MultiMuz (in seconds). A value of 0 means no time synchronization (default).

NOTE Variables: a variable used to monitor the channel status and the variable used to disable the channel support must belong to a channel of NONE type.

Transmission parameters of devices MultiMuz are fixed:

- Baud rate: 9600 Bd,
- 8 bits of mark,
- parity control,
- 1 stop bit.

Variable Declaration

The driver provides the following variable types of MODBUS protocol:

- CS - binary value (writing),
 - HR - 16-bit log (reading)
 - HRF - 32-bit log of FLOAT type (reading)
- and internal driver variable:
- RS - reason for logger triggering (reading)
 - RQ - logger reading request (writing),
 - RT - logger triggering time (reading)
 - MN - network number of MultiMuz, from which the logger is/was read (reading)
 - RN - number of currently/recently read logger (reading)
 - RR - status of currently/recently read logger (reading)
 - SN - number of recently read logger sample (reading)

The variable address has the following syntax:

Type[Index]

where:

Type: - variable type,
Index - variable index within 'Type' variable type.

NOTE Variables: the variable used to monitor the channel status and the variable used to disable the channel support must belong to a channel of NONE type.

1/ indexes are not given for types: *MN*, *RN*, *RR*, *RQ* and *SN*;

2/ in the case of *RS* and *RT* types, the range of indexes depends on the number of loggers defined in the device;

3/ the parameter of the logger reading request (*RQ* type) is the logger number. Loggers are numbered, starting from 1. If 0 is given as a parameter, it is equivalent to the request of stopping the currently executed logger reading;

4/ ranges for *HR* and *HRF* types depend on the device type;

4/ in order to present the logger triggering time, use the conversion function *DATAZAS_MUZ*, which converts the *double*-type number to a character string in the following format:

yyyy-mm-dd hh:nn:ss.zzz

EXAMPLE

Examples of variable declaration (variable values are taken from a device of the *LR 001* type available through the *KLR_01* channel):

ZM_01, positive active energy meter,	HRF5, KLR_01, 1, 1, NIC_FP
ZM_02, protection triggering 1,	HR19, KLR_01, 1, 1, NIC
ZM_03, measurement I1,	HRF28, KLR_01,1,1,NIC_FP
ZM_04, switch control,	CS2, KLR_01,1,1, NIC
ZM_05, change of settings bank,	CS10, KLR_01,1,1, NIC
ZM_06, logger triggering time 1,	RT1, KLR_01, 1,1, DATAZAS_MUZ

Examples of variable declaration without parameters (variable values are taken from a device of the *LR 001* type available through the *KLR_01* channel):

ZM_07, logger reading request,	RQ, KLR_01,1,1,NIC
ZM_08, read logger number,	RN, KLR_01,1,1,NIC
ZM_09, logger reading status,	RR, KLR_01,1,1,NIC
ZM_10, read logger sample number,	SN, KLR_01,1,1,NIC
ZM_11, read device number,	MN, KLR_01,1,1,NIC

Trouble Logging

The driver enables the automatic logging of troubles in the DataLogger application database. In order to activate the trouble logging mode, declare the option *Logging troubles on SQL server in AsLogger program base*, which defines:

- MS SQL server name,
- database name,

where the driver will save the read trouble samples.

The driver does not perform an automatic trouble logging - the logging must be initiated by the Asix system operator each time by the execution of control with the use of the *RQ*-type variable. As the control value, give the number of the logger, whose contents should be read from MultiMuz and saved to the DataLogger program base. If the control value is 0, it is interpreted as the request to stop the currently performed logger reading.

During logger reading, it is possible to track the reading status. This is executed with the use of the internal driver variables of symbolic addresses:

a/ *MN* - number of read MultiMuz device,
b/ *RN* - number of read logger,
c/ *RR* - logger reading status:

Communication Drivers

- inactive or completed ok.,
 - reading in progress,
 - reading terminated with error.
- d/ *SN* - number of recently read sample.

Trouble logging is performed in accordance to the logging plans. The names of the logging plans are not declared in the application (this would be too difficult, due to the number of devices in the switching stations, and due to the fact that each device can log troubles resulting from several causes). The driver assumes that the MultiMuz logging plans names have the following syntax:

NrxxxpyyReason

where:

- | | |
|---------------|--|
| <i>xxx</i> | - MultiMuz network number, |
| <i>yy</i> | - number of serial port, which MultiMuz is connected to, |
| <i>Reason</i> | - abbreviation determining the reason for logger triggering. |

Event Signaling

Event signaling is checked cyclically, checking the frequency is determined by the *Event checking period* parameter. Events read from MultiMuz are converted to the appropriate Asix system alarm numbers. This conversion is performed on the basis of mapping presented for each MultiMuz type and offset presented in the ASMENA channel declaration. Two types of Asix alarms are possible:

- a/ text only
- b/ text and one numerical parameter

Events from MultiMuz of type no. 2 are converted to Asix alarms of *text* type, while the remaining MultiMuz events (types 0, 1, 3 and 4) are changed to Asix alarms of *text + one numerical parameter* (of *float* type) type.

EXAMPLE 1

Event *Closing switch from controller* in MultiMuz of type LR 001 (*text-type* event) is mapped to the Asix alarm number of value 160. If in the declaration of the ASMENA channel supporting MultiMuz LR 001, the alarm offset of value 400 is given, the alarm definition in the Asix alarm definition file will have the form of (400 + 160 = 560):

560, al, closing switch from controller

EXAMPLE 2

Event *Circuit protection triggering* in MultiMuz of type SR 067 (*text and one numerical parameter-type* event) is mapped to the Asix alarm number of value 0. If in the declaration of the ASMENA channel supporting MultiMuz SR 067, the alarm offset of value 100 is given, the alarm definition in the the Asix alarm definition file will have the form of (100 + 0 = 100):

100, al, circuit protection triggering %f

Mapping the events of specific MultiMuz types to Asix alarm numbers is presented in the *NumeryAlarmowAsixa.xls* file.

Driver Parameters

The MultiMuz_TCPIP driver parameters are declared in the *Miscellaneous* module, on *Directly entered options* tab.

Section_name: MultiMuz_TCPIP

Option_name: LOG_FILE

Option_value: file_name

Meaning - the diagnostic purposes are fulfilled by a text log file, where the driver operation status messages are entered.

Default value - by default, the log file is not created.

Defining - manual.

Parameter:

file_name

Section_name: MultiMuz_TCPIP

Option_name: LOG_OF_TELEGRAMS

Option_value: YES/NO

Meaning - option allows the contents of telegrams sent between the driver and controllers to the log file (declared with use of *Log file* option) to be saved. The subject option should be used only during the start-up of the Asix system.

Default value - by default, the option is disabled.

Defining - manual.

Section_name: MultiMuz_TCPIP

Option_name: LOG_FILE_SIZE

Option_value: number

Meaning - option is used to determine the size of the log file defined with the use of the *Log file* option.

Parameter:

number

- log file size in MB.

Default value - default log file size is 1 MB.

Defining - manual.

Section_name: MultiMuz_TCPIP

Option_name: EVENT_CHECK_PERIOD

Option_value: number

Meaning - option declares the interval (in seconds) between reading the event log of the subsequent device connected to the same serial port supported by the driver.

Default value - by default the option value is 10 seconds.

Defining - manual.

Section_name: MultiMuz_TCPIP

Option_name: REGISTRAR

Option_value: serwer_name, database_name

Meaning - the option switches the driver to trouble logging mode. This option defines the server name and the database name, in which the trouble samples will be logged.

Default value - by default, the troubles are not logged.

Communication Drivers

Parameters:

- ServerName - MSSQL server name
- BaseName - base name on *ServerName* server
- Defining - manual.

EXAMPLE

Example of driver parameters:

```
[MULTIMUZ_TCPIP]
LOG_FILE=d:\tmp\multimuz\muz.log
LOG_FILE_SIZE=3
LOG_OF_TELEGRAMS=YES
REGISTRAR=SERWER_RO6, BAZA_RO6
```

Channel Parameters

The parameters defined for individual channels in the sections with the name of Asmen channel:

Section name: *<channel_name>*

Option name: **NUMBER_OF_REPETITIONS**

Option value: *number*

Meaning - number of repetitions in the case of error.

Default value - no repetitions.

Section name: *<channel_name>*

Option name: **MAX_REGISTERS**

Option value: *number*

Meaning - maximal number of registers in one inquiry.

Default value - 119.

Section name: *<channel_name>*

Option name: **LOG_OF_TELEGRAMS**

Option value: **YES/NO**

Meaning - option allows the contents of telegrams sent between the driver and controllers to the log file.

Default value - default settings from the driver section.

Section name: *<channel_name>*

Option name: **RECONNECT_TIMEOUT**

Option value: *number_of_seconds*

Meaning - timeout for reconnect after depletion of repetition number.

Default value - after depletion of repetition number the driver indicates a transmission error.

Section name: *<channel_name>*

Option name: **PORT**

Option value: *number*

Meaning - the number of a port through the driver communicates with the controller.

Section name: *<channel_name>*

Option name: **IP_ADDRESS**

Option value: *ip_address*

Meaning - IP address of network card through which the driver communicates with the controller.

1.62 MultiMuz3_tcpip - Driver for MultiMUZ Microprocessor-Based Security Devices from JM-Tronik

Driver Use

The MultiMuz protocol driver is used to exchange data between the Asix system and the MultiMUZ3 microprocessor-based security devices manufactured by Warsaw-based JM-Tronik. Communication is executed in MODBUS RTU mode on TCPIP with the use of Ethernet and port 10502.

The driver executes the following functions:

- reading current statuses and measurements,
- reading events and reporting them to the Asix alarms system,
- reading troubles and logging them in the database in the format of the DataLogger application, developed by ASKOM Sp. z o.o.

The parameterization of the MultiMuz_TCPIP driver is performed by the Architect program.

Declaration of Transmission Channel

The declaration of the transmission channel operating according to MultiMuz_TCPIP protocol requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MultiMuz_TCPIP

MultiMuz_TCPIP tab:

Channel parameters:

number, alarmOff, ip, status_var, control_var [,period]

where:

<i>number</i>	- network device number,
<i>alarmOff</i>	- offset added to the calculated number of Asix alarm;
<i>ip</i>	- ip address fo device;
<i>status_var</i>	- name of the variable used for channel status monitoring (0 – transmission status o.k.; 1 – lack of communication/communication errors; 2 – disabling MultiMuz support)
<i>control_var</i>	- name of the variable used for channel disabling (1 – request to disable MultiMuz support; 0 – enabling MultiMuz support)
<i>period</i>	- period of time synchronization with MultiMuz (in seconds). A value of 0 means no time synchronization (default).

NOTICE:

The variables *status_var* and *control_var* have to belong to the channel of NONE type.

EXAMPLE

An exemplary declaration of the channel KSR_67, in which MultiMuz3 with network number 5, address IP 10.10.12.5 and alarm offset 200 is supported. The channel state is given by the variable MuzStat05, the channel control is possible by the variable MuzCtrl05 and synchronization is performed every 60 seconds:

KSR_67 = MULTIMUZ3_TCPIP, 5, 200, 10.10.12.5, MuzStat05, MuzCtrl05, 60

Variable Declaration

The driver provides the following variable types of MODBUS protocol:

CS - binary value (writing),
HR - 16-bit log (reading)
HRF - 32-bit log of FLOAT type (reading)
HRL - 32-bit log of DWORD/LONG type (reading)

and internal driver variable:

RS - reason for logger triggering (reading)
RQ - logger reading request (writing),
RT - logger triggering time (reading)
MN - network number of MultiMuz, from which the logger is/was read (reading)
RN - number of currently/recently read logger (reading)
RR - status of currently/recently read logger (reading)
SN - number of recently read logger sample (reading)
RSKR - reason for release of criterion logger (reading)
RQKR - request for reading a criterion logger (writing)
RTKR - release time of criterion logger (reading)
MNKR - network number of the device from which criterion logger is/was read (reading)
RNKR - number of currently/recently read out criterion logger (reading)
RRKR - status of currently/recently read out criterion logger (reading)
SNKR - number of recently read out sample of criterion logger (reading)

The variable address has the following syntax:

Type[Index]

where:

Type: - variable type,
Index - variable index within 'Type' variable type.

NOTE Variables: the variable used to monitor the channel status and the variable used to disable the channel support must belong to a channel of NONE type.

1/ indexes are not given for types: *MN, RN, RR, RQ, SN, MNKR, RNKR, RRKR, RQKR* and *SNKR*;

2/ in the case of *RS, RT, RSKR, RTKR* types, the range of indexes depends on the number of loggers defined in the device;

3/ the parameter of the logger reading request (*RQ, RQKR* type) is the logger number. Loggers are numbered, starting from 1. If 0 is given as a parameter, it is equivalent to the request of stopping the currently executed logger reading;

4/ in order to present the logger triggering time, use the conversion function *DATAZAS_MUZ*, which converts the *double*-type number to a character string in the following format:

yyyy-mm-dd hh:nn:ss.zzz

EXAMPLE

Examples of variable declaration:

ZM_01, RMS value of current I1, HRL3, KLR, 1, 1, NOTHING_FP
ZM_02, RMS value of voltage U1, HRL27, KLR, 1, 1, NOTHING_DW
ZM_03, release of protections 1, HRL95, KLR,1,1, NOTHING_DW
ZM_04, change of bank of settings to bank1, CS17, KLR,1,1, NOTHING
ZM_05, release time of disturbance logger 1, RT1, KLR, 1,1, DATATIME_MUZ
ZM_06, request of reading disturbance logger, RT1, RQ, KLR,1,1,NOTHING
ZM_07, number of disturbance logger being read, RN, KLR,1,1,NOTHING
ZM_08, status of disturbance logger readout, RR, KLR,1,1, NOTHING
ZM_09, number of sample read fromdisturbance logger,
SN, KLR_01,1,1, NOTHING
ZM_10, request of reading criterion logger, RQKR, KLR,1,1, NOTHING
ZM_11, number of criterion logger being read, RNKR, KLR,1,1, NOTHING
ZM_12, status of reading criterion logger, RRKR, KLR,1,1, NOTHING
ZM_13, number of sample read from criterion logger, SNKR, KLR_01,1,1, NOTHING

Readout of Loggers

The driver enables the automatic logging of troubles in the AsLogger application database. In order to activate the trouble logging mode, declare the option REGISTRAR in the section [MULTIMUZ3_TCPIP], which defines:

- MS SQL server name,
- database name,

where the driver will save the read trouble samples.

(see more in: *Driver Parameters*)

The driver does not perform an automatic trouble logging - the logging must be initiated by the Asix system operator each time by the execution of control with the use of the RQ-type or RQKR- type variable. As the control value, give the number of the logger, whose contents should be read from MultiMuz and saved to the AsLogger program base. If the

control value is 0, it is interpreted as the request to stop the currently performed logger reading.

During logger reading, it is possible to track the reading status. This is executed with the use of the internal driver variables of symbolic addresses:

- a/ *MN, MNKR* - number of read MultiMuz device,
- b/ *RN, RNKR* - number of read logger,
- c/ *RR, RNKR* - logger reading status:
 - 0 - inactive or completed ok.,
 - 1 - reading in progress,
 - 2 - reading terminated with error.
- d/ *SN, SNKR* - number of recently read sample.

Trouble logging is performed in accordance to the logging plans. The names of the logging plans can be:

- 1/ defined by the user;
- 2/ generated automatically by the driver.

When registering, the driver writes into the AsLogger database:

- a/ all parameters contained in the record of logger, described in the documentation protocol of version 01.07;
- b/ creates an archive plan;
- c/ sets max. and min. values for currents and voltages in registered data series - they will be corrected during registration of consecutive series for a given plan.

Names of logging plans defined by the user

The user can define names of registration plans in text files with the extension '.def'. To do it, for each transmission channel (ASMEN channel) a separate file should be created and definitions of names for logging plans for disturbances logged in a given channel should be written into this file. Files with definitions of plan names should be written into a common directory. The name of this directory should be placed in the item *DISTURBANCES_NAMES_PATH* in the section [MULTIMUZ3_TCPIP]. (See more in: *Driver Parameters*)

The syntax of definitions for registration plan placed in the file '.def' is as follows:

channel, type, cause, table [, comment]

where:

- channel* - name of ASMEN channel,
- type* - type of logger (K – criterion, Z – disturbances),
- cause* - number of cause (compatible with the specification given in the description of protocol of ver. 01.07)
- table* - name of logging plan,
- comment* - comment

EXAMPLE:

KTR_06, Z, 2, Pole06ZadzZabezpZwarcioowego, zadziałanie zabezpieczenia zwarcioowego
KTR_06, Z, 31, Pole06ZamkWylacznika, zamknięcie wyłącznika

Default names for logging plans

If the user did not define its own names, the driver creates a default name.

The syntax of name for disturbance loggers:

NrxxxipyyyCause

where:

xxx	- nuber of device in MODBUS network,
yyy	- youngest element of device IP address,
Cause	- shortcut to identify the cause of logger release.

The syntax of name for criterion loggers:

NrxxxkryyyCause

where:

xxx	- nuber of device in MODBUS network,
yyy	- youngest element of device IP address,
Cause	- shortcut to identify the cause of logger release.

EXAMPLE:

For disturbance caused by logger release in MultiMuz3 no. 2 in MODBUS network and IP address: 10.10.12.5 the following logging plan name will be created:

Nr002ip005wyzw_rej_od_log_uzytk

Event Signaling

Event signaling is checked cyclically, checking the frequency is determined by the item EVENT_CHECK_PERIOD. Events read from MultiMuz are converted to the appropriate Asix system alarm numbers. This conversion is performed on the basis of mapping presented in the file NumeryAlarmowAsixaVerxx.xls and alarm offset presented in the ASMENA channel declaration. The following event parameters (according to event type) are transferred to Asix alarms:

- a/ 01H –*int* and *word* (for events marked with (*1) text describing the stages is transferred instead of *word*)
- b/ 02H –*int* and *word*
- c/ 04H –*int* and *word*
- d/ 08H –*int* and *word* (for events marked with (*1) *word* contains event cause ID)
- e/ 11H –*word*
- f/ 12H –*word*
- g/ 14H –*word*

h/ 21H (*2) (*3) – switch number, ID of control
i/ 21H (*2) – switch number
j/ 21H (*3) – ID of control
k/ 21H –word
l/ 52H –word
t/ 54H –word
m/ 92H –word
n/ 94H –word

EXAMPLE:

Event *Closing switch from controller* (event of 21H type with the code 161) is mapped to the Asix alarm number of value 190. If in the declaration of the ASMENA channel supporting the given device, the alarm offset of value 400 is given, the alarm definition in the Asix alarm definition file will have the form of (400 + 190 = 590):

590, al, closing switch from controller

Driver Parameters

The MultiMuz3_TCPIP driver parameters are declared in the *Miscellaneous* module, on *Directly entered options* tab.

Section_name: MultiMuz3_TCPIP

Option_name: LOG_FILE

Option_value: file_name

Meaning - the diagnostic purposes are fulfilled by a text log file, where the driver operation status messages are entered.

Default value - by default, the log file is not created.

Defining - manual.

Parameter:

file_name

Section_name: MultiMuz3_TCPIP

Option_name: DISTURBANCE_LOG_FILE

Option_value: file_name

Meaning - the diagnostic purposes are fulfilled by a text log file, where the disturbance messages are entered.

Default value - by default, the log file is not created.

Defining - manual.

Parameter:

file_name

Section_name: MultiMuz3_TCPIP

Option_name: LOG_FILE_SIZE

Option_value: number

Meaning - option is used to determine the size of the log file defined with the use of the *Log file* option.

Parameter:

number - log file size in MB.

Default value - default log file size is 10 MB.

Defining - manual.

Section_name: MultiMuz3_TCPIP

Option_name: LOG_OF_TELEGRAMS

Option_value: YES/NO

Meaning - option allows the contents of telegrams sent between the driver and controllers to the log file (declared with use of *Log file* option) to be saved. The subject option should be used only during the start-up of the Asix system.

Default value - by default, the option is disabled.

Defining - manual.

Section_name: MultiMuz3_TCPIP

Option_name: EVENT_CHECK_PERIOD

Option_value: number

Meaning - option declares the interval (in seconds) between reading the event log of the subsequent device connected to the same serial port supported by the driver.

Default value - by default the option value is 10 seconds.

Defining - manual.

Section_name: MultiMuz3_TCPIP

Option_name: REGISTRAR

Option_value: serwer_name, database_name

Meaning - the option switches the driver to trouble logging mode. This option defines the server name and the database name, in which the trouble samples will be logged.

Default value - by default, the troubles are not logged.

Parameters:

ServerName - MSSQL server name

BaseName - base name on *ServerName* server

Defining - manual.

Section_name: MultiMuz3_TCPIP

Option_name: DISTURBANCES_NAMES_PATH

Option_value: path

Meaning - the item allows to specify the full path to the directory with files containing definitions of disturbance plan names.

EXAMPLE

Example of driver parameters:

```
[MULTIMUZ3_TCPIP]
LOG_FILE=d:\tmp\multimuz\muz.log
LOG_FILE_SIZE=3
LOG_OF_TELEGRAMS=YES
REGISTRAR=SERWER_RO6, BAZA_RO6
```

Channel Parameters

The MultiMuz3_TCPIP driver parameters are declared in the *Miscellaneous* module, on *Directly entered options* tab.

Section name: <channel_name>

Option name: RECV_TIMEOUT

Option value: number

Meaning - the item allows to determine a maximal waiting time between sending a query and receiving an answer (so called receiving timeout). The parameter value is passed for all handled MUZ-RO devices globally.

Default value - 500.

Parameters:

number - timeout value in milliseconds.

Section name: <channel_name>

Option name: RECV_DELAY

Option value: number

Meaning - the item allows to determine a maximal delay time between sending a query and receiving an answer.

Default value - 20.

Parameters:

number - value in milliseconds.

Section name: <channel_name>

Option name: LOG_FILE

Option value: file_name

Meaning - the diagnostic purposes are fulfilled by a text log file, where the driver operation status messages are entered.

Default value - by default, the log file is not created.

Parameter:

file_name

Section name: <channel_name>

Option name: LOG_FILE_SIZE

Option value: number

Meaning - option is used to determine the size of the log file defined with the use of the *Log file* option.

Parameter:

number - log file size in MB.

Default value - default log file size is 10 MB.

☑ **Section name:** <channel_name>

☑ **Option_name:** LOG_OF_TELEGRAMS

☑ **Option_value:** YES/NO

Meaning - option allows the contents of telegrams sent between the driver and controllers to the log file (declared with use of *Log file* option) to be saved. The subject option should be used only during the start-up of the Asix system.

Default value - by default, the option is disabled.

Defining - manual.

☑ **Section name:** <channel_name>

☑ **Option_name:** NUMBER_OF_REPETITIONS

☑ **Option_value:** number

Meaning - the item allows to define maximal number of trials to do the command in case of transmission errors.

Default value - set in driver section.

Defining - manual.

Parameters:
 number - number of repetitions in case of transmission error.

☑ **Section name:** <channel_name>

☑ **Option_name:** MAX_REGISTERS

☑ **Option_value:** number

Meaning - the item allows to define maximal number of registers which the driver may ask for in one command in a given channel.

Default value - 119.

Parameters:
 number - max. number of registers.

☑ **Section name:** <channel_name>

☑ **Option_name:** IP_ADDRESS

☑ **Option_value:** card_address

Meaning - the item allows to define IP address of computer network card through which the communication in a given channel will be realized.

Default value - the card assigned by Windows.

Parameters:
 card_address - IP address of computer network card.

☑ **Section name:** <channel_name>

☑ **Option_name:** PORT

☑ **Option_value:** number

Meaning - the item allows to define the number of computer port through which the communication in a given channel will be realized.

Default value - the port assigned by Windows.

Parameters:
 number - number of computer port.

EXAMPLE

```
[CHANNEL]
LOG_FILE =c:\tmp\kanal_1.log
LOG_FILE_SIZE =30
LOG_OF_TELEGRAMS = YES
IP_ADDRESS =10.10.112.8
MAX_REGISTERS =53
```

1.64 MUPASZ - Driver of MUPASZ Device Protocol

Driver Use

The MUPASZ driver is used for data exchange between MUPASZ or MUPASZ2000 devices and an Asix system computer. The communication is performed with use of serial interfaces in the RS232C or RS485 standard.

Parameterization of MUPASZ driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MUPASZ driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MUPASZ

MUPASZ/Channel parameters tab:

Remote device number - number assigned to the remote device;
Serial port - name of the serial port;
Signalization mode... - number added to the event number with **signalization** executing mode in order to build a unique number of the alarm transferred to the Asix system;
Off mode event offset... - number added to the event number with **shutdown** executing mode in order to build a unique number of the alarm transferred to the Asix system;
Block mode event offset... - number added to the event number with **shutdown with lock** executing mode in order to create a unique number of the alarm transferred to the Asix system.

EXAMPLE

The declaration of the logical channel named CHAN1, which works according to the MUPASZ protocol and has parameters as below:

- number of remote device - 4
- port - COM1
- number added to the number of event **signalization** - 100
- number added to the number of event **shutdown** - 200
- number added to the number of event **shutdown with lock** - 300
- is as follows:

Channel / Name: CHAN1
Driver: MUPASZ
Remote device number: 4
Serial port: COM1
Signalisation mode...: 100
Off mode event offset... : 200
Block mode event offset...: 300

The MUPASZ driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the MUPASZ driver channel is as follows:

`<variable_type><channel>.<index>`

where:

variable_name - process variable type,
index - index of a process variable within the type.

Types of process variable:

P - measurement values (FLOAT),
B - state of locks arriving with measures (WORD),
L - values of counters (WORD),
F - status arriving with measurements and events (WORD).

EXAMPLE

Example of declarations of variables:

```
X1, current Io,          P1, CHAN1, 1, 1, NOTHING_FP
X2, I1 accum.,          P31, CHAN1, 1, 1, NOTHING_FP
X3, state of blockade no. 1, B1, CHAN1, 1, 1, NOTHING
X4, counter of switch openings, L1, CHAN1, 1, 1, NOTHING
X5, counter of motor startups, L25, CHAN1, 1, 1, NOTHING
X6, switch state,       F1, CHAN1, 1, 1, NOTHING
```

Generating Alarms

Numbers of events generated by a remote device have the same range of variation. In order to be able to uniquely determine which device the event comes from, the MUPASZ driver adds to the event number the number specified in the channel declaration as *AlSygOf* (for signalization), *AlWyłOf* (for shutdowns) or *AlBlokOf* (for shutdowns with lock). In such way this number is transferred to the *Asix* system as an alarm number.

For some alarms the MUPASZ driver may transfer values coming with events (activation time or current). These values may be read by giving a formatting string (%3.0f) in the definition of an alarm message.

In order to transfer alarms the MUPASZ driver uses the function *AsixAddAlarmGlobalMili()* by default. The item *GLOBAL_ALARMS* allows to change default settings and to transfer alarms by means of the function *AsixAddAlarmMili()*.

Driver Parameters

The driver configuration is defined in the *Current Data* module, in the channel operating according to MUPASZ driver.

Log file

Meaning - the item allows to define a file to which all diagnostic messages of the MUPASZ driver and information about contents of telegrams received and sent by the MUPASZ driver will be written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

Defining - manual.

Transmission delay

Meaning - the item allows to specify the time period (as a multiple of 10 msec) between successive operations on the MUPASZ bus.

Default value - by default, the item assumes a value of 1 (10 msec).

Defining - manual.

Number of repetitions

Meaning - the item allows to specify a number of repetitions in case of a transmission error.

Default value - by default, the item assume a value of 0 (no repetitions).

Defining - manual.

Data update

Meaning - the item allows to define the time period (in seconds), after which the driver should update values of process variables stored in internal driver buffers.

Default value - by default, the item assumes a value of 1.

Defining - manual.

Current time update

Meaning - the item allows to define a time period (in seconds), after which an actual time should be sent to remote devices.

Default value - by default, the item assumes a value of 60.

Defining - manual.

Global alarms

Meaning - the item controls the way of transferring alarms read from remote devices to the Asix alarm system.

Default value - by default, the alarms are transferred to the alarm system as global alarms (transferred by means of the function *AsixAddAlarmGlobalMili()*). Setting the GLOBAL_ALARMS item value causes that alarms are transferred to the alarm system by means of the function *AsixAddAlarmMili()*.

Defining - manual.

1.64. Mupasz710_RS - Driver of Microprocessor Protecting Devices of MUPASZ 710 Type

Driver Use

The Mupasz710_RS is used for data exchange between Asix and the microprocessor protecting devices of MUPASZ 710 type made by Instytut Tele- i Radiotechniczny in Warsaw. The communication is made with use of serial link and the MODBUS protocol.

The driver realizes the following functions:

- readout of current states and measurements,
- readout of events and reporting them to the Asix alarm system,
- readout of interferences from the recorder and their registration in the AsLogger database (the software developed by Askom).

Notice:

Using the functions of the recorder readout and interference registration in AsLogger database needs the appropriate Asix system license.

Declaration of Transmission Channel

Declaration of transmission channel using the Mupasz710_RS driver requires a channel with the following parameters to be added to the *Current data* module:

Standar tab:

Name: logical name of the transmission channel
Driver: Mupasz710_RS

Mupasz710_RS/Channel parameters:

Address

Device number in the MODBUS network,

Transmission parameters

Port - serial port name,
Baud rate - baud rate. By default: 115200 Bd,
Parity bit checking
Number of stop bits

Alarms offset

Offset added to the calculated alarm number sent to the Asix system.

EXAMPLE

The declaration of the logical channel named CHANNAL, which works according to the Mupasz 710 protocol and has parameters as below:

- *Device number...*: 2,
- *Port*: COM3,
- *Alarms offset*: 200,
- *Baud rate*: 9600,

- Parity bit checking: NONE,
- Number of stop bits: 1

Declaration of Process Variables

Types of process variable for MODBUS protocol:

HR - 16-bit register	(readout)
HRF - 32-bit register of FLOAT type	(readout)
HRL - 32-bit register of DWORD/LONG type	(readout)

and internal driver variables:

MN - network number of device from which sector is being read or has been read (readout)

RN - number of currently/recently read sector	(readout)
RQ - sector readout request	(write)
RR - status of currently/recently read sector	(readout)
RS - state of recorder (unavailable/empty/written)	(readout)
RT - release time of interference written in a sector	(readout)
SN - current counter of HR registers read from a sector	(readout)

The syntax of symbolic address:

Type[Index]

where:

- Type* - process variable type,
- Index* - index of a process variable within the *Type*.

REMARKS:

1. indexes are not declared for the types: *MN, RN, RQ, RR i SN*
2. for the types: *RS, RT* the range of indexes depends on the number of sectors defined in the device,
3. the parameter of sector readout request (*RQ* type) is the sector number; the sectors are numbered w.e.f. 1. If 0 is set as the parameter, that means the interrupt request of sector current readout,
4. to present the sector release time, use the conversion function *DATETIME_MUZ*, that convert the number of *double* type into the following string:

yyyy-mm-dd hh:nn:ss.zzz

Example of variable declarations:

```
ZM_01, face value Un, HR8235, KLR, 1, 1, NOTHING
ZM_02, face value In, HR8236, KLR, 1, 1, NOTHING
ZM_03, release time in the sector 1, RT1, KLR, 1, 1, DATETIME_MUZ
ZM_04, sector readout request RQ, KLR, 1, 1, NOTHING
ZM_05, number of read sector, RN, KLR, 1, 1, NOTHING
ZM_06, status of sector readout, RR, KLR, 1, 1, NOTHING
```

ZM_07, counter of registers read from the sector SN, KLR, 1 ,1, NOTHING_DW

Interference Recorder Readout

The driver allows for readout of interferences from the recorder and their registration in the AsLogger database. The registered trends can be reviewed only by AsLogger software.

The recording of interference recorder trends demands declaration of **Registration of disturbances in AsLogger database** option (*Mupasz710_RS* tab / *Driver parameters - AsLogger*). It contains:

- MSSQL server name,
- database name,

where the trends will be written.

The driver does not register the trends automatically - registration has to be initiated any time by the Asix system operator by execution of control with the use of RQ type variable. The control value is the number of sector the value of which should be read from a device and written to AsLogger database. If control value equals 0, it means the interrupt request of sector current readout.

While the sector readout the readout state tracking is possible with the use of driver internal variables of symbolic addresses:

- a/ *MN* - device number in MODBUS network,
- b/ *RN* - number of read sector,
- c/ *RR* - status of sector readout:

- 0 – readout is not active or finished OK
- 1 – readout is in progress
- 2 – readout of the latest frame finished OK
- 3 – readout of the latest frame finished with error
- 4 – readout of the sector finished with error
- 5 – readout of the sector finished OK
- 6 – readout of the sector stopped by the operator

- d/ *SN* - current counter of registers read from the sector.

The recording of register trends is realized according to recording plans. The names of recording plans may be:

- a/ defined by the user in text files which are read by the driver at application start-up,
- b/ generated automatically by the driver.

While the trend recording, the driver writes to AsLogger database the following items:

- a/ all the parameters from the sector,
- b/ creates the plan archive,
- c/ determines max and min values for currents and voltages in recorded trend – if need they will be corrected during reading the successive trends for the given plan.

The **Number of repetitions of disturbances registrar** parameter (set on *Driver parameters - AsLogger* tab) determines the number of repetitions in the case of transmission error.

- **Defining the Names of Recording Plans by the User**

The user can define the names of recording plans in text files with the extension '.def'. To do this for each communication channel (channel of Asmen), one should create the separate file and write to them the definitions of recording plan names for interferences recorded in this channel. The files with the plan definitions should be located in the common directory the name of which should be declared as the *Disturbance names files path* option (*Mupasz710_RS* tab / *Driver parameters - AsLogger*).

The syntax of definition for recording plan name defined in '.def' file is as follows:

Channel, Cause, FormatAi, FormatDi, Table [, Commentary]

where:

<i>Channel</i>	- Asmen channel name,
<i>Cause</i>	- number identifying the cause of recorder release,
<i>FormatAi</i>	- analog measurement mask in HEX notation (6 digits),
<i>FormatDi</i>	- binary input mask in HEX notation (2 digits),
<i>Table</i>	- recording plan name,
<i>Commentary</i>	- kommentary (option)

Example:

Definition for recording plan for recording interferences with the following parameters:

- voltage value U1 < (release cause number 1),
- analog mask 0000FF – recording U1, U2, U3, U0 and I1, I2, I3, I0
- binary values mask 0001 – recording input states 1 – 16

in the channel KTR:

KTR, 1, 0000FF, 0001, Field05VoltageDropU1

- **The Default Recording Plan Names**

If the user does not define its own recording plan names, the driver will create the name of recording plan automatically.

The syntax of interference recording plan name generated by the driver is as follows:

ChannelName.Cause.FormatAi.FormatDi

where:

<i>ChannelName</i>	- name of Asmen channel in which the interferences were read,
<i>Cause</i>	- identifier of recording release cause,
<i>FormatAi</i>	- analog measurement mask in HEX notation (6 digits),
<i>FormatDi</i>	- binary input mask in HEX notation (2 digits).

Example:

For interference caused by the recorder release from the user's logic in the device operated in Asmen channel named CHANNEL with the registration set as follows:

- analogs: U1, U2, U3, U0, I1, I2, I3, I0

and

- binary measurements: inputs 1-16, inputs 17-32, outputs 1-16

the following recording plan name will be defined:

CHANNEL.29.000FF.0023

- **Identifiers of Recorder Release Reasons**

Below the set of recorder release reasons:

01	U1LE	voltage U1 as a parameter
02	U2LE	voltage U2 as a parameter
03	U3LE	voltage U3 as a parameter
04	U0LE	voltage Uo as a parameter
05	I1LE	current I1 as a parameter
06	I2LE	current I2 as a parameter
07	I3LE	current I3 as a parameter
08	I0LE	current Io as a parameter
09	I1LESEC	current I1sec as a parameter
10	I2LESEC	current I2sec as a parameter
11	I3LESEC	current I3sec as a parameter
12	I0LESEC	current Iosec as a parameter
13	U1GT	voltage U1 as a parameter
14	U2GT	voltage U1 as a parameter
15	U3GT	voltage U1 as a parameter
16	U0GT	voltage Uo as a parameter
17	I1GT	current I1 as a parameter
18	I2GT	current I2 as a parameter
19	I3GT	current I3 as a parameter
20	I0GT	current Io as a parameter
21	I1GTSEC	current I1sec as a parameter
22	I2GTSEC	current I2sec as a parameter
23	I3GTSEC	current I3sec as a parameter
24	I0GTSEC	current Iosec as a parameter
25	DIN	release input number as a parameter (1..80)
26	DOUT	release output number as a parameter (1..80)
27	SIG	release register number as a parameter (1..80)
28	OIN	release input number as a parameter (1..8)
29	USER	register release by the user: parameter 0 - local, 1 - remote

- **Analog Measurement Mask**

There are the set of bits of analog measurement mask below, which may be recorded in interference recorder (lists **LIST_8** and **LIST_9** in **list.xml**).

U1	0x0001
U2	0x0002
U3	0x0004
U0	0x0008
I1	0x0010
I2	0x0020
I3	0x0040
I0	0x0080
I1sec	0x0100
I2sec	0x0200
I3sec	0x0400
I0sec	0x0800
Ia_1	0x1000
Ia_2	0x2000
Ia_3	0x4000
Ia_4	0x8000
Ia_5	0x0010000
Temp_1	0x0020000
Temp_2	0x0040000

Communication Drivers

Temp_3	0x0080000
Temp_4	0x0100000
Temp_5	0x0200000
Temp_6	0x0400000
I0sec	0x0800000

- **Binary Measurement Mask**

Poniżej podano zestawienie bitów maski dwustanów, które mogą być zarejestrowane w rejestratorze zakłóceń (lista **LIST_10** w pliku **list.xml**).

IN_01_16	0x0001
IN_17_32	0x0002
IN_33_48	0x0004
IN_49_64	0x0008
IN_65_80	0x0010
OUT_01_16	0x0020
OUT_17_32	0x0040
OUT_33_48	0x0080
OUT_49_64	0x0100
OUT_65_80	0x0200
SIG_01_16	0x0400
SIG_17_32	0x0800
SIG_33_48	0x1000
SIG_49_64	0x2000
SIG_65_80	0x4000
OIN_01_08	0x8000

Event Signalling

Signalling events is checked periodically, the frequency of check is determined by the global option

Event check period (see: *Driver parameters*). Event read from the devices are converted to the corresponding numbers in the Asix system alarms.

The conversion is performed based on the following algorithm:

- definitions and the way they are converted are read from the files: **event.xml** and **format.xml**, provided by the device manufacturer,
- driver converts the parameters of the event as it is described in the **event.xml** file w.e.f. no. 1 until depletion of the buffer used to pass event parameters to the Asix alarm system or depletion of the number of event parameters (the driver may report any combination of 16-bit to 32-bit parameters, provided that their total size do not exceed 8 bytes),
- driver converts the value of each parameter according to the rule defined by the format of the parameter described in the format.xml file.
- it is possible to use global files **event.xml** and **format.xml** by entering the names of this files in the global options **Event definitions files** (see: *Driver parameters, Channel parameters 2*) and **Format definitions file** (see: *Driver parameters, Channel parameters 2*).
- it is possible to define the specific files **event.xml** and **format.xml** by entering the names of this files in the given transmission channel options: **Event definitions file** i **Format definitions file**).
- driver searches the files **event.xml** and **format.xml** in the directory the name of which is given in the global option **Disturbance names files path** (**Mupasz710_RS** tab / **Driver parameters - AsLogger**).

Driver Parameters

The driver configuration is defined in the *Current Data* module, in the channel operating according to Mupasz710_RS driver. Options are placed on the **Driver parameters...** tabs. These options refer to all the devices.

Driver parameters - diagnostics tab:

Log file

Meaning: The item allows to define a file where all diagnostic messages of the driver are written.

Default value: By default, the log file is not created.

Option value:
log_file_name

Log file size

Meaning: The item allows to specify the size of log file size defined by the options: *Log file* and *Disturbances log file*.

Default value: 10 MB.

Option value:
number - log file size in MB.

Log of telegrams

Meaning: The item allows to write to the log file the contents of telegrams sent between the driver and network clients. Writing the contents of telegrams to the log file should be used only while the **Asix** start-up.

Default value: NO.

Option value:
YES/NO

Disturbances log file

Meaning: The item allows to define a file where all diagnostic messages on read disturbances are written.

Default value: The log file is not created.

Option value:
log_file_name

Driver parameters tab:

Password

Meaning: The option defines the password of the user registered in Mupasz 710 device. The password is necessary to read interferences of the recorder. The password entered by this option is a global option and concerned all the devices. The password value can be overloaded by the option declared in the communication channel options.

Default value: „1111“.

Option value:
password - four-character text.

Number of repetitions

Meaning: The option defines the number of connection repetitions in the case of response error from a device when reading all types of data (it does not refer to recorder readout). When the number of repetitions is exhausted the connection with the device is closed and re-established.

Default value: 3.

Option value:
number - the number of connection repetitions.

Event check period

Meaning: The option defines the time after which the event register readout should be performed.

Default value: 10.

Option value:
number - number of seconds.

Definition files path

Meaning: The option defines the full path to the directory in which the driver will be searching for files with event definition (**event.xml**) and files with format definitions (**format.xml**).

Default value: -.

Option value:
path - full path to the directory.

Event definitions file

Meaning: The option defines the name of XML file with event definition. The option is global one, but may be overloaded by the same option defined in the communication channel parameters.

Option value:
file_name

Format definitions file

Meaning: The option defines the name of XML file with format definition. The option is the global one, but it may be overloaded by the same option declared in the communication channel parameters.

Option value:
file_name

Driver parameters - AsLogger tab:

Registration of disturbances in AsLogger database

Meaning: The option changes over the driver to the mode of writing recorder trend to a database. It concerns samples from disturbance and criterion recorders.

Option value:

SERVERNAME - MS SQL SERVER NAME
DatabaseName - database name of the *ServerName* server

Default value: Disturbances are not recorded.

Number of repetitions of disturbances registrar

Meaning: The option defines the number of repetitions in case of response error from a device when reading the recorder.

Default value: 0 (no repetition).

Option value:
number - number of repetitions.

Disturbance names files path

Meaning: The option defines full path to the directory of files with recording plan definitions.

Option value:
path - full path to the directory.

Channel parameters

The channel parameters are defined in the *Current Data* module, in the channel operating according to Mupasz710_RS driver. Options are placed on the *Channel parameters...* tabs. These options refer only to the channel.

Zakładka **Parametry kanału 2:**

Password

Meaning: The option defines the password of the user registered in Mupasz 710 device. The password is necessary to read interferences of the recorder. The option may overload the same option declared in the driver parameters.

Default value: By default, the password is defined by the driver option, if not - the following value is taken: „1111”.

Option value:
password - four-character text.

Number of repetitions

Meaning: The option defines the number of query repetitions in the case of response error in that channel. When the number of repetitions is exhausted the connection with the device is closed and re-established. The option may overload the same option declared in the driver parameters.

Default value: By default, the option is defined by the driver option.

Option value:
number - the number of connection repetitions.

Response timeout

Meaning: The option defines the maximal time of waiting for response from the device.

Communication Drivers

Default value: 500.

Option value

number - timeout in milliseconds.

Char timeout

Meaning: The option specifies the maximum time between characters of responses from a device.

Default value: 50.

Option value:

number - timeout in milliseconds.

Event definitions file

Meaning: The option defines the name of XML file with event definition. The option may overload the same option defined in the driver parameters.

Option value:

file_name - full path to the directory.

Format definitions file

Meaning: The option defines the name of XML file with format definition. The option may overload the same option declared in the driver parameters.

Option value:

file_name - full path to the directory.

Channel parameters - diagnostics tab:

Log file

Meaning: The item allows to define a file where all diagnostic messages of the driver in the given communication channel are written.

Default value: By default, the log file is defined by the driver option.

Option value:

log_file_name

Log file size

Meaning: The item allows to specify the size of log file size defined by the option *Log file* of the given channel.

Default value: 10 MB.

Option value:

number - log file size in MB.

Log of telegrams

Meaning: The item allows to write to the log file the contents of telegrams sent between the driver and network clients in the given channel. Writing the contents of telegrams to the log file should be used only

while the **Asix** start-up. Przedmiotowa opcja powinna być wykorzystywana jedynie w fazie uruchamiania systemu Asix. Opcja przeciąża opcję o tej samej nazwie umieszczoną w sekcji drajwera.

Default value: No

Option value:
YES/NO

Examples of Driver Parameters

Log file: c:\tmp\mupasz.log

Disturbances log file: c:\tmp\zaklocenia.log

Log file size: 20

Log of telegrams: TAK

Event check period: 10

Registration of disturbances in AsLogger database: SERWER_RO6, BAZA_RO6

Disturbance names files path: c:\tmp\DefZaklocen

Definition files path: c:\tmp\DefFiles

Password: 1234

Examples of Channel Parameters

Channel > Name: KANALX

Log file: c:\tmp\kanalx.log

Event definitions file: kanalx\Event.xml

Format definitions file: kanalx\Format.xml

Password: 4321

1.65. MupaszRtu_TCPIP - Driver of Microprocessor Protecting Devices of MUPASZ 710 Type

Driver Use

The MupaszRtu_TCPIP driver is used for data exchange between Asix and the microprocessor protecting devices of MUPASZ 710 type. The communication is performed in MODBUS RTU mode via Ethernet link, using port no. 502.

The driver realizes the following functions:

- readout of current states and measurements,
- readout of events and reporting them to the Asix alarm system,
- readout of interferences from the recorder and their registration in the AsLogger database (software developed by Askom).

Notice:

Using the functions of the recorder readout and interference registration in AsLogger database needs the appropriate Asix system license.

Declaration of Transmission Channel

Declaration of the transmission channel using the MupaszRtu_TCPIP driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: MupaszRtu_TCPIP

MupaszRtu_TCPIP /Channel parameters tab:

Device number in the MODBUS network - device number in the MODBUS network;

Notice: currently the only supported device number in the MODBUS network is 255,

IP address of the device,

Alarms offset - offset added to the calculated alarm number sent to the Asix system,

IP address of the computer - IP address of the computer through which the channel will connect to the computer.

EXAMPLE

The declaration of the logical channel named CHAN1, which works according to the Mupasz 710 protocol and has parameters as below:

- IP address 10.10.12.5 and alarm offset: 200;

Name: CHAN1

Driver: MupaszRtu_TCPIP

Channel parameters:

Device number in the MODBUS network: 255
 IP address of the device: 10.10.12.5
 Alarms offset: 200

Addressing the Process Variables

Types of process variable for MODBUS protocol:

HR - 16-bit register	(readout)
HRF - 32-bit register of FLOAT type	(readout)
HRL - 32-bit register of DWORD/LONG type	(readout)

and internal driver variables:

MN - network number of device from which sector is being read or has been read	(readout)
RN - number of currently/recently read sector	(readout)
RQ - sector readout request	(write)
RR - status of currently/recently read sector	(readout)
RS - state of recorder (unavailable/empty/written)	(readout)
RT - release time of interference written in a sector	(readout)
SN - current counter of HR registers read from a sector	(readout)

The syntax of symbolic address which is used for variables belonging to the MUPASZ driver channel is as follows:

Type[Index]

where:

Type - process variable type,
Index - index of a process variable within the type.

REMARKS:

- indexes are not declared for the types: *MN*, *RN*, *RQ*, *RR* and *SN*
- for the types: *RS*, *RT* the range of indexes depends on the number of sectors defined in the device,
- the parameter of sector readout request (*RQ* type) is the sector number; the sectors are numbered w.e.f. 1. If 0 is set as the parameter, that means the interrupt request of sector current readout;
- to present the sector release time, use the conversion function *DATETIME_MUZ*, that convert the number of *double* type into the following string:

yyyy-mm-dd hh:nn:ss.zzz

EXAMPLE

Example of variable declarations:

ZM_01, face value Un,	HR8235, KLR, 1, 1, NOTHING
ZM_02, face value In,	HR8236, KLR, 1, 1, NOTHING
ZM_03, release time in the sector 1,	RT1, KLR, 1, 1, DATETIME_MUZ
ZM_04, sector readout request	RQ, KLR, 1, 1, NOTHING
ZM_05, number of read sector,	RN, KLR, 1, 1, NOTHING
ZM_06, status of sector readout,	RR, KLR, 1, 1, NOTHING
ZM_07, counter of registers read from the sector	SN, KLR, 1, 1, NOTHING_DW

Interference Recorder Reading

The driver allows for readout of interferences from the recorder and their registration in the AsLogger database. The registered trends can be reviewed only by AsLogger software.

The recording of interference recorder trends demands declaration of **Registration of disturbances in AsLogger database** option (**MupaszRtu_TCPIP** tab / **Driver parameters - AsLogger**). It contains:

- MSSQL server name,
- database name,

where the trends will be written.

The driver does not register the trends automatically - registration has to be initiated any time by the Asix system operator by execution of control with the use of RQ type variable. The control value is the number of sector the value of which should be read from a device and written to AsLogger database. If control value equals 0, it means the interrupt request of sector current readout.

While the sector readout the readout state tracking is possible with the use of driver internal variables of symbolic addresses:

- a/ *MN* - device number in MODBUS network,
b/ *RN* - number of read sector,
c/ *RR* - status of sector readout:

- 0 - readout is not active or finished OK
- 1 - readout is in progress
- 2 - readout of the latest frame finished OK
- 3 - readout of the latest frame finished with error
- 4 - readout of the sector finished with error
- 5 - readout of the sector finished OK
- 6 - readout of the sector stopped by the operator

- d/ *SN* - current counter of registers read from the sector.

The recording of register trends is realized according to recording plans. The names of recording plans may be:

- a/ defined by the user in text files which are read by the driver at application start-up,
b/ generated automatically by the driver.

While the trend recording the driver writes to AsLogger database the following items:

- a/ all the parameters from the sector,
b/ creates the plan archive,
c/ determines max and min values for current and voltage in recorded trend - if need they will be corrected during reading the successive trends for the given plan.

Defining the Names of Recording Plans by the User

The user can define the names of recording plans in text files with the extension '.def'. To do this for each communication channel (channel of Asmen) one should create the separate file and write to them the definitions of recording plan names for interferences recorded in this channel. The files with the plan definitions should be located in the common directory the name of which should be declared as the **Disturbance names files path** option (**MupaszRtu_TCPIP** tab / **Driver parameters - AsLogger**).

The syntax of definition for recording plan name defined in '.def' file is as follows:

Channel, Cause, FormatAi, FormatDi, Table [, Commentary]

where:

<i>Channel</i>	- Asmen channel name,
<i>Cause</i>	- number identifying the cause of recorder release,
<i>FormatAi</i>	- analog measurement mask in HEX notation (6 digits),
<i>FormatDi</i>	- binary input mask in HEX notation (2 digits),
<i>Table</i>	- recording plan name,
<i>Commentary</i>	- kommentary (option)

Example:

Definition for recording plan for recording interferences with the following parameters:

- voltage value U1 < (release cause number 1),
- analog mask 0000FF – recording U1, U2, U3, U0 and I1, I2, I3, I0
- binary values mask 0001 – recording input states 1 – 16

in the channel KTR:

KTR, 1, 0000FF, 0001, Field05VoltageDropU1

The Default Recording Plan Names

If the user does not define its own recording plan names, the driver will create the name of recording plan automatically.

The syntax of interference recording plan name generated by the driver is as follows:

ChannelName.Cause.FormatAi.FormatDi

where:

<i>ChannelName</i>	- name of Asmen channel in which the interferences were read,
<i>Cause</i>	- identifier of recording release cause,
<i>FormatAi</i>	- analog measurement mask in HEX notation (6 digits),
<i>FormatDi</i>	- binary input mask in HEX notation (2 digits).

Example:

For interference caused by the recorder release from the user's logic in the device operated in Asmen channel named CHANNEL with the registration set as follows:

- analogs: U1, U2, U3, U0, I1, I2, I3, I0

and

- binary measurements: inputs 1-16, inputs 17-32, outputs 1-16

the following recording plan name will be defined:

CHANNEL.29.000FF.0023

Identifiers of Recorder Release Reasons

Below the set of recorder release reasons:

01	U1LE	voltage U1 as a parameter
02	U2LE	voltage U2 as a parameter
03	U3LE	voltage U3 as a parameter
04	U0LE	voltage Uo as a parameter
05	I1LE	current I1 as a parameter
06	I2LE	current I2 as a parameter
07	I3LE	current I3 as a parameter
08	I0LE	current Io as a parameter

Communication Drivers

09	I1LESEC	current I1sec as a parameter
10	I2LESEC	current I2sec as a parameter
11	I3LESEC	current I3sec as a parameter
12	I0LESEC	current I0sec as a parameter
13	U1GT	voltage U1 as a parameter
14	U2GT	voltage U1 as a parameter
15	U3GT	voltage U1 as a parameter
16	U0GT	voltage U0 as a parameter
17	I1GT	current I1 as a parameter
18	I2GT	current I2 as a parameter
19	I3GT	current I3 as a parameter
20	I0GT	current I0 as a parameter
21	I1GTSEC	current I1sec as a parameter
22	I2GTSEC	current I2sec as a parameter
23	I3GTSEC	current I3sec as a parameter
24	I0GTSEC	current I0sec as a parameter
25	DIN	release input number as a parameter (1..80)
26	DOUT	release output number as a parameter (1..80)
27	SIG	release register number as a parameter (1..80)
28	OIN	release input number as a parameter (1..8)
29	USER	register release by the user:
		parameter 0 - local, 1 - remote

Analog Measurement Mask

There are the set of bits of analog measurement mask below, which may be recorded in interference recorder (lists **LIST_8** and **LIST_9** in **list.xml**).

U1	0x0001
U2	0x0002
U3	0x0004
U0	0x0008
I1	0x0010
I2	0x0020
I3	0x0040
I0	0x0080
I1sec	0x0100
I2sec	0x0200
I3sec	0x0400
I0sec	0x0800
Ia_1	0x1000
Ia_2	0x2000
Ia_3	0x4000
Ia_4	0x8000
Ia_5	0x0010000
Temp_1	0x0020000
Temp_2	0x0040000
Temp_3	0x0080000
Temp_4	0x0100000
Temp_5	0x0200000
Temp_6	0x0400000
I0sec	0x0800000

Binary Measurement Mask

There are the set of bits of binary measurement mask below, which may be recorded in interference recorder (list **LIST_10** in **list.xml**).

IN_01_16	0x0001
IN_17_32	0x0002
IN_33_48	0x0004
IN_49_64	0x0008
IN_65_80	0x0010

OUT_01_16	0x0020
OUT_17_32	0x0040
OUT_33_48	0x0080
OUT_49_64	0x0100
OUT_65_80	0x0200
SIG_01_16	0x0400
SIG_17_32	0x0800
SIG_33_48	0x1000
SIG_49_64	0x2000
SIG_65_80	0x4000
OIN_01_08	0x8000

Event Signalling

Signalling events is checked periodically, the frequency of check is determined by the global option

Event check period (see: *Driver parameters*). Event read from the devices are converted to the corresponding numbers in the Asix system alarms.

The conversion is performed based on the following algorithm:

- definitions and the way they are converted are read from the files: **event.xml** and **format.xml**, provided by the device manufacturer,

- driver converts the parameters of the event as it is described in the **event.xml** file w.e.f. no. 1 until depletion of the buffer used to pass event parameters to the Asix alarm system or depletion of the number of event parameters (the driver may report any combination of 16-bit to 32-bit parameters, provided that their total size do not exceed 8 bytes),

- driver converts the value of each parameter according to the rule defined by the format of the parameter described in the format.xml file.

- it is possible to use global files **event.xml** and **format.xml** by entering the names of this files in the global options **Event definitions files** (see: *Driver parameters, Channel parameters 2*) and **Format definitions file** (see: *Driver parameters, Channel parameters 2*).

- it is possible to define the specific files **event.xml** and **format.xml** by entering the names of this files in the given transmission channel options: **Event definitions file** i **Format definitions file**).

- driver searches the files **event.xml** and **format.xml** in the directory the name of which is given in the global option **Disturbance names files path** (**MupaszRtu_TCPIP** tab / **Driver parameters - AsLogger**).

Driver Parameters

The driver configuration is defined in the *Current Data* module, in the channel operating according to MupaszRtu_TCPIP driver. Options are placed on the tabs:

MupaszRtu_TCPIP / Driver parameters, MupaszRtu_TCPIP / Driver parameters - AsLogger, MupaszRtu_TCPIP / Driver parameters - diagnostics. These options refer to all the devices.

Log file

Meaning:

The item allows to define a file where all diagnostic messages of the driver are written.

Communication Drivers

Option value:

log_file_name

Default value: By default, the log file is not created.

Log file size

Meaning: The item allows to specify the size of log file size defined by the options: *Log file* and *Disturbances log file*.

Option value:

number

- log file size in MB.

Default value: 10 MB.

Disturbances log file

Meaning: The item allows to define a file where all diagnostic messages on read disturbances are written.

Option value:

log_file_name

Default value: The log file is not created.

Log of telegrams

Meaning: The item allows to write to the log file the contents of telegrams sent between the driver and network clients. Writing the contents of telegrams to the log file should be used only while the **Asix** start-up.

Option value: YES/NO

Default value: NO.

Password

Meaning: The option defines the password of the user registered in Mupasz 710 device. The password is necessary to read interferences of the recorder. The password entered by this option is a global option and concerned all the devices. The password value can be overloaded by the option declared in the communication channel options.

Option value:

password

- four-character text.

Default value: „1111“.

Number of repetitions

Meaning: The option defines the number of connection repetitions in case of transmission error. When the number of repetitions is exhausted the connection with the device is closed and re-established.

Option value:

number

- the number of connection repetitions.

Default value: 3.

Event check period

Meaning: The option defines the time after which the event register readout should be performed.

Option value:

number - number of seconds.

Default value: 10.

Definition files path

Meaning: The option defines the full path to the directory in which the driver will be searching for files with event definition (**event.xml**) and files with format definitions (**format.xml**).

Option value:

path - full path to the directory.

Default value: -.

Event definitions file

Meaning: The option defines the name of XML file with event definition. The option is global one, but may be overloaded by the same option defined in the communication channel parameters (**MupaszRtu_TCPIP** tab / **Channel parameters**).

Option value:

file_name - full path to the directory.

Format definitions file

Meaning: The option defines the name of XML file with format definition. The option is the global one, but it may be overloaded by the same option declared in the communication channel parameters (**MupaszRtu_TCPIP** tab / **Channel parameters**).

Option value:

file_name

Registration of disturbances in AsLogger database

Meaning: The option changes over the driver to the mode of writing recorder trend to a database. It concerns samples from disturbance and criterion recorders.

Option value:

SERVERNAME - MS SQL SERVER NAME
DatabaseName - database name of the *ServerName* server

Default value: Disturbances are not recorded.

Number of repetitions of disturbances registrar

Communication Drivers

Meaning: The option defines the number of repetitions in case of transmission error.

Option value:

number - number of repetitions.

Default value: 0 (no repetition).

Disturbance names files path

Meaning: The option defines full path to the directory of files with recording plan definitions.

Option value:

path - full path to the directory.

Channel Parameters

The channel parameters are defined in the *Current Data* module, in the channel operating according to MupaszRtu_TCPIP driver. Options are placed on the tabs: **MupaszRtu_TCPIP / Channel parameters 2, MupaszRtu_TCPIP / Driver parameters - diagnostics**. These options refer only to the channel.

Password

Meaning: The option defines the password of the user registered in Mupasz 710 device. The password is necessary to read interferences of the recorder.

Option value:

password - four-character text.

Default value: By default, the password is defined by the driver option, if not - the following value is taken: „1111”.

Number of repetitions

Meaning: The option defines the number of query in the case of response error in that channel. When the number of repetitions is exhausted the connection with the device is closed and re-established.

Option value:

number - the number of connection repetitions.

Default value: By default, the password is defined by the driver option.

Response timeout

Meaning: The option defines the maximal time of waiting for response from the device.

Option value:

number - timeout in milliseconds.

Default value: 500.

Response delay

Meaning: The option defines the time of delay between sending the query to the device and starting the operation of getting response. The use of this option has a sense in case of considerable defragmentation of the response.

Option value:

number - delay in milliseconds

Default value: 20.

Event definitions file

Meaning: The option defines the name of XML file with event definition. The option may overload the same option defined in the driver parameters.

Option value:

file_name - full path to the directory.

Format definitions file

Meaning: The option defines the name of XML file with format definition. The option may overload the same option declared in the driver parameters.

Option value:

file_name

Log file

Meaning: The item allows to define a file where all diagnostic messages of the driver in the given communication channel are written.

Option value:

log_file_name

Default value: By default, the log file is defined by the driver option.

Log file size

Meaning: The item allows to specify the size of log file size defined by the option *Log file* of the given channel.

Option value:

number - log file size in MB.

Default value: 10 MB.

Log of telegrams

Meaning: The item allows to write to the log file the contents of telegrams sent between the driver and network clients in the given channel. Writing the contents of telegrams to the log file should be used only while the **Asix** start-up.

Option value: YES/NO

Default value: NO.

Examples of Driver Parameters

Driver: MupaszRtu_TCPIP

Log file: c:\tmp\mupasz.log

Disturbance log file: c:\tmp\zaklocenia.log

Log file size: 20

Log of telegrams: TAK

Event check period: 10

Registration of disturbances in AsLogger database: SERWER_RO6, BAZA_RO6

Disturbance names files path: c:\tmp\DefZaklocen

Definition files path: c:\tmp\DefFiles

Password: 1234

Examples of Channel Parameters

ChannelName: KANALX

Log file: c:\tmp\kanalx.log

Event definitions file: kanalx\Event.xml

Format definitions file: kanalx\Format.xml

Password: 4321

1.66 CtMus04 - driver for data exchange with MUS-04 control devices from ELEKTROMETAL S.A.

Driver Use

The CtMus04 protocol driver allows data between the Asix system and the microprocessor-based control devices MUS-04 manufactured by ELEKTROMETAL S.A. from Cieszyn to be exchanged. The transmission is executed with the use of serial links by means of standard computer serial ports in RS-485 standard.

Parameterization of the CtMus04 driver is performed with the use of the Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel operating according to CtMus04 protocol requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtMus04

CtMus04 tab:

Channel parameter:
Port=number; No=number
[[[*Timeout=number*];*CharTimeout=number*];*TransmissionDelay=number*]

where:

<i>Port</i>	- serial port number,
<i>No</i>	- number of Mus04 supported through this channel,
<i>Timeout</i>	- max. waiting time for the first response character (in milliseconds); by default – 1000 milliseconds;
<i>CharTimeout</i>	- max. waiting time between the response characters (in milliseconds); by default – 100 milliseconds;
<i>TransmissionDelay</i>	- means a beak in milliseconds between the end of receiving the data from the device and sending a next inquiry to the device.

Transmission parameters are constant and have the following values:

- transmission speed 2400 Bd,
- 8 character bits,
- no parity bit,
- 1 stop bit.

EXAMPLE

An example of the declaration of the transmission channel for communication with the Mus04 devices no. 1 and 2 with the use of the COM2 serial port and with Mus04 no. 3 with the use of the COM1 serial port.

Name: K1

Driver: CtMus04

Channel parameters: Port=2;No=1

Name: K2

Driver: CtMus04

Channel parameters: Port=2;No=2

Name: K3

Driver: CtMus04

Channel parameters: Port=1;No=3

Addressing Variables

Symbolic address of the process variable has the following syntax:

<type>.<index>

where:

type - variable type,
index - index within type – in relation to the variable reading operation.

Variable types markings (in the brackets, the raw variable value type is given) are discussed below:

Read-only variable types:

R1 – information on MUS status, index range 1 – 12, index meanings – as in box 161,

R2 – is not used,

R3 – function matrix, index range 1 – 9, index meanings – as in box 163,

R4 – delay times, index range 1 – 8, index meanings – as in box 164,

R5 – retention times, index range 1 – 8, index meanings – as in box 164,

R6 – description of input determined by the index, index range 1 – 8,

R7 – description of output determined by the index, index range 1 – 8,

R8 – access password, only index 1,

R9 – input settings, index range 1 – 8, index meanings – as in box 169,

R10 – output settings, index range 1 – 8, index meanings – as in box 170,

R11 – MW settings, only index 1,

R12 – settings change information, only index 1,

R13 – additional settings information, only index 1.

Write-only (control) variables types:

W1 – RESET,

W2 – change of MUS number, it is not implemented,

W3 – sending new function matrix – buffer must have frame format of 3,

W3 – sending new delay times – buffer must have frame format of 4,

W5 – sending new retention times – buffer must have frame format of 5,

W6 – sending new retention times – buffer must have frame format of 6,

W7 – sending output description – buffer must have frame format of 7,

W8 – sending access password – buffer must have frame format of 8,

W9 – sending new input settings – buffer must have frame format of 9,

W10 – sending new output settings – buffer must have frame format of 10,

W11 – sending new MW settings – buffer has a size of 1 byte,

W12 – deleting bits related to settings change – buffer has a size of 1 byte.

Writing variables of **W6**, **W7** and **W8** types can be executed from **CAPTION** objects.

Writing variables of **W11** and **W12** types can be executed from **NUMBER** objects.

Writing variables of the remaining types can be executed with the use of scripts.

EXAMPLES

Examples of variable declaration – channel K1 supports the Mus-04 device no.1, channel K2 supports the Mus-04 device no.2:

```
JJ_10, IN1 input status of Mus-04 no. 1,      R1.1, K1, 1, 1, NIC
JJ_11, IN8 input status of Mus-04 no. 2,      R1.8, K2, 1, 1, NIC
JJ_12, battery voltage for Mus-04 no. 1,      R1.10, K1, 1, 1, NIC_FP
JJ_13, supply voltage of Mus-04 no. 2,        R1.11, K2, 1, 1, NIC_FP
JJ_14, description of input no. 1 of Mus-04 no. 2, R6.1, K2, 1, 1, NIC_TEXT
JJ_15, description of output no.5 of Mus-04 no.1, R7.5, K1, 1, 1, NIC_TEXT
JJ_16, delay time no. 2 of Mus-04 no. 1,      R4.2, K1, 1, 1, NIC
JJ_16, settings of inputs no. 3 of Mus-04 no. 1, R9.3, K1, 1, 1, NIC
JJ_17, settings of outputs no. 4 of Mus-04 no. 2, R10.4, K2, 1, 1, NIC
```

Variables used only for execution of controls:

```
JJ_20, sending RESET order to Mus-04 no. 2,   W1, K2, 1, 1, NIC
JJ_21, new matrix settings for Mus-04 no. 2,   W3, K2, 9, 1, NIC_BYTE
JJ_22, new delay times settings for Mus-04 no. 1, W4, K1, 8, 1, NIC_BYTE
JJ_23, new input settings for Mus-04 no. 1,    W9, K1, 8, 1, NIC_BYTE
JJ_24, new output settings for Mus-04 no. 2,   W10, K2, 8, 1, NIC_BYTE
```

Driver Parameterization

The CtMus04 driver parameters are declared in the *Miscellaneous* module, on *Directly entered options* tab.

Section name: CtMus04

Option name: LOG_FILE

Option value: log_filename

Meaning - a text log file, where the driver operation status messages are entered.

Default value - by default, the log file is not created.

Defining - manual.

Section name: CtMus04

Option name: LOG_FILE_SIZE

Option value: number

Meaning - option is used to determine the size of the log file defined with use of the LOG_FILE option.

Default value - default log file size is 10 MB.

Parameters:

number - log file size in MB.

Defining - manual.

Section name: CtMus04

Option name: LOG_OF_TELEGRAMS

Option value: YES/NO

Meaning - allows the contents of telegrams sent between the driver and controllers to the log file (declared with use of LOG_FILE option) to be saved. The discussed option can be used only during the asix system start-up.

Default value - by default, the option value is set to NO.

Defining - manual.

EXAMPLE OF DRIVER SECTION:

Section name: CTMUS04
Option name: LOG_FILE
Option value: d:\tmp\CtMus04\mus.log

Section name: CTMUS04
Option name: LOG_FILE_SIZE
Option value: 20

Section name: CTMUS04
Option name: LOG_OF_TELEGRAMS
Option value: YES

1.67 MUZ - Driver of Protocol for MUZ Devices

Driver Use

The MUZ driver is used for data exchange between Microprocessor Protecting Devices (MUZ) of the MUZ-RO type made by JMTronik Warsaw and an Asix system computer.

In the current driver version logical channels are connected with serial ports that service MUZ-RO devices, and not with each of MUZ-RO devices separately.

Parameterization of MUZ driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the MUZ driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: MUZ

MUZ tab:

Channel parameters:
port

where:

port - address of the serial port (HEX), which the connection with MUZ-RO devices will be realized by.

The separate logical channel declaration is demanded for each serial port used by the MUZ driver.

Declaration of Device

Declaration of all MUZ-RO devices serviced by the MUZ driver is realized by means of the MUZ position set in the separate **MUZ** section. Each device should have the separate MUZ position.

The MUZ position includes the parameters used for logical channel declaration in the previous driver version. The position syntax is given below:

channel_name,id,type,alarmTxtOff,alarmValOff,var_status,var_control

where:

channel_name - name of the logical channel declared in the [ASMEN] section, which the given MUZ-RO device will be serviced by;
id - number of MUZ-RO in the network;
type - identifier of the MUZ type (for MUZ-RO it is 7);
alarmTxtOff - number added to the number of a text alarm transferred from MUZ-RO;

<i>alarmValOff</i>	- number added to the alarm number with the value transferred from MUZ-RO;
<i>var_status</i>	- variable that shows the status of transmission with MUZ-RO;
<i>var_control</i>	- variable that controls the realization of transmission with MUZ-RO.

Parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

Syntax of Symbolic Variable Address

The previous symbolic address of the variable has been extended by the prefix containing the MUZ-RO device number. The present address is as follows:

Address.IdMUZ

where:

<i>Address</i>	- the previous address of the symbolic variable;
<i>IdMUZ</i>	- number of the MUZ-RO device, which the variable with the <i>Address</i> address is received from.

Symbolic Addresses and Kinds of Variables Used in Data Exchange with MUZ Devices

In the operation of data exchange with MUZ devices, the variables are divided into groups differing with data kind and addressing method. To each group a different symbolic address is assigned. The variables are divided into the following groups:

- values of analog measures;
- binary inputs handled together with measurements (state of single bits is transferred);
- binary inputs handled together with measurements (state of 16 successive SPi variables is transferred);
- rated values and settings of protections;
- binary inputs related to settings of protections;
- variable storing states of events with value;
- variable storing states of text events;
- control variables.

The way of configuring the individual groups of variables is described below.

Table 9. Values of Analog Measures.

Symb. Addr.	Variable in MUZRO	Type of Conversion	Allowed Operation
P1	Current I0	Byte3->Float	Reading
P2	Current I1	Byte3->Float	Reading
P3	Current I2	Byte3->Float	Reading
P4	Current I3	Byte3->Float	Reading
P5	Voltage U0	Byte3->Float	Reading
P6	Voltage U1	Byte3->Float	Reading
P7	Voltage U2	Byte3->Float	Reading
P8	Voltage U3	Byte3->Float	Reading
P9	cos(f1)	Byte4->Float	Reading
P10	cos(f2)	Byte4->Float	Reading
P11	cos(f3)	Byte4->Float	Reading
P12	active power	Byte3->Float	Reading
P13	reactive power	Byte3->Float	Reading
P14	active energy	BCD6->Float	Reading
P15	reactive energy	BCD6->Float	Reading

Table 10. Binary Inputs Handled Together with Measurements (State of Single Bits is Transferred)

8	Variable in MUZRO	Type of Conversion	Allowed Operation
SP1	switch status, closed	Bit (0/1)->Word	Reading
SP2	switch status, closed	Bit (0/1)->Word	Reading
SP3	freely used by client	Bit (0/1)->Word	Reading
SP4	freely used by client	Bit (0/1)->Word	Reading
SP5	local opening of switch	Bit (0/1)->Word	Reading
SP6	freely used by client	Bit (0/1)->Word	Reading
SP7	freely used by client	Bit (0/1)->Word	Reading
SP8	local closing of switch	Bit (0/1)->Word	Reading
SP9	signal for technological protection	Bit (0/1)->Word	Reading
SP10	signal for technological protection 10	Bit (0/1)->Word	Reading
SP11	signal for technological protection 11	Bit (0/1)->Word	Reading
SP12	signal for technological protection 12	Bit (0/1)->Word	Reading
SP13	signal for technological protection 13	Bit (0/1)->Word	Reading
SP14	signal for technological protection 14	Bit (0/1)->Word	Reading
SP15	signal for technological protection 15	Bit (0/1)->Word	Reading
SP16	signal for technological protection 16	Bit (0/1)->Word	Reading
SP17	signal for technological protection 17	Bit (0/1)->Word	Reading
SP18	lock of function of undervoltage protection	Bit (0/1)->Word	Reading
SP19	not used – 0	Bit (0/1)->Word	Reading
SP20	not used – 0	Bit (0/1)->Word	Reading
SP21	not used – 0	Bit (0/1)->Word	Reading
SP22	not used – 0	Bit (0/1)->Word	Reading
SP23	1 – MUZ signals operation of one of protections	Bit (0/1)->Word	Reading
SP24	not used – 0	Bit (0/1)->Word	Reading

Table 11. Binary Inputs Handled Together with Measurements (State of 16 Successive SPi Variables is Transferred)

Symb. Addr.	Variable in MUZRO	Type of Conversion	Allowed Operation
SPW	actual status of variables SP1 (Bit 0) – SP16	WORD ->WORD	Reading
SPW	actual status of variables SP17 (Bit0) – SP24	WORD->WORD	Reading
	(Bits B8 – B15 are filled with zeroes)		

Table 12. Specific Variable in MUZRO.

Symb. Addr.	Variable in MUZRO	Type of Conversion	Allowed Operation
RP1	Number of not read events (operation of protections)		Reading
RP2	event code (1-22) if RP1 != 0		Reading

Table 13. Rated Values and Settings of Protections.

Symb. Addr.	Variable in MUZRO	Type of Conversion	Allowed Operation
Z1	Voltage Uzn	Byte3<->Float	Read/Write
Z2	Current Izn	Byte3<->Float	Read/Write
Z3	Utilization factor of network Iw	Byte3<->Float	Read/Write
Z4	Coefficient kcdc - current cutter	Byte3<->Float	Read/Write
Z5	Coefficient ki>> - short-circuit protection	Byte3<->Float	Read/Write
Z6	Coefficient ti>> - short-circuit protection	Byte3<->Float	Read/Write
Z7	Coefficient ki> - independent overload protection	Byte3<->Float	Read/Write
Z8	Coefficient ti> - independent overload protection	Byte3<->Float	Read/Write
Z9	Coefficient t1.2 - dependent overload protection	Byte3<->Float	Read/Write
Z10	Coefficient t1.5 - dependent overload protection	Byte3<->Float	Read/Write
Z11	Coefficient t2.0 - dependent overload protection	Byte3<->Float	Read/Write
Z12	Coefficient t3.0 - dependent overload protection	Byte3<->Float	Read/Write
Z13	Coefficient t6.0 - dependent overload protection	Byte3<->Float	Read/Write
Z14	Coefficient ta - dependent overload protection	Byte3<->Float	Read/Write
Z15	Coefficient Ii0> - ground-fault protection	Byte3<->Float	Read/Write
Z16	Coefficient ti0> - ground-fault protection	Byte3<->Float	Read/Write
Z17	Coefficient ku< - undervoltage protection	Byte3<->Float	Read/Write
Z18	Coefficient tu< - undervoltage protection	Byte3<->Float	Read/Write
Z19	Coefficient tt9 - technological protection 9	Byte3<->Float	Read/Write
Z20	Coefficient tt10 - technological protection 10	Byte3<->Float	Read/Write
Z21	Coefficient tt11 - technological protection 11	Byte3<->Float	Read/Write
Z22	Coefficient tt12 - technological protection 12	Byte3<->Float	Read/Write
Z23	Coefficient tt13 - technological protection 13	Byte3<->Float	Read/Write
Z24	Coefficient tt14 - technological protection 14	Byte3<->Float	Read/Write
Z25	Coefficient tt15 - technological protection 15	Byte3<->Float	Read/Write
Z26	Coefficient tt16 - technological protection 16	Byte3<->Float	Read/Write
Z27	Coefficient tt17 - technological protection 17	Byte3<->Float	Read/Write
Z28	Coefficient tiE - impulse time on output E	Byte3<->Float	Read/Write
Z29	Coefficient tiF - impulse time on output F	Byte3<->Float	Read/Write

Table 14. Binary Inputs Related to Settings of Protections.

Symb. Addr.	Variable in MUZRO	Type of Conversion	Allowed Operation
SZ1	on/off - current cutter	Bit (0/1)<->Word	Read/Write
SZ2	on/off - short-circuit protection	Bit (0/1)<->Word	Read/Write
SZ3	op/sign. - overload protection,	Bit (0/1)<->Word	Read/Write
SZ4	on/off - overload protection,	Bit (0/1)<->Word	Read/Write
SZ5	op/sign. - overload protection, dependent	Bit (0/1)<->Word	Read/Write
SZ6	on/off - overload protection, dependent	Bit (0/1)<->Word	Read/Write
SZ7	op/sign. - ground-fault protection	Bit (0/1)<->Word	Read/Write
SZ8	on/off - ground-fault protection	Bit (0/1)<->Word	Read/Write
SZ9	op/sign. - undervoltage protection	Bit (0/1)<->Word	Read/Write
SZ10	on/off - undervoltage protection	Bit (0/1)<->Word	Read/Write
SZ11	op/sign. - technological protection 9	Bit (0/1)<->Word	Read/Write
SZ12	dep./indep. - technological protection 9	Bit (0/1)<->Word	Read/Write
SZ13	op/sign. - technological protection 10	Bit (0/1)<->Word	Read/Write
SZ14	dep./indep. - technological protection 10	Bit (0/1)<->Word	Read/Write
SZ15	op/sign. - technological protection 11	Bit (0/1)<->Word	Read/Write
SZ16	dep./indep. - technological protection 11	Bit (0/1)<->Word	Read/Write
SZ17	op/sign. - technological protection 12	Bit (0/1)<->Word	Read/Write
SZ18	dep./indep. - technological protection 12	Bit (0/1)<->Word	Read/Write
SZ19	op/sign. - technological protection 13	Bit (0/1)<->Word	Read/Write
SZ20	dep./indep. - technological protection 13	Bit (0/1)<->Word	Read/Write
SZ21	op/sign. - technological protection 14	Bit (0/1)<->Word	Read/Write
SZ22	dep./indep. - technological protection 14	Bit (0/1)<->Word	Read/Write
SZ23	op/sign. - technological protection 15	Bit (0/1)<->Word	Read/Write
SZ24	dep./indep. - technological protection 15	Bit (0/1)<->Word	Read/Write
SZ25	op/sign. - technological protection 16	Bit (0/1)<->Word	Read/Write
SZ26	dep./indep. - technological protection 16	Bit (0/1)<->Word	Read/Write
SZ27	op/sign. - technological protection 17	Bit (0/1)<->Word	Read/Write
SZ28	dep./indep. - technological protection 17	Bit (0/1)<->Word	Read/Write

Table 15. Variables Storing States of Events with Value.

Symb. Addr.	Variable in MUZRO	Type of Conversion	Allowed Operation
ZW8	Current cutter – phase 0	Bit (0/1)->Word	Read/Write
ZW9	Current cutter – phase 3	Bit (0/1)->Word	Read/Write
ZW10	Current cutter – phase 2	Bit (0/1)->Word	Read/Write
ZW11	Current cutter – phases 2 and 3	Bit (0/1)->Word	Read/Write
ZW12	Current cutter – phase 1	Bit (0/1)->Word	Read/Write
ZW13	Current cutter – phases 1 and 3	Bit (0/1)->Word	Read/Write
ZW14	Current cutter – phases 1 and 2	Bit (0/1)->Word	Read/Write
ZW15	Current cutter – phases 1, 2 and 3	Bit (0/1)->Word	Read/Write
ZW16	Short-circuit protection – phase 0	Bit (0/1)->Word	Read/Write
ZW17	Short-circuit protection – phase 3	Bit (0/1)->Word	Read/Write
ZW18	Short-circuit protection – phase 2	Bit (0/1)->Word	Read/Write
ZW19	Short-circuit protection – phases 2 and 3	Bit (0/1)->Word	Read/Write
ZW20	Short-circuit protection – phase 1	Bit (0/1)->Word	Read/Write
ZW21	Short-circuit protection – phases 1 and 3	Bit (0/1)->Word	Read/Write
ZW22	Short-circuit protection – phases 1 and 2	Bit (0/1)->Word	Read/Write
ZW23	Short-circuit protection – phases 1, 2 and 3	Bit (0/1)->Word	Read/Write
ZW24	Independent overload protection – phase 0	Bit (0/1)->Word	Read/Write
ZW25	Independent overload protection – phase 3	Bit (0/1)->Word	Read/Write
ZW26	Independent overload protection – phase 2	Bit (0/1)->Word	Read/Write
ZW27	Independent overload protection – phases 2 and 3	Bit (0/1)->Word	Read/Write
ZW28	Independent overload protection – phase 1	Bit (0/1)->Word	Read/Write
ZW29	Independent overload protection – phases 1 and 3	Bit (0/1)->Word	Read/Write
ZW30	Independent overload protection – phases 1 and 2	Bit (0/1)->Word	Read/Write
ZW31	Independent overload protection – phases 1, 2 and 3	Bit (0/1)->Word	Read/Write
ZW32	Dependent overload protection – phase 0	Bit (0/1)->Word	Read/Write
ZW33	Dependent overload protection – phase 3	Bit (0/1)->Word	Read/Write
ZW34	Dependent overload protection – phase 2	Bit (0/1)->Word	Read/Write
ZW35	Dependent overload protection – phases 2 and 3	Bit (0/1)->Word	Read/Write
ZW36	Dependent overload protection – phase 1	Bit (0/1)->Word	Read/Write
ZW37	Dependent overload protection – phases 1 and 3	Bit (0/1)->Word	Read/Write
ZW38	Dependent overload protection – phases 1 and 2	Bit (0/1)->Word	Read/Write
ZW39	Dependent overload protection – phases 1, 2 and 3	Bit (0/1)->Word	Read/Write
ZW40	Ground-fault protection	Bit (0/1)->Word	Read/Write
ZW64	Undervoltage protection – phase 0	Bit (0/1)->Word	Read/Write
ZW65	Undervoltage protection – phase 3	Bit (0/1)->Word	Read/Write
ZW66	Undervoltage protection – phase 2	Bit (0/1)->Word	Read/Write
ZW67	Undervoltage protection – phases 2 and 3	Bit (0/1)->Word	Read/Write
ZW68	Undervoltage protection – phase 1	Bit (0/1)->Word	Read/Write
ZW69	Undervoltage protection – phases 1 and 3	Bit (0/1)->Word	Read/Write
ZW70	Undervoltage protection – phases 1 and 2	Bit (0/1)->Word	Read/Write
ZW71	Undervoltage protection – phases 1, 2 and 3	Bit (0/1)->Word	Read/Write

Table 16. Variable Storing States of Text Events.

Symb. Addr.	Variable in MUZRO	Type of Conversion	Allowed Operation
ZT1	Short-circuit PDZ (accelerated protections)	Bit (0/1)->Word	Read/Write
ZT4	Failure of shutdown	Bit (0/1)->Word	Read/Write
ZT5	Failure of switching on	Bit (0/1)->Word	Read/Write
ZT7	Opening of remote control	Bit (0/1)->Word	Read/Write
ZT8	Closure of remote control	Bit (0/1)->Word	Read/Write
ZT38	Technological protection 9	Bit (0/1)->Word	Read/Write
ZT39	Technological protection 10	Bit (0/1)->Word	Read/Write
ZT40	Technological protection 11	Bit (0/1)->Word	Read/Write
ZT41	Technological protection 12	Bit (0/1)->Word	Read/Write
ZT 48	Technological protection 13	Bit (0/1)->Word	Read/Write
ZT49	Technological protection 14	Bit (0/1)->Word	Read/Write
ZT50	Technological protection 15	Bit (0/1)->Word	Read/Write
ZT51	Technological protection 16	Bit (0/1)->Word	Read/Write
ZT52	Technological protection 17	Bit (0/1)->Word	Read/Write
ZT116	Bad clock setting	Bit (0/1)->Word	Read/Write
ZT117	Checksum error (MUZ failure)	Bit (0/1)->Word	Read/Write

Table 17. Control Variables.

Symb. Addr.	Variable in MUZRO	Type of Conversion	Allowed Operation
KS1	Quitting signals of protection activation (writing any and zeroing statuses of all variables ZTi and ZWi in internal driver buffer	Word->Word	Writing
SW1	Opening (0) and closure of breaker (1)	Word->Word	Writing
KZ1	Zeroing statuses of all variables ZTi and ZWi in internal driver buffer (writing any number)	Word->Word	Writing

Meanings of Abbreviations

- On - protection switched on (1),
- Off - protection switched off (0),
- Op - protection causes opening of a breaker (1),
- Sygn - protection causes activation of a signalization (0),
- Dep. - protection is active when a breaker is closed (0),
- Indep. - protection is active independently.

Declaring the Permission for Control

Group handling the MUZ-RO devices has an effect on passing control permissions. It results from the fact that the ASMEN positions declaring control permissions refer to the individual logical channels. In the previous MUZ driver version (v 1.3.1.) the logical channel was assigned to the singular MUZ-RO device and it allowed passing permissions for each of MUZ-ROs individually. In the current group version of the driver the logical channel may group a few MUZ-RO devices and permissions for control refer to all the MUZ-RO devices handled by the given logical channel.

Configuring the Driver

MUZ driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

Section name: MUZ

Option name: RECV_TIMEOUT

Option value: number

Meaning - the item allows to determine a maximal waiting time between sending a query and receiving an answer (so called receiving timeout). The parameter value is passed for all handled MUZ-RO devices globally.

Default value - 1000.

Defining - manually.

Parameters:
number - timeout value in milliseconds.

Section name: MUZ

Option name: LOG_FILE

Option value: file_name, file_size

Meaning - allows to define a file to which all diagnostic driver messages and information about the content of telegrams sent/received by the driver will be written. If the item LOG_FILE does not defines the full path then the log file will be created in the current directory.

Default value - log file is not created.

Defining - manually.

Parameters:
file_name - log file name;
file_size - log file size in MB;

Section name: MUZ

Option name: DATA_UPDATE

Option value: number

Meaning - the item allows to specify an acceptable time difference between the time stamp of the variable stored in the driver cache and the current system time. After exceeding the acceptable difference the driver performs reading the variable from the MUZ-RO device.

Default value - by default the item assumes the value of 0.

Defining - manual.

Parameters:
number - time value in seconds;

Section name: MUZ

Option name: TIME_UPDATE

Option value: number

Meaning - the item allows to specify the global period of updating the time between the Asix system and the MUZ-RO device.

Default value - by default the item assumes the value of 1.

Defining - manual.

Parameters:
number - time value in minutes.

Section name: MUZ

Option name: LOG_OF_TELEGRAMS

Option value: YES/NO

Meaning - the item allows writing to the log file (declared with use of LOG_FILE item) the contents of telegrams transmitted during the data exchange between the Asix system and MUZ-ROs; writing the

Communication Drivers

telegrams content to the log file should be used only during starting the Asix system.

Default value - by default the file is not created.
Defining - manual.

Section name: MUZ

Option name: NUMBER_OF_REPETITIONS

Option value: number

Meaning - the item allows to define maximal number of trials to do the command in case of transmission errors.

Default value - by default the repetitions are not realized.

Defining - manual.

Parameters:

number

- number of repetitions in case of transmission error.

1.68 CtNCP - Driver for MN-Series Drivers from Invensys

Driver Use

The CtNCP driver is used to exchange data between the Asix system and MN-series controllers from Invensys (former Satchwell). Communication is performed by the use of serial links in standard RS-485.

Parameterization of the CtNCP4 driver is performed by the Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel operating according to CtNCP protocol requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtNCP

CTNCP TAB:

Channel parameter:
Port=port_number, No.=slave_number

where:

Port - COM serial port number,
No - MN controller number set on the controller switch.

Transmission parameters are constant and have the following values:

- speed **9600** bps,
- 8 data bits,
- no parity control,
- 1 stop bit.

EXAMPLE

Below is an example of the declaration of the CHANNEL channel, where the MN-440 controller with a network number of 5 is supported. The communication is performed through the port COM2:

Name: CHANNEL
Driver: CtNCP
Channel parameters: Port=2; No.=5

Variable Declaration

The driver provides the following variable types:

B	- byte,
R	- 16-bit number,
RL	- 32-bit number,
RF	- floating point number.

The variable address has the following syntax:

<Type><ArrNo><Index>

where:

Type	- variable type name,
ArrNo	- data array number in the controller,
Index	- byte number in the array specified by 'r;ArrNo'.

EXAMPLE

Examples of variables declaration:

X11, byte 0 from array 114, B114.0, CHANNEL, 1, 1, NIC_BYTE
 X12, WORD consisting of bytes 2 and 3 of array 110, R110.2, CHANNEL, 1, 1, NIC
 X13, DWORD consisting of bytes from 4 to 7 of array 8, RL8.4, CHANNEL, 1, 1, NIC_DW
 X14, FLOAT consisting of bytes from 8 to 11 of array 12, RF12.8, CHANNEL, 1, 1, NIC_FP

Driver Parameterization

The MUZ driver parameters are declared in the *Miscellaneous* module, on *Directly entered options* tab.

- Section name: CTNCP**
- Option name: LOG_FILE**
- Option value: log_filename**

Meaning - the diagnostic purposes are fulfilled by a text log file, where the driver operation status messages are entered.
 Default value - by default, the log file is not created.

- Section name: CTNCP**
- Option name: LOG_FILE_SIZE**
- Option value: number**

Meaning - the option is used to determine the log file size.
 Parameter:
 number - log file size in MB.
 Default value - log file size is 1 MB.

- Section name: CTNCP**
- Option name: LOG_OF_TELEGRAMS**
- Option value: YES | NO**

Meaning - option allows the contents of telegrams sent between the driver and controllers to the log file (declared with use of *LOG_FILE*)

option) to be saved. The subject option should be used only during the start-up of the Asix system.
Default value - NO.

Section name: CTNCP

Option name: MAX_BUFFER_LEN

Option value: number

Meaning - option determines the maximum number of bytes which can be asked for in a single readout request.

Default value - 64.

EXAMPLE

Example of driver parameterization:

Section name: CTNCP

Option name: LOG_FILE

Option value: d:\tmp\CtNcp\ncp.log

Section name: CTNCP

Option name: LOG_FILE_SIZE

Option value: 3

Section name: CTNCP

Option name: LOG OF TELEGRAMS

Option value: YES

1.69 NetLink - Driver of MPI/Profibus Protocol for SIMATIC S7 by using NetLink Lite SYSTEME HELMHOLZ Module

Driver Use

The NetLink driver is used for data exchange between Asix computers and SIMATIC S7 PLCs by using an MPI/Profibus.

The advantage of NetLink driver is that it uses inexpensive and easy to use the NetLink Lite module which is the gateway of Ethernet for MPI or PROFIBUS data bus of S7 controllers. This method of communication is an attractive alternative to solutions based on SOFTNET software and CP5611/CP5613 cards of SIEMENS.

NetLink Lite module is manufactured by Systeme Helmholtz GmbH, and is distributed in Poland by MEDIOTECH (www.mediotech.pl).

Limitations of using NetLink Lite:

- a) the module can handle maximally 2 clients at the same time;
- b) during communication between a Netlink Lite module and PLCs (more than one) it is necessary to take into account a time needed for the module to switch over between PLCs (an exemplary configuration having been tested consisted of 3 PLCs, and the time of switching amounted to about 80 msec/PLC).

The NetLink driver needs ASMEN v. 4.6.8 or newer one.

Parameterization of CtM200 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the NetLink driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: *NetLink*

NetLink tab:

Channel parameters:

IP, port, address [, *contr_var* [, *alarm_nr*] [, *error_signal*]]

where:

- IP* - IP address assigned to the NetLink Lite module;
- port* - port number (1099);
- address* - PLC address on the MPI/Profibus Network;
- contr_var* - variable name used for control of the PLC's RUN-STOP state;
- alarm_nr* - alarm number generated when changing the PLC's RUN-STOP state; by default the alarm is not generated;

error_signal - setting an error status for all the variables in a defined channel in case of switching the PLC to STOP; by default, an error status is set.

Addressing Process Variables

The rules for creating symbolic addresses of variables belonging to the channel that uses the NetLink driver are the same as for the SAPI7 driver – see: SAPI7 - Driver of SAPI7 Protocol for SIMATIC S7 PLCs.

Driver Configuration

NetLink driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **NETLINK** section.

- Section name: NETLINK**
- Option name: STATISTICS**
- Option value: yes/no**

Meaning - the item allows to display (every 1 minute) information about number of transmission sessions that have been carried-out, average transmission time and number of transmission errors. The item was developed as a designer support on the stage of the Asix system start-up.

Default value - by default, the transmission statistics is not displayed.

- Section name: NETLINK**
- Option name: LOG_FILE**
- Option value: file_name**

Meaning - the item allows to define a file to which all NetLink driver messages concerning operations performed by the driver are written. If the item does not define the full name, then the log file is created in the current directory.

Default value - by default, the log file is not created.

- Section name: NETLINK**
- Option name: LOG_FILE_SIZE**
- Option value: number**

Meaning - declares the log file size.

Default value - 1MB.

Defining - manual.

Parameters:

number - the log file size in MB;

Section name: NETLINK

Option name: TELEGRAM_LOG

Option value: YES|NO

Meaning - declaration of writing the contents of telegrams sent and received by the NetLink driver within reading/writing process variables to the log file declared in the item LOG_FILE.

Default value - NO.

Time Synchronization

See: [SAPIS7 - Driver of SAPIS7 Protocol for SIMATIC S7 PLCs.](#)

Signalization of the Controller's STOP State

See: [SAPIS7 - Driver of SAPIS7 Protocol for SIMATIC S7 PLCs.](#)

1.70 NetLinkPro – Driver for Communication with the S7 Controllers

The NetLinkPro driver (manufactured by SYSTEME HELMHOLZ and distributed in Poland by www.mediotech.pl) task is to communicate with the S7 controllers via the NETLink PRO gateway (an Ethernet <-> MPI/Profibus gateway).

Basic features of the NETLink PRO driver include:

a/ at the Ethernet side it may support simultaneously up to 6 PC computers

b/ at the MPI/PROFIBUS side it may support simultaneously up to 12 controllers.

The NetLinkPro driver requires the ASMEN module version 4.13.1 or higher.

Parameterization of NetLinkPro driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the NetLink driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: NetLinkPro

NetLinkPro tab:

Channel parameters:

deviceNr, slaveNr [, *contr_var* [, *alarm_nr* [, *error_signal*]]]

where:

<i>deviceNr</i>	- number of a NetLink Pro module (with use of configuration software);
<i>slaveNr</i>	- number of a controller in MPI/PROFIBUS network;
<i>contr_var</i>	- variable name used for control of a PLC's RUN-STOP state;
<i>alarm_nr</i>	- alarm number generated when changing the PLC's RUN-STOP state; by default the alarm is not generated;
<i>error_signal</i>	- setting an error status for all the variables in a defined channel in case of switching the PLC to STOP.

Addressing Process Variables

The rules for creating symbolic addresses of variables belonging to the channel that uses the NetLinkPro driver are the same as for the AS512 driver – see: *AS512 - Driver of AS512 Protocol for SIMATIC S5 PLCs* (in „*Communication Drivers – User's Manual*”).

The set of process variables types for NetLinkPro driver protocol has been enriched (compared to AS512 protocol) with the following items:

- EDI - 16-byte words in INTEL convention,
- ER - floating-point number in a data block,
- EB - contents of the data blocks treated as bytes.

The NetLinkPro driver is loaded as a DLL automatically.

Parameters of NetLinkPro Driver

NetLinkPro driver parameters are declared in: Architect > *Miscellaneous* module > *Directly entered options* tab.

The driver is parameterized with use of **NETLINKPRO** section.

Section name: NETLINKPRO

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file to which all NetLinkPro driver messages concerning operations performed by the driver are written. If the item does not define the full name, then the log file is created in the current directory.

Default value - by default, the log file is not created.

Section name: NETLINKPRO

Option name: TELEGRAM_LOG

Option value: file_name

Meaning - declaration of writing the contents of telegrams sent and received by the NetLinkPro driver within reading/writing of process variables to the log file declared in the LOG_FILE item.

Default value - NO.

Section name: NETLINKPRO

Option name: MAX_BUFFER_LEN

Option value: number

Meaning - the length of telegrams accepted by an MPI interface depends on the CPU type of S7 controllers and on a program executed by them.

Default value - by default, length of a telegram equals 220 bytes.

Parameter:

number - length of telegrams passed in bytes.

Section name: NETLINKPRO

Option name: CONSOLE

Option value: YES|NO

Meaning - the item allows to create a console window where NetLinkPro driver messages concerning operations executed by the driver are displayed currently.

Default value - by default, any console window is not created.

Section name: NETLINKPRO

Option name: STATISTICS

Option value: YES|NO

Meaning - the item allows to display (every 1 minute) information about number of transmission sessions that have been carried-out, average transmission time and number of transmission errors. The item was developed as a designer support on the stage of the Asix system start-up.

Default value - by default, the transmission statistics is not displayed.

Section name: NETLINKPRO

Option name: NUMBER_OF_CHECK_READINGS

Option value: number

Meaning - the item specifying a minimal number of successive readings of control variable (of a constant value) which cause a signalization of the controller STOP status.

Default value - by default, the item assumes a value of 3.

Section name: NETLINKPRO

Option name: SERIALISING

Option value: YES|NO

Meaning - declaration of servicing the transmission from the S7 by transferring single YES or many NO queries.

Default value - YES.

Section name: NETLINKPRO

Option name: WITHOUT_MULTIPLE_READ

Option value: YES|NO

Meaning - it allows to block the mode of multiple read creation and enables driver operation in the mode of single read.

Default value - No; in the current version the s7_multiple_read_req function is used by default (it allows to build a multiple read) for maximal use of the length of the telegram buffer sent between PC and S7.

1.71. NETWORK Driver

The **NETWORK** protocol used by the NETSRV.EXE program is a special type of protocol. It does not provide a physical link to a controller, but only connection to any other computer that has such a link. The driver of the network channel, that have established the link, sends a query to all servers, defining the logical name of a channel. The query is responded by only those servers, where such a channel has been previously declared. If more that one server responds the query, the one with the less loaded is chosen to establish the link. If the chosen server is turned off during operation, network link will be established with another server.

The network channel can be used for creating the network terminals that use current variables of Asix.

Declaration of Transmission Channel

Declaration of the transmission channel using the NETWORK driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: NETWORK

Driver Configuration

NETWORK tab:

Option name: List of network names of data servers

Option value: *network_server_names*

Meaning - if data server names are not defined then the workstations can connect to any data server with a required transmission channel declared (the channel with the same name as the channel with the NETWORK driver declared). Otherwise the set of servers will be limited to the list declared in the option.

Default value - NO.

1.72 NONE Driver

Driver Use

The NONE driver uses the NONE protocol internally served by ASMEN. That protocol doesn't realize a physical connection with the controller. It may be used for:

- application testing in simulation mode,
- data exchange between Asix applications by means of process variables.

Declaration of Transmission Channel

Declaration of the transmission channel using the NONE driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: NONE

Driver Configuration

NONE tab:

Option name: Writing data and status

Option value: YES[NO]

Meaning - the option allows to determine a time period after exceeding of which the current time should be sent to remote devices.

Default value - NO.

The item **Writing data and status** causes that in the channel only writing with variable value supplemented with date and status is possible. At present this property is available only from the level of the **AsixConnect** function (write2()).

A status, time and variable value are a subject to the following rules:

- to the moment of the first writing, while reading, the status AVD_BAD is returned;
- while writing, the time given in writing parameters, new status and new variable value is written to the variable;
- the reading following the writing returns parameters of the lately performed writing (value, status and time);
- writing to the variable by using previous writing functions ends with an error code of 24;
- for needs of DEMO (program AS32_demo.exe) objects may perform writes to variables belonging to the NONE channel with the item **Writing data and status** declared.

1.73 CtNordicRF - driver of Nordic ID RF 601 Terminal Made by NordicID Company

Driver Use

CtNordicRF. The exchange of data with Nordic ID RF 601 barcode scanner. Communication takes place using the RS-232 serial interface of the base station.

Parameterization of CtNordicRF driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtNordicRF driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtNordicRF

CtNordicRF tab:

Channel parameters:

Port=*PortNo* [;*ValidTimeout=timeout*] [;*Alarm=AlarmNo*]

where:

Port - number of serial port COM.

ValidTimeout - time (in minutes) between the two telegrams from a terminal after which data received by the driver will be invalidated. Default value: 0 (without invalidating data).

Alarm - number of an alarm called to alarm system of Asix when exceeding ValidTimeout.

Transmission is realized at constant settings:

19200 Bd, 8 bites of mark, no parity control, 1 stop bit.

Declaration of Variables

The driver provides one type of variables:

D - text type

The syntax of variable address is as follows:

D.<termId>.<position>

where:

termId - ID of the terminal (16-bit unsigned)

position - number of position on the terminal display; the value of position is assigned to a variable. By default, two following parameters can be read from the terminal:

1/ Count - position 26

2/ Code - position 46

NOTE:

All variables have the BSTR type, therefore you should use the conversion function NOTHING_TEXT.

EXAMPLE

Exemplary declarations of variables for the terminal with IDs: 30002 and 30004 (variables belong to the logical channel CHANNEL):

```
JJ_11, field Count, D.30002.26, CHANNEL, 1,1,NOTHING_TEXT
```

```
JJ_12, field Code, D.30002.46, CHANNEL, 1,1,NOTHING_TEXT
```

```
jj_21, field Count, D.30004.26, CHANNEL, 1,1,NOTHING_TEXT
```

```
JJ_22, field Code, D.30004.46, CHANNEL, 1,1,NOTHING_TEXT
```

Driver Parameters

CtNordicRF driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **NETLINKPRO** section.

Section name: CtNordicRF

Option name: LOG_FILE

Option value: file_name

Meaning - it allows to define a file to which all diagnostic messages of the driver and the information about the content of telegrams received by the driver will be written.

Default value - log file is not created.

Section name: CtNordicRF

Option name: LOG_FILE_SIZE

Option value: number

Meaning - it allows to determine a log file size in MB.

Default value - 10 MB

Section name: CtNordicRF

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - the item allows to write to the log file (declared by using an item LOG_FILE) the content of telegrams received by the driver.

Writing the content of telegrams should be used only while the Asix start-up.

Default value - NO

EXAMPLE

```
[CTNORDICRF]
```

```
LOG_FILE =d:\tmp\test\centrala.log
```

```
LOG_FILE_SIZE =30
```

```
LOG_OF_TELEGRAMS =YES
```

1.74 OMRON - Driver of HOSTLINK Protocol

Driver Use

The OMRON driver protocol is used for data exchange with OMRON PLCs. The transmission is executed by means of serial interfaces HOSTLINK by using standard serial ports of an Asix system computer.

The cooperation of Asix with the controller by using the OMRON protocol does not require any controller's program adaptation. Before executing controls the driver switches the controller in MOTOROLA mode (if the controller is in the run mode). After control is ended, the controller is switched to mode, in which was operating before executing the control.

Parameterization of CtM200 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel utilizing the OMRON driver requires a channel with the following parameters to be added to the Current data module:

Standard tab:

Name: logical name of the transmission channel

Driver: OMRON

OMRON tab:

Channel parameters: *type*[,*id*],*port*,[*baud*,*character*,*parity*,*stop*]

where:

<i>type</i>	- connection type - SLINK (single link), MLINK (multi link);
<i>id</i>	- controller identifier (unit number), it is used when the connection type was marked as MLINK (multi link);
<i>port</i>	- name of the serial port (COM1 or COM2);
<i>baud</i>	- transmission speed in baud;
<i>character</i>	- number of bits in a transmitted character;
<i>parity</i>	- parity check type (even,odd,none0);
<i>stop</i>	- number of stop bits.

The parameters *baud*, *character*, *parity*, *stop* are optional. In case of omitting them the following default values are assumed:

- transmission speed - 9600 Bd,
- number of bits in a character - 7,
- parity check type - parity check (even),
- number of stop bits - 2.

EXAMPLE

An exemplary declaration of transmission channel working according to the OMRON protocol:

Channel / Name: CHAN1

Driver: OMRON

Channel parameters: MLINK,0,COM1,9600,7,even,2

The transmission channel with the logical name CHAN1 has the following parameters defined:

- OMRON protocol using a serial interface working in MLINK (multi-link);
- identifier of the controller (unit number) 0;
- port COM1;
- transmission channel of 9600 Bd;
- transmitted character length - 7 bits;
- parity check;
- two stop bits.

Transmission Channel Parameters

The transmission channel is parameterized by using a separate section with the name the same as the name of the channel. Parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab:

- using the FINS command,
- network number with the controller,
- node number in the network assigned to the controller.

Using the FINS command

Section name: *channel_name*

Option name: PROTOKOL_FINS

Option value: YES/NO

Meaning - it forces using the commands of FINS during the data exchange with the controller.

Default value - NO. By default, the communication is done using C-MODE commands.

If the options: DNA and DA1 are not used in the channel section, then for the communication in the FINS mode it is assumed that:

- controller network number (DNA),
- controller node number (DA1)

have the value of 0.

Controller network number

Section name: *channel_name*

Option name: DNA

Option value: *number*

Meaning - the option sets the controller network number to the value of DNA and it forces the use of commands of FINS during data exchange with the controller.

Parameter:

number - number of network of the controller.

Default value - 0 (local network).

Controller node number

☑ **Section name:** *channel_name*

☑ **Option name:** **DA1**

☑ **Option value:** *number*

Meaning - The option sets the node number of the controller to the value of the parameter DA1 and forces the use of commands of FINS during data exchange with the controller.

Parameter:

number - controller node number.

Default value - 0 (internal communication in local PLC).

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the OMRON driver channel is as follows:

variable_type variable_index

where:

variable_type - string identifying the variable type in the OMRON protocol,

variable_index - variable index within a given type.

Types of variables available in C-MODE (in parentheses there is a range of variable indexes).

IR - Internal Relay, (0 - 235, 300 - 511),

HR - Holding Relay, (0 - 99),

AR - Auxiliary Relay, (0 - 27),

LR - Link Relay, (0 - 63),

DM - Data Memory, (0 - 6143).

All the process variables are treated as 16-bit numbers.

Types of variables available in FINS:

16-bit types (WORD):

CIO - CIO Area

T - Timer Area

C - Counter Area

WR - Work Area

HR - Holding Area

AR - Auxiliary Bit Area

32-bit types (DWORD):

ARL - Auxiliary Bit Area

CIOL - CIO Area

CL - Counter Area

DML - DM Area

HRL - Holding Area

TL - Timer Area

WRL - Work Area

32-bit types (FLOAT):

Communication Drivers

ARF - Auxiliary Bit Area
CIOF - CIO Area
CF - Counter Area
DMF - DM Area
HRF - Holding Area
TF - Timer Area
WRF - Work Area

64-bit types (DOUBLE):

ARD
CD
CIOD
DMD
HRD
TD
WRD - Auxiliary Bit Area
- Counter Area
- CIO Area
- DM Area
- Holding Area
- Timer Area
- Work Area

64-bit types (INT64):

ARI
CI
CIOI
DMI
HRI
TI
WRI - Auxiliary Bit Area
- Counter Area
- CIO Area
- DM Area
- Holding Area
- Timer Area
- Work Area

EXAMPLES

Exemplary variable declarations:

Name: JJ_02
(C6 i C7 jako DWORD)
Address: CL6
Channel: K1
ElementsCount: 1
SampleRate: 1
ConversionFunction: NOTJING_DW

Name: JJ_03
(DM480 i DM481 as FLOAT)
Address: DMF480
Channel: K1
ElementsCount: 1
SampleRate: 1
ConversionFunction: NOTJING_FP

Name: JJ_04
(DM480 - DM483 as DOUBLE)

Address: DMD480
Channel: K1
ElementsCount: 1
SampleRate: 1
ConversionFunction: NOTJING_DOUBLE

Name: JJ_05
(DM500 – DM503 as INT64)
Address: DMI480
Channel: K1
ElementsCount: 1
SampleRate: 1
ConversionFunction: NOTJING_INT64

Driver Configuration

OMRON driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

- Section name: OMRON**
- Option name: LOG_FILE**
- Option value: file_name**

Meaning	- it allows to define a file to which all diagnostic messages of the driver and the information about the content of telegrams received by the driver will be written. If the item does not define the full path, then the log file will be created in the current directory. The log file should be used only while the Asix start-up.
Default value	- log file is not created.
Defining	- manual

- Section name: OMRON**
- Option name: LOG_FILE_SIZE**
- Option value: number**

Meaning	- it allows to determine a log file size in MB.
Default value	- 1MB
Defining	- manual

- Section name: OMRON**
- Option name: LOG_OF_TELEGRAMS**
- Option value: YES|NO**

Meaning	- the item allows to write to the log file (declared by using an item LOG_FILE) the content of telegrams received by the driver. Writing the content of telegrams should be used only while the Asix start-up.
Default value	- NO
Defining	- manual

- Section name: OMRON**
- Option name: MAX_BUFFER_LEN**
- Option value: number**

Meaning	- maximal length of answer telegrams (counted in bytes). Maximal value is equal to 118.
Default value	- 118 bytes
Defining	- manual

Section name: OMRON

Option name: CHARACTER_TIMEOUT

Option value: *id,number*

Meaning - option allows to specify the maximum time (in seconds) between consecutive characters of response from the specified device. After this time, it is considered that this device is not working properly and the transmission session is completed with an error.

Parameter:

id

- number of the meter in K3N network;

number

- time in milliseconds (from 10 to 300).

Default value

- 50 milliseconds.

Section name: OMRON

Option name: RECV_TIMEOUT

Option value: *number*

Meaning - specifies the maximum time for waiting for device response.

Default value - 0 (no repetition)

1.75. CtOmronTcpi - Driver for Data Exchange with Omron Controllers Supporting the FINS/UDP and FINS/TCP Protocols

Driver Use

CtOmronTcpi protocol driver is used for data exchange between Asix system and Omron controllers supporting the FINS/UDP and FINS/TCP protocols. The driver provides communication with the CS/CJ and CV Series controllers.

CtLZQM driver configuration is performed using the Architect application.

Transmission Channel Declaration

Declaration of the transmission channel operating according to the CtOmronTcpi driver protocol requires adding a channel with the following parameters to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: OmronTcpi

OmronTcpi/Channel parameters tab:

<i>IP address of the device</i>	- controller IP address,
<i>Node number of the device</i>	- controller node number (UDP mode only)
<i>Node number of the PC</i>	- PC node number (UDP mode only)
<i>Alarm number</i>	- The alarm number reported to Asix alarm system in the absence of communication with the controller,
<i>Timeout</i>	- Max. time (in milliseconds) to wait for a response from the controller. By default, 500 milliseconds,
<i>Port</i>	- Controller TCPIP port number supporting the FINS protocol. The default port is 9600.

Example of transmission channel declaration for communication with the controller, IP address 10.10.105.212 in UDP mode (DA1 = 212, SA1 = 50) with time synchronization every minute:

IP=10.10.105.212; DA1=212; SA1=50; Time synchronization=60

Example of transmission channel declaration for communication with the controller, IP address 10.10.105.212 in TCP mode with time synchronization every minute:

IP=10.10.105.212; Time synchronization=60

Declaration of Variables

The general syntax of the process variable symbolic address is as follows:

`<variable_type><variable_index>`

List of 16-bit types (WORD):

AR - Auxiliary Bit Area
C - Counter Area
CIO - CIO Area
DM - DM Area
HR - Holding Area
T - Timer Area
WR - Work Area

List of 32-bit types (DWORD):

ARL - Auxiliary Bit Area
CL - Counter Area
CIOL - CIO Area
DML - DM Area
HRL - Holding Area
TL - Timer Area
WRL - Work Area

List of 32-bit types (FLOAT):

ARF - Auxiliary Bit Area
CF - Counter Area
CIOF - CIO Area
DMF - DM Area
HRF - Holding Area
TF - Timer Area
WRF - Work Area

List of 64-bit types (DOUBLE):

ARD - Auxiliary Bit Area
CD - Counter Area
CIOD - CIO Area
DMD - DM Area
HRD - Holding Area
TD - Timer Area
WRD - Work Area

List of 64-bit types (INT64):

ARI - Auxiliary Bit Area
CI - Counter Area
CIOI - CIO Area
DMI - DM Area
HRI - Holding Area
TI - Timer Area
WRI - Work Area

The driver does not validate the variable index range.

Examples of variable declarations:

JJ_01, HR number 100 WORD, HR100, K1, 1, 1, NIC
JJ_02, C6 and C7 as a DWORD, CL6, K1, 1, 1, NIC_DW
JJ_03, DM480 and DM481 as FLOAT, DMF480, K1, 1, 1, NIC_FP
JJ_04, DM480 - DM483 as DOUBLE, DMD480, K1, 1, 1, NIC_DOUBLE
JJ_05, DM500 - DM503 as INT64, DMI480, K1, 1, 1, NIC_INT64

Driver Parameters

The CtOmronTcpip driver is declared using options from the *Driver parameters* tab.

Log file

Meaning - the text log file to which driver status messages are stored is used for diagnostic purposes.

Default value - Log file is not created.

Parameter:

log_file_name

Log file size

Meaning - determines the log file size in MB.

Default value - 10 MB.

Parameter:

number - number in MB.

Log of telegrams

Meaning - This option allows you to save the contents of messages received by the driver in the log file (declared using the *Log file* option) Writing of the messages in the log file should be used only during the Asix system start-up.

Default value - NO.

Parameter:

YES/NO

IP address of the computer

Meaning - Allows the declaration of a network adapter through which the driver communicates with the controller.

Default value - By default, the option value is set to NO.

Option value:

IPaddress - IPv4 address notation.

Sample Driver Parameterization

Log file: d:\tmp\CtOmronTcpip\mvi.log

Log file size: 20

Log of telegrams: YES

IP address of the computer: 10.10.105.23

Channel Parameters

The transmission channel is configured using a separate options from the *Channel parameters 2* tab.

Log file

Meaning - the text log file to which driver status messages are stored is used for diagnostic purposes.

Default value - Log file declared in driver options.

Parameter:

log_file_name

Log file size

Meaning - determines the log file size in MB.

Default value - declared in driver options.

Parameter:

number - number in MB.

Log of telegrams

Meaning - This option allows you to save the contents of messages received by the driver in the log file (declared using the *Log file* option) Writing of the messages in the log file should be used only during the Asix system start-up.

Default value - declared in driver options.

Parameter:

YES/NO

UDP mode

Meaning - Allows you to set the UDP mode of communication.

Default value - NO, by default, the communication mode is set to TCP.

Parameter:

YES/NO

UTC tme synchronization

Meaning - Allows you to specify a time synchronization using UTC time format instead of local time.

Default value - NO, by default, the local time is communicated to the controller.

Parameter:

YES/NO

Time synchronization

Meaning - the period of time synchronization.

Default value - 1.

Parameter:

number - time in seconds (0 - off)

1.76 OPC Driver

Driver Use

The OPC driver is used for data exchange between Asix system computers and any industrial PLC or SCADA program that has an access to a data server compatible with the OPC 1.0 or OPC 2.05 specification. (OPC specification is available at <http://www.opcfoundation.org>).

The OPC driver handles operations of read/write from/into a controller of:

1. simple variables containing scalar values like:
 - a. Byte - 8-bit unsigned number;
 - b. Word - signed or unsigned word (16-bit number);
 - c. Double Word - signed or unsigned double word (32-bit number);
 - d. Single Precision - 32-bit real number;
2. single dimension table variables consisting of simple variables (*see: 1*);
3. text variables.

Changes in OPC Driver - Version 2.0

- Adding the OPC server service compatible with the OPC 2.05 specification.
- Adding the possibility of specifying the access path for variables in the transmission channel.
- Adding the possibility of blocking the operation of writing to the OPC server.
- Driver extension with read/write operation of text / table variables.
- Elimination of large OPC server loading reducing considerably its capacity in case when a variable archiving period was too long in relation to their sampling period.

Declaration of Transmission Channel

The declaration of the transmission channel operating according to OPC protocol requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: OPC

OPC/Channel parameters/Main tab:

The basic and the only obligatory OPC driver option is *Identifier of OPC server in Windows system.*

Update mechanism - mechanism of updating values from the OPC server. Available values:

- Automatic selection,
- Asynchronous according to OPC specification 1.0,
- Asynchronous according to OPC specification 2.05,
- Synchronous.

Blocking of all writes to OPC server - if the option has the value 'Yes', then all write operations to the OPC server are blocked.

Period of reading all measurements - reading time in [ms]. The option should be used only for the OPC servers that contain errors and don't always send information on changes in values of variables. Cyclic reading time should be adequate long (tens of seconds) so that the OPC server is not overloaded.

EXAMPLE

An exemplary declaration of the channel recalling to the OPC server registered under the *Matrikon.OPC.Simulation* identifier:

Channel / Name: Matrikon

Driver: OPC

Identifier of OPC Server: Matrikon.OPC.Simulation

An exemplary declaration of the channel using all options:

Channel / Name: Matrikon

Driver: OPC

Identifier of OPC Server: Matrikon.OPC.Simulation

Blocking of all writes to OPC server: yes,

Items always active: yes,

OPC version: 2

OPC/Channel parameters/Advanced tab:

Remote server - when using this option, the designer is solely responsible for proper configuration of protections on both computers so that the client and server can exchange data with each other using DCOM.

Using this option requires on first tab *Identification* to be used, because OPC server isn't registered on the computer on which the Asix system works.

If no server name is declared, the local computer will be used.

Status item of channel - option allows to declare a variable used to signal the channel status (information on damage or proper operation of the channel). There are two possibilities: declaration of values of variables denoting the proper operation of the channel (then other value of the variable denotes an error in the channel) or declaration of values signaling a damage of the channel (then other value of the variable denotes a proper operation of the channel).

Variables always active - every variable is updated by an OPC server regardless of whether the variable is at the moment used in the Asix system.

The other group of options is declared by **OPC/Channel parameters/Diagnostics - Log** tab:

Log of successful initializations

Meaning - allows to store in the log the information on successful initializations of item on the OPC server.

Default value - NO.

Log of successful writes

Meaning - the information on successful end of the operation of writing to the OPC server is placed in the log.

Default value - NO.

Log of transmitted items

Meaning - the information on the items transmitted by the server is placed in the log.

Default value - NO.

Log of statistics of data change

Meaning - the information on the number of items transmitted by the server and time of data processing by the driver is placed in the log.

Default value - NO.

OPC/Channel parameters/Diagnostics - Trace tab:

Traced names

Meaning - for each variable, which name is on the list, the information on its value, quality and stamp will be written to the log (during the variable processing).

Default value - lack.

Parameter:

variable_list - list of the variable names in the Asix system, delimited with commas.

Defining the Process Variables

Defining the variables in the Asix system is described in *Asix, User Manual*, in chapter *Asmen – Communication Manager (see: Declaration of Process Variables)*.

When defining the variable (recalling to an OPC server), the variable identifier from the OPC server variable base should be declared as the variable address. The syntax of the identifier depends on the specific OPC server and is described in its documentation. If the identifier contains small letters, comma or white space, then the identifier (the whole one) should be put in quotation marks.

Notice: It is possible to display the window of selecting a variable from the OPC server and to configure the address of the variable using this window. The window is activated in Architect > variable definition database editor > by clicking in the field of the *Address* column.

See: informations on import of variable definitions from the OPC server: Architect.CHM/PDF, 3.2.1. *Creating the new application - Wizard - base import from OPC.*

Type Matching

While initializing the variable in the OPC server, the OPC driver sends a requested type of the variable to it. This type is defined according to the conversion function that has been assigned to the variable in the Asix VariableBase. If the variable type requested by the OPC driver differs from the type declared in the OPC variable base, then the OPC server usually accepts the requested type and performs the proper conversion during the data transmission. If the OPC server is not able to perform the proper conversion, then an error is notified at the moment of variable initialization. This fact is also signaled in the list of system messages (in 'Control Panel') as the message "Incorrect variable type". The variable the initialization of which finished with an error will have a bad status.

If the error connected with the variable type misfit in the Asix system and the OPC server occurs, then the other analogical conversion function (but operating with the variable type handled by the OPC server) should be used. The variable types used by conversion functions are described in the Asix system documentation, in chapter *ASMEN – Communication Manager/Conversion Functions* (the type of variables requested by the OPC server is named *type of PLC variable*).

The variable type misfit most often occurs when the conversion functions that operate on unsigned numbers are used. It is because some OPC servers don't handle such numbers at all. In such case, it is impossible to use the following functions: TIME, CIRCLE1, COUNTER, MASK, FACTOR, FACTOR_DW, NEGBIT, NEGBIT_DW, NOTHING, NOTHING_BYTE, NOTHING_DD, NOTHING_DW, ON/OFF, SHIFT_L, SHIFT_R, SLIORDER, SLIDER1, SLIDER1_FP.

There are three conversion functions handling any type of values being received from the controller: GRADIENT, AVERAGE, TABLE. For these functions, the OPC driver always requests from the OPC server sending the variable values in the form of floating-point numbers – because the floating-point number is always these functions' output type.

Communication Testing

The OPC driver enters on the message list of 'Control Panel' information on important events like driver loading, driver connection to the OPC server, variable initialization performance. The information on possible errors at the driver initialization and operation stage is also entered on the list.

Detailed information on errors and diagnostic information is placed in the OPC log file. The driver log file is named *UniDriver,<current_date>.log* and is placed in the Asix system directory by default. There are two groups of options defining the kind of information written to the log file. The first group options are declared with use of **OPC/Driver parameters – UniDriver** tab:

Path to the directory in which the log file will be created

Meaning - the log file is placed in the defined directory.

Default value - by default, the log file will be created in the Asix directory.

Parameter:

record_track - path to the directory in which the log file will be created.

Traced names

Meaning - for each variable, which name is on the list, the information on its value, quality and stamp will be written to the log (during the variable processing).

Default value - lack.

Parameter:

variable_list - list of the variable names in the Asix system, delimited with commas.

All the options concerning the communication test may be changed during the Asix system operation. After the modification and writing the application initialization file on the disc, the new option values will be retrieved from the log by the OPC driver and will begin to have an effect on the range of information to be written to the log.

1.77 CtPA5 - PA5 Flow Counter Protocol Driver

Driver Use

The CtPa5 protocol driver allows the exchange of data between the Asix system and the PA-5 transducers manufactured by Poznań-based POWOGAZ S.A. Water Meter Factory.

The communication can be performed in two modes:

- A/** point-to-point - the Asix system and the transducer are connected with the RS-232 link,
- B/** multidrop - communication with the transducer is performed by using the addressable ADAM-4521 modules connected into RS-485 network.

Parameterization of the CtPA5 driver is performed by the Architect application.

Declaration of Transmission Channel

The declaration of the transmission channel operating according to CtPa5 protocol requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtPA5

CtPa5 tab:

Channel parameters:

**Port=number [;ReceiveTimeout=number] [;ServiceType=number]
[;ScanPeriod=number] [;CharTimeout=number]**

where:

<i>Port</i>	- computer's COM serial port number,
<i>ReceiveTimeout</i>	- waiting time for the first response character (in milliseconds); by default - 500 milliseconds;
<i>CharTimeout</i>	- time between response characters (in milliseconds); by default - 100 milliseconds;
<i>ServiceType</i>	- RS-232 interface (mode 1) or RS-485 interface with ADAM-4521 modules (mode 2); default mode is mode 2;
<i>ScanPeriod</i>	- time in milliseconds between subsequent readings of the transducer; by default - 30 seconds (manufacturer's recommendation). Parameter applies to all transducers supported in the given channel.

NOTE *Communication with the transducer is performed by using standard transmission parameters i.e. speed of 1200 Bd, 8 character bits and 1 stop bits.*

NOTE *In the case of the use of addressable ADAM-4521 modules, the following parameters should be set in ADAM-4521 module:*

- a/** *delimiter* - { (factory preset);
- b/** *add cr* - yes (factory preset);

c/ address in RS-485 network (different address for each module);
d/ baud rate - 1200 Bd (transmission speed used in PA-5 transducer).

EXAMPLE

An example of the declaration of the transmission channel using COM2, work mode with addressable ADAM-4521 modules and transducer reading every 40 seconds:

Name: CHANNEL
Driver: CtPA5
Channel parameters: Port=2; ScanPeriod =40

Variable Declaration

The variable address has the following syntax:

V.<address>.<index>

where:

V	- variable name,
address	- transducer address (important for RS-485 network using addressable ADAM-4521 modules. In case of RS-232 connections, parameter value can be custom),
index	- values from 1 to 4 are assumed: 1 - order no. of the water counter type, 2 - current flow percentage value, 3 - current A counter status, 4 - current B counter status,

All variables return values of FLOAT type.

EXAMPLE

Examples of variables declaration:

JJ_01, meter A of transducer no. 1,	V.1.3, CHANNEL, 1, 1, NIC_FP
JJ_02, meter B of transducer no. 2,	V.2.4, CHANNEL, 1, 1, NIC_FP

Driver Parameters

The CtPA5 driver parameters are declared in the *Miscellaneous* module, on *Directly entered options* tab.

Section name: CtPA5

Option name: LOG_FILE

Option value: log_filename

Meaning - the diagnostic purposes are fulfilled by a text log file, where the driver operation status messages are entered.

Default value - by default, the log file is not created.

Section name: CtPA5

Option name: LOG_FILE_SIZE

Option value: number

Meaning - option is used to determine the size of the log file defined with use of the LOG_FILE option.

Default value - default log file size is 10 MB.

Communication Drivers

Parameter:

number - log file size in MB.

Section name: CtPA5

Option name: LOG_OF_TELEGRAMS

Option value: YES | NO

Meaning - option allows the contents of telegrams sent between the driver and controllers to the log file (declared with use of LOG_FILE option) to be saved. The subject option should be used only during the start-up of the Asix system.

Default value - by default, the option value is set to NO.

EXAMPLE

Example of driver parameters:

Section name: CtPA5

Option name: LOG_FILE

Option value: d:\tmp\ctpa5\pa5.log

Section name: CtPA5

Option name: LOG_FILE_SIZE

Option value: 20

Section name: CtPA5

Option name: LOG_OF_TELEGRAMS

Option value: YES

1.78 CtPmc4000 - POLON 4800 Fire Protection Station Driver According to Protocol PMC-4000

Driver Use

The CtPmc4000 protocol driver is used for data exchange between the Asix system and POLON 4800 fire protection station according to protocol PMC-4000. The communication is executed with the use of a serial link in RS-232 standard.

The parameterization of the CtPmc4000 driver is performed by the Architect module.

Declaration of Transmission Channel

The declaration of the transmission channel operating according to CtPmc4000 protocol requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtPmc4000

CtPmc4000 tab:

Channel parameters:
Port=number; StationNr=number; Baud=number

where:

Port - computer's COM serial port number,
StationNo - station number,
Baud - transmission speed (2400, 4800 or 9600 Bd). By default, 9600 Bd.

EXAMPLE

An example of the declaration of the transmission channel communicating with the fire protection station numbered 2 with the use of the COM2 serial port at the default transmission speed (9600 Bd):

Name: CHANNEL
Driver: CtPmc4000
Channel parameters: Port=2; StationNo=2

Variable Declaration

The variable address has the following syntax:

V.<LineNo>.<ElemNo>.<IONo>.<ZoneNo>[.<baseAlarmNo>]

where:

V	- variable name,
LineNo	- line number,
ElemNo	- given line element number,
IONo	- input/output number of the given element,
ZoneNo	- zone number,
AlarmNo	- base alarm number.

All variables return values of WORD type.

Line, element, IO and zone numbers are determined by the fire protection station configuration.

The variable value is the bitmap of the fire protection station's element status whose address was given in the variable declaration. Bits have the following meaning:

bit 0	- fire alarm status;
bit 1	- control status;
bit 2	- test status;
bit 3	- blocking status;
bit 4	- technical alarm status;
bit 5	- failure status;
bit 6	- unmaskable failure status;
bits 7 – 15	- are not used.

If the bit value is 1, the given bit is active.

For each variable the user can define a set of alarms assigned to specific variable bitmap bits. Alarms are reported, as soon as the status of any bit is changed. To guarantee the correct driver operation, the aforementioned alarms should occupy a coherent alarm number area, starting from *baseAlarmNo*. Subsequent alarm numbers, starting from *baseAlarmNo*, have the following meanings:

+ 0	- fire alarm;
+ 1	- control performed;
+ 2	- test;
+ 3	- blocking;
+ 4	- technical alarm;
+ 5	- failure;
+ 6	- unmaskable failure;

Asix alarms are reported according to the following rule: **start** (change from 0 to 1) and **end** (change from 1 to 0). The time at which the alarm occurred is marked with a fire protection station timestamp. It is not possible to automatically pass on the alarm text sent from the fire protection station to the Asix alarm. It is recommended that the alarm texts defined in the Asix system should be compliant with the alarm texts defined in the fire protection station.

Specific supported variables

The variables of the following addresses are specifically supported:

V.0.0.0.0.baseAlarm (line no. 0)

and

V.1.0.0.0.baseAlarm (line no. 1)

The status of **V.0.0.0.0.baseAlarm** contains information about the 2nd level alarm status.

The bits have the following meaning:

bit 0	- 2 nd level alarm status;
-------	---------------------------------------

The base alarm number of the variable in question is used for generating the following alarms:

- + 0 - 2nd level alarm signaling;
- + 1 - receipt of DELETE information from the station,
- + 2 - receipt of CONFIRMATION information from the station,

The variable can be used to send orders to the fire protection station:

- recording the value 1 to the variable results in sending a DELETE order to the station,
- recording the value 2 to the variable results in sending a CONFIRMATION order to the station,

V.1.0.0.0.baseAlarm variable status is used to pass on alarms about station failures.

The base alarm number of the variable is used to generate 107 alarms according to the specification given in the station failure code table of POLON unit ("r;PMC-4000 – Digital monitoring protocol for POLON 4800 standard"). The first alarm in the specification will be assigned to *baseAlarm* number, the second one – to *baseAlarm + 1*, and so on.

The variable value is accidental.

EXAMPLES

Examples of variables declaration:

```
# variable used to display the 2nd level alarm status and to send orders
# DELETE and CONFIRMATION. It generates alarms of the numbers starting from 1
JJ_01, , V.0.0.0.0.1, PMC, 1, 1, NIC
```

```
# line 1001, element 2, I/O 3, zone 4, alarms starting from number 10
JJ_02, , V.1001.2.3.4.10, PMC1, 1, 1, NIC
```

```
# line 3002, element 4, I/O 0, zone 0, alarms starting from number 20
JJ_03, , V.3002.4.0.0.20, PMC1, 1, 1, NIC
```

```
# variable used to pass alarms about station failures:
JJ_04, , V.1.0.0.0.1000, PMC, 1, 1, NIC
```

Alarm definitions for JJ_01 variable:

- 1, al, 2nd level fire alarm
- 2, al, information on deleting fire alarm from station
- 3, al, information on confirmation of event or failure

Alarm definitions for JJ_02 variable:

- 10, al, fire alarm - line 1001 elem 2 io 3 zone 4
- 11, al, control - line 1001 elem 2 io 3 zone 4
- 12, al, test - line 1001 elem 2 io 3 zone 4
- 13, al, blocking - line 1001 elem 2 io 3 zone 4
- 14, al, technical alarm - line 1001 elem 2 io 3 zone 4
- 15, al, failure - line 1001 elem 2 io 3 zone 4
- 16, al, unmaskable failure - line 1001 elem 2 io 3 zone 4

Alarm definitions for JJ_03 variable:

- 20, al, fire alarm - line 3002 elem 4 io 0 zone 0
- 21, al, control - line 3002 elem 4 io 0 zone 0
- 22, al, test - line 3002 elem 4 io 0 zone 0
- 23, al, blocking - line 3002 elem 4 io 0 zone 0
- 24, al, technical alarm - line 3002 elem 4 io 0 zone 0
- 25, al, failure - line 3002 elem 2 io 0 zone 0
- 26, al, unmaskable failure - line 3002 elem 2 io 0 zone 0

Alarm definitions for JJ_04 variable:

- 1000, al, uP1 microprocessor system
- 1001, al, uP2 microprocessor system

1005,al, uP1 processor EPROM memory
1006,al, configuration memory - uP1 setup

Driver Parameters

The CtPmc4000 driver parameters are declared in the Miscellaneous module, on Directly entered options tab.

Section name: CtPmc4000

Option name: LOG_FILE

Option value: log_filename

Meaning - the diagnostic purposes are fulfilled by a text log file, where the driver operation status messages are entered.

Default value - by default, the log file is not created.

Section name: CtPmc4000

Option name: LOG_FILE_SIZE

Option value: number

Meaning - option is used to determine the size of the log file defined with the use of LOG_FILE option. When the size exceeds the amount declared, the driver keeps the current log file contents in the file named log_filename.old (the name is created from log_filename given in the LOG_FILE declaration and extension .old). In this manner, the user is always able to view records of size equal to at least LOG_FILE_SIZE MB.

Parameter:

number - log file size in MB.

Default value - default log file size is 10 MB.

Section name: CtPmc4000

Option name: LOG_OF_TELEGRAMS

Option value: YES | NO

Meaning - option allows the contents of telegrams sent between the driver and controllers to the log file (declared with use of LOG_FILE option) to be saved. The subject option should be used only during the start-up of the **asix** system.

Default value - by default, the option value is set to NO.

EXAMPLE

Example of driver parameters:

Section name: CtPmc4000

Option name: LOG_FILE

Option value: d:\tmp\CtPmc4000\pmc.log

Section name: CtPmc4000

Option name: LOG_FILE_SIZE

Option value: 20

Section name: CtPmc4000

Option name: LOG OF TELEGRAMS

Option value: YES

1.79 PPI - Driver of PPI Protocol for SIMATIC S7 200 PLCs

Driver Use

The communication protocol PPI is used for data exchange between computers with the Asix application and SIEMENS S7 200 PLCs.

Parameterization of PPI driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the PPI driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: PPI

PPI / Channel parameters tab:

Port - number of the serial port to which the controller is connected;

Programmable controller address - address of the PLC.

Number of repetitions

Meaning - number of transmission repetitions in case of transmission errors.
Default value - 4.
Parameter:
number - number of repetitions.

Timeout

Meaning - timeout for the station answer.
Default value - 500.
Parameter:
number - time passed in milliseconds.

Delay

Meaning - minimal time interval in milliseconds between transmissions of frames.
Default value - 25.
Parameter:
number - time passed in milliseconds.

All errors

Meaning - if the parameter has a value of no, the information on timeout errors will appear in 'Control Panel' only when the transmission

missed in spite of attempts of its repetition. If it has a value of yes, the information on all errors is transmitted to 'Control Panel'.
Default value - no.

PPI / Channel parameters 2 tab:

Send frame

Meaning - maximal length of a sending frame.
Default value - 117.
Parameter:
 number - number passed in bytes from the range of 10-260.

Receive frame

Meaning - maximal length of a receiving frame.
Default value - 117.
Parameter:
 number - number passed in bytes from the range of 10-260.

Variables

Meaning - maximal number of variables transferred once.
Default value - 8.

Simulation

Meaning - if yes is given, then data reading/writing from/to a PLC will be simulated.
Default value - no.

PC adres

Meaning - address of a computer.
Default value - no.
Parameter:
 number - number passed in bytes from the range of 0-255.

EXAMPLE 1

*Channel / Name: S7_212
Driver: PPI
Port: COM2
Programmable controller address: 5*

In the example above, the station named S7_212 connected to the COM2 port is defined. The communication with the controller is operating on the basis of default parameters.

NOTE *The PPI protocol driver may act together with the AsComm connections manager. In such case, the driver is registered as a client of the AsComm module with a name PPI:n, where n is a number of a serial interface through which the communication with the PLC is executed.*

Driver Parameters

PPI / Driver Parameters tab:

Transmission parameters

Port

Meaning - number of serial port (COM1...COM256).

Speed

Meaning - option allows to specify the baud rate; the option is not placed in a section of parameters of logical channel.

Default value - 9600.

Parameter:

number - number in bauds.

Parity

Meaning - option allows to specify the parity type; the option is not placed in a section of parameters of logical channel.

Default value - e.

Parameter:

parity_parameter - one of the following items:
n - no parity,
o - odd,
e - even,
m - mark,
s - space.

Word length

Meaning - option allows to specify the length of the word; the option is not placed in a section of parameters of logical channel.

Default value - 8.

Parameter:

number - number from the range of 5-8.

Stop bits

Meaning - option allows to specify the number of stop bits; the option is not placed in a section of parameters of logical channel.

Default value - 1.

Parameter:

number - number of bits.

AsComm

Meaning - option allows to specify whether the driver has to work with the communication manager AsComm; the option is not placed in a section of parameters of logical channel.

Default value - no (from the version 1.1).

Defining the Process Variables

Measurement Data

The driver executes an access to the following variables.

Table 48. Variables Serviced by the PPI Driver.

Symbol	Data Length
Mn.m	BYTE
MBn	BYTE
MWn	WORD
MDn	DWORD
In.m	BYTE
Ibn	BYTE
Iwn	WORD
Idn	DWORD
Qn.m	BYTE
BN	BYTE
PWN	WORD
QDn	DWORD
Vn.m	BYTE
VBn	BYTE
VWn	WORD
VDn	DWORD
Sn.m	BYTE
SBn	BYTE
SWn	WORD
SDn	DWORD
SMn.m	BYTE
SMBn	BYTE
SMWn	WORD
SMDn	DWORD
AIWn	WORD
AQWn	WORD
HCn	DWORD
Cn	WORD
Cn.m	BYTE
Tn	WORD
Tn.m	BYTE
RUN	BYTE

Meaning of symbols placed in the left column (except RUN) is described in the documentation of S7 controllers.

The variable RUN assumes a value of 1 if the controller is in the state RUN, and of 0 otherwise. Writing to the variable RUN causes an activation of the controller. Writing the value of 0 to the variable RUN causes a transition of the controller to the STOP mode. The change of the controller state is possible only at a suitable setting of switches on the controller.

The variables Cn and Tn enable to access to an actual value of counters and timers. The variables Cn.m and Tn enable access to the state (1 or 0) of counters and timers. The value m may be any number of the range 0 to 7.

The present driver version does not allow to write to the variables Q, AQW, AIW. Writing to other variables is limited by the controller (Cm.n, Tm.n).

Access to Pseudo-Variables

The PPI protocol driver enables access to pseudo-variables. The access to pseudo-variables does not cause a physical transmission through a serial interface. Values of pseudo-variables are related with an actual state of a connection with the controller.

Table 49. Pseudo-Variables Serviced by the PPI Driver.

Symbol	Meaning	Length
SBS	number of sent bytes	DWORD
SBR	number of received bytes	DWORD
SFS	number of sent frames	DWORD
SFR	number of received frames	DWORD
SPE	number of parity errors	DWORD
SFE	number of frame errors	DWORD
SOE	number of overrun errors	DWORD
SLE	number of line errors (sum of parity, frame, overrun and other errors)	DWORD
STE	number of timeout errors	DWORD
SPRE	number of protocol errors	DWORD
SCE	number of checksum errors	DWORD
SFC	number of unsuccessful connections (by means of AsComm module)	DWORD
SBC	number of broken connections (established by AsComm module)	DWORD
SLGE	number of logical errors (no data in the controller, faulty address etc.).	DWORD
ERR	sum of all errors (SLE, STE, SPRE, SCE, SFC, SBC and SLGE). Writing of any value to ERR variable causes zeroing of variables SBS, SBR, SFS, SFR, SPE, SFE, SOE, SLE, STE, SPRE, SCE, SFC, SBC and SLGE.	DWORD
TSBS	number of sent bytes (from the beginning of driver operation)	DWORD
TSBR	number of received bytes (from the beginning of driver operation)	DWORD
TSFS	number of sent frames (from the beginning of driver operation)	DWORD
TSFR	number of received frames (from the beginning of driver operation)	DWORD
TSPE	number of parity errors (from the beginning of driver operation)	DWORD
TSFE	number of frame errors (from the beginning of driver operation)	DWORD
TSOE	number of overrun errors (from the beginning of driver operation)	DWORD
TSLE	number of line errors (sum of parity, frame, overrun and other errors) (from the beginning of driver operation)	DWORD
TSTE	number of timeout errors (from the beginning of driver operation)	DWORD
TSPRE	number of protocol errors (from the beginning of driver operation)	DWORD
TSCE	number of checksum errors (from the beginning of driver operation)	DWORD
TSFC	number of unsuccessful connections (by means of AsComm module)	DWORD

Communication Drivers

	(from the beginning of driver operation)	
TSBC	number of broken connections (established by AsComm module) (from the beginning of driver operation)	DWORD
TSLGE	number of logical errors (no data in the controller, faulty address etc.). (from the beginning of driver operation)	DWORD
TERR	sum of errors determined by variables TSLE, TSTE, TSPRE, TSCE, TSFC, TSBC and TSLGE.	DWORD
ONLINE	assume a value of 1 if the last attempt to send any frame ended successfully (i.e. an acknowledge from the controller was received) and 0 otherwise.	BYTE

1.80 CtProtherm300 - Driver of PROTHERM 300 DIFF PLC Protocol

Driver Use

The CtProtherm300 driver is used for data exchange between Asix system computers and Protherm 300 DIFF PLC of Process-Electronic GmbH. The data are transferred over the RS-422 serial link.

Parameterization of CtProtherm300driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtProtherm300driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtProtherm300

CtProtherm300 tab:

Channel parameters:

Port=*port_number* [;*RecvTimeout=ms_number*]

where:

port_number - number of the serial link (1 is passed for COM1, 2 for COM2, end so on);
ms_number - timeout of waiting for the controller response (in milliseconds); it is passed 1000 milliseconds by default.

By default, the following transmission parameters are passed:

- transmission speed 9600 Bd;
- number of bytes in a character;
- parity check -EVEN;
- number of stop bytes - 1.

EXAMPLE

An exemplary declaration of the channel using the CtProtherm300 driver on the serial port COM2 with receiving timeout that equals 2000 ms is as follows:

Channel / Name: PLC1
Driver: CTPROTHERM300
Channel parameters: Port=2; RecvTimeout=2000

Addressing the Process Variables

The syntax of the variable address is as follows:

V.group.unit.index

where:

- | | |
|--------------|--|
| <i>group</i> | - number of the group to which the controller is assigned (a number form 0 to 9); |
| <i>unit</i> | - number assigned to the controller within the group (a number form 0 to 9); |
| <i>index</i> | - number of the variable in the controller, compatible with the specification ' <i>Variablen-Liste fuer PT300</i> ' (in <i>Protherm300/Protherm300 Kommunikation</i> documentation). |

The raw variables may have one of the following type:

- byte;
- byte table;
- float.

The type of raw variable is defined in the specification '*Variablen-Liste fuer PT300*', in *Protherm300/Protherm300 Kommunikation* documentation with the symbol R411.0, published by Process-Electronic.

EXAMPLE

Examples of variable declaration.

```
JJ_00, value CO (FLOAT),V.1.2.6,      PLC1, 1, 1, NOTHING_FP
JJ_01, status STAT3 (BAJT),V.1.2.18,  PLC1, 1, 1, NOTHING_BYTE
JJ_02, table of 4 statuses XRELi (BAJT),V.1.2.14,PLC1, 4, 1, NOTHING_BYTE
```

Time Stamp

The variables read from the Protherm300 system are stamped with a local PC time.

Driver Configuration

CTPROTHERM300 driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CTPROTHERM300** section.

Section name: CTPROTHERM300

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file to which all the diagnostic messages of the driver will be written. If the item LOG_FILE doesn't define a full path, the log file will be created in the current directory. The log file should be used only during the asix system start-up.

Default value - by default, the log file is not created.

Parameter:

file_name - name of the log file.

Section name: CTPROTHERM300

Option name: LOG_FILE_SIZE

Option value: number

Meaning - allows to define the size of the log file in MB.

Default value - by default, the item assumes that the log file has a size of 1 MB.

Parameter:
number - size of the log file in MB.

Section name: CTPROTHERM300

Option name: LOG_OF_TELEGRAMS

Option value: YES/NO

Meaning - the item allows writing to the log file (declared with use of the LOG_FILE item) the contents of telegrams transmitted during the data exchange between the asix system and Protherm 300 DIFF PLC of Process-Electronic GmbH company; writing the telegrams content to the log file should be used only during the asix system start-up

Default value - NO.

1.81 PROTRONICPS - Driver of PROTRONICPS Regulator Protocol

Driver Use

The PROTRONICPS driver is used for data exchange between PROTRONIC PS regulators of Hartmann & Braun and an **asix** system computer. The communication is performed by means of serial interfaces in the RS422 standard.

Parameterization of PROTRONICPS driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the PROTRONICPS driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: PROTRONICPS

PROTRONICPS tab:

id, port, baud [, *character, parity, stop*]

where:

- | | |
|-------------|---|
| <i>id</i> | - device identifier (regulator no. in the network), |
| <i>port</i> | - name of the serial port, |
| <i>baud</i> | - transmission speed, |

optional parameters:

- | | |
|------------------|----------------------------------|
| <i>character</i> | - number of bits in a character, |
| <i>parity</i> | - parity check type, |
| <i>stop</i> | - number of stop bits. |

Default values:

- 8 bits in a character,
- even parity check (EVEN),
- number of stop bits 1.

The PROTRONICPS driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the PROTRONICPS driver channel is as follows:

<type><index>

where:

<i>type</i>	- variable type; allowable types are:
	STAT - controller status,
	F - status of controller errors,
	WA - analog value,
	BV - binary value,
	Y - controller output;
<i>index</i>	- index within the type (used only for WA, BV and Y):
	WA 0 – 255
	BV 0 – 255
	Y 0 – 10

Variables of STAT and F type may be only read.

Variables of Y type may be only written.

Variables of WA and BV type may be read and written.

Raw values of STAT, F, WA type variables are of WORD type.

Raw values of BV type variables are of BYTE type.

Raw values of Y type variables are of SIGNED SHORT type.

EXAMPLE

An exemplary declaration of variables:

```
X1, Controller status,STAT,      CHAN1, 1, 1, NOTHING
X2, Status of errors,F,         CHAN1, 1, 1, NOTHING
X3, Bit BV1,BV1,               CHAN1, 1, 1, NOTHING_BYTE
X4, Analog WA3,WA3,           CHAN1, 1, 1, NOTHING
X5, Controller output no. 0,Y0, CHAN1, 1, 1, NOTHING
X6, Controller output no. 1,Y1, CHAN1, 1, 1, NOTHING
```

Driver Configuration

PROTRONICPS driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **PROTRONICPS** section.

Section name: PROTRONICPS

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file to which all diagnostic messages of the PROTRONICPS driver and information about contents of telegrams received by the driver are written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the asix start-up.

Default value - by default, the log file is not created.

Section name: PROTRONICPS

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - the item allows to write to the log file (declared by LOG_FILE) the contents of telegrams sent within the communication with the PROTRONIC PS controller. Writing the contents of telegrams to the log file should be used only while the asix start-up.

Default value - by default, telegrams are not written.

Section name: PROTRONICPS

Option name: NUMBER_OF_REPETITIONS

Option value: YES|NO

Meaning - the item allows to determine a number of repetitions in case of occurrence of transmission error.

Default value - by default, telegrams are not written.

1.82 S700 - Driver S700 of MAIHAK Analyzer Protocol

Driver Use

The S700 driver is used for data exchange between Maihak S700 gas analyzers and an Asix system computer by use of the AK protocol. The communication is performed via standard serial ports of an Asix computer and the serial interface no. 1 of the analyzer.

NOTE Settings *Serial interface # 1* of the analyzer must have the following values:

- 1/ RTS/CTS protocol - without RTS/CTS protocol,
- 2/ XON/XOFF protocol - without XON/XOFF protocol.

Settings *Communication # 1* of the analyzer must have the following values:

- 1/ AK-ID active - ON (1).

Parameterization of S700 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the S700 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: S700

S700 tab:

Channel parameters:

id, port [, baud ,character, parity, stop]

where:

id - analyzer identifier (number AK-ID),
port - port name: COM1, COM2 etc.,

optional parameters:

baud - transmission speed,
character - number of bits in a character,
parity - parity check type,
stop - number of stop bits.

If optional parameters are not given, then default values are as follows:

- transmission speed of 9600 baud,
- 8 bits in a character,
- no parity check (NONE),
- number of stop bits 1.

EXAMPLE

The declaration of the logical channel named CHAN1 operating according to the S700 protocol and exchanging data with the analyzer no. 1 via the COM2 port is as follows:

Channel / Name: CHAN1
Driver: S700
Channel parameters: 1, COM2

The S700 driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the S700 driver channel is as follows:

`<type>[<index>][.<element>]`

where:

type - variable type,
index - index within the type (for some types of variables),
element - element within the index (for some types of variables).

Types which use no index (in parentheses a type of raw variable value is given):

CZK - time of calibration measure (WORD),
CZO - delay time (WORD),
IDA - analyzer identifier (up to 40 characters) (BYTE),
MNU - menu language identifier (BYTE),
NRS - analyzer serial number (BYTE),
PGB - measure (introducing) of tested gas to the analyzer (WORD),
SPKK - state of a calibration tray pump (WORD).

Types which need to give an index (in parentheses a type of raw variable value is given):

DWK - sensibility drift after calibration (FLOAT),
DZK - zero-point drift of measure substance after calibration (FLOAT),
NSKK - rated value of measured substance in calibration tray (FLOAT),
PGKW - measuring (introducing) of standard calibration gas in the analyzer (WORD),
PGKZ - measuring (introducing) of zero calibration gas to the analyzer (WORD),
SKT - compensation of measured substance temperature (WORD),
SPKW - status of a standard calibration gas pump (WORD),
SPKZ - status of a zero calibration gas pump (WORD),
SPT - name of measure substance (BYTE),
SPW - current values of measured substances (FLOAT),
SPZ - end value of measuring range of measured substance (FLOAT),
STA - actual analyzer state (WORD).

Types which need to give an index and an element (in parentheses a type of raw variable value is given):

NSPW - rated value of measured substance in standard calibration gas (FLOAT),
NSPZ - rated value of measured substance in zero calibration gas (FLOAT).

Types only for reading :

DWK - sensibility drift after calibration,
DZK - zero-point drift of calibration substance after calibration,
MNU - menu language identifier,
NRS - analyzer serial number,

NSKK - rated value of measure substance in calibration tray,
 SPKK - status of a calibration tray pump,
 SPT - name of measured substance,
 SPW - current values of measured substance,
 SPZ - limit range value of measured substance,
 STA - current analyzer status.

Types only for writing:

PGB - measuring (introducing) of tested gas in the analyzer,
 PGKW - measuring (introducing) of standard calibration gas to the analyzer,
 PGKZ - measuring (introducing) of zero calibration gas to the analyzer.

Types for reading and writing:

CZO - delay time,
 CZK - time of calibration measurement,
 IDA - identifier of the analyzer,
 NSPW - rated value of the measured substance in zero calibration gas,
 NSPZ - rated value of measured substance in zero calibration gas,
 SKT - compensation of measured substance temperature,
 SPKW - status of a standard calibration gas pump,
 SPKZ - status of a zero calibration gas pump.

EXAMPLE

Exemplary declarations of variables.

names of types (SPT) and ranges (SPZ) of measured substances – with an index

```

X1, SPT1, CHAN1, 10, 1, NOTHING_TEXT
X2, SPZ1, CHAN1, 1, 1, NOTHING_FP
X3, SPT2, CHAN1, 10, 1, NOTHING_TEXT
X4, SPZ2, CHAN1, 1, 1, NOTHING_FP
X5, SPT3, CHAN1, 10, 1, NOTHING_TEXT
X6, SPZ3, CHAN1, 1, 1, NOTHING_FP
X7, SPT4, CHAN1, 10, 1, NOTHING_TEXT
X8, SPZ4, CHAN1, 1, 1, NOTHING_FP
X9, SPT5, CHAN1, 10, 1, NOTHING_TEXT
X10, SPZ5, CHAN1, 1, 1, NOTHING_FP
  
```

state bytes (STA) of analyzer with an index

```

X11, STA1, CHAN1, 1, 1, NOTHING
X12, STA2, CHAN1, 1, 1, NOTHING
X13, STA3, CHAN1, 1, 1, NOTHING
X14, STA4, CHAN1, 1, 1, NOTHING
X15, STA5, CHAN1, 1, 1, NOTHING
X16, STA6, CHAN1, 1, 1, NOTHING
X17, STA7, CHAN1, 1, 1, NOTHING
X18, STA8, CHAN1, 1, 1, NOTHING
  
```

actual values (SPW) of measured substances – with an index

```

X21, SPW1, CHAN1, 1, 1, NOTHING_FP
X22, SPW2, CHAN1, 1, 1, NOTHING_FP
X23, SPW3, CHAN1, 1, 1, NOTHING_FP
X24, SPW4, CHAN1, 1, 1, NOTHING_FP
X25, SPW5, CHAN1, 1, 1, NOTHING_FP
  
```

time pauses (CZO and CZK) – without an index

```

X31, CZO, CHAN1, 1, 1, NOTHING
X32, CZK, CHAN1, 1, 1, NOTHING
  
```

results after calibration: zero drift (DZK), sensibility drift (DWK) – without an index

```

X42, DZK1, CHAN1, 1, 1, NOTHING_FP
X43, DWK1, CHAN1, 1, 1, NOTHING_FP
  
```

Communication Drivers

X44, DZK2, CHAN1, 1, 1, NOTHING_FP
X45, DWK2, CHAN1, 1, 1, NOTHING_FP

status of temperature compensation (SKT) – with an index

X51, SKT1, CHAN1, 1, 1, NOTHING
X52, SKT2, CHAN1, 1, 1, NOTHING
X53, SKT3, CHAN1, 1, 1, NOTHING
X54, SKT4, CHAN1, 1, 1, NOTHING
X55, SKT5, CHAN1, 1, 1, NOTHING

identifier of analyzer (IDA) – without an index

X61, IDA, CHAN1, 42, 1, NOTHING_TEXT

#serial number of analyzer (IDA) - without an indexes

X62, NRS, CHAN1, 20, 1, NOTHING_TEXT

menu language of analyzer (IDA) - without an index

X63, MNU, CHAN1, 1, 1, NOTHING_BYTE

state of zero calibration gas pump (1 and 2) (SPKZ) – with an index

X70, SPKZ1, CHAN1, 1, 1, NOTHING
X80, SPKZ2, CHAN1, 1, 1, NOTHING

nominal values of zero calibration gases (1 and 2) (NSPZ) – with an index and element

X71, NSPZ1.1, CHAN1, 1, 1, NOTHING_FP
X72, NSPZ1.2, CHAN1, 1, 1, NOTHING_FP
X73, NSPZ1.3, CHAN1, 1, 1, NOTHING_FP
X74, NSPZ1.4, CHAN1, 1, 1, NOTHING_FP
X75, NSPZ1.5, CHAN1, 1, 1, NOTHING_FP

X81, NSPZ2.1, CHAN1, 1, 1, NOTHING_FP
X82, NSPZ2.2, CHAN1, 1, 1, NOTHING_FP
X83, NSPZ2.3, CHAN1, 1, 1, NOTHING_FP
X84, NSPZ2.4, CHAN1, 1, 1, NOTHING_FP
X85, NSPZ2.5, CHAN1, 1, 1, NOTHING_FP

status of standard calibration gas pump (3 - 6) (SPKW) – with an index

X90, SPKW3, CHAN1, 1, 1, NOTHING
X100, SPKW4, CHAN1, 1, 1, NOTHING
X110, SPKW5, CHAN1, 1, 1, NOTHING
X120, SPKW6, CHAN1, 1, 1, NOTHING

rated values of standard calibration gases (3 - 6) (NSPW) – with an index and element

X91, NSPW3.1, CHAN1, 1, 1, NOTHING_FP
X92, NSPW3.2, CHAN1, 1, 1, NOTHING_FP
X93, NSPW3.3, CHAN1, 1, 1, NOTHING_FP
X94, NSPW3.4, CHAN1, 1, 1, NOTHING_FP
X95, NSPW3.5, CHAN1, 1, 1, NOTHING_FP

X101, NSPW4.1, CHAN1, 1, 1, NOTHING_FP
X102, NSPW4.2, CHAN1, 1, 1, NOTHING_FP
X103, NSPW4.3, CHAN1, 1, 1, NOTHING_FP
X104, NSPW4.4, CHAN1, 1, 1, NOTHING_FP
X105, NSPW4.5, CHAN1, 1, 1, NOTHING_FP

X111, NSPW5.1, CHAN1, 1, 1, NOTHING_FP
X112, NSPW5.2, CHAN1, 1, 1, NOTHING_FP
X113, NSPW5.3, CHAN1, 1, 1, NOTHING_FP
X114, NSPW5.4, CHAN1, 1, 1, NOTHING_FP
X115, NSPW5.5, CHAN1, 1, 1, NOTHING_FP

X121, NSPW6.1, CHAN1, 1, 1, NOTHING_FP
X122, NSPW6.2, CHAN1, 1, 1, NOTHING_FP
X123, NSPW6.3, CHAN1, 1, 1, NOTHING_FP

```
X124, NSPW6.4, CHAN1, 1, 1, NOTHING_FP
X125, NSPW6.5, CHAN1, 1, 1, NOTHING_FP
```

```
# settings of calibration tray (SPKK) - pump, (NSKK) - rated
```

```
X130, SPKK, CHAN1, 1, 1, NOTHING
X131, NSKK1, CHAN1, 1, 1, NOTHING_FP
X132, NSKK2, CHAN1, 1, 1, NOTHING_FP
X133, NSKK3, CHAN1, 1, 1, NOTHING_FP
X134, NSKK4, CHAN1, 1, 1, NOTHING_FP
X135, NSKK5, CHAN1, 1, 1, NOTHING_FP
```

```
# start of zero calibration gas (1 and 2)
```

```
X201, PGKZ1, CHAN1, 1, 1, NOTHING
X202, PGKZ2, CHAN1, 1, 1, NOTHING
```

```
# start of standard calibration gas measuring (3 - 6)
```

```
X203, PGKW3, CHAN1, 1, 1, NOTHING
X204, PGKW4, CHAN1, 1, 1, NOTHING
X205, PGKW5, CHAN1, 1, 1, NOTHING
X206, PGKW6, CHAN1, 1, 1, NOTHING
```

```
# start of tested gas measuring
```

```
X207, PGB, CHAN1, 1, 1, NOTHING
```

Driver Configuration

S700driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **S700** section.

Section name: S700

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file to which all diagnostic messages of the S700 driver and information about contents of telegrams received by the driver are written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

Section name: S700

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - the item allows to write to the log file (declared by use of LOG_FILE) the contents of telegrams transferred within the communication with a S700 analyzer. Writing the contents of telegrams to the log file should be used only while the Asix start-up.

Default value - by default, telegrams are not written.

☑ **Section name: S700**

☑ **Option name: LOG_FILE_SIZE**

☑ **Option value: number**

- Meaning - the item allows to specify the log file size in MB.
Default value - by default, the item assumes that the log file has a size of 1 MB.

☑ **Section name: S700**

☑ **Option name: IGNORE_STATUS_CHARACTER**

☑ **Option value: YES|NO**

- Meaning - in each answer from S700 an internal status byte of the analyzer is transferred. The content of this byte decides about the status of data which are transferred in a given answer from the analyzer. If the byte has a value of 0, then the variables receive a correct status, otherwise they receive an error status. The use of the item IGNORE_STATUS_CHARACTER with a value of YES causes that a correct status is assigned to the variables, irrespectively of the status byte content.
Default value - by default, the item has a value of NO.

☑ **Section name: S700**

☑ **Option name: RECV_TIMEOUT**

☑ **Option value: station_no,number**

- Meaning - the item RECV_TIMEOUT allows to specify a waiting time for arriving the first character of an answer sent from a specified analyzer. After passage of this time it is assumed that a given analyzer does not work correctly and the transmission session ends with an error.
Default value - by default, it is assumed that the maximal waiting time for the first character of an answer is equal to 1000 milliseconds.
Parameter:
station_no - number AK-ID of the analyzer,
number - time in milliseconds (from 100 to 5000).

☑ **Section name: S700**

☑ **Option name: CHAR_TIMEOUT**

☑ **Option value: station_no,number**

- Meaning - the item allows to determine a maximal time between successive characters of answer from a given analyzer. After passage of this time it is assumed that a given analyzer does not work correctly and transmission session ends with an error.
Default value - by default, it is assumed that the time between successive characters is equal to 50 millisecond.
Parameter:
station_no - number AK-ID of analyzer,
number - time in milliseconds (from 10 to 300).

1.83 S7_TCPIP – Driver for Data Exchange with SIMATIC Controllers with Use of Ethernet

Driver Use

The S7_TCPIP driver is used for data exchange with SIMATIC S7-series controllers through the Ethernet connection with the use of a standard computer network card.

The S7_TCPIP protocol driver does not require the installation of SIMATIC NET software from SIEMENS on the Asix system computer, nor the adaptation of the controller program for the needs of data exchange.

The parameterization of the S7_TCPIP driver is performed by the Architect application.

Declaration of Transmission Channel

The declaration of the transmission channel operating according to S7_TCPIP protocol requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the logical transmission channel

Driver: S7_TCPIP

S7_TCPIP/ Channel parameters tab:

Device (controller) IP address

Local TSAP address

Remote TSAP address

IP address - the IP address of the local computer network adapter through which the channel will connect with the driver;

UTC Synchronization - it is possible to use UTC time for time synchronization.

S7_TCPIP/ Channel parameters - controlling tab:

Control variable - name of variable used to control the controller's RUN-STOP status;

Alarm number - alarm number generated upon the change of the controller's RUN-STOP status; by default, the alarm is not generated;

Error signal - setting the error status for all variables in the given channel; if the controller switches into STOP status; by default the error status is set;

EXAMPLE

Below is an example of the declaration of the transmission channel utilizing protocol S7-TCPIP:

Name: CHAN1
Driver: S7_TCPIP
Server IP address: 10.10.10.40
Local TSAP address: 10.02
Remote TSAP address: 10.03

Process Variable Addressing

The rules for creating symbolic variable addresses belonging to the transmission channel utilizing S7_TCPIP protocol are the same as in the case of channel utilizing SAPI7 protocol.

The symbolic address for variables belonging to the S7_TCPIP channel has the following syntax:

variable_type[*db_number.*]*variable_index*

where:

- variable_type* - string identifying the variable type in the controller;
- db_number* - optional data block number; used only in the case of process variables being the mapping of word contents in the data blocks;
- variable_index* - variable index within the given type; in the case of data blocks, this is the word number in the data block.

The following process variable type markings (based on the variable type names used by SIEMENS) are allowed:

- EA - statuses of outputs, transmitted in bytes,
- EE - statuses of inputs, transmitted in bytes,
- EM - statuses of flags, transmitted in bytes,
- EZ - statuses of meters, transmitted in words,
- ET - statuses of clocks, transmitted in words,
- ED - word values in data blocks,
- EL - double word values in data blocks,
- EG - double word values in data blocks, treated as number in floating point format KG,
- EDI - 16-bit words in INTEL convention,
- ER - contents of the data blocks treated as floating point numbers,
- EB - contents of the data blocks treated as bytes.

EXAMPLES

- ED10.22 - word number 22 in data block no. 10
- EZ100 - meter no. 100

Driver Parameters

Driver parameters are declared in the *Current data* module on **S7_TCPIP/Driver parameters Driver parameters - logging** tabs of the channel operating on the basis of S7_TCPIP driver protocol:

- IP address** - the IP address of the local computer network adapter through which the channel will connect with the driver.

Statistics

Meaning

- the option allows information on the number of performed transmission sessions, average transmission time and the transmission error number to be displayed every minute; this option was developed to support the designer in the system start-up stage.

Default value

- by default, transmission statistics are not displayed.

Receive timeout

Meaning

- maximal waiting time for PLC response.

Default value

- 1000

Parameter:

number

- number in milliseconds

Log file

Meaning

- option allows the definition of a file, where all S7_TCPIP driver messages related to operations executed by the driver will be saved. If the *Log file* option does not define a full path, the log file will be created in the current folder.

Default value

- by default, the log file is not created.

Parameter:

file_name

Log file size

Meaning

- allows log file size in MB to be determined.

Default value

- by default, option takes the value of 1 MB.

Parameter:

Number

- number in MB

Log of telegrams

Meaning

- declaration of writing the contents of telegrams sent and received by the S7_TCPIP driver within the reading/writing process variables to the log file, declared in *Log file* option.

Default value

- by default, the option is disabled.

Log of telegram contents

Meaning

- writing telegram contents to the log file.

Default value

- by default, the option is disabled.

1.84 SAPI7 - Driver of SAPI7 Protocol for SIMATIC S7 PLCs

Driver Use

The SAPI7 driver is used for data exchange with SIMATIC S7 PLCs by means of the MPI interface or a PROFIBUS bus communication processor. In an Asix system computer the SIEMENS CP5611, CP5412(A2) or CP5613 card is used. The data exchange with use of the SAPI7 protocol is based on so called S7 functions.

Operation of the Asix system with the SIMATIC S7 PLC by use of the SAPI7 protocol does not require any controller's program adaptation for data exchange.

Parameterization of SAPI7 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the SAPI7 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: SAPI7

SAPI7/Channel parameters tab:

<i>Application name</i>	- virtual device name (VFD),
<i>Connection name</i>	- connection name,
<i>Control variable</i>	- name of a variable used to control the RUN-STOP state of the PLC,
<i>Alarm number</i>	- number of the alarm generated when the RUN-STOP state of the PLC changes; by default, alarms are not generated;
<i>Error signal</i>	- setting an error status for all variables of a given channel in case of the PLC switching over into the STOP state; by default, an error status is set;
<i>UTC Synchronization</i>	- use for time synchronization in the UTC format.

Names *VFD* and *connection name* must be compatible to parameters declared by use of the configuration program COML S7 supplied with the communication processor board.

EXAMPLE

An exemplary item declaring use of transmission channel operating according to the SAPI7 protocol is given below:

Channel / name: CHAN1
Driver: SAPI7
Channel parameters: VFD1, S7_connection1

The logical channel named CHAN1 has defined the following parameters:

- SAPI7 protocol,

- virtual device name (VFD) - VFD1,
- connection name - S7_connection1.

Rules of creating the symbolic addresses of variables belonging to the transmission channel using the Sapis7 protocol are the same ones as in case of a channel using the AS512 protocol.

The set of process variable types used in the Sapis7 protocol was extended with the following elements in relation to the set offered by the AS512 protocol:

- EDI - 16-byte words in INTEL convention,
- ER - content of data blocks, treated as floating-point numbers,
- EB - content of data blocks, treated as bytes.

The Sapis7 driver is loaded as a DLL automatically.

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to Sapis7 driver.

Sapis7/Driver parameters tab:

Log file

- Meaning - the item allows to define a file to which all Sapis7 driver messages concerning operations performed by the driver are written. If the item does not define the full name, then the log file is created in the current directory.
- Default value - by default, the log file is not created.

Log of telegrams

- Meaning - declaration of writing the contents of telegrams sent and received by the Sapis7 driver within reading/writing process variables to the log file declared in the item Log file.
- Default value - NO.

Maximal length of the buffer

- Meaning - the length of telegrams accepted by an MPI interface depends on the CPU type of S7 controllers and on a program executed by them.
- Default value - the default, length of a telegram is equal to 220 bytes.
- Parameter:
 number - length of telegrams passed in bytes.

Console

- Meaning - the item allows to create a console window where Sapis7 driver messages concerning operations executed by the driver are displayed currently.
- Default value - by default, any console window is not created.

SAPIS7/Driver parameters 2 tab:

Statistics

- Meaning - the item allows to display (every 1 minute) information about number of transmission sessions that have been carried-out, average transmission time and number of transmission errors. The item was developed as a designer support on the stage of the Asix system start-up.
- Default value - by default, the transmission statistics is not displayed.

Number of check readings

- Meaning - the item specifying a minimal number of successive readings of control variable (of a constant value) which cause a signalization of the controller STOP status.
- Default value - by default, the item assumes a value of 3.

Serialization

- Meaning - declaration of servicing the transmission from the S7 by transferring single YES or many NO queries.
- Default value - YES.

Without multiple read

- Meaning - it allows to block the mode of multiple read creation and enables driver operation in the mode of single read.
- Default value - No, in the current version the `s7_multiple_read_req` function is used, by default (it allows to build a multiple read), for maximal use of the length of the telegram buffer sent between PC and S7.
- Parameter:
number - length of telegrams passed in bytes.

1.85 S-BUS - Driver of S-BUS Protocol for SAIA-Burgess Electronics PLCs

Driver Use

The S-BUS driver is used for data exchange between PCD PLCs of SAIA-Burgess Electronics and an Asix system computer.

The S-BUS protocol is compatible to the specification "SAIA S-Bus for the PCD family", Edition 26/739 E2-05.96, developed by SAIA-Burgess Electronics.

For purposes of communication with the Asix system, the following interfaces of PCD PLCs may be used:

- the PGU interface (RS-232C);
- additional communication interfaces, the number and type of which depend on the controller type and configuration. These interfaces enable data transmission in one of the standards given below:
RS-232C,
RS-422,
RS-485,
current loop of 20 mA.

NOTE For data exchange you should use a cable made according to the specification PCD8.K111.

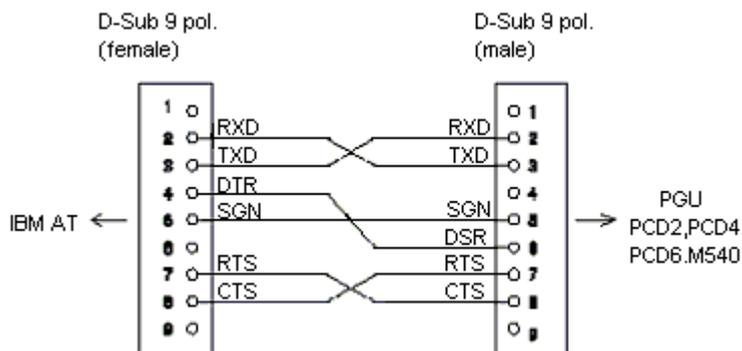


Figure 4. Cable Compatible with the PCD8.K111 Specification.

Parameterization of S-BUS driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the S-BUS driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: S-BUS

S-BUS tab:

Channel parameters:

id, port [, baud]

where:

id - number of the controller in the S-BUS network;
port - port name: COM1, COM2 etc.;

optional parameters:

baud - transmission channel.

If the optional parameters are not given, then by default it is assumed as follows:
transmission speed of 9600 baud.

EXAMPLE

The declaration of the logical channel named CHAN1 operating according to the S-BUS protocol and exchanging data with the controller numbered 1 through the COM2 port with a speed of 9600 baud is as follows:

Channel / Name: CHAN1
Driver: S-BUS
Channel parameters: 1, COM2

The S-BUS driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the S-BUS driver channel is as follows:

<type><index>

where:

type - variable type,
index - index within the type.

Symbols of variable types (the type of raw variable value is given in parentheses):

C - values of counters (DWORD),
F - states of flags (WORD),
I - values of inputs (WORD),
K - current date and time in the form of an 8-bit array (BYTE),
O - values of outputs (WORD),
RI - values of registers treated as 32-bit fixed-point signed numbers (LONG),
RF - values of registers treated as 32-bit floating-point numbers in SAIA format (FLOAT),

S - status (WORD),
T - values of timers (DWORD).

Values of variables of **C, F, O, RI, RF, T** that may be read and written.

Values of variables of **I, S** type that may be only read.

Values of variables of **K** types are used by the driver for time synchronization with a PCD.

The structure of **K** type variable buffer is as follows:

byte 0 - number of a week in a year,
byte 1 - number of a week day (Monday - 1, Sunday - 7),
byte 2 - two least significant digits of a year,
byte 3 - month,
byte 4 - day,
byte 5 - hour,
byte 6 - minute,
byte 7 - second.

Range of indexes for the **S** type is limited to 20 – 27.

Variable defining the state of connection with the controller

The variable is defined by address ON and takes value 1 when the last transmission is ended properly as well as when the last transmission is ended with failure. The variable is of WORD type and requires the NOTHING conversion function to be used.

EXAMPLE

Examples of variable declaration:

```
# values of registers treated as FLOAT
JJ_10, RF1, CHAN1, 1, 1, NOTHING_FP

# values of registers treated as LONG
JJ_11, RI11, CHAN1, 1, 1, NOTHING_LONG

# states of flags
JJ_14, F14, CHAN1, 1, 1, NOTHING

# values of inputs
JJ_14, I14, CHAN1, 1, 1, NOTHING

# values of outputs
JJ_14, O14, CHAN1, 1, 1, NOTHING

# values of counters
JJ_21, C21, CHAN1, 1, 1, NOTHING_DW

# value of status
JJ_40, S20, CHAN1, 1, 1, NOTHING
```

Driver Configuration

S-BUS driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **S-BUS** section.

Section name: S-BUS

Option name: ALARM

Option value: id,number

Meaning - driver of the S-BUS protocol may generate an alarm in case of loss and re-establishing the connection with the station. It is necessary in this case to create the item ALARM in the INI file.

Default value - by default, the alarm is not generated.

Parameters:

id

- number of the controller in the S-BUS network,

number

- number of the alarm to be generated in case of loss and re-establishing the connection.

Section name: S-BUS

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file to which all diagnostic messages of the S-BUS driver and the information about contents of telegrams received by the driver are written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

Section name: S-BUS

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - the item allows to write to the log file (declared by use of the item LOG_FILE) the contents of telegrams sent within the communication with the controller. Writing the contents of telegrams to the log file should be used only while the Asix start-up.

Default value - by default, the telegrams are not written.

Section name: S-BUS

Option name: LOG_FILE_SIZE

Option value: number

Meaning - the item allows to specify the log file size in MB.

Default value - by default, the item assumes that the log file has a size of 1 MB.

Section name: S-BUS

Option name: RECV_TIMEOUT

Option value: id,number

Meaning - the item allows to specify a maximal waiting time for arriving the first character of an answer from a given controller. After this time it is assumed that a given controller is switched off and the transmission session ends with an error.

Default value - by default, it is assumed that the maximal waiting time for the first character of an answer is equal to 1000 milliseconds.

Parameters:

id

- number of the controller in the S-BUS network,

number

- time in milliseconds (from 100 to 5000).

Section name: S-BUS

Option name: CHAR_TIMEOUT

Option value: id,number

Meaning - the item allows to specify a maximal time between successive characters of an answer from a given controller. After this time it

is assumed that the controller does not work correctly and the transmission session ends by an error.

Default value - by default, it is assumed that the maximal time between successive characters of an answer is equal to 50 milliseconds.

Parameters:
id - number of the controller in the S-BUS network,
number - time in milliseconds (from 10 to 300).

Section name: S-BUS

Option name: ADDRESS_TIMEOUT

Option value: number

Meaning - the item allows to determine a time period between the character of address and the first character of data in an order sent to the PCD. The time period is necessary to switch over the PGU interface from the mode of address receiving to the mode of data receiving.

Default value - by default, it is assumed that the time period between the address character and the first character of data is equal to 25 milliseconds.

Parameters:
number - time in milliseconds.

Section name: S-BUS

Option name: NUMBER_OF_REPETITIONS

Option value: number

Meaning - the item allows to specify a number of repetitions in case of a transmission error.

Default value - by default, the item assumes a values of 0 (no repetitions).

Time Synchronization Between the Asix System and SAIA Controllers

In the S-BUS driver there is a mechanism of time synchronization between the Asix system and SAIA controllers. The time synchronization is activated for each channel separately by means of items placed in the ASMEN section.

Section name: S-BUS

Option name: TIME_SYNCHRONIZATION

Option value: channel, variable

Parameters:

channel - name of a transmission channel used for communication with a given SAIA controller;
variable - name of an ASMEN variable belonging to the channel CHANNEL and used for time synchronization.

The time synchronization consists on cyclic writing to the controller a frame containing an actual Asix time. The frame is written by means of a built-in function for writing the S_BUS protocol time according to a frequency assigned to variable. The variable type must be the **K** type (clock support), the number of elements assigned to variable must accommodate the time frame, i.e. it must have a size of min. 8 bytes. As a conversion function the NOTHING_BYTE function must be used.

Section name: S-BUS

Option name: MODE

Option value: id,mode_name

Meaning - up to now, the S-BUS protocol driver has serviced the PARITY transmission mode; from the version 1.02.000 the driver services also BREAK and DATA modes; settings of a proper mode are realized by the MODE parameter.

Communication Drivers

Default value - omission of the item causes the PARITY mode realization.
Parameters:
 id - number of controllers in the S-BUS network,
 mode_name - one of the following words: PARITY, BREAK or DATA.

NOTICE *Using a specific mode, one should remember about proper controller parametrization - the controller should use the same mode.*

Section name: S-BUS

Option name: RTS_MODE

Option value: number

Meaning - the option sets RTS control mode; useful for RS232/RS485 converters.

Default value - 1

Parameter:

number - one of the following numbers that indicate RTS control mode according to API Win32:
 0 - RTS_CONTROL_DISABLE
 1 - RTS_CONTROL_ENABLE
 2 - RTS_CONTROL_HANDSHAKE
 3 - RTS_CONTROL_TOGGLE

Connection by Means of Modem

Driver of the S-BUS protocol is also able to exchange the data by means of a modem, also with use of the PGU interface.

Connection by means of a modem is possible only by using the DATA transmission mode.

S-BUS driver channel is the client of the AsComm server named S:BUS:n

where:

n - it is the number of the serial port received from the ASMEN channel definition,

e.g.

if channel_name=S=BUS,1,com2,...

then a client name is S-BUS:2.

To establish a connection on dial-up links by means of the AsComm program, the record given below must be placed in the [MODBUS:n] section:

Switched_line = Yes

If the modem is connected to the other port than COMn, then you should give the number of this port by means of the parameter Port or specify the modem name by means of the parameter Modem. You should also give a telephone number and define other required parameters. If MODBUS driver has to communicate with many controllers by means of the same modem, then one should define suitable number of channels taking the parameter port as a virtual transmission channel and place suitable number of sections in the application configuration file, by specifying in them an appropriate telephone number.

EXAMPLE

An example of the initialization file content:

Channel / Name: Chan1

Driver: S-BUS
Channel parameters: 1,COM11,9600,8,none,1,16,16

Channel / Name: Chan2
Driver: S-BUS
Channel parameters: 1,COM12,9600,8,none,1,16,16

Section name: MODBUS:11
Option name: Switched_line
Option value: Yes

Section name: MODBUS:11
Option name: Modem
Option value: US Robotics

Section name: MODBUS:11
Option name: Number

Option value: 11111111

Section name: MODBUS:12
Option name: Switched_line
Option value: Yes

Section name: MODBUS:12
Option name: Modem
Option value: US Robotics

Section name: MODBUS:12
Option name: Number
Option value: 22222222

In the example above Chan1 will communicate with a controller placed under the telephone number 11111111, and the Chan2 with a controller placed under the telephone number 22222222. The US Robotics modem will be used. The *Modem* parameter may be replaced by the parameter *Port*, which specifies the number of the serial port to which the modem is connected.

You should notice that the description of application of the MODBUS driver on switched links does not include any modem configuration guidelines. The modem configuration depends on modem types.

1.86 CtSbusTcpiip - Driver of S-Bus Ethernet Protocol

Driver Use

The CtSbusTcpiip driver is used for data exchange between Asix system computers and PLCs of PCD SAIA-Burgess family by means of the Ethernet S-Bus protocol.

Parameterization of CtSbusTcpiip driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtSbusTcpiip driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtSbusTcpiip

CtSbusTcpiip/Channel parameters tab:

Device ID in the S-BUS network - number of the controller in the S-BUS network;
Serial port - number of the TCPIP port of the controller (by default 5050),
Device IP address - IP address of the controller,
Synchronization interval - period (in seconds) for time synchronization with the controller – optional;
Timeout - timeout (in milliseconds) between sending query and receiving response - optional.

EXAMPLE

An exemplary declaration of the channel for communication with the controller:

- a. number in the S-BUS network - 3;
- b. number of a TCPIP port - 5050;
- c. IP address - 10.10.10.225;
- d. time synchronization - every 20 seconds;

Channel: CHANNEL
Driver: CtSbusTcpiip
Device ID in the S-BUS network: 3
Serial port: 5050
Device IP address: 10.10.10.225
Synchronization interval: 20

Declaration of Variables

The declaration of variables is the same as in the S-BUS driver. The syntax of the variable address is as follows:

`<type><index>`

where:

type - variable type,
index - indexes within the framework of the type.

The notations of variable types (the raw variable type is put in parentheses):

C - counter values (DWORD),
F - flag states (WORD),
I - input states (WORD),
K - **current date & time in the form of 8-byte table (BYTE)**,
O - output states (WORD),
RI - values of registers treated as a 32-bit signed number (LONG),
RF - values of registers treated as a 32-bit floating-point number in SAIA format (FLOAT),
S - statuses (WORD),
T - **timer values (DWORD)**.

The variable values of the **C, F, O, RI, RF, T** type may be read and written.

The variable values of the **I, S** type may be only read.

The range of the indexes for the **S** type is from 20 to 27.

EXAMPLE

Examples of variable declarations.

```
# values of registers treated as FLOAT
JJ_10, , RF1, CHANNEL1, 1, 1, NOTHING_FP
# values of registers treated as LONG
JJ_11, , RI11, CHANNEL1, 1, 1, NOTHING_LONG
# flag states
JJ_14, , F14, CHANNEL1, 1, 1, NOTHING
# input states
JJ_14, , I14, CHANNEL1, 1, 1, NOTHING
# output states
JJ_14, , O14, CHANNEL1, 1, 1, NOTHING
# counter values
JJ_21, , C21, CHANNEL1, 1, 1, NOTHING_DW
# statuses values
JJ_40, , S20, CHANNEL1, 1, 1, NOTHING
```

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to CtSbusTcpip driver.

CtSbusTcpip/Driver parameters tab:

Log file

Meaning - it is a text file to which messages about the driver operation state are written; is used for diagnostic purposes.

Default value - by default, the log file is not created.

Communication Drivers

Defining - manual.

Log file size

Meaning

Default value

Parameter:

number

Defining

- allows to define the size of the log file.

- by default, the item assumes that the log file has a size of 1 MB.

- size of the log file in MB.

- manual.

Telegrams log

Meaning

Default value

Defining

- the item allows writing to the log file (declared with use of the LOG_FILE item) the contents of telegrams transmitted during the data exchange between the Asix system and the controllers.

- NO.

- manual.

PCD status

Meaning

Default value

Defining

- the item allows to control the variable status modification depending on the current controller status (PCD own status). If the item has the value YES, then the variable status is not dependent on the current variable of the controller status. If the item is set at value NO, then the variable status is dependent on the controller status - if it differs from 0x52 (RUN state), then the variable status is set at OPC_QUALITY_ COMM_FAILURE.

- NO.

- manual.

1.87 CtSi400 - Driver of Protocol for Sintony Si 400 Alarm Central of SIEMENS

Driver Use

The CtSi400 driver is used for data exchange between Asix computers and a Sintony Si 400 alarm central of SIEMENS. The communication is executed by means of serial links in the RS-232 standard.

Additional recommendations:

For proper operation of the alarm system it is demanded to connect only one visualization computer to a Sintony central (despite the central is equipped with 3 interfaces, during the system operation it is possible to use only one of them). The best solution is to connect a computer to the J7 interface with use of a SAQ11 cable recommended by SIEMENS.

Parameterization of CtSi400 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtSi400 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: CtSi400

CtSi400 tab:

Channel parameters:

Port=*port_nr* [;*BaudRate=baud*] [;*Timeout=ms_number*]
[;*AlarmOffset=offset*]*USERID=user_id*

where:

port	- serial port number (for COM1 it passed 1, for COM2 is passed 2, etc.);
BaudRate	- transmission speed passed in bauds. By default, it is assumed 9600 Bd;
Timeout	- timeout of waiting for the controller response (in milliseconds); it is passed 1000 milliseconds by default;
AlarmOffset	- offset added to the number of each alarm sent from a SINTONY SI 400 central;
USERID	- user identifier sent to SINTONY SI 400 in control frames. Proper values include in the range 0-500.

By default, it is assumed:

- number of character bits - 8,
- without parity check (NONE),
- number of stop bits - 1.

EXAMPLE

An exemplary declaration of the channel using CtSi400 on the serial port COM2 with the receiving timeout that equals 2000 ms and the offset, added to each alarm number, equaling 1500 is as follows:

Channel name: PLC1

Driver: CTSI400

Channel parameters: Port=2; Timeout=2000; OffsetAlarm=1500

Addressing Process Variables

The syntax of the symbolic address for all variables used to monitor the central state is given below:

<type><index>

and for variables used to control:

<type>

or

<type><index>

or

<type><p_index>.<r_index>

where:

<i>type</i>	- variable type,
<i>index</i>	- index within the type,
<i>p_index</i>	- partition number (0-15),
<i>r_index</i>	- room's number within the partition (0-7).

Types of Variables Used to Monitor

There are several types of variables used to monitor, which are listed below. The driver permits readout operations to be performed on these variables, while all write operations end with the OPC_E_BADRIGHTS error.

The bit 0 means the least significant bit in the following list.

- **IS<index>** - input status

PState	- bits 7-6
Lstate	- bits 5-3
Reserved	- bits 2-0

- **IP<index>** - input parameters:

PSL	- bits 15-14
V.Address	- bits 13-8
Type	- bits 7-4,

SubType, - bits 3-1

- **IA<index>** - input address

room nr - bits 12-9

partition nr - bits 4-0

- **IN<index>** - input name
- **OS<index>** - output status

State - bit 7

OutInTest - bit 6

BlinkBit - bit 5

NbrPulse - bit 4

Reserved - bits 3-0

- **OP<index>** - output parameters

Ltype - bits 7-0

- **OA<index>** - output address

room nr - bits 12-9

partition nr - bits 4-0

- **ON<index>** - output name
- **RP<index>** - room parameters

Rset - bits 15-8 (room1 is in the bit no. 15, room2 is in the bit no. 14, etc.)

Rarm - bits 7-0 (room1 is in the bit no. 7, room2 is in the bit no. 6, etc.)

- **RS<index>** - room status

room1 - bits 15-14

room2 - bits 13-12

etc.

- **PS<index>** - partition status

TAMP - bit 15

PA - bit 14

Fire - bit 13

AM - bit 12

Chime - bit 11

Mess - bit 10

Reserved - bits 9-8

Pstate - bits 7-6

PFA - bit 5

PPA - bit 4

PFS - bit 3

PPS - bit 2

PUS - bit 1

BA - bit 0

- **SS<index>** - system status

ParamCh - bit 15

Evt Overflow - bit 14

Avzone - bits 13 - 8

Mains - bit 7

Batt - bit 6
Fuse - bit 5
Line - bit 4
CMS1 - bit 3
CMS2 - bit 2
InComm - bit 1
Evt queue - bit 0

Types of Variables Used to Control

There are several types of variables used to control, which are listed below. The driver permits write operations to be performed on these variables, while all readout operations end with the OPC_E_BADRIGHTS error.

- **cIB<index>** - input bypass (index = 0..0xFFFF)

Writing any value to the variable will cause the performance of the command for the input with the *index* number.

- **cIS<index>** - input in soak test (index = 0..0xFFFF)

Writing any value to the variable will cause the performance of the command for the input with the *index* number.

- **cOT<index>** - set output in test mode (index = 0..0xFFFF)

Writing any value to the variable will cause the performance of the command for the output with the *index* number.

- **cTO<index>** - toggle output (index = 0..0xFFFF)

Writing any value to the variable will cause the performance of the command for the output with the *index* number.

- **cPP<p_index>** - partition part-set (p_index = 0..0xF)

Writing any value to the variable will cause the performance of the command for the partition with the *p_index* number.

- **cPF<p_index>** - partition full-set (p_index = 0..0xF)

Writing any value to the variable will cause the performance of the command for the partition with the *p_index* number.

- **cPU<p_index>** - partition unset (p_index = 0..0xF)

Writing any value to the variable will cause the performance of the command for the partition with the *p_index* number.

- **cCA<p_index>** - clear alarm memory in partition (p_index = 0..0xF)

Writing any value to the variable will cause the performance of the command for the partition with the *p_index* number.

- **cRF<p_index>.<r_index>** - room full-set (p_index = 0..0xF, r_index = 0..0xF)

Writing any value to the variable will cause the performance of the command for the room with the *r_index* number from the partition with the *p_index* number.

- **cRU<p_index>.<r_index>** - room unset (p_index = 0..0xF, r_index = 0..0xF)

Writing any value to the variable will cause the performance of the command for the room with the *r_index* number from the partition with the *p_index* number.

- **cSR<p_index>** - partition reset sounders/bells (p_index = 0..0xF)

Writing any value to the variable will cause the performance of the command for the partition with the *p_index* number.

- **cIP<index>** - input activation pulse (index = 0..0xFFFF)

Writing any value to the variable will cause the performance of the command for the input with the *index* number.

- **cIL<index>** - input activation latch (index = 0..0xFFFF)

A written value must convert to a double type. If the value 0 is received after conversion, for the input with the *index* number there will be performed the command with the parameter *commutation level* equaling 0; otherwise the parameter will be equal to 1.

- **cAV** - new current A/Video zone

A written value must be an integer from the range <0; 32>. Writing the value 0 will activate the *autoswitch* option.

- **cTC** - transmission to CMS

A written value must have the value 1 or 2 and indicate CMS1 or CMS2 suitably.

- **cER** - reset the pending event buffer

Writing any value to the variable will cause the performance of the command.

IN and ON variables are 16-element BYTE type arrays. Other variables are WORD type values.

All the variables used to control are of the WORD type.

EXAMPLE

Exemplary variable declarations:

JJ_00, input status 1,	IS1,	PLC1, 1, 1, NIC
JJ_01, output status 10,	OS10,	PLC1, 1, 1, NIC
JJ_02, input 2 name,	IN2,	PLC1, 16, 1, NIC_BYTE
JJ_03, system status,	SS1,	PLC1, 1, 1, NIC
cIB3, input 3 bypass,	cIB3,	PLC1, 1, 1, NIC
cRU1.2, part 1 room 2 unset,	cRU1.2,	PLC1, 1, 1, NIC
cAV, current A/V zone,	cAV,	PLC1, 1, 1, NIC

Time Stamp

All values of variables read from a SINTONY SI 400 central are stamped with the local PC time.

Driver Configuration

CtSi400 driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CTSI400** section.

Section name: CTSI400

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file to which all diagnostic messages of the driver will be written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix system start-up.

Default value - by default, the log file is not created.

Defining - manual.

Section name: CTSI400

Option name: LOG_FILE_SIZE

Option value: number

Meaning - allows to specify the log file size.

Default value - 1MB.

Defining - manual.

Parameter:

number - number in MB.

Section name: CTSI400

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - item allows to write to the log file (declared by use of the item LOG_FILE) the contents of telegrams received by the driver. Writing the contents of telegrams to the log file should be used only in the stage of the Asix system start-up.

Default value - NO.

Defining - manual.

Section name: CTSI400

Option name: DELAY_AFTER_OPEN_SESSION

Option value: number

Meaning - allows to define a timeout between opening a session and sending the first query about data within this session.

Default value - by default, the value is set to 100.

Defining - manual.

Parameter:

Number - timeout value in milliseconds.

1.88 SINECH1 – Driver of Ethernet Network Protocol for SIMATIC S5 PLCs

Driver Use

The SINECH1 driver is used for data exchange between Asix computers and SIMATIC S5 PLCs provided with the CP 1430, via an Ethernet network. An Asix system computer must be provided with the SIEMENS CP1413 card.

The cooperation of the Asix system with the PLC by use of the SINECH1 protocol needs developing the controller's program supporting the CP 1430.

Parameterization of SINECH1 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the SINECH1 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: SINECH1

SINECH1 tab:

fTsapPC, fTsapPLC, rTsapPC, rTsapPLC, MAC

where:

- | | |
|----------|---|
| fTsapPC | - name of TSAP used for the reading operation (FETCH) in the Asix computer; |
| fTsapPLC | - name of TSAP used for the reading operation (FETCH) in the controller; |
| rTsapPC | - name of TSAP used for the writing operation (RECEIVE) in the Asix computer; |
| rTsapPLC | - name of TSAP used for the writing operation (RECEIVE) in the controller; |
| MAC | - MAC network address assigned to the controller. |

NOTE Names of TSAPs are any 8-character strings. Names of TSAPs declared in the Asix system must have their equivalents among TSAPs declared by means of COM 1430 on the controller side. Reading and writing from/to the controller is executed within separate connections.

EXAMPLE

An exemplary declaration of transmission channel using the SINECH1 protocol is given below:

Channel name: CHAN1

Driver: SINECH1

Channel parameters: LocFetch,TestFetc,LocRecev,TestRece,08:00:06:01:00:22

The logical channel named CHAN1 has the following parameters defined:

SINECH1 protocol,

- LocFetch - name of TSAP used for the reading operation (FETCH) in the Asix system,
- TestFetc - name of TSAP used for the reading operation (FETCH) in the controller,
- LocRecev - name of TSAP used for the writing operation (RECEIVE) in the Asix computer,
- TestRece - name of TSAP used for the writing operation (RECEIVE) in the controller,
- 08:00:06:01:00:22 - MAC network address assigned to the controller

Addressing the Process Variables

The rules of creating the symbolic addresses of variables belonging to the SINECH1 driver channel are the same as in case of the channel using the AS512 protocol

The SINECH1 driver is loaded as a DLL automatically.

Driver Configuration

SINECH1 driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **SINECH1** section.

Section name: SINECH1

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file to which all diagnostic messages of the SINECH1 driver and the information about contents of telegrams received by the driver are written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix start-up.

Default value - by default, the log file is not created.

Section name: SINECH1

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - the item allows to write to the log file (declared by use of the item LOG_FILE) the contents of telegrams sent within the communication with the controller. Writing the contents of telegrams to the log file should be used only while the Asix start-up.

Default value - by default, the telegrams are not written.

Section name: SINECH1

Option name: LOG_FILE_SIZE

Option value: number

Meaning - the item allows to specify the log file size in MB.

Default value - by default, the item assumes that the log file has a size of 1 MB.

1.89 SINECL2 – Driver of PROFIBUS Protocol for SIMATIC S5 PLCs

Driver Use

The SINECL2 driver is used for data exchange between Asix computers and SIEMENS SIMATIC S5 PLCs provided with the CP5430 card, with the aid of the SINEC L2 local network based on the FDL protocol (2-nd level of the PROFIBUS standard). An Asix system computer must be provided with the CP5412 (A2) or CP5613 communication processor and system software used to support this processor.

The software of the controller dedicated for operation together with the Asix system must meet the following requirements:

- program in the controller must contain calls of function blocks executing receiving and sending telegrams through the CP5430 according to the FDL protocol;
- number of the node given to the CP5430 must be unique within the local SINEC L2 network;
- parameters of the CP5430 and CP5412(A2) or CP5613 operation must be compatible.

In each transmission channel established between any Asix system computer and any CP5430 communication processor, it is allowed to use 10 subchannels, multiplying in this way a quantity of transferred information.

Parameterization of SINECL2 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the SINECL2 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: SINECL2

SINECL2 tab:

Channel parameters:

PC_node, PLC_node [, *subchannel*]

where:

PC_node

- number of the node assigned to the application computer;

PLC_node

- number of the node assigned to the CP5430 processor in the controller with which the connection is to be executed in a given transmission channel;

subchannel

- numbers of subchannels which are used in a given transmission channel. An absence of this parameter signifies that all the subchannels (from 1 to 10 inclusive) are used in a given channel.

EXAMPLE

Exemplary items declaring transmission channels working according to the SINEC L2 protocol are given below:

Channel name: CHAN2
Driver: SINECL2
Channel parameters: 5,1,1,2,3,4

Channel name: CHAN3
Driver: SINECL2
Channel parameters: 5,2

The transmission channel with the logical name CHAN2 has the following parameters defined:

- SINECL2 protocol using the SINEC L2 local network;
- number of the node assigned to the computer - 5;
- number of the node assigned to the CP5430 communication processor - 1;
- used subchannels with numbers 1, 2, 3 and 4.

The transmission channel with the logical name CHAN3 has the following parameters defined:

- SINECL2 protocol using the SINEC L2 local network;
- number of the node assigned to the computer - 5;
- number of the node assigned to the CP5430 communication processor - 2;
- all the subchannels are used.

Addressing the Process Variables

The rules of creating the symbolic addresses belonging to the SINECL2 type channel are the same ones as for AS512 type channels.

The SINECL2 protocol driver requires installing the CP5412(A2) or CP5613 card and the driver of this card supplied in the DP-5412/Windows NT packet by SIEMENS.

The SINECL2 protocol driver is loaded as a DLL automatically.

Driver Configuration

SINECL2 driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **SINECL2** section.

Section name: SINECL2

Option name: ALARM_LOG

Option value: YES|NO

Meaning - declaration of writing to the log file the messages about an arrival of alarm telegrams.

Default value - NO.

Defining - manual.

Section name: SINECL2

Option name: ERROR_LOG

Option value: YES|NO

Meaning - declaration of writing to the log file the messages about transmission errors.

Default value - NO.

Defining - manual.

Section name: SINECL2

Option name: MAX_NOUMBER_OF_NODES

Option value: number

Meaning - declaration of maximal number of nodes in the SINECL2 network.

Default value - 16.

Defining - manual.

Section name: SINECL2

Option name: SAP

Option value: id, PC_SAP, PLC_SAP

Meaning - declaration of mapping the SAPs, creating a logical channel named id, on the PC and PLC sides;

Default value - by default, 10 pairs of SAPs mapped as follows (id, PC_SAP, PLC_SAP) are used:

1, 35, 45

2, 36, 46

3, 37, 47

4, 38, 48

5, 39, 49

6, 40, 50

7, 41, 51

8, 42, 52

9, 43, 53

10, 44, 54

Defining - manual.

Section name: SINECL2

Option name: STATISTICS

Option value: YES|NO

Meaning - transmission statistics writing to the log file every minute.

Default value - NO.

Defining - manual.

Section name: SINECL2

Option name: TIMEOUT

Option value: number

Meaning - timeout for an answer from the controller expressed in ticks of duration time equal to 400 ms.

Default value - 3.

Defining - manual.

Section name: SINECL2

Option name: LOG_FILE

Option value: name

Meaning - declaration of the log file name with diagnostic messages of the SINECL2 driver.

Default value - log file is not created.

Defining - manual.

Section name: SINECL2

Option name: CP_TYPE

Option value: number

Meaning - declaration of the communication processor card type used in the asix system computer. Two types are allowable:

1/ CP5613 identified by the number 5613;

2/ CP4512 (A2) identified by the number 5412.

Default value - 5412 (CP5412 (A2) communication processor).

Defining - manual.

Section name: SINECL2

Option name: DELAY

Option value: number

Meaning - timeout declaration (in milliseconds) after an occurrence of SDA telegram sending error.

Default value - 0.

Defining - manual.

Section name: SINECL2

Option name: ACTIVE_TELEGRAMS_SAP

Option value: number

Meaning - the item allows definition of SAP number that is used for servicing active telegrams.

Default value - 0.

Defining - manual.

1.90 CtSNG - Driver to Exchange Data with SNG Devices

Driver Use

CtSNG protocol driver is used for data exchange between the Asix system and SNG systems provided by the Warsaw based Synergia Tech company, via an Ethernet link. CtSNG driver configuration is performed using the Architect application.

Transmission Channel Declaration

Declaration of the transmission channel utilizing the CtSNG driver requires adding a channel with the following parameters to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: SNG

SNG tab:

Channel parameters:

ServerIP=IPaddress; [Port=number;] SNG=address; AlarmNo=number; [Timeout=number]

where:

ServerIP - IP address of the CommServer of the SNG_Synergia system
Port - CommServer port number of the SNG_Synergia system. Default 8888,
SNG - Source Physical Address of the SNG system assigned to transmission channel,
Timeout - Max. time (in seconds) between two consecutive frames sent by the CommServer (CommServer sends a 'heart-beat' frame, if there are no frames generated by the SNG_Synergia devices). By default, 15 seconds,
AlarmNo - The alarm number reported to Asix alarm system in the absence of communication with the SNG_Synergia system.

EXAMPLE

Example of a declaration of transmission channels to communicate with the CommServer with an IP address 87.205.117.187 and the default port 8888. SNG address assigned to the channel is 2.1.5:

ServerIP=87.205.117.187; SNG=2.1.5; AlarmNo=100

Declaration of Variables

The general syntax of the process variable symbolic address is as follows:

`<data_type:<group_address>:<source_address>:<return_address>`

where:

data_type - Number in the range 1 - 6 determines the type of the SNG data. It should be given only when a variable is used for control.

group_address - group address of the device in the SNG_Synergia system in the **a/b/c** format.

It should be given only when a variable is used for control.

source_address - The physical address of the source in **a.b.c** format, from which the 'Feedback' messages that supplies the current value of the variable arrive. It should be given only when a variable is fed with data from the messages of the 'feedback' type;

return_address - A group source address in the **a/b/c** format, from which the 'Feedback' messages that supplies the current value of the variable arrive. It should be given only when a variable is fed with data from the messages of the 'feedback' type.

Depending on the application of the variable, its symbolic address can take form:

a/ control only variable:

`<data_type>: <group_adres>`

b/ monitoring only variable:

`<source_address>: <return_address>`

c/ control and monitoring variable:

`<data_type:<group_address>:<source_address>:<return_address>`

Examples of variable declarations:

JJ_01 is only used to control the **On/Off** type device in the 1/2/3 group address.
JJ_01, , 1:1/2/3, K1, 1, 1, NIC

JJ_02 only supports the 'feedback' from the device with a physical SOURCE address 1.2.3 and
group return address 1/0/23 (data type arrives in the 'feedback' frame and is neither
Time nor
Date type)
JJ_02, , 1.2.3:1/0/23, K1, 1, 1, NIC

JJ_03 device IS used to control the **Value** type device with the 1/2/3 group address and receives

```
# 'Feedback' of a different type than Time or Date from the device with the source  
physical address of 1.5.6  
# and group address 1/0/44  
JJ_03, , 6:.1/2/3:1.5.6:1/0/44, K1, 1, 1, NIC
```

```
# JJ_04 only supports the Time type 'feedback' from a device with a source physical  
address of 1.2.3  
# and return group address of 1/0/23  
JJ_04, , 1.2.3:1/0/23, K1, 10, 1, NIC_TEXT
```

```
# JJ_05 only supports the Date type 'feedback' from a device with a source physical  
address of 1.2.3  
# and return group address of 1/0/23  
JJ_05, , 1.2.3:1/0/23, K1, 12, 1, NIC_TEXT
```

Driver Parameters

The CtSNG driver parameters are declared in the *Miscellaneous* module, in the *Directly Entered options* tab.

The driver configuration is done using a separate section called **CTSNG**

Section name: CTSNG

Option name: LOG_FILE

Option value: log_file_name

Purpose: - the text log file to which driver status messages are stored is used for diagnostic purposes.

The default value: - by default, no log file is created.

Section name: CTSNG

Option name: LOG_FILE_SIZE

Option value: number

Purpose: - this item is used to determine the size of the log file defined using LOG_FILE item.

Option value:

number - the size of the log file in MB.

The default value: - the default log file size is 10 MB.

Section name: CTSNG

Option name: LOG_OF_TELEGRAMS

Option value: YES | NO

Purpose: - the item allows writing the contents of messages communicated between the driver and the controllers to the log file (declared using the LOG_FILE item) The item in question should only be used during the Asix system start-up.

The default value: - default value of the option is NO.

EXAMPLE

Sample driver parameterization

Section name: CTSNG

Option name: LOG_FILE

Option value: d:\tmp\CtSNG\mvi.log

Section name: CTSNG

Option name: LOG_FILE_SIZE
Option value: 20

Section name: CTSNG
Option name: LOG_OF_TELEGRAMS
Option value: YES

Channel Parameters

The parameters included in the channel section (in the *Miscellaneous* module, the *Directly entered options* tab).

In the section called *<channel_name>* it is possible to include declaration items:

- create a log file
- the log file size
- messages log.

The purpose of this item is similar to the driver's purpose, but the information stored in files declared in the channel section refer to a single driver channel.

1.91 SNMP - driver for reading and writing object values using SNMPv1 and SNMPv2c protocol

Driver Use

SNMP. The driver can read and write objects values using SNMPv1 and SNMPv2c protocol - manage the various elements of telecommunications networks, such as routers, switches, computers and telephone exchanges. The driver performs its functions by using the SNMP Management API.

Declaration of Transmission Channel

Declaration of the transmission channel using the SNMP driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: SNMP

SNMP/Channel parameters tab:

Remote device address - IP address of remote device;

Community string - community string defined on remote device; default: public;

Transmission timeout - transmission timeout in milliseconds; default: 1000 ms;

Number of retries - number of retries of transmission; default: 3;

Log file - the item allows to define a file to which all the diagnostic messages of the driver will be written; default: snmp.log.

Declaration of Variables

Declaration of variable takes the form of identifiers sequence separated by dots, e.g.: „1.3.6.1.2.1.4.1.0“. the last digit is zero for scalar values or index in an array of values (starting form 1). The index may also have a more complex structure depending on the object. Instead of numerical identifiers occurring in the given address you can use symbolic identifiers - if they are defined on local computer (in mib.bin file); for example: „iso.org.dod.internet.mgmt.mib-2.system.sysDescr.0“. If the address begins with a dot - it's absolute address. Otherwise, the address is relative to „iso.org.dod.internet.mgmt.mib-2“. That means: you can declare only „system.sysDescr.0“ to get a description of the system. The variable type must be compatible with the type of object.

1.92 CtSNPX - Driver of SNPX Protocol for GE Fanuc PLCs

Driver Use

The driver of the SNPX protocol (Series Ninety Protocol) is used for data exchange between Asix system computers and GE_FANUC 90-30 PLCs as well as GE_FANUC 90 CMM and PCM modules. The communication is executed by means of serial links.

The driver allows access to the following controller variable types:

- Discrete Inputs (%I),
- Discrete Outputs (%O),
- Discrete Internals (%M),
- Analog Inputs (%AI),
- Analog Outputs (%AO),
- Registers (%R),
- Genius Global Data (%G).

The driver does not handle the following controller variable types (system and temporary types):

- %SA Discrete,
- %SB Discrete,
- %SC Discrete,
- %S Discrete,
- Discrete Temporary (%T).

Parameterization of SNPX driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the SNPX driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: SNPX

SNPX tab:

Channel parameters:

```
Port=number; [Baudrate=number;] [ParityBit=check_parity_name;]  
[TimeSynchrX=address[:period];] [T4=timeout_break;] [T2=response_timeout;]  
[TBroadCast=timeout_broadcast]
```

where:

Port - number of the COM serial port;
BaudRate - transmission speed between the computer and the controller;
there are the following acceptable values: 300, 600,1200,2400,
4800, 9600, 19200 Bd; a default value – 19200 Bd;

ParityBit - determines the method of frame parity check; there are the following acceptable values: NONE, ODD, EVEN; default value – ODD (odd parity check);

T4 - timeout (in milliseconds) between sending BREAK and BROADCAST ATTACH; a default value – 50 milliseconds;

TBroadcast - timeout between sending BROADCAST ATTACH and sending the first request to the controller; a default value – 2000 milliseconds;

T2 - timeout (in milliseconds) for receiving the first bit of the response; a default value – 2000 milliseconds;

SynchrCzasuX - cyclic (every period in seconds) date & time frame write at the given address in the controller; there are 99 positions of time synchronization from the range of names from SynchrCzasu1to SynchrCzasu99; if the parameter period is not given, the synchronization is performed every 60 seconds by default; the date & time frame synchronization is compatible with SVCREQ 7 – the procedure of date & time write:

```

struct    dateTime
{
    byte Year;
    byte Month;
    byte Day;
    byte Hour;
    byte Minute;
    byte Second;
    byte DayOfWeek;
    byte NotUsed;    // always 0
    word    wSynchr;    // set to 1 at new date & time frame
write
};
    
```

NOTICE The parameters given in the channel declaration must be compatible with the parameters set for communication ports of the controllers handled by this channel.

EXAMPLE

An exemplary declaration of the channel, in which the controllers with identifiers A123 and B456 are handled, is given below:

- 1/ for the controller with the A123 identifier - time is synchronized by writing to the register area beginning with R10 (every 25 seconds),
- 2/ for the controller with the B456 identifier - time is synchronized by writing to the register area beginning with R10 (with default frequency).

The communication with the controllers is performed over COM2 by means of standard transmission parameters, i.e. 19200 Bd, odd parity control, the first bit of stop and standard timeouts of the SNPX protocol.

Channel name: CHANNEL

Driver: CtSNPX

Channel parameters: Port=2; TimeSynchr1=A123.R10:25; TimeSynchr2=B456.R20

Declaration of Variables

The driver makes the following variable types available:

I	- Discrete Input (%I) in BIT mode,
IB	- Discrete Input (%I) in BYTE mode,
IW	- Discrete Input (%I) in WORD mode,
Q	- Discrete Output (%I) in BIT mode,
QB	- Discrete Output (%I) in BYTE mode,
QW	- Discrete Output (%I) in WORD mode,

M	- Discrete Internal (%I) in BIT mode,
MB	- Discrete Internal (%I) in BYTE mode,
MW	- Discrete Internal (%I) in WORD mode,
G	- Genius Global Data (%G) in BIT mode,
GB	- Genius Global Data (%G) in BYTE mode,
GW	- Genius Global Data (%G) in WORD mode,
AI	- Analog Input (%AI) in WORD mode,
AO	- Analog Output (%AO) in WORD mode,
R	- Register (%R) treated as WORD,
RL	- two following Registers (%R) treated as DWORD,
RF	- two following Registers (%R) treated as FLOAT,

The syntax of the variable address is as follows:

[<CpuID>.<Type><Index>

where:

<i>CpuID</i>	- CPU identifier;
<i>Type</i>	- variable type name;
<i>Index</i>	- variable address within the framework of the variable type <i>Type</i> .

NOTICE

1. *CpuID* may be omitted in the variable address exclusively when only one controller is connected to the serial link. In such case, commands sent to the controller contain the identifier set at NULL (the real identifier set in the controller is unimportant).

2. *Index* indicates bit number, from which the range of bits ascribed to the variable begins, for discrete variables. Index may have one of the following values (by pattern of addressing used in VersaPro), depending on mode of making discrete variables available:

a/ for BIT mode - any value w.e.f. 1,

b/ for BYTE mode - value 1, 9, 17, etc. (numbers of the first bit of successive bytes),

c/ for WORD mode - value 1, 17, 33, etc. (numbers of the first bit of successive words).

EXAMPLE

An exemplary variable declaration (the variable values come from the controllers identified by A123 and B456):

JJ_01, Register R3,	A123.R3,	CHANNEL, 1, 1, NOTHING
JJ_02, Analog Input 1,	A123.AI1,	CHANNEL, 1, 1, NOTHING
JJ_03, Discrete Input 3,	B456.I3,	CHANNEL, 1, 1, NOTHING
JJ_04, Discrete Output Byte 9 ,	A123.QB9,	CHANNEL,1,1, NOTHING_BYTE
JJ_05, Genius Global Word 17 ,	A123.GW17,	CHANNEL, 1, 1, NOTHING
JJ_06, Discrete Internal Word 33,	B456.MW33,	CHANNEL, 1, 1, NOTHING

Driver Configuration

SNPX driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **SNPX** section.

Section name: SNPX

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file to which all the diagnostic messages of the driver will be written.

Default value - by default, the log file is not created.

Section name: SNPX

Option name: LOG_FILE_SIZE

Option value: number

Meaning - the item allows to define the size of the log file in MB.
Default value - by default, the item assumes that the log file has a size of 1 MB.
Parameter:
 number - size of the log file in MB.

Section name: SNPX

Option name: LOG_OF_TELEGRAMS

Option value: YES | NO

Meaning - the item allows writing to the log file (declared with use of the LOG_FILE item) the contents of telegrams transmitted during the data exchange between the Asix system and controllers.
Default value - NO.

1.93 SPA - Driver of SPA Protocol

Driver Use

The SPA driver is used for data exchange between devices manufactured by ABB connected to the SPA bus and an Asix system computer. The communication is executed by means of serial interfaces in the RS232C or RS485 standard.

Parameterization of SPA driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the SPA driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: SPA

SPA tab:

Channel parameters:

number, type, port, baud, AITxtOff, AIVaOff, password

where:

number - number assigned to a remote device;
type - remote device type:

1 - SPAJ 141C,
2 - SPAM 150C,

port - serial port name;
baud - transmission speed: 9600 or 4800 - it must be compatible to settings in the remote device;

AITxtOff - number added to the number of the text event read from the remote device in order to build a unique alarm number transferred to the Asix system;

AIVaOff - number added to the event number in order to build a unique alarm number transferred to the Asix system;

password - password allowing write operations to the remote device - it must be compatible to settings in the remote device.

EXAMPLE

The declaration of the logical channel named CHAN1 operating according to the SPA protocol and with parameters as below:

- remote device number - 4
- device type - SPAM 150 C
- port - COM1
- transmission speed - 9600 Bd
- number added to the number of a text event - 100
- number added to the number of an event with a value - 200

- password - 123

is as follows:

Channel name: CHAN1

Driver: SPA

Channel parameters: 4, 2, COM1, 9600, 100, 200, 123

The SPA driver is loaded as a DLL automatically.

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the SPA driver channel is as follows:

<variable_type><channel>.<index>

where:

- variable_type* - type of the process variable;
- channel* - channel number in the device from which the process variable is taken;
- index* - process variable index within the type.

Types of process variables:

- I - values of I category data,
- O - values of O category data,
- S - values of S category data,
- V - values of V category data.

The range of used channels, types of supplied process variables, index range within each of types and meaning of individual elements within the type are specific for the remote device type.

A detail specification is included in the documentation of the remote device.

NOTE Raw values of all process variables are of *FLOAT* type.

EXAMPLE

An example of the declaration of variables for the SPAM 150 C device (according to the documentation all the variables are placed in the channel no. 0):

X1, current in phase L1 , I0.1, CHAN1, 1, 1, NOTHING_FP
X2, stimulation of stage Io> , O0.8, CHAN1, 1, 1, NOTHING_FP
X3, coefficient p for thermal unit, S0.3, CHAN1, 1, 1, NOTHING_FP
X4, current I measured during stimulation,V0.21,CHAN1, 1, 1, NOTHING_FP
X5, current I measured during activation,0.41,CHAN1, 1, 1, NOTHING_FP

Generating the Alarms

Numbers of events, generated by remote devices, have the same variation range. In order to specify unambiguously which device the event under consideration come from, the SPA driver adds to the event number a number specified in the channel declaration as *AllTxFOff* (for text events) or *AllValOff* (for events with a value). In this way created number is transferred to the *Asix* system as an alarm number.

Beside an alarm number, the SPA driver transfers a number of the remote device from which a given event comes. The device number may be used in a message related to the alarm by giving a formatting string (%3.0f) in the content of the alarm message.

For transferring alarms the SPA driver uses the function *AsixAddAlarmGlobalMili()* by default. The item GLOBAL_ALARMS allows to change the default settings and to transfer the alarms by means of the *function AsixAddAlarmMili()*.

Types of SPA remote devices implemented in the SPA driver generate only text events.

Driver Configuration

SPA driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **SPA** section.

Section name: SPA

Option name: LOG_FILE

Option value: file_name

Meaning - the item allows to define a file to which all diagnostic messages of the SPA driver and information about contents of telegrams received and sent by the SPA driver will be written. If the item does not define the full path, then the log file is created in the current directory. The log file should be used only while the Asix system start-up.

Default value - by default, the log file is not created.

Defining - manual.

Section name: SPA

Option name: LOG_OF_TELEGRAMS

Option value: YES|NO

Meaning - the item allows to write to the log file (declared by use of the item LOG_FILE) the contents of telegrams sent and received from the SPA bus within reading the process variables. Writing the contents of telegrams to the log file should be used only while the Asix system start-up.

Default value - by default, telegrams are not written.

Defining - manual.

Section name: SPA

Option name: TRANSMISSION_DELAY

Option value: number

Meaning - the item allows to determine a time interval (as a multiple of 10 milliseconds) between two successive operations on the SPA bus.

Default value - by default, the item assumes a value of 1 (10 milliseconds).

Defining - manual.

Section name: SPA

Option name: NUMBER_OF_REPETITIONS

Option value: number

Meaning - the item allows to specify a number of repetitions in case of a transmission error.

Default value - by default, the item assumes a value of 0 (no repetitions).

Defining - manual.

Section name: SPA

Option name: DATA_UPDATE

Option value: number

Meaning - the item allows to specify a time period (in seconds) after exceeding of which you should update values of process variables stored in internal buffers of the driver.

Default value - by default, the item assumes a value of 5.

Defining - manual.

Section name: SPA

Option name: TIME_UPDATE

Option value: number

Meaning - the item allows to specify a time period (in seconds) after exceeding of which you should send an actual time to remote devices.

Default value - by default, the item assumes a value of 1.

Defining - manual.

Section name: SPA

Option name: DATE_UPDATE

Option value: number

Meaning - the item allows to specify a time period (in seconds) after exceeding of which you should send an actual date to remote devices.

Default value - by default, the item assumes a value of 30.

Defining - manual.

Section name: SPA

Option name: ALARM_UPDATE

Option value: number

Meaning - the item allows to specify a time period (in seconds) which separates the successive cycles of reading alarm buffers of all remote devices supported by individual serial interfaces.

Default value - by default, the item assumes a value of 1.

Defining - manual.

Section name: SPA

Option name: CHECKSUM

Option value: YES|NO

Meaning - the item allows to control the building of checksum in telegrams sent to the SPA bus. If the item has the value NO, then two characters X are inserted in telegram instead of the checksum.

Default value - by default, the checksum is built.

Defining - manual.

Section name: SPA

Option name: TELEGRAM_EXCLUSION

Option value: YES|NO

Meaning - the item allows to exclude, from the list of supported telegrams, telegrams which are stamped by an addressed device with a code N (illegal range of variables in the telegram or not supported type of variables). The exclusion of telegrams allows to use interfaces efficiently.

Default value - by default, telegrams are excluded.

Defining - manual.

- ☑ **Section name: SPA**
- ☑ **Option name: GLOBAL_ALARMS**
- ☑ **Option value: YES|NO**

Meaning - the item controls the way of transferring alarms read from remote devices to the alarm system in the Asix system.

Default value - default alarms are transferred to the alarm system as global alarms (transferred to the alarm system by means of the function AsixAddAlarmGlobalMili()). Setting the value of the item GLOBAL_ALARMS on NO causes that alarms are transferred to the alarm system by means of the function AsixAddAlarmMili().

Defining - manual.

1.94 CtSrio - driver of SRIO 500M protocol

Driver Use

CtSrio. The exchange of data with the SRIO 500M hub (ABB-produced), which provides communication between the host system and the devices connected to the SPA bus, such as protection relays and signalling devices. Communication with the hub is accomplished via RS232-compliant serial communication, data transport layer - based on the ANSI X3.28 protocol in full-duplex mode with the BCC checksum.

The controller is a gateway between the security network SPA and a computer. The controller communicates with the security network using the SPA protocol, and with the computer using the ANSI X3.28 protocol.

Process variables get from the security network SPA are mapped in SRIO into so-called ANSI variables. The process of defining ANSI variables is made at the stage of setting up SRIO and is performed using the SRIO manufacturer's software tools.

ANSI variables have a unique number belonging to one of four groups marked with symbols: DI, DO, AI and AO. The way of servicing the variable on computer interface depends on the group to which the variable belongs. The variables DI and DO are treated as 16-bit integers unsigned, while the variables AI and AO are treated as 32-bit integers signed.

The driver CtSrio realizes read and write operations of ANSI variables on computer demand and supports spontaneous messages sent by the controller SRIO related to:

- any change of values in variables belonging to DI or DO group;
- change the values of AI and AO group with a value greater than the value of 'delta';
- the occurrence of event or alarm in security.

Additionally, CtSrio allows you to:

- configure variables ANSI in a SRIO,
- configure event masks of SPA devices,
- direct communication with securities using the native protocol SPA (SPA messages),
- write the configuration into SPA devices,
- write the SRIO configuration into EEPROM,
- support information on events in external variables of the driver,
- delete information on events in internal variables of the driver,
- link events with selected controls,
- read interference files.

Parameterization of CtSrio driver is performed with the use of Architect module.

Declaration with transmission channel

Declaration of the transmission channel using the CtSrio driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: CtSrio

CtSrio tab:

Channel parameters:

```
port=number; nrPc=number; nrSrio=number; enq=number; timeout=number;
nrAlarmu=number; defAnsi=fileName; defAlarmow=fileName [;defSynop=fileName]
[;KartZaklocen=directoryPath]
```

where:

port - number of a serial port COM,
nrPc - parameter 'host num' set by the function ansi_setup of SRIO terminal,
nrSrio - parameter 'own num' set by the function ansi_setup of SRIO terminal,
enq - max number of ENQ sent in the absence of DLE ACK/NAK,
timeout - timeout (in milliseconds) for first character of query response,
nrAlarmu - number of an Asix alarm set when communication is lack,
defAnsi - name (path) of the file with ANSI point definition,
defAlarmow - name (path) of the file with event definitions,
defSynop - name (path) of the file with definitions of relations between controls, spontaneous telegrams and variables of blinking state,
kartZaklocen - directory in which files read from disturbance recorders are saved. By default, disturbance files are in subfolder Disturbances (created by the driver in Asix system directory).

Parameters of transmission are fixed at:

- baud rate: 9600 bps,
- 8 bits of data,
- parity check (even),
- 1 stop bit.

Types of Variables

The driver provides the following types of variables:

A - ANSI variable,

F - internal variable that stores information about the occurrence of spontaneous events or changes of ANSI point assigned to that variable in the file of event definition,

S - device status in security network,

Z - internal variable used to maintain information on the occurrence of event assigned to that variable in the file with definitions of relations between controls, spontaneous telegrams and variables of blinking state.

It is assumed that the address of the variable will have the syntax:

<Type>[.<No>[.<Index>]]

where:

Type - name of variable type (A, F, S or Z);

No - ANSI number (for A type) or number of device in the security network (for S type).

Virtual variables of type F or Z does not require a parameter *No*.

Index - number of bit for variables of A type relating to a DI or DO. It is assumed that variables of A type with address 0-1999 enable access to real variables ANSI in SRIO:

0 - 499 variables of DI type

500 - 999 variables of DO type

1000 - 1499 variables of AI type

1500 - 1999 variables of AO type

Variables of A type with addresses 16000 – 16010 will be used to carry out functions related to configuration of SRIO and direct communication with securities using the native protocol SPA (SPA messages):

16000 - name of the file with configuration of ANSI variables

16001 - request to save the file with configuration of ANSI variables into SRIO

16002 - name of the file with configuration of event masks for SPA devices

16003 - request to save the file with configuration of event masks for SPA devices

16004 - name of the file with configuration of SPA device

16005 - request to save the file with configuration of device into SPA

16006 - number of currently processed command element

16007 - saving configuration of SRIO into EEPROM

16008 - content of 'SPA message' sent to SRIO

16009 - content of response for 'SPA message'

16010 - number of bytes which we ask for when reading form 'SPA bus reply'
(default is 64 bytes, min. 16 bytes, max. 255 bytes)

Variables of A type with addresses 16010 - 16019 are used to carry out functions related to handling disturbance recorder:

16011 - address of SPA network device which all operations concerning disturbance recorder will apply to

16012 - write of any value into this variable initiates readout of disturbance recorder directory from the device which address (in SPA network) is indicated by the variable with the address 16011

16013 - number of disturbances recorded in disturbance recorder directory

16014 - reserve

16015 - write into a variables initiates readout of interference with w number equal to the value of control value

16016 - write any value into a variable causes removal form a disturbance recorder an oldest interference

16017 - total number of lines in the current read disturbance file (set at the moment of start of reading disturbance file)

16018 - counter of lines read from the current read disturbance file (updated during the execution of disturbance file readout)

16019 - compression rate used when reading a disturbance file (an integer in the range of 0-5); by default: 0 (without compression)

16500 - write any value into a variable causes sending current PC time into SRIO. By default: local time is sent

16501 - write the value of 1 into a variable causes forcing refresh of all the ANSI variables. Write the value of 0 into a variable causes refresh the ANSI variables the definitions of which were changed/added as a result of uploading the configuration into a SRIO.

Variables of A type with addresses form 16020 to 16039 are used for the presentation of the names of recorder disturbance file when reading disturbance directories. The names of files are listed from oldest to youngest. The variable with the address 16020 contains the name of the oldest file in interference directory.

NOTICE:

For the variables with the addresses 16020 – 16039 the conversion function NOTHING_TEXT should be used.

Exemplary declarations of variables:

```
DI_90, , A.90, PT, 1, 1, NOTHING
DI_90_00, , A.90.0, PT, 1, 1, NOTHING
DI_90_01, , A.90.1, PT, 1, 1, NOTHING
DO_580, , A.580, PT, 1, 1, NOTHING
AI_1000, , A.1000, PT, 1, 1, NOTHING_FP
AO_1502, , A.1502, PT, 1, 1, NOTHING_FP
SRIO_FILE_NAME, , A.16000, PT, 255, 1, NOTHING_TEXT
SRIO_FILE_RQ, , A.16001, PT, 1, 1, NOTHING
SPA_MESS_SD, , A.16008, PT, 80, 1, NOTHING_TEXT
SPA_MESS_RV, , A.16009, PT, 255, 1, NOTHING_TEXT
SPA_LEN, , A.16010, PT, 1, 1, NOTHING
ST_203, , S.203, PT, 1, 1, NOTHING
ZADZ_01, , Z, PT, 1, 1, NOTHING
ZADZ_02, , Z, PT, 1, 1, NOTHING
DIST_UNIT_NR, , A.16011, PT, 1, 1, NOTHING
DIST_READ_RQ, , A.16015, PT, 1, 1, NOTHING
DIST_LINES_CNT, , A.16017, PT, 1, 1, NOTHING
DIST_CURR_LINE, , A.16018, PT, 1, 1, NOTHING
DIST_FILE_1, , A.16020, PT, 255, 1, NOTHING_TEXT
DIST_FILE_2, , A.16021, PT, 255, 1, NOTHING_TEXT
SET_DATE_TIME, , A.16500, PT, 1, 1, NOTHING
```

Event Processing

Each event sent from a SRIO into a computer has a following parameters:

- number of SPA device;
- number of a channel in SPA device;
- number of an event;
- time stamp in the form: minute, second, millisecond;

For each event get from a SRIO which is to be reported to the Asix alarm system the way of its conversion should be set:

a/ whether it is only an Asix event (simultaneously the beginning and end of Asix alarm is reported)?

b/ whether it is an event which should be treated as an Asix alarm - and if so:

1. whether it is a signalling of the beginning of an Asix alarm (which one?);
2. whether it is a signalling of the end of an Asix alarm (which one / ones?);
3. whether an event should be reported as an Asix event (simultaneously beginning and end)?

c/ whether it is necessary to uphold the fact of appearing of an event in an internal variable.

Definitions of event processing are placed in text files. For each transmission channel (for each SRIO) a separate file is created and the name of the file is a parameter for the declaration of a transmission channel (parameter *DefAlarmow*). All files with the definitions of event processing can be placed in a common directory which name is given using *EVENTS_DEFINITIONS_PATH* position in the [CtSRIO].

Definition of Processing of an Event Get From a SRIO

The syntax for the definition of event processing is as follows (all items separated by ' ; '):

```
[#] unit ; channel ; eventNr ; [eventSpec] ; [alarmStartSpec] ; [alarmEndSpec  
[,alarmEndSpec]] ; [ZmZadzialanie[.value]] ; [ZmZapis] ; [AnsiAlarm.bitNr.val]
```

where:

- an optional character that allows you to add a comment

Parameters identifying the event

unit - number of a SPA device,
channel - number of a channel,
eventNr - number of an event,

Parameters defining the way of event processing

eventSpec - definition of an Asix alarm which will be reported as an Asix event (alarmStart + alarmEnd with the same time),
alarmStartSpec - definition of an Asix alarm which will be reported as the beginning of Asix alarm,
alarmEndSpec - definition of Asix alarm / alarms which will be reported as the end of Asix alarm,
ZmZadzialanie - name of a virtual variable which value is set to the value of the parameter *value* (default: 1) after the event occurrence. It is used to uphold the fact of event occurrence for the operator. The operator can modify the value of variable according to its preference.

Specific use of event definition to register controls

ZmZapis - if the operation of write was made on the variable *ZmZapis* it takes effect in generation of Asix event (registration of controls in the history of alarms). Parameters: *unit*, *channel* and *eventNr* are ignored.

Specific use of event definition to generate alarms of changing binary digits

AnsiAlarm - if the bit *bitNr* of ANSI point with the number *AnsiAlarm* will change the value, it results in generating Asix events according to the definitions given in *alarmStartSpec* and *alarmEndSpec*. It applies only to ANSI points with numbers up to 999 (binary digits) inclusive. Parameters: *unit*, *channel* and *eventNr* are ignored. By default, change of a bit from 1 into 0 (parameter *val=0*) is the end of the alarm.

NOTICE:

If parameters identifying an event will not be found in the event definition file, the event will be ignored by the driver.

Definition of Asix Alarm

The definition of an Asix alarm has the following syntax:

`<AlarmNo>[.K][.N][.U]`

where:

AlarmNo - number of Asix system alarm,

K - number of a channel in the event sent from a SRIO,

N - number of an event in the event sent from a SRIO,

U - number of a device in the event sent from a SRIO;

The parameters: *K*, *N* and *U* are optional and can be used to transfer max. 3 dynamic parameters with an alarm to Asix alarm system (all parameters are of WORD type).

The order of parameters: *K*, *N* and *U* in the definition of Asix alarm is arbitrary.

The order of dynamic parameter transferred to Asix alarm is compatible with the order of parameters in the alarm definition.

Definition of Asix Alarm for Registering Control

In the case of registering control it is permitted to use a special syntax of the parameter *alarmStartSpec* in the definition of Asix alarm:

`<AlarmNo>.<value>, . . . , <AlarmNo>.<value>`

where:

AlarmNo - number of an alarm in Asix system,

value - value of control the sending of which to a SRIO will cause notification of an alarm with the number *AlarmNo*.

Examples of the Definition of Event Processing

activate the input 8 of the device 204 - the event 206 of Asix is reported with # the channel number and device number, upholding the event by the

variable ZZ_06

204; 8; 1; 206.K.U; ; ; ZZ_06 ; ;

no communication with the device 203 - the beginning of the alarm 102 is reported with

the number of device, upholding the event by the variable ZZ_02

203; 0; 53; ; 102.U; ; ZZ_02 ; ;

restart of the device 203 - the beginning of the alarm 101 is reported with

the number of device

203; 0; 50; ; 101.U; ; ; ;

Communication Drivers

```
# return of the communication with the device 203 - the end of the alarms 101 and 102 is reported
```

```
# with the number of device, upholding the event by the variable ZZ_03  
203; 0; 54; ; ;101.U, 102.U ; ZZ_03 ; ;
```

```
# controlling the variable ZZ_01 results in the event 201 of asix  
; ; ;201; ; ; ; ZZ_01 ;
```

```
# controlling the variable DO_580 results in: the event 305 of asix, if the value of control equals 0 or the event 306, if the value of control equals 1
```

```
; ; ; ;305.0, 306.1 ; ; ; DO_580 ;  
; ; ; ;400 ; 400 ; ; ; 90.0.1
```

```
# the state of bit 2 in ANSI 90 set to 1 results in the beginning of the alarm 402
```

```
# the state of bit 2 in ANSI 90 set to 0 results the end of the alarm 402
```

```
; ; ; ;402 ; 402 ; ; ; 90.2.1
```

```
# the state of bit 5 in ANSI 90 set to 0 results in the beginning of the alarm 405
```

```
# the status of bit 5 in ANSI 90 set to 1 results in the end of the alarm 405
```

```
; ; ; ;405 ; 405 ; ; ; 90.5.0
```

Configuration of SRIO and SPA Devices

The driver allows you to:

- configure ANSI variables in a SRIO,
- configure event masks of events of SPA devices supervised by a SRIO,
- configure SPA devices,
- save the current configuration of a SRIO into EEPROM.

The parameters used by the driver when configuring a SRIO and SPA devices are transferred in text files. The format of files is specific for each type of configuration.

Configuration of ANSI Variables

Configuration of ANSI variables consists in transmission of content of configuration file to a SRIO. The process uses three virtual variables:

- A.16000 - variable contains a full name of the configuration file,
- A.16001 - variable is used to begin the process of writing the configuration to a SRIO,
- A.16006 - variable is used to monitor the number of currently saved declaration from the configuration file.

The process of configuration of ANSI variables consists in execution of the following steps:

- preparation of a text file with declaration of ANSI variables,
- writing a full name of a file with ANSI variable declarations into the virtual variable A.16000,
- writing arbitrary value into the virtual variable A.16001. This record is treated by the driver as the request to write the configuration of ANSI variables into a SRIO.

Adoption of the request of saving the configuration by the driver is signaled by setting the value of 1 in the variable A.16001 and the value of 0 in the variable A.16006.

After saving the configuration of each of ANSI variable into a SRIO the value of the variable A.16006 increases by 1.

After saving the configuration of all variables into a SRIO the variable A.16001 takes the value of 2 for 1 second time, and after that the values of variables A.16001 and A.16006 are set to 0.

Before saving the configuration file the driver compares connectivity of configuration of ANSI points existing in a SRIO with the configuration which the operator intends to save to a SRIO. There are principles which the driver uses during execution of above operation:

a/ it is assumed that at the start of application there are ANSI points which are defined in a configuration file (specified in the declaration of transmission channel),

b/ during the operation of the driver the following items can be written into a SRIO:

- 1/ modifications of ANSI points already existing in a SRIO,
- 2/ definitions of new ANSI points,

c/ definitions identical to the definitions existing in a SRIO are ignored,

d/ driver stores its own map of ANSI points which is updated after each modification and after each operation of saving a new ANSI point.

NOTICE:

The driver does not update the content of configuration file (given in the declaration of transmission channel). It is assumed that any changes in the configuration of ANSI points performed during operation of the application will be updated in the configuration file by the system engineer.

Format of ANSI Variable Declaration

The declaration of ANSI variable has to be compatible with the format created by the SIGTOOL program of ABB company - i.e. it has to be a line of the text consisting of 14 elements separated by space characters and ending with CR and LF characters.

Line beginning with the character # or ; are treated as comment lines.

The meaning of individual elements of the declaration is as follows:

- 1 (SNR) - number of a SRIO
- 2 (ITEM) - beginning number of the declaration in the declaration file
- 3 (ADDR) - identifier of ANSI assigned to the variable
- 4 (BUS) - number of a serial link in a SRIO
- 5 (UNIT) - number of a device in SPA network
- 6 (CHS) - number of the first channel
- 7 (CHE) - number of the last channel
- 8 (IO) - identifier of the variable category (I, O, S, V)
- 9 (DAT1) - number of the first datum
- 10 (DAT2) - number of the last datum
- 11 (DTYPE) - variable type (0 - DI, 1 - AI, 2 - DI, 3 - AO)
- 12 (DFORM) - datum format (0 - binary, 1 - decimal, 2 - hexadecimal)
- 13 (DELTA) - mask of spontaneous telegrams
- 14 (STAT) - status. Individual status bits mean:

- bit 0 - update enable,
- bit 1 - continuous poll enable,
- bit 2 - timed poll enable
- bit 3 - spontaneous transmission enable

Exemplary declarations of ANSI variables:

```
;SNR ITEM ADDR BUS UNIT CHS CHE IO DAT1 DAT2 DTYPE DFORM DELTA STATUS
6 1 1342 2 203 0 0 I 15 15 1 1 20 13
6 2 580 2 203 1 1 OI 1 1 2 0 0 11
6 3 92 2 203 0 0 V 6 6 1 1 0 11
6 4 1500 2 203 0 0 S 15 15 0 0 10 13
6 5 91 2 203 7 7 I 2 3 0 0 0 11
6 6 92 2 203 11 11 I 1 1 0 0 0 11
```

Configuration of Event Masks of SPA Device

Configuration of event masks of SPA devices consists in transferring the content of configuration file to a SRIO. The process uses three virtual variables:

- A.16002 - variable contains the full name of the configuration file,
- A.16003 - variable is used to begin the process of writing the configuration into a SRIO according to the selected configuration mode,
- A.16006 - variable is used to monitor the number of the currently saved declaration form the configuration file.

The configuration can be realized in one of two modes:

- **add all** – declarations from the configuration file will be added to the configuration existing in a SRIO. If the device declared in the configuration file has its own declaration in a SRIO, the declaration in the SRIO will be replaced by the declaration given in the configuration file,
- **overwrite** – all declarations existing in a SRIO will be deleted and the declarations from the configuration file will be written into the SRIO.

The process of configuring event masks of SPA devices consists in execution of the following steps:

- preparing text file with declarations of device masks,
 - entering the full name of the file with declarations of device masks to the variable A.16002,
 - entering the identifier of configuration of event masks into the virtual variable A.16003.
- The entry is treated by the driver as the request to write the configuration of device masks into a SRIO.

Adoption of the configuration write request by the driver is signaled by setting the value of 1 in the variable A.16003 and the value of 0 in the variable A.16006.

After saving the configuration of each of device masks into a SRIO the value of the variable A.16006 increases by 1.

After saving the configuration of all variables into a SRIO the variable A.16003 takes the value of 2 for 1 second time, and after that the values of variables A.16003 and A.16006 are set to 0.

Format of declaration of event mask

Declaration of the event mask has to be compatible with the format created by the program SIGTOOL of ABB, i.e. it has to be a line of text consisting of 4 elements separated by space characters and ending by the characters CR and LF. Lines beginning with # or ; are treated as comment lines.

The meaning of individual elements of the declaration is as follows:

- 1 (SNR) - number of a SRIO
- 2 (BUS) - number of a serial link in a SRIO
- 3 (UNIT) - number of a device in SPA network
- 4 (UTYPE) - device type

Exemplary declarations of device event masks:

```
; SNR BUS UNIT UTYPE  
6 2 203 2  
6 2 204 3
```

Configuration of SPA Devices

Configuration of SPA devices consists in transferring SPA commands (SPA messages) read from the configuration file to a SRIO. Commands are sent according to the order of placement in the configuration file. The process uses three virtual variables:

- A.16004 - variable contains the full name of the configuration file,
- A.16005 - variable is used to begin the process of writing the configuration to a SRIO,
- A.16006 - variable is used to monitor the number of the currently sent command of SPA from the declaration of configuration file.

The process of configuration of SPA devices consists in execution of the following steps:

- preparation of a text file with SPA commands which will be sent to a SRIO during the configuration process,
- entering the full name of the file with SPA commands into the virtual variable A.16004,
- entering an arbitrary value into the virtual variable A.16005. The entry is treated by the driver as the request of writing the SPA device configuration into a SRIO,

Adoption of the configuration write request by the driver is signaled by setting the value of 1 in the variable A.16005 and the value of 0 in the variable A.16006.

During saving each of SPA commands into a SRIO the value of the variable A.16006 increases by 1.

After saving all of the SPA commands into a SRIO the variable A.16005 takes the value of 2 for 1 second time, and after that the values of variables A.16005 and A.16006 are set to 0.

Format of SPA Command

The commands used to configure the SPA devices must use the format of SPA protocol command with the control checksum replaced by the string XX.

Lines of the configuration file starting with a semicolon are treated as a comment.

The content of exemplary file with commands used to configure SPA devices:

```
>204W0V155:255:XX  
>204W0V156:0:XX  
>204W0V157:0:XX  
; STORE COMMANDS  
>204WV151:1:XX
```

Saving SRIO Configuration into the EEPROM Memory

To make the changes made in the SRIO configuration permanent, it is necessary to save the modified configuration into the EEPROM memory.

Saving the configuration into the EEPROM memory is initialized by performing write operation at the virtual variable A.16007 (control value does not matter).

Saving the configuration into the EEPROM memory is a long-term operation during which the driver blocks the possibility of performing any changes in the configuration of a SRIO (any attempt to perform changes in the configuration ends with the error).

Readout of Disturbance Recorder

The driver allows the following operations related to disturbance recorder:

- readout of disturbance recorder directory,
- readout of a selected file from the directory of disturbance recorder,
- removal of the oldest file from the disturbance recorder directory.

All operations are performed with the use of SPA command (SPA messages) realized concurrently with routine communication with a SRIO.

Messages about the following operations start and end are displayed in *Control Panel* of the application.

Readout of Disturbance Recorder Directory

Readout of disturbance recorder directory consists in the following operations:

- entering into the variable A.16011 the number of device (in SPA network) from which the disturbance directory has to be read,
- entering into the variable A.16012 an arbitrary value - this operation will initiate reading the disturbance directory from the device the number of which is set in the variable A.16011.

In the first phase of the operation the number of disturbances stored in the device will be read out (and written into the variable A.16013). After that, if the number of disturbances is

nonzero, the names of disturbance files occurs will be read out and written successively into the variables with addresses from the range of A.16020 upwards.

It is assumed for the driver that the number of disturbance files stored in a device will not exceed 20.

Readout of Selected File from Disturbance Recorder

Readout of the disturbance recorder directory consists in the following operations:

- entering into the variable A.16011 the number of device (in SPA network) from which the disturbance directory has to be read out,
- entering into the variable A.16019 the stage of compression of the file being read (acceptable values: 0, 1, 2, 3, 4, 5). By default: 0 (no compression),
- entering into the variable A.16014 the number of disturbance file which we want to read out - this operation will initiate a read file. The oldest file has the number of 1, the youngest file has the number equal to the number of disturbance files read out from the disturbance directory.

In the first stage of the operation the number of lines existing in the disturbance file (and written into the variable A.16017) is read out as well as the current line counter is reset (the variable A.16018).

In successive stages the read out of consecutive lines of the disturbance file and A.16018 variable update occur - it allows to track the progress of reading.

After the correct reading the disturbance file is saved into the directory given in the declaration of transmission channel (or into the default directory). The file is named the name created from the file name preceded by the letter 'h'. Files are saved in ASCII format. The time stamp with the time of the file writing is given to the file (not the time of creation the file in recorder).

Removing the Oldest File from Disturbance Recorder

Removing the oldest file from the disturbance recorder directory consists in the following operations:

- entering into the variable A.16011 the number of the device (in SPA network) from which the disturbance directory has to be read out,
- entering into the variable A.16016 an arbitrary value - this operation will initiate the process of removing the oldest file from the disturbance recorder.

Time Synchronization

The variable A. 16500 is used for synchronization. Writing an arbitrary value into this variable results in sending the current PC time into a SRIO. By default, local time is sent. It is also possible to send the time in UTC mode - to do so, create the section with the name of ASMEN channel servicing the SRIO data and write into this section the following item:

UTC_SYNCHRONIZATION = YES

Driver Parameterization

CtSrio driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **CtSrio** section.

- Section name: CTSRIO**
- Option name: LOG_FILE**
- Option value: file_name**

Meaning: The item allows to define a file which all the diagnostic messages of the driver will be written to. The item is used for diagnostic purpose.

Default value: by default, the log file is not created.

- Section name: CTSRIO**
- Option name: LOG_FILE_SIZE**
- Option value: number**

Meaning: The item allows to define the size of the log file.

Option value: *number* - size of the log file in MB.

Default value: 10 MB.

- Section name: CTSRIO**
- Option name: LOG_OF_TELEGRAMS**
- Option value: YES|NO**

Meaning: The item allows to write the content of telegrams sent between SRIO and Asix.

Default value: NO.

- Section name: CTSRIO**
- Option name: DIAGNOSTIC_PERIOD**
- Option value: number**

Meaning: For the purpose of checking the activity of SRIO the driver can periodically send diagnostic messages.

Option value: *number* - the period of sending diagnostic messages (in seconds).

Default value: By default, the driver sends diagnostic messages every 10 seconds.

- Section name: CTSRIO**
- Option name: EVENTS_DEFINITIONS_PATH**
- Option value: path**

Meaning: Files with definitins are placed in a common directory declared by the item *EVENTS_DEFINITIONS_PATH*.

Option value:

path - name of the directory in which the driver will search files with the definition of events.

Parameters of Driver Channel

The following items can be entered in the section which name is the name of transmission channel.

- creating log file for a single channel,
- size of the log file for a single channel,
- log of telegrams of a single channel,
- type of the time sent into a SRIO within time synchronization,
- tracking controls,
- exclusion of reading specified ANSI points,
- exclusion of registering alarms of control.

The first three items have the syntax and meaning the same as corresponding items placed in the driver section [CTSRIO], but they apply only to the channel for which they were declared.

Time synchronization in UTC mode

- Section name: <channel_name>**
- Option name: UTC_SYNCHRONIZATION**
- Option value: YES/NO**

Meaning: The item allows you to specify the type of the time sent to a SRIO within the synchronization operation. The item should be used for each transmission channel individually. YES - sending UTC time; NO - sending local time.

Default value: By default, the driver sends local time into a SRIO.

Tracking controls allows you to ...

The item allows you to enter into an operator panel the messages applies to individual stages of control operation. The messages contain a time stamp accurate to milliseconds and concern the following stages of control:

- making out the command to write to a queue the telegrams sent into a SRIO,
- sending the command to write into a SRIO,
- receiving from a SRIO the mark ACK for a write command,
- receiving from a SRIO the mark NAK for a write command,
- timeout of waiting for receiving from a SRIO the mark ACK/NAK for a sent write command,
- receiving the spontaneous telegram being the effect of performed control.

By default, the driver does not create a log during control operation.

Exclusion of selected ANSI points from readout list

- Section name:** *<channel_name>*
- Option name:** *ANSI_WRITE_ONLY*
- Option value:** *number*

Meaning: The item allows you to exclude from the readout list the certain ANSI point. That means that the driver will not send into a SRIO the queries about the value of a given ANSI point (but it will receive spontaneous telegrams concerning the given point). The item should be used for ANSI points for which the readout operation ends with the error with the code 0x40 signaled by a SRIO. For each ANSI point for which you want to turn off the readout function use a separate item.

Option value:
nrANSI - number of ANSI point in decimal form.

Exclusion of registering alarms from control

- Section name:** *<channel_name>*
- Option name:** *WITHOUT_CONTROL_ALARMS*
- Option value:** *YES/NO*

Meaning: The items allows you to detach registering alarms from control (the alarms defined in the file with definitions of processing events). The item refers to all alarms of control. NO - registering alarms of control. YES - detaching registering alarms from control.

Default value: NO.

1.95 SRTP - Driver of SRTP Protocol

Driver Use

The SRTP driver is designed for data exchange between the Asix system and the GE Fanuc Automation PLCs of VersaMax Nano/Micro, WersaMax and 90 series, by means of SRTP (Service Request Transfer Protocol) using an Ethernet network with the TCP/IP protocol.

The data exchange with the VersaMax Nano/Micro PLCs is realized with the aid of the IC200SET001 converter.

The communication with the WersaMax and 90 PLCs demands the IC693CMM321 converter.

Parameterization of SRTP driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the SRTP driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: SRTP

SRTP/Channel parameters tab:

Channel parameters:

IP address... - IP address assigned to the IC693CMM321 communication module;
Port number - optional port number through which the connection with the IC693CMM321 communication module is executed (by default, 18245).

For each IC693CMM321 module a separate transmission channel declaration is required.

Types of Process Variables

In the driver the following types of process variables are defined:

I	- Discrete Input (%I) in BIT mode,
IB	- Discrete Input (%I) in BYTE mode,
IW	- Discrete Input (%I) in WORD mode,
Q	- Discrete Output (%Q) in BIT mode,
QB	- Discrete Output (%Q) in BYTE mode,
QW	- Discrete Output (%Q) in WORD mode,
M	- Discrete Internal (%M) in BIT mode,
MB	- Discrete Internal (%M) in BYTE mode,
MW	- Discrete Internal (%M) in WORD mode,
G	- Genius Global Data (%G) in BIT mode,
GB	- Genius Global Data (%G) in BYTE mode,

GW	- Genius Global Data (%G) in WORD mode,
AI	- Analog Input (%AI) in WORD mode,
AQ	- Analog Output (%AQ) in WORD mode,
R	- Register (%R) treated as WORD,
RL	- two successive Registers (%R) treated as DWORD,
RF	- two successive Registers (%R) treated as FLOAT,
TD	- current time and date of the controller.

Values of **I**, **IB**, **IW** and **AI** type variables may be only read whereas values of the other variables may be read and written.

The following types of variables (system, temporary) are NOT supported:

- Discrete SA (%SA),
- Discrete SB (%SB),
- Discrete SC (%SC),
- Discrete S (%S),
- Discrete Temporary (%T).

Addressing the Process Variables

The syntax of symbolic address which is used for variables belonging to the SRTP driver channel is as follows:

<Type><Index>

where:

<i>Type</i>	- name of the variable type;
<i>Index</i>	- variable address within the type <i>Type</i> of the variable.

For discrete variables (**I**, **IB**, **IW**, **Q**, **QB**, **QW**, **M**, **MB**, **MW**, **G**, **GB**, **GW**) *Index* indicates the number of bit from which the range of bits assigned to the variable begins. Depending on the mode of accessing the discrete variables, *Index* may assume the following values:

- a/ for BIT mode - any value beginning from 1;
- b/ for BYTE mode - values 1, 9, 17, etc. (numbers of the first bit of successive bytes);
- c/ for WORD mode - values 1, 17, 33, etc. (numbers of the first bit of successive words).

EXAMPLE

Examples of variable declarations:

JJ_1, %R1 and %R2 as FLOAT,	RF1,	CHANNEL,1,1,NOTHING_FP
JJ_3, %R3 and %R4 as DWORD,	RL3,	CHANNEL,1,1,NOTHING_DW
JJ_5, %R5 as WORD,	R5,	CHANNEL,1,1,NOTHING
JJ_31, single bit %M1,	M1,	CHANNEL,1,1,NOTHING
JJ_32, bits %Q9 - %Q16 as one byte,	QB9,	CHANNEL,1,1,NOTHING_BYTE
JJ_33, bits %I17 - %I32 as one word,	IW17,	CHANNEL,1,1,NOTHING
JJ_40, writing date and time to PLC,	TD,	CHANNEL,8,15,NOTHING_BYTE

Date and Time Synchronization with the Controller

A mechanism of date and time synchronization between the Asix system and GE Fanuc PLCs is built in the driver. The synchronization is performed for each transmission channel separately by means of option declared in:

Architect > *Fields and Computers* > *Current data* > channel parameter tab > *Standard* tab

TIME_SYNCHRONIZATION

Parameters:

variable - name of the ASMEN variable, belonging to the channel channel, used for date and time synchronization.

The date and time synchronization consists in a cyclic writing to the controller an actual frame containing the current date and time of Asix. The frame is written by use of a built-in SRTP protocol function for writing date and time according to the frequency assigned to *variable*. The variable type must be the **TD** type (support of date and time), number of elements assigned to *variable* must have a size of 8 (size of date and time frame). The function NOTHING_BYTE must be used as the conversion function.

The declaration of the variable SYNCHRO may be found in the file *SRTP.DAT* and is as follows:

SYNCHRO, date and time synchronization, TD, CHANNEL, 8, 60, NOTHING_BYTE

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to SRTP driver.

Log file

Meaning

- allows to define a file to which all diagnostic driver messages and information about the content of telegrams received by the driver will be written. If the item LOG_FILE does not define the full path, then the log file will be created in the current directory. The log file should be used only in the stage of the Asix start-up.

Default value

- log file is not created.

Defining

- manual.

Log file size

Meaning

- declares a log file size in MB.

Default value

- 1MB.

Defining

- manual.

Log of telegrams

Meaning

- allows to write, to the log file (declared by use of the item LOG_FILE), contents of telegrams sent/received by the driver. Telegrams content write should be used only in the stage of the Asix system start-up.

Default value

- NO.

Defining

- manual.

Start-up time

Meaning

- allows declaring a time (in seconds) provided for establishing the network connections with all the IC693CMM321 modules on the stage of the Asix start-up.

Default value

- 3s.

Defining

- manual.

Transmission

Meaning

- for each module IC693CMM321 it is determined maximum time between sending requests and receiving responses (receive timeout). After this time the connection will be dropped (and established again).

Default value

- 5s.

Parameter

IP address - IP address of the module IC693CMM321,
number - value of timeout (in seconds)

MaxON Redundancy Parameterization

1. Two Asmen channels should be created and assigned to ID_A and ID_B PLCs that make MaxON redundancy.
2. The channel directed to ID_A PLC is dedicated to variables of Asix application, the channel directed to ID_B is used by SRTP driver (and should not be used by the application).
3. Next, the parameter **MaxOn redundancy** should be declared in the SRTP driver parameters:

Architekt > *Fields and Computers* > *Current data* > declaration of the transmission channel using the SRTP driver > *SRTP* tab / *Driver parameters 2*

where:

ID_A - name of the channel directed to ID_A PLC;
ID_B - name of the channel directed to ID_B PLC.

Principle of operation of SRTP driver during MaxON redundancy handling consists in selection of the right channel (*ID_A* or *ID_B*) for servicing application variables. The selection strategy bases on current state of status flags read from *ID_A* and *ID_B* channels.

There are the meanings for symbolic addresses of system variables:

XN1 - status ID_A
XN2 - status ID_B
XN3 - status RUN
XN4 - status MASTER
XN5 - status SYNC

1.96 TALAS - Driver of TALAS Analyzer Protocol

Driver Use

The TALAS driver is used for data exchange between TALAS emission computers and the Asix system by use of serial interfaces. The driver was created in order to operate with devices which have a firm software v 2.3 (007)22 installed.

Parameterization of TALAS driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the TALAS driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: TALAS

TALAS tab:

Channel parameters:

COMn, *baud*

where:

COMn - number of the serial port to which the TALAS emission computer is connected;

baud - transmission speed expressed in bauds.

The TALAS driver is loaded as a DLL automatically.

Addressing the Process Variables

The arrays of data of following categories are read from a TALAS computer:

- HM - current half-minute data,
- PI - current partial integrals,
- AI - current values of half-hour integrals,
- HI - half-hour integrals for a current day,
- DIW - daily distribution of half-hour integrals from a previous day,
- YIW - annual distribution of half-hour integrals from a previous day,
- DMV - distribution of an average daily value from a previous day.

From the arrays above the TALAS driver retrieves process data of the following types:

- ATM - current time (of half-minute data) of the TALAS computer, transferred as a number of seconds in DWORD format;

- VAL - variable value in float format;
- STA - variable status in word format;
- OTM - *work time* of variable counted in tenths of second, transferred in long format;
- ITM - integration period in seconds in short format;
- DCL - classes of classification in word format;
- DCT - classification table for the variable, contents of individual classes in word format, maximal table size – 34 elements,
- IVT - table of half-hour integrals for the variable, element is a structure containing time, value (float) and status (word); maximal table size – 48 elements.

Allowable sets: type-data category together with waited format of an address string are given in the table below, where *nn* signifies the successive number (not identifying) of the variable in the variable list of the TALAS computer in the range <1..128> for HM, PI and AI categories and <1..64> for HI, DIW, YIW and DMV categories (see: the table below).

Table 50. Allowable Sets: Type-Data Category Together with Waited Format of an Address String for the TALAS Driver.

Address state	Contents	Notes
HM.ATM	dword	actual time of TALAS station in [s]
HM.VAL.nn PI.VAL.nn AI.VAL.nn	float	variable value
HM.STA.nn PI.STA.nn AI.STA.nn	word	variable status
HI.VAL.nn	float	half-hour integral of variable
HI.STA.nn	word	status of the above-mentioned integral
HI.IVT.nn	struct { struct xtime time; float value; word status; }	table; size 48
DIW.VAL.nn YIW.VAL.nn DMV.VAL.nn	float	average value
DIW.OTM.nn YIW.OTM.nn DMV.OTM.nn	long	working time of variable in [0.1s]
DIW.ITM.nn YIW.ITM.nn DMV.TTM.nn	short	integration period in [s]
DIW.DCL.nn.mm YIW.DCL.nn.mm DMV.DCL.nn.mm	word	mm: class number <1..34>
DIW.DCT.nn YIW.DCT.nn DMV.DCT.nn	word	table; size 34

Driver Configuration

TALAS driver parameters are declared in the *Miscellaneous* module, the *Directly entered options* tab.

The driver is parameterized with use of **TALAS** section.

Section name: TALAS

Option name: baud (or bod or bps)

Option value: number

Meaning - the item is used to declare a transmission speed. The item value has priority over a transmission speed given in the definition of the logical channel.

Default value - by default, the transmission speed is assumed to be equal to 9600 Bd.

Defining - manual.

Parameters:
number - transmission speed in bauds.

Section name: TALAS

Option name: parity

Option value: check_type

Meaning - the item used to declare a method of the parity check.

Default value - by default, it is assumed the even parity check.

Defining - manual.

Parameters:
check_type - identifier of the way of parity check:
n - no parity bit,
o - odd parity check,
e - even parity check,
m - mark,
s - space.

Section name: TALAS

Option name: stop

Option value: number

Meaning - the item is used to declare a number of stop bits.

Default value - by default, it is assumed 1 stop bit.

Defining - manual.

Parameters:
number - number of stop bits: 1 or 2.

Section name: TALAS

Option name: word (or word_length)

Option value: number

Meaning - the word item is used to declare a number of bits in a transmitted character.

Default value - by default, it is assumed that the transmitted character has 8 bits.

Defining - manual.

Parameters:
number - number of bits in a character (from 5 to 8).

Section name: TALAS

Option name: timeout

Option value: number

Meaning - the item is used to declare a waiting time for an answer from the TALAS computer.

Default value - by default, it is assumed 10 seconds.

Defining - manual.

Parameters:

number - waiting time for an answer in seconds.

Section name: TALAS

Option name: KM_Interval (or Interval)

Option value: number

Meaning - the item is used to declare a time interval between readings of values of short-time averages and partial integrals from the TALAS computer.

Default value - by default, it is assumed to be 30 seconds.

Defining - manual.

Parameters:

number - time interval in seconds.

Section name: TALAS

Option name: IW_Interval

Option value: number

Meaning - the item used to declare a time interval between readings of values of half-hour integrals and actual integrals from the TALAS computer. By default it is assumed to be 30 minutes.

Default value - by default, it is assumed to be 30 seconds.

Defining - manual.

Parameters:

number - time interval in minutes.

Section name: TALAS

Option name: FD_Interval

Option value: number

Meaning - the item used to declare a time interval between readings of values of distributions from the TALAS computer.

Default value - by default, it is assumed to be 60 minutes.

Defining - manual.

Parameters:

number - time interval in minutes.

Section name: TALAS

Option name: log

Option value: name

Meaning - the item is used to declare a file to which a diagnostic information of the TALAS driver are written. The item is dedicated to test purposes.

Default value - by default, the file is not created.

Defining - manual.

Parameters:

name - file name.

1.97 CtTwinCAT - Driver of ADS Protocol for TwinCAT System

Driver Use

The CtTwinCAT driver is designed to exchange data between the Asix system and the TwinCAT system of Beckhoff Industrie Elektronik. The communication between systems is realized through Ethernet in two modes, depending on the firmware a Beckhoff controller is delivered with.

There are two versions of the CtTwinCAT driver:

1. CtTwinCat.dll - uses the TcAdsDll library provided by Beckhoff.
2. CtTwinCatTcpi.dll - uses ADS/AMS over TCPIP interfaces (without Beckhoff libraries).

CtTwinCAT services the following devices:

- controllers of the CX1000 series;
- TwinCAT PLC (PC based control system);
- controllers of the BC9000 series;
- controllers of the BX9000 series.

Parameterization of CtTwinCAT driver is performed with the use of Architect module.

Declaration of Transmission Channel

The CtTwinCAT driver is loaded by the universal Asix driver – UNIDRIVER.

The declaration of transmission channel using CtTwinCat.dll has the following form:

Declaration of the transmission channel using the CtTwinCAT driver requires a channel with the following parameters to be added to the Current data module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtTwinCAT

TwinCAT/Channel parameters tab:

<i>Number of the controller port</i>	- port number of the TwinCAT system router, for example 801 (RTS1), 811 (RTS2);
<i>AMS Net Id of controller</i>	- AMS address (4 first elements) of the TwinCAT system router;

TwinCAT/Channel parameters 2 tab:

<i>Timeout</i>	- timeout (in milliseconds) for performing an ADS operation in a given channel;
<i>Time synchronization</i>	- address in controller to which time frame will be sent;
<i>Time synchronization period</i>	- time period (in seconds) according to which time frame will be sent to a controller;
<i>Service type</i>	- service type;
<i>Number of STOP state alarm</i>	- it enables generation of alarm when PLC changes its state to STOP.
<i>Version</i>	- version of the software in the controller.

The declaration of transmission channel using CtTwinCatTcpip.dll has the following form:

Declaration of the transmission channel using the CtTwinCatTcpip driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel
Driver: CtTwinCatTcpip

CtTwinCatTcpip/ Channel parameters tab:

AMS Net Id of the asix system (4 first elements)
Controller IP address
AMS Net Id of controller
Number of the controller port

- AmsNetId address that identifies together with an Asix computer IP a connection Asix <- > controller; both addresses must have their equivalents in the table of controller project routs to make data exchange possible; it is passed that AmsNetId is the same as an Asix computer IP (for simplification of connection parameterization);

IP address of the controller
Buffer size
UTC synchronization

The date & time frame structure is given below:

```
struct dateTime
{
  word wYear;
  word wMonth;
  word wDayOfWeek;
  word wDay;
  word wHour;
  word wMinute;
  word wSecond;
  word wMilliseconds;
  word wSynchr;
};
```

where:

wYear	- year	1970 ~ 2106
wMonth	- month	1 ~ 12 (January = 1, February = 2, etc)
wDayOfWeek	- day of week	0 ~ 6 (Sunday = 0, Monday = 1, itd.)
wDay	- day of month	1 ~ 31;
wHour	- hour	0 ~ 23;
wMinute	- minute	0 ~ 59;
wSecond	- second	0 ~ 59;
wMilliseconds	- millisecond	0 ~ 999;
wSynchr	- synchro marker	1 is written with the new data &

time frame

Buffer size - maximal size (in bytes) of the buffer; this option overwrites value of similar option declared among the TwinCATtcpip driver parameters;

UTC synchronization - time synchronization in UTC mode.

CtTwinCatTcpip/ Channel parameters 2 tab:

Timeout - timeout (in milliseconds) for performing an ADS operation in a given channel;

Time synchronization - address in controller to which time frame will be sent;

Time synchronization period - time period (in seconds) according to which time frame will be sent to a controller;

Service type - service type;

Number of STOP state alarm - it enables generation of alarm when PLC changes its state to STOP.

Version - version of the software in the controller.

CtTwinCatTcpip/ Channel parameters - history tab:

Group number - number of the group (in HEX) in which the historical data are stored;

Historical data offset - offset (in HEX) in the group from which the historical data starts

Number of variables - number of historical variables

Query offset - offset (in HEX) in the group from which the buffer for the commands of the Asix system starts

Reply offset - offset (in HEX) in the group from which the reply buffer for the commands of the Asix system starts

Query delay - expected time of execution

CtTwinCatTcpip/ Channel parameters - log tab:

Log file

Meaning - the item allows to define a file to which all diagnostic messages of the driver and the information about ADS requests will be written. If the item doesn't define a full path, the log file will be created in the current directory. The log file should be used only during the Asix system start-up.

Default value - by default, the log file is not created.

Parametr:

file_name - name of the log file.

Log file size

Meaning - the item allows to define the size of the log file.

Default value - by default, the item assumes that the log file has a size of 1 MB.

Communication Drivers

Parameter:

number - size of the log file in MB.

Log of telegrams

Meaning

- the item allows to write the info about performed ADS requests to the log file. This option should be used only during the Asix system start-up.

Default value

- by default, the driver does not write the info about ADS requests to the log file.

Log of telegram contents

Meaning

- the item allows to write the contents of telegram to the log file.

Default value

- by default, the driver does not write the info to the log file.

Types of Process Variable Addresses

Two types of addresses are allowed in the TwinCAT system:

- **symbolic** – variable symbolic address. The form is as follows:

[<text1>].<text2>

where:

text1, text2 - ASCII string.

Symbolic addresses of all variables of the project realized in the TwinCAT system are placed in the project directory, in an XML file with the extension *.tpy – addresses are entered in sections identified by the key word <Symbol>.

EXAMPLE

.engine
MAIN.devUP

- *direct* – address in the form **Group:Offset**. Both **Group** and **Offset** are declared in HEX format and delimited with a colon (:).

EXAMPLE

F030:03EA

EXAMPLE

Examples of process variable declarations.

JJ_00, variable valFloat (REAL), .valFloat, PLC1, 1, 1, NOTHING_FP
JJ_01, variable valWord (WORD), .valWord, PLC1, 1, 1, NOTHING
JJ_02, variable MAIN.engine (BOOL), MAIN.engine, PLC1, 1, 1, NOTHING_BYTE
JJ_03, variable with address F030:5 (BYTE), F030:5, PLC1, 1, 1, NOTHING_BYTE

Variable Type

For variables with a symbolic address the raw type of a variable is taken from the variable's type declared in the TwinCAT system. This type is converted into the type required by the user.

For variables with a direct address the raw type of a variable is the real type of conversion function defined for the variable. Based on this type:

- the appropriate number of bytes are read/written from/into the address specified by **Group:Offset**;
- the conversion of read bytes, according to the type defined for the variable, is performed.

Data & Time Stamp

Data read from the driver is stamped with the PC local date & time, evaluated at the moment when the ADS request is completed.

Driver Configuration

The driver configuration is defined in the *Current Data* module, in the channel operating according to CtTwinCAT / CtTwinCatTcpip driver.

Log file

Meaning

- the item allows to define a file to which all diagnostic messages of the driver and the information about ADS requests will be written. If the item doesn't define a full path, the log file will be created in the current directory. The log file should be used only during the Asix system start-up.

Default value

- by default, the log file is not created.

Parameter:

file_name

- name of the log file.

Log file size

Meaning

- the item allows to define the size of the log file.

Default value

- by default, the item assumes that the log file has a size of 1 MB.

Parameter:

number

- size of the log file in MB.

Log of telegrams

Meaning

- the item allows to write the info about performed ADS requests to the log file. This option should be used only during the Asix system start-up.

Default value

- by default, the driver does not write the info about ADS requests to the log file.

Log of telegram contents

Meaning

- the item allows to write the contents of telegram to the log file.

Default value

- by default, the driver does not write the info to the log file.

Buffer size

Meaning

- the item allows to define the size of the buffer used to perform ADS read/write requests.

Default value

- the default size of the buffer is 1800 bytes.

Parameter:

number

- size of the buffer in bytes.

Variable Quick Refresh Function

By default, variables are refreshed by the Asmen - current data module with a frequency of at least 1 second. The function of variable quick refresh is realized by the driver CtTwinCATTcpip from the version 1.3.5 and it enables to refresh variables with maximum line speed (it does not affect the backup process - variables are archived with a frequency of at least 1 second). The variables being subject to quick refresh function have the attribute *FastRefresh* with the value of 1 declared in variable definition database.

1.98 UniDriver

Driver parameters - UniDriver tab:

NOTICE: Options defined on this tab for any channel that has this tab are valid for all the channels that have this tab.

Path to the directory in which the log file will be created

Meaning - the log file is placed in the defined directory.
Default value - by default, the log file will be created in the Asix directory.
Parameter:
record_track - path to the directory in which the log file will be created.

Traced variables

Meaning - for each variable, which name is on the list, the information on its value, quality and stamp will be written to the log (during the variable processing).

Default value - lack.

Parameter:
variable_list - list of the variable names in the Asix system, delimited with commas.

1.99 CtWago - Wago Controllers Protocol Driver

Driver Use

CtWago protocol driver is used to exchange data between the Asix system and Wago controllers. Data exchange is via Ethernet in UDP mode based on the network variables concept described in the "Network Functionality in CoDeSys V2.3" - Document Version 1.7.

The driver design is based on the following assumptions:

a/ a separate set of network variables is created for each controller to communicate with the CtWago driver. The set has the following attributes:

- 'Pack variables'
- 'Read'
- 'Write', 'Answer bootup requests'
- 'Transmit on change'

b/ a set of 'network variables' is stored in a file whose name is a parameter in the CtWago driver transmission channel declaration,

c/ a separate CtWago driver transmission channel is defined for each controller,
d/ driver updates the process variables values by capturing the 'StateFree' frames transmitted by the controllers due to a change in the value of network variables, or as a result of controller activation by the driver using the 'BootUpRequest' frames.

e/ driver performs write operations by transmitting the 'StateFree' frame to the controller. It is assumed that the controller responds by transmitting a 'StateFree' frame, which is the result of setting the "Transmit on change" parameter.

Transmission Channel Declaration

Declaration of the transmission channel operating according to the CtWago driver protocol requires adding a channel with the following parameters to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: CtWago

Wago/Channel parameters tab:

IP port number in the controller - IP port number in the controller. Default 1202,
SYM_XML file name generated for the project CoDeSys - SYM_XML file name generated for CoDeSys project implemented by the controller. The driver imports from this file the definitions of all types used in the CoDeSys project. It is important that the SYM_XML file is generated taking into account the network variables, otherwise the types used only in the network variables file will not be accessible the SYM_XML file;

The name of the file with network variable declarations of the controller - the name of the file holding the controller network variable declarations (in the CoDeSys project implemented by the driver);

Identifier (COB-ID) assigned to network variables - identifier (COB-ID) assigned to network variables (in the CoDeSys project implemented by the controller);

IP Address to which Bootup Request commands are sent (address IP of the controller);

Alarm Number of the lack of communication with the controller - alarm number in the absence of communication with the controller.

Wago/Channel parameters 2 tab:

Options related to time synchronization with the controller:

Time synchronization - the variable name in the controller, to which time frame will be sent,

Synchronization interval - interval (in seconds) at which time frame will be sent to the controller. The default is 60 seconds,

UTC Time Sync Mode - if this item is set to YES, time is synchronized with UTC time. If the item is set to NO, it is time synchronized with local time. By default, the items is set to NO.

Other parameters:

Computer network card address - this option is used to specify the network adapter address used by the driver to communicate with the controller. If the item is not declared, then the driver will use the network adapter provided by the system, which can prevent communication with the controller. NIC address in IPv4 notation.

Log file - the text log file is for diagnostic purposes; the log records the datagrams sent and received from the controller.

Log file size - this option is used to determine the size of the log file defined using the *Log file* option

EXAMPLE

Channel/Name: WAGO211

The log file: d:\logi\wago211.log

Log file size: 20

The computer's network card address: 10.10.105.2

Time frame structure transmitted to the PLC has the following format:

```
struct dateTime
{
    word wYear;
    word wMonth;
    word wDayOfWeek;
    word wDay;
    word wHour;
    word wMinute;
    word wSecond;
    word wMilliseconds;
    word wSynchr;
};
```

where:

Communication Drivers

wYear - year 1970 ~ 2106
wMonth - Month 1 ~ 12 (January = 1, February = 2, etc.)
wDayOfWeek - day of the week 0 ~ 6 (Sunday = 0, Monday = 1, etc.)
wDay - day 1 ~ 31;
wHour - time 0 ~ 23;
wMinute - minute 0 ~ 59;
wSecond - second 0 ~ 59;
wMilliseconds - millisecond 0 ~ 999;
wSynchr - synchronization, 1 stored when time frame is transmitted to the controller

EXAMPLE

Example of transmission channel declaration:

Channel/Name: WAGO211
IP port number in the controller: 1202
address IP of the controller: 255.255.255.255
SYM_XML file name generated for the project CoDeSys: d:\Proj211.sym_xml
The name of the file with network variable declarations of the controller: d:\Zm211.exp
Identifier (COB-ID) assigned to network variables: 211
IP Address to which Bootup Request commands are sent (address IP of the controller): 10.10.105.211
Alarm Number of the lack of communication with the controller: 1211
Time synchronization: Glob211ArrDt[1]
Synchronization interval: 15
UTC Time Sync Mode: YES

Declaration of Variables

The driver accepts the process variables, whose symbolic addresses are consistent with the symbolic address of CoDeSys project variables read from the network variable definition file (the 'File' parameter in the transmission channel declaration). The symbolic address may refer to variables that are simple types, elements of structures or arrays.

Note:

The network variable definition file:

- there can be only one VAR_GLOBAL ... VAR_END section,
- sections other than VAR_GLOBAL ... VAR_END are not allowed,
- Comments may be included only as single, separate lines.

The VAR_GLOBAL opening section can include the PERSISTENT and RETAIN options.

The driver accepts CoDeSys simple types with the following names:

BYTE
WORD
DWORD
UINT16
SINT
USINT
INT
INT16
DINT
REAL
LREAL
STRING
STRING()
TIME
TOD
DATE

DT

Note:

The driver returns the values of TIME, TOD, DATE and DT type variables as DWORD.

The driver imports the definitions of all types used in the CoDeSys project from the SYM_XML file. This file should be created in the CoDeSys project using the 'Project >Options->SymbolConfiguration->DumpXMLsymbolTable' menu item. The SYM_XML file name must be specified in the transmission channel declaration as the "Sym" parameter.

EXAMPLE

Examples of process variables declarations based on simple types:

```
JJ_1, GlobalWord, Glob211Word, WAGO211, 1, 1, NOTHING
JJ_2, GlobalDw, Glob211Dw, WAGO211, 1, 1, NOTHING_DW
JJ_3, GlobalReal, Glob211Real, WAGO211, 1, 1, NOTHING_FP
JJ_4, GlobalInt, Glob211Int, WAGO211, 1, 1, NOTHING_INT
JJ_9, GlobalByte, Glob211Byte, WAGO211, 1, 1, NOTHING_BYTE
JJ_10, GlobalString, Glob211Str, WAGO211, 17, 1, NOTHING_TEXT
JJ_11, GlobalStringArr2, Glob211StrArr[2], WAGO211, 21, 1, NOTHING_TEXT
JJ_12, GlobalBool, Glob211Bool, WAGO211, 1, 1, NOTHING_BYTE
# Array used to synchronize the time - 9 elements, the WORD type
JJ_13, GlobalDtArray, Glob211ArrDt[1], WAGO211, 9, 1, NOTHING
# The first element of the array used for time synchronization
JJ_14, GlobalDtArray0, Glob211ArrDt[1], WAGO211, 1, 1, NOTHING
```

Network variable declarations file content, which defines the translation process variables:

```
VAR_GLOBAL
Glob211Bool: BOOL;
Glob211Word: WORD;
Glob211Str: STRING(16):='ala ma kota';
Glob211StrArr: ARRAY [1..4] OF STRING(20);
Glob211Cnt: INT;
Glob211Byte: BYTE;
Glob211Dw: DWORD;
Glob211Int: INT;
Glob211Real: REAL;
Glob211ArrDt: ARRAY [1..9] OF WORD;
END_VAR
```

EXAMPLE

Examples of process variables declarations for the structures:

```
TYPE stLevel3:
STRUCT
parL3_1: INT;
parL3_2: ARRAY [1..5] OF WORD;
END_STRUCT
END_TYPE

TYPE stLevel2:
STRUCT
parL2_1: INT;
parL2_2: ARRAY [1..5] OF stLevel3;
END_STRUCT
END_TYPE

TYPE stLevel1:
STRUCT
```

```
parL1_1: INT;  
parL1_2: ARRAY [1..5] OF stLevel2;  
END_STRUCT  
END_TYPE
```

```
JJ_1, , testLevel[1].parL1_1, KANAL, 1, 1, NOTHING  
JJ_2, , testLevel[2].parL1_2[2].parL2_1, KANAL, 1, 1, NOTHING  
JJ_3, , testLevel[2].parL1_2[2].parL2_2[3].parL3_1, KANAL, 1, 1, NOTHING  
JJ_4, , testLevel[5].parL1_2[5].parL2_2[5].parL3_2[5], KANAL, 1, 1, NOTHING
```

Network variable declarations file content, which defines the translation process variables relating to structures:

```
VAR_GLOBAL  
testLevel: ARRAY [1..5] OF stLevel1;  
END_VAR
```

Driver Parameters

CtWago driver parameters are declared in the [Driver parameters / Driver parameters 2](#) tab.

Period of controllers connection test

Meaning - this option is used to determine the maximum allowable time between two successive messages received from the controller. After this time, the driver sends a 'Bootup request' command to the controller to initiate a response from the controller. If there is no response, loss of connection with the controller is indicated.

Parameter:
number - Max. acceptable time expressed in seconds between two consecutive messages received from the controller.

The default value - The default value is 10 (seconds).

Response timeout after control

Meaning - This option is used to specify the maximum time to receive the 'Write on change' type message in response to the control signal transmitted to the controller. After this time, a 'Bootup request' message is transmitted to force a message from the controller. If there is no response, a runtime error and loss of connection with the controller are indicated.

Parameter:
number - Max. acceptable time expressed in milliseconds between sending a control signal and receiving a 'Write on change' message from the controller.

The default value - The default value is 500 (milliseconds).

Response timeout after a request to refresh

Meaning - This option is used to specify the maximum time to receive the response to a 'Bootup request' message sent by the driver to the controller. If there is no response, loss of connection with the controller is indicated.

Parameter:
number - Max. acceptable time expressed in milliseconds between sending a 'Bootup request' message and receiving a response from a controller.

The default value - The default value is 500 (milliseconds).

Timeout between commands Bootup Request

Meaning - This option is used to specify the delay between successive 'Bootup request' messages sent to controllers during driver start-up. The value of this parameter determines the duration of the application start-up.

Parameter:
number - time delay expressed in milliseconds between successive 'Bootup request' messages.

The default value - The default value is 20 (milliseconds).

Log file

Meaning - the text log file to which driver status messages are stored is used for diagnostic purposes.

The default value - by default, the log file is not created.

Parameter:
file name

Log file size

Meaning - This option is used to determine the log file size defined using the *Log file* option.

Parameter:
number - the size of the log file in MB.

The default value - By default, the log file size is 10 MB.

Log of telegrams

Meaning - this option allows writing the contents of messages communicated between the driver and the controllers to the log file (declared using the *Log File* item) The option in question should only be used during the Asix system start-up.

The default value - By default, this option is disabled.

EXAMPLE

Sample driver parameterization.

Driver: Wago

Log file: d:\tmp\CtWago\muel.log

Log file size: 20

Log of telegrams: YES

Period of controllers connection test: 20

Response timeout after control: 700

Response timeout after a request to refresh: 600

1.100 ZdarzenieZmienna Driver

Driver Use

The ZdarzenieZmienna driver is used to generate process variables of WORD types (16-bit word) on the basis of current values of alarm events in the Asix system.

Declaration of Transmission Channel

The ZdarzenieZmienna driver is a dynamic library DLL with an interface meeting requirements of the ASMEN module. ASMEN activates the driver after having found in the application configuration file, a channel definition calling to the ZdarzenieZmienna driver.

Declaration of the transmission channel using the ZdarzenieZmienna driver requires a channel with the following parameters to be added to the Current data module:

Standard tab:

Name: logical name of the transmission channel

Driver: ZdarzenieZmienna

After starting the asix system, the ZdarzenieZmienna driver receives from ASMEN one after the other an algorithm, taken from the definition file, calculating the value of each process variable. This algorithm is executed at each reading the variable and its result becomes a value of the process variable.

Variables supplied by the driver are variables only for reading.

Calculating the Asix Process Variables

The alarm module of the Asix system generates values of individual alarm events, which are identified by its number in the file of alarm definitions.

Two ways of determining values of alarm event exist:

- alarm event assumes a value of 1 when the alarm is active, 0 when it is inactive.
- alarm event assumes a value of 1 when the alarm is active and not acknowledged, 0 when it is active and acknowledged or inactive.

Alarm events are used to calculate Asix process variables identified by means of their name in the whole system.

Definition of ASMEN variables (in database of variables) contains the way of calculating values of an individual variable of the Asix system.

The declaration of each variable has the following form:

```
variable_name,variable_description,algorithm for calculating  
values,channel,1,frequency,NOTHING
```

A detailed description of components of this line may be found in chapter Declaring process variables.

The algorithm for calculating values is specific for this described driver. There are three algorithms of operations on alarm events that generate a value of the process variable:

- composition of alarm events,
- logical sum of alarm events,
- logical product of alarm events.

An alarm event is treated as a number of alarm in the alarm file with a suffix N. The N suffix signifies that an alarm event assumes a value of 1 only when the alarm with a given number is active and not acknowledged.

Composition of Alarm Events

The algorithm form:

```
Composition: <Alarm event >; <Alarm event >; ...
```

or

```
MERGE: <Alarm event >; <Alarm event >; ...
```

The interpretation result of this algorithm is a number, the bit no. 0 of which has a value equal to the first alarm variable, bit no. 1 equal to the second alarm variable etc. The algorithm may contain maximally 16 alarm variables.

EXAMPLE

```
MERGE: 11; 12; 13N
```

In the algorithm, the alarm variables may be omitted and then the state of bit corresponding with omitted alarm variable is always equal to 0.

EXAMPLE

```
MERGE: 11; ; 13; ;15; 16
```

The bits no. 1 and 3 have always a value of zero.

Logical Sum of Alarm Events

The algorithm form:

```
Logical_sum: <Alarm event>; <Alarm event>; ...
```

or

OR: <Alarm event >; <Alarm event >; ...

The interpretation result of this algorithm is a value of 1 if at least one of the alarm variables has a value of 1, 0 – otherwise. The algorithm may contain maximally 16 alarm variables.

EXAMPLE

OR: 11N; 12; 13

Logical Product of Alarm Events

The algorithm form:

LogicalProduct: <Alarm event>; <Alarm event>; ...

or

AND: <Alarm event>; <Alarm event>; ...

The interpretation result of this algorithm is a value of 1 if all alarm variables have a value of 1, 0 - otherwise. The algorithm may contain maximally 16 alarm variables.

EXAMPLE

AND: 11; 12N; 13N

Subjection of Values of Alarm Events to Value Status

Three algorithm above may also use alarm events, the value of which, taken from the alarm module, is still corrected by the state of the other alarm event treated as a status. You should use then the writing: alarm event/status e.g.101/102. When the status is equal to 0, then it does not change the value of alarm event. Otherwise a measure error for all Asix process variables is generated. It is calculated on the basis of this status.

EXAMPLE

AND: 11/110; 12; 13

or

OR: 11; 12/120; 13/130

EXAMPLE OF USING THE DRIVER

Our task is to cause a text on synoptic diagram to blink while simultaneous exceeding limits for two temperatures T1 and T2. Two-state signals about exceeding appropriate temperatures we obtain from the object. We assume that alarms in the system are already activated and a file of alarms definitions exists.

Declarations in the Configuration Application File

In the configuration file for the application we place a declaration initiating the driver ZdarzenieZmienna for the channel named EVENT:

Channel name: EVENT
Driver: ZdarzenieZmienna

Complement of File of Alarms Definitions

In the alarm file you should add two alarms, which signals exceeding the temperatures T1 and T2. For example, we place them under numbers: 101 for exceeding the temperature T1 and 102 for exceeding the temperature T2:

101,AL,Exceeding of temperature T1
102,AL,Exceeding of temperature T2

Creation of File Defining the Asmen Variables

You should declare new variable by using *VariableBase Manager*.

The process variable should assume a value of 1 when both alarms 101 and 102 are active (they assume a value of 1), otherwise the value of process variable should be equal 0. Let's name it T1_T2_MAX.

The file of the variable definition should contain the following line:

T1_T2_MAX,Process variable of exceeding T1 and
T2,AND:101;102,EVENT,1,1,NOTHING

Location of a Text Object on the Application Synoptic Diagram

After having opened the mask under *Constructor* you should place on it the TEXT object and parameterize it on our variable T1_T2_MAX. The object must have two states. For the value of a monitored variable 0 the text "Temperatures T1 and T2" are displayed. For the value 1 a text "Exceeding of temperatures T1 and T2" with a blink attribute.

1.101 CtZxD400 - Driver of Protocol of Landys & Gyr ZxD400 Electric Energy Counters

Driver Use

The CtZxD400 driver is used for data exchange between Asix and electric energy counters of ZxD400 type manufactured by Landys & Gyr, via the RS-485 interface. The driver is not adapted for data exchange through an optical connection, because it demands the protocol with initial negotiations of transmission speed to be used.

The driver allows readout of register statement of a counter as well as registration of data (read by commands *Read Log Book* or *Read Load Profile*) in files.

Parameterization of CtZxD400 driver is performed with the use of Architect module.

Declaration of Transmission Channel

Declaration of the transmission channel using the CtZxD400 driver requires a channel with the following parameters to be added to the *Current data* module:

Standard tab:

Name: logical name of the transmission channel

Driver: CtZxD400

CtZxD400/Channel partameters tab:

<i>Port</i>	- number of the COM serial port;
<i>Boud rate</i>	- speed of transmission between computer and device; the following speeds are acceptable: 1200,2400, 4800, 9600, 19200, 38400 Bd; a default value is 2400 Bd;
<i>Period</i>	- timeout (in seconds) between successive readouts of counter registers. A default value is 10 seconds.

Declaring the Process Variables

The syntax of the symbolic address of the process variable is as follows:

"[*counter_name*]/*register_code*"

where:

<i>counter_name</i>	- (option); defines the controller unique name used in multipoint installations to identify particular controllers;
<i>counter_name</i>	- it corresponds to <i>Device address</i> according to PN-EN 61107; <i>counter_name</i> may be omitted in point-point connection;

register_code - code and index of the counter register compatible with a readout list - that is loaded into the counter by the manufacturer in the parameterization stage.

NOTICE All the variable values are of *FLOAT* type.

EXAMPLE

```
/* C.1.0 - identification number of the counter */
JJ_01, identification number of the counter, "/C.1.0",CHANNEL, 1, 1, NOTHING_FP

/* 1.8.0 - register of consumed active energy*/
JJ_03, register of consumed active energy, "/1.8.0",CHANNEL, 1, 1, NOTHING_FP

/* C.8.0 - total worktime */
JJ_03, total worktime, "/C.8.0",CHANNEL, 1, 1, NOTHING_FP
```

Driver Parameterization

The driver configuration is defined in the *Current Data* module, in the channel operating according to CtZx400 driver.

Log file

Meaning - allows to define a file to which all the diagnostic messages of the driver will be written.
Default value - by default, the log file is not created.
Defining - manual.

Log file size

Meaning - this item is used to define the size of the log file defined with use of the LOG_FILE item.
Default value - by default, the log file size is 1 MB.
Parameter:
number - log file size in MB.
Defining - manual.

Log of telegrams

Meaning - this item allows contents of telegrams transferred between driver and controllers to be written into the log file (declared with use of the LOG_FILE item). The referred item should only be used in the asix system start-up.
Default value - by default, value of this item is set to NO.
Defining - manual.

Parameterization of Particular Counters

The driver allows the set of individual parameters concerning service of particular counters to be transferred in separate sections. Such the parameterization is set on **Zx400 / Channel parameters** tab.

Counter name - address name of the counter (the name used in a variable address); counter_name may be empty, if point-point installation is used.

A parameterization of the counter may be performed by the following items:

- time maker,
- log book file,
- log book file size,
- log book read period,
- log profile file,
- log profile file size,
- log profile read period.

Option name: Time maker

Option value: register_code [,register_code]

Meaning - it allows to define a register (or two registers), that includes the data and time stamp transmitted from the counter. It is assumed that, if one register is declared, it contains data and time in the 'r;YY-MM-DD hh:mm:ss' format. If the couple of registers is declared, it is assumed that the first register contains data in the 'r;YY-MM-DD' format, and the second one contains time in the 'r;hh:mm:ss' format.

Default value - by default, it is assumed that the PC's data and time stamp from the moment of the end of data receiving will be assigned to variables transmitted from the counter.

Option name: Log book file

Option value: log_file_name

Meaning - events read from the counter are written to a text file in 'r;csv' format. Each event is written in a separate line. Events in the file are ordered according to the growing time stamps. An exemplary event form is as follows:

```
P.98;1;2005-05-10
08:14:33;0048;;3;;;F.F;;1.8.0;kWh;024;00000000;0000.0000
```

LOG_BOOK_FILE allows to define a file path in which the book file will be written.

Default value - by default, the log book file is not created.

Option name: Log book file size

Option value: number

Meaning - this item is used to define the size of the log file defined with use of the **Log book file** item.

Default value - by default, the log file size is 10 MB.

Parameter:
number - log file size in MB.

Option name: Log book read period

Option value: number

Meaning - it allows to determine the cycle of the event log readout from the counter.

Default value - by default, the event log readout takes place every hour.

Parameter:
number - cycle of the event log readout (in hours).

Option name: Log profile file

Option value: log_file_name

Meaning - profiles read from the counter are entered to a text file in 'r;csv' format. Each profile is written in a separate line. Profiles in the file are ordered according to the growing time stamps. An exemplary profile form is as follows (the exemplary profile form is broken into two lines to be more clear):

```
P.01;1;2005-05-10 12:45:00;0008;15;6;1.5.0;kW;5.5.0;kvar;8.5.0;kvar;  
32.7;V;52.7;V;72.7;V;0.0000;0.0000;0.0000;---.-;---.-;---.-
```

LOG_PROFILE_FILE allows to define a file path in which the profile file will be written.

Default value - by default, the profile log file is not created.

Option name: Log profile file size

Option value: number

Meaning - this item is used to define the log file size, defined with use of the LOG_PROFILE_FILE item.

Default value - by default, the log file size is 10 MB.

Parameter:
number - log file size in MB.
Defining - manual.

Option name: Log profile read period

Option value: number

Meaning - it allows to determine the cycle of profile log readout from the counter.

Default value - by default, profile log readout takes place every hour.

Parameter:
number - cycle of profile log readout (in hours).

Other driver parameters:

Option name: Log book data

Option value: YES/NO

Meaning - it allows to declare whether detailed description of parsing of particular event log lines should be entered to the driver log. The log file should be used only while the **asix** system start-up.

Default value - by default, event parsing details are not written to the driver log.

Communication Drivers

Option name: Log profile data

Option value: YES/NO

Meaning - it allows to declare whether detailed description of parsing of particular profile log lines should be entered to the driver log. The log file should be used only while the asix system start-up.

Default value - by default, event parsing details are not written to the driver log.

Option name: Meter data

Option value: YES/NO

Meaning - it allows to declare whether detailed description of parsing of particular data (read from the counter) lines should be entered to the driver log. The log file should be used only while the asix system start-up.

Default value - by default, readout data parsing details are not written to the driver log.

Option name: History scope

Option value: number

Meaning - it allows to declare period of profile and event history for each counter individually.

Default value - 0, that means reading since 00:00 of a current day.

Parameter:
number - time passed in days.